



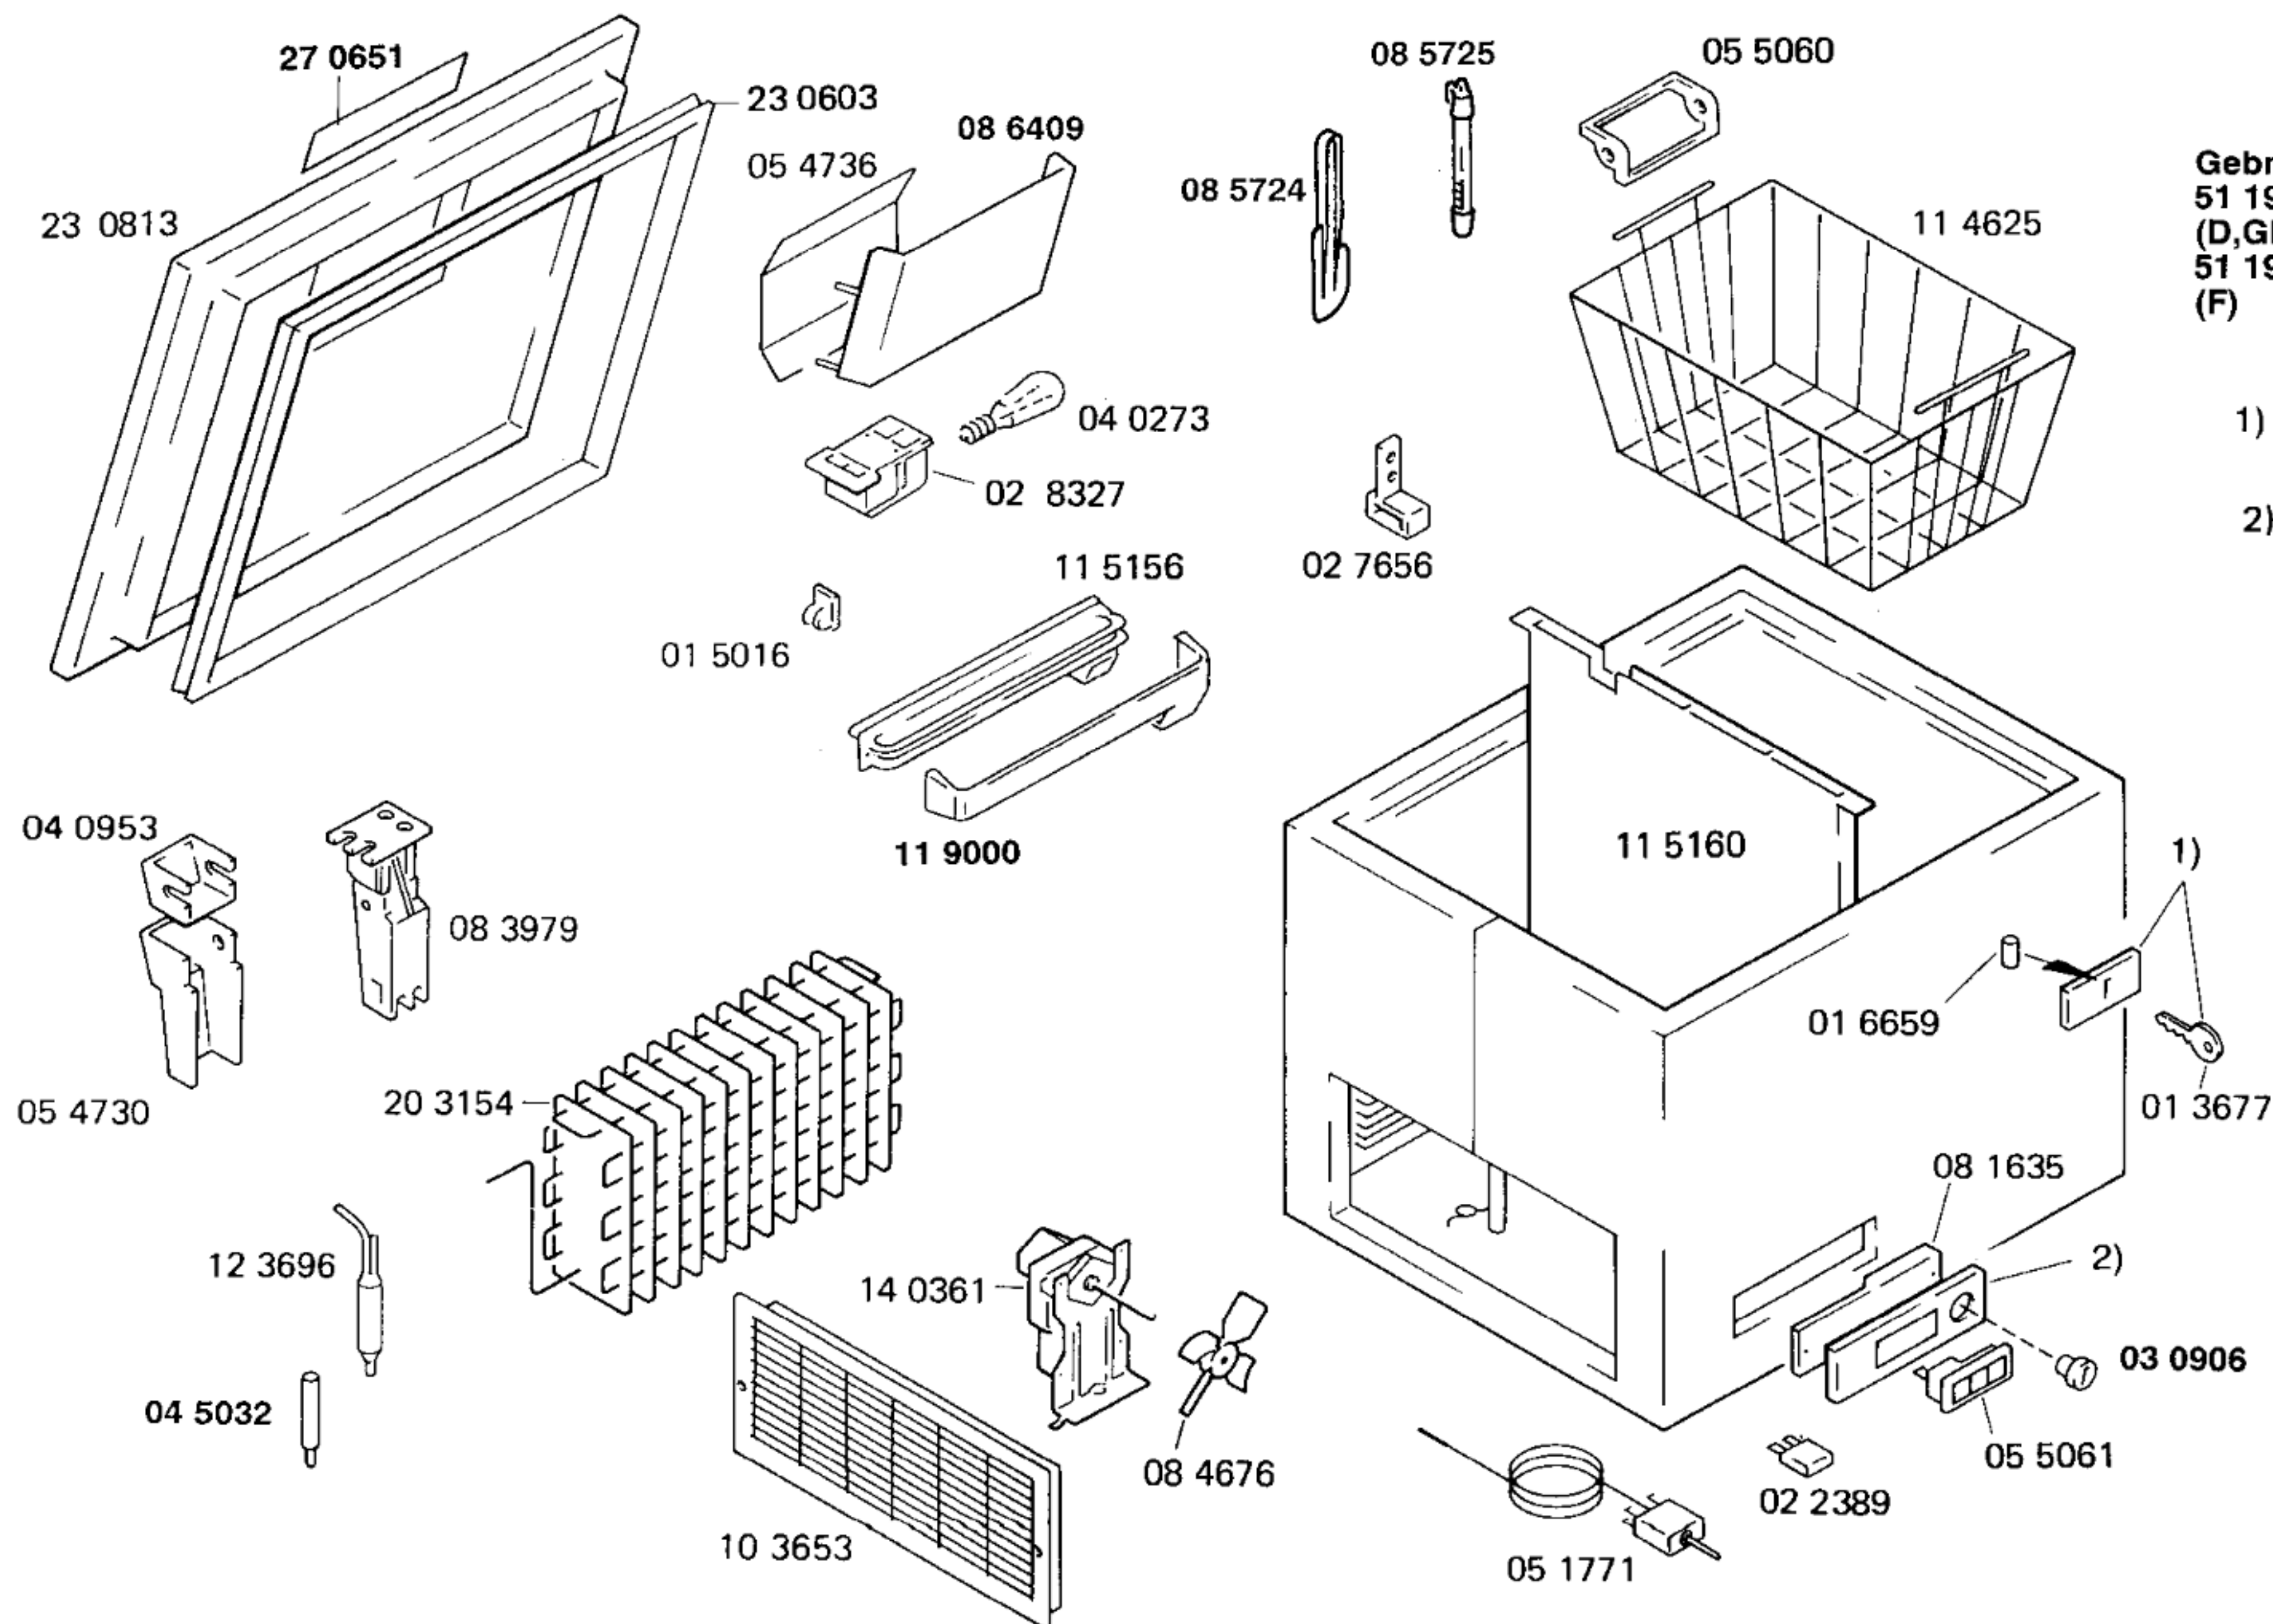

Gebrauchsanweisungen
51 1910
(D,GB,F,I,NL,S,N,SF)
51 1911
(F)

- 1) 05 0642
kompl.
- 2) 08 7163
EU1
08 7162
F1

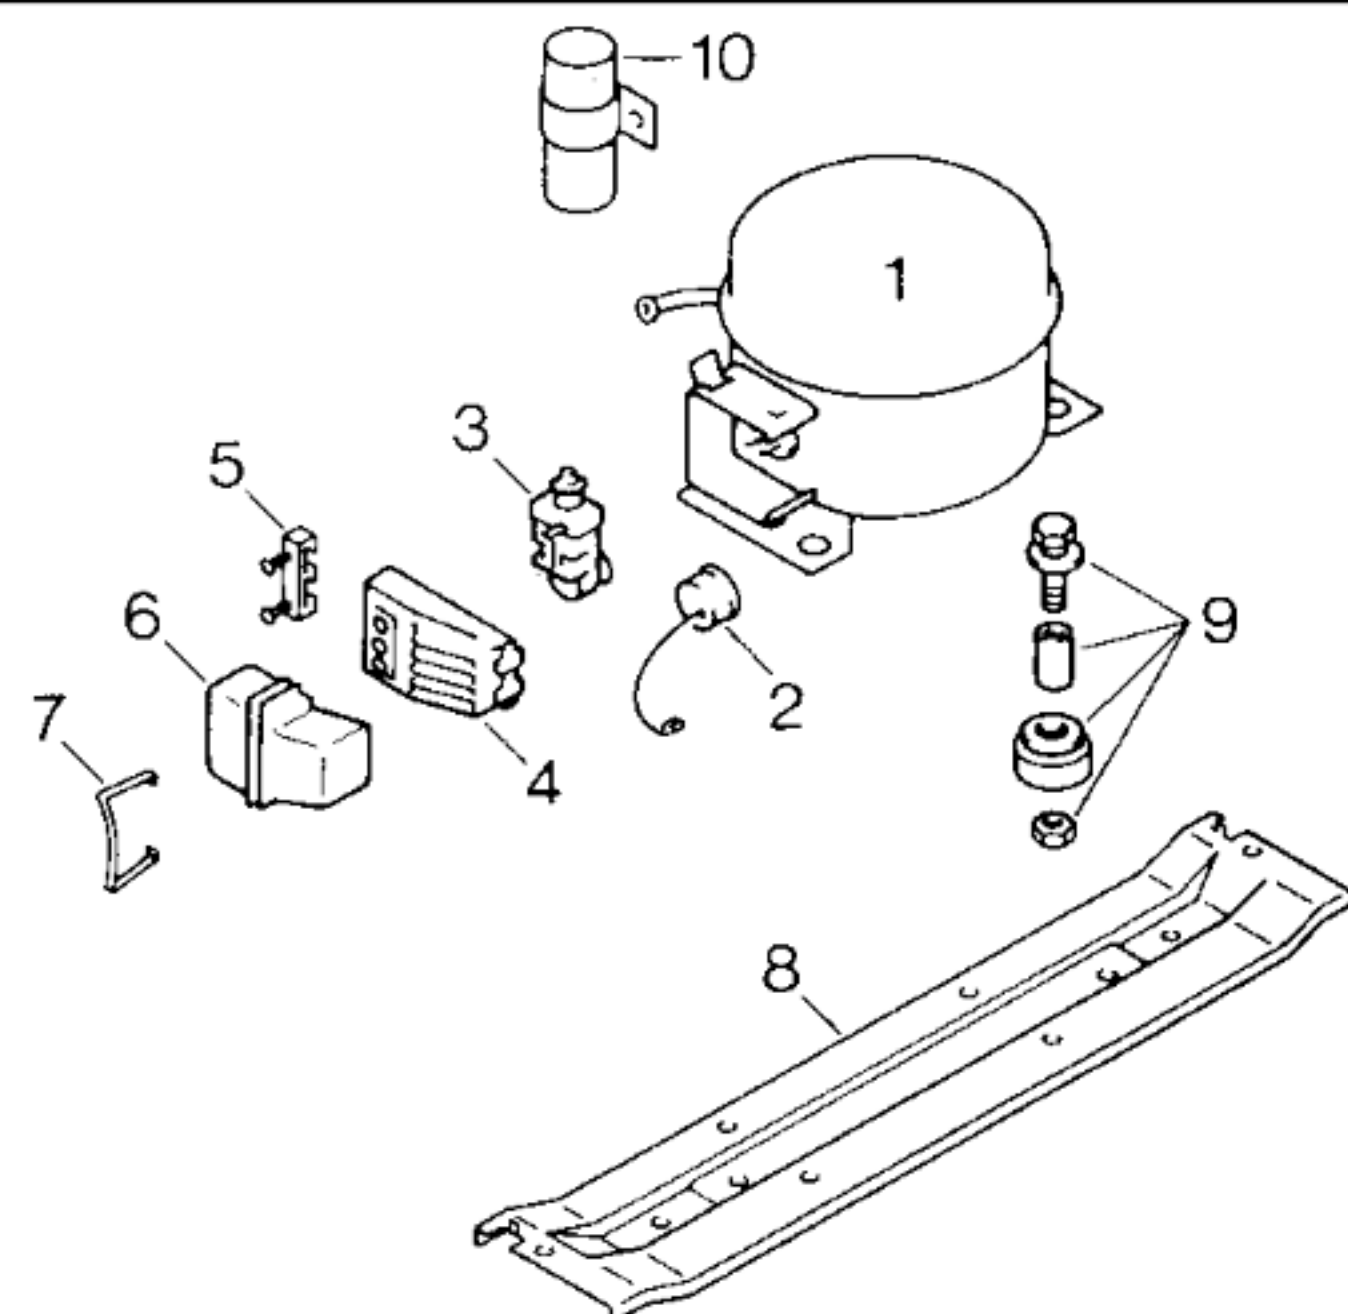

EU1,F1			
Pos.	Matsushita		
	FN 91 Q 17 G		
1	14 0359		
2			
3	02 6742		
4			
5			
6	05 6077		
7	02 6731		
8			
9	05 0166		
10			
11			
12			
13			
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		FN 91 Q 17 G		
Förderleistung/Delivery/Débit		I/h	V 1633	
Anlaufstrom/Starting current/Cour. de démarrage		A	11,7	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	8,6
		Hi/aux	Ω	30,5
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K 54		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“	°C	- 24 - 18
Valeurs de commutation		„aus“		- 31 - 24
		(„abtauen“ od.)	„alarm“	- 19 - 14
Füllmenge/Fill.quantity/Charge		R12	g	200
Anschlußwert/Conn.load/Puiss. connectée			W	190
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance			Ω	
Leistung/Power/Puissance			W	
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance			Ω	155
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance			Ω	
Spannung/Voltage/Tension			V	