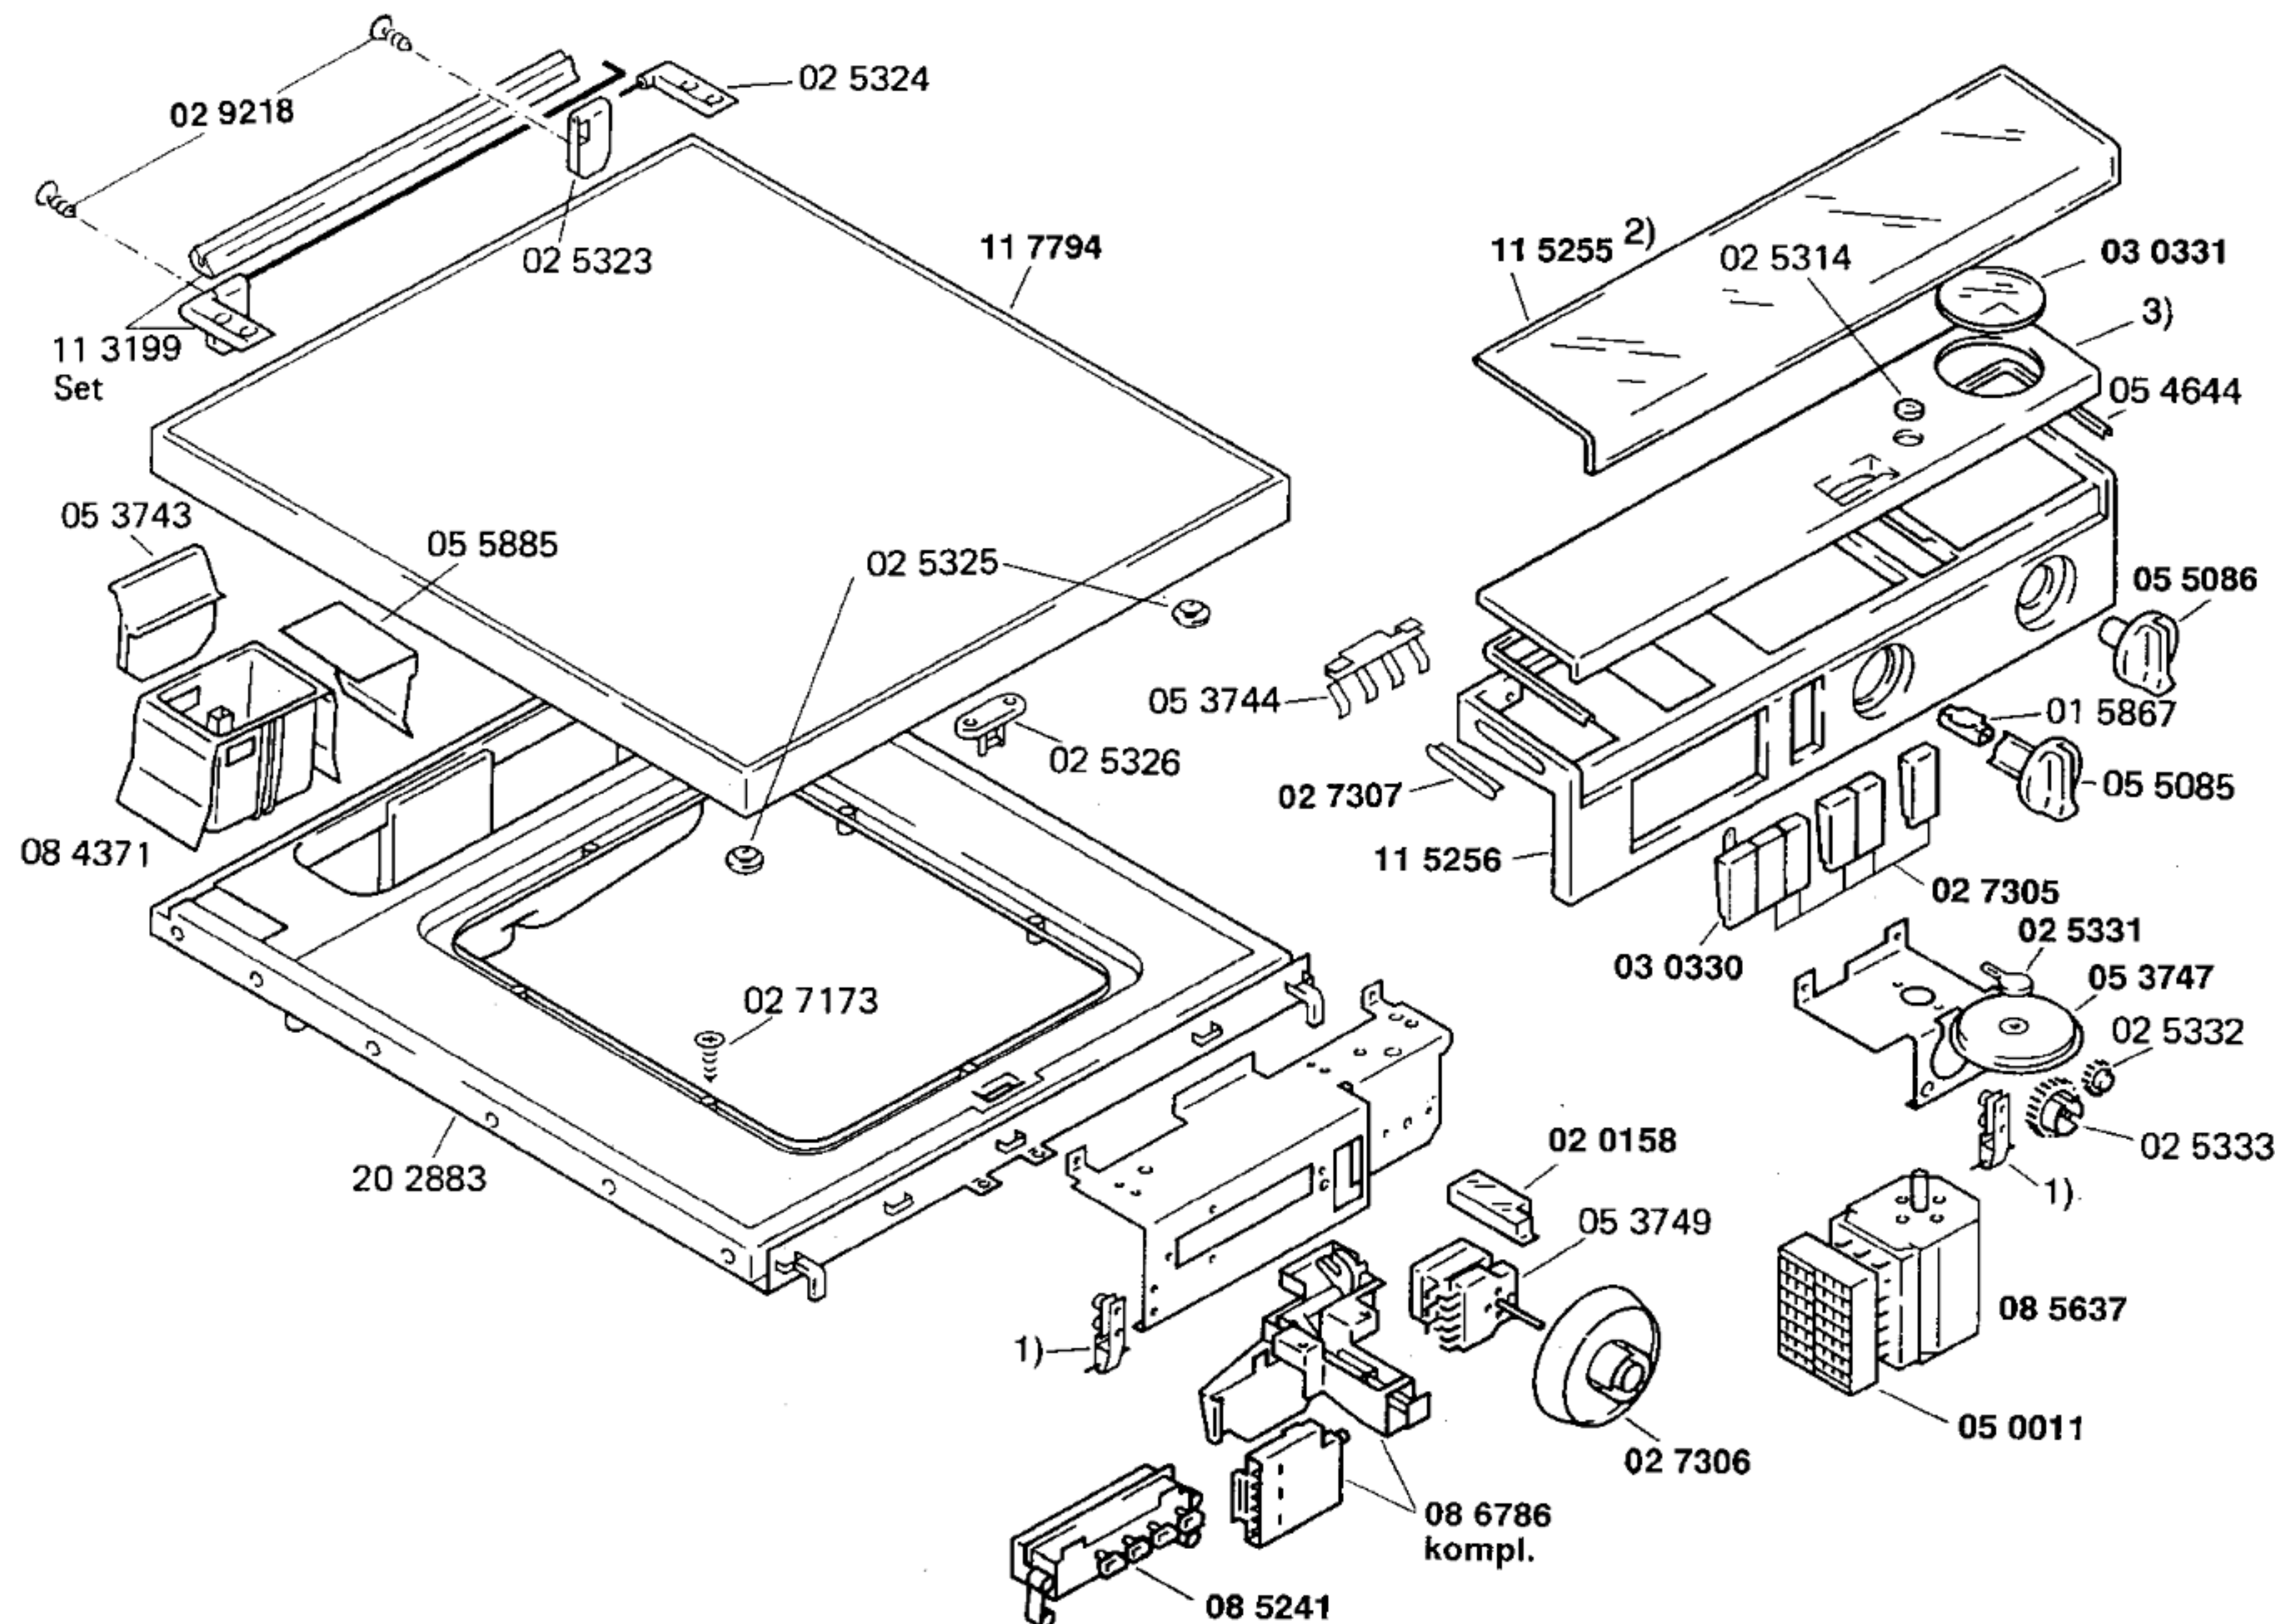


**BOSCH**

V344-WMV3444/01-D1
 V344-WMV3444II/01-I1
 V344-WMV344425/03-F1

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

**Gebrauchsanweisung**

51 4264
 (D)
 51 4258
 (I)
 51 3760
 (F)
Programmtabelle
 51 4263
 (D)
 51 4261
 (I)
 51 3759
 (F)
 1) 02 5334
 2) einschl. 05 4644
 3) 27 1508
 D1
 27 1509
 I1
 11 9712
 F1

Aufstellanweisung

51 3182
 (D,GB,F,I,NL,E)
 51 4257
 (I)


Ident – Nummern – Konstante
3740

1) 04 5561

2) 01 4687

3) 02 8340

4) 02 5345

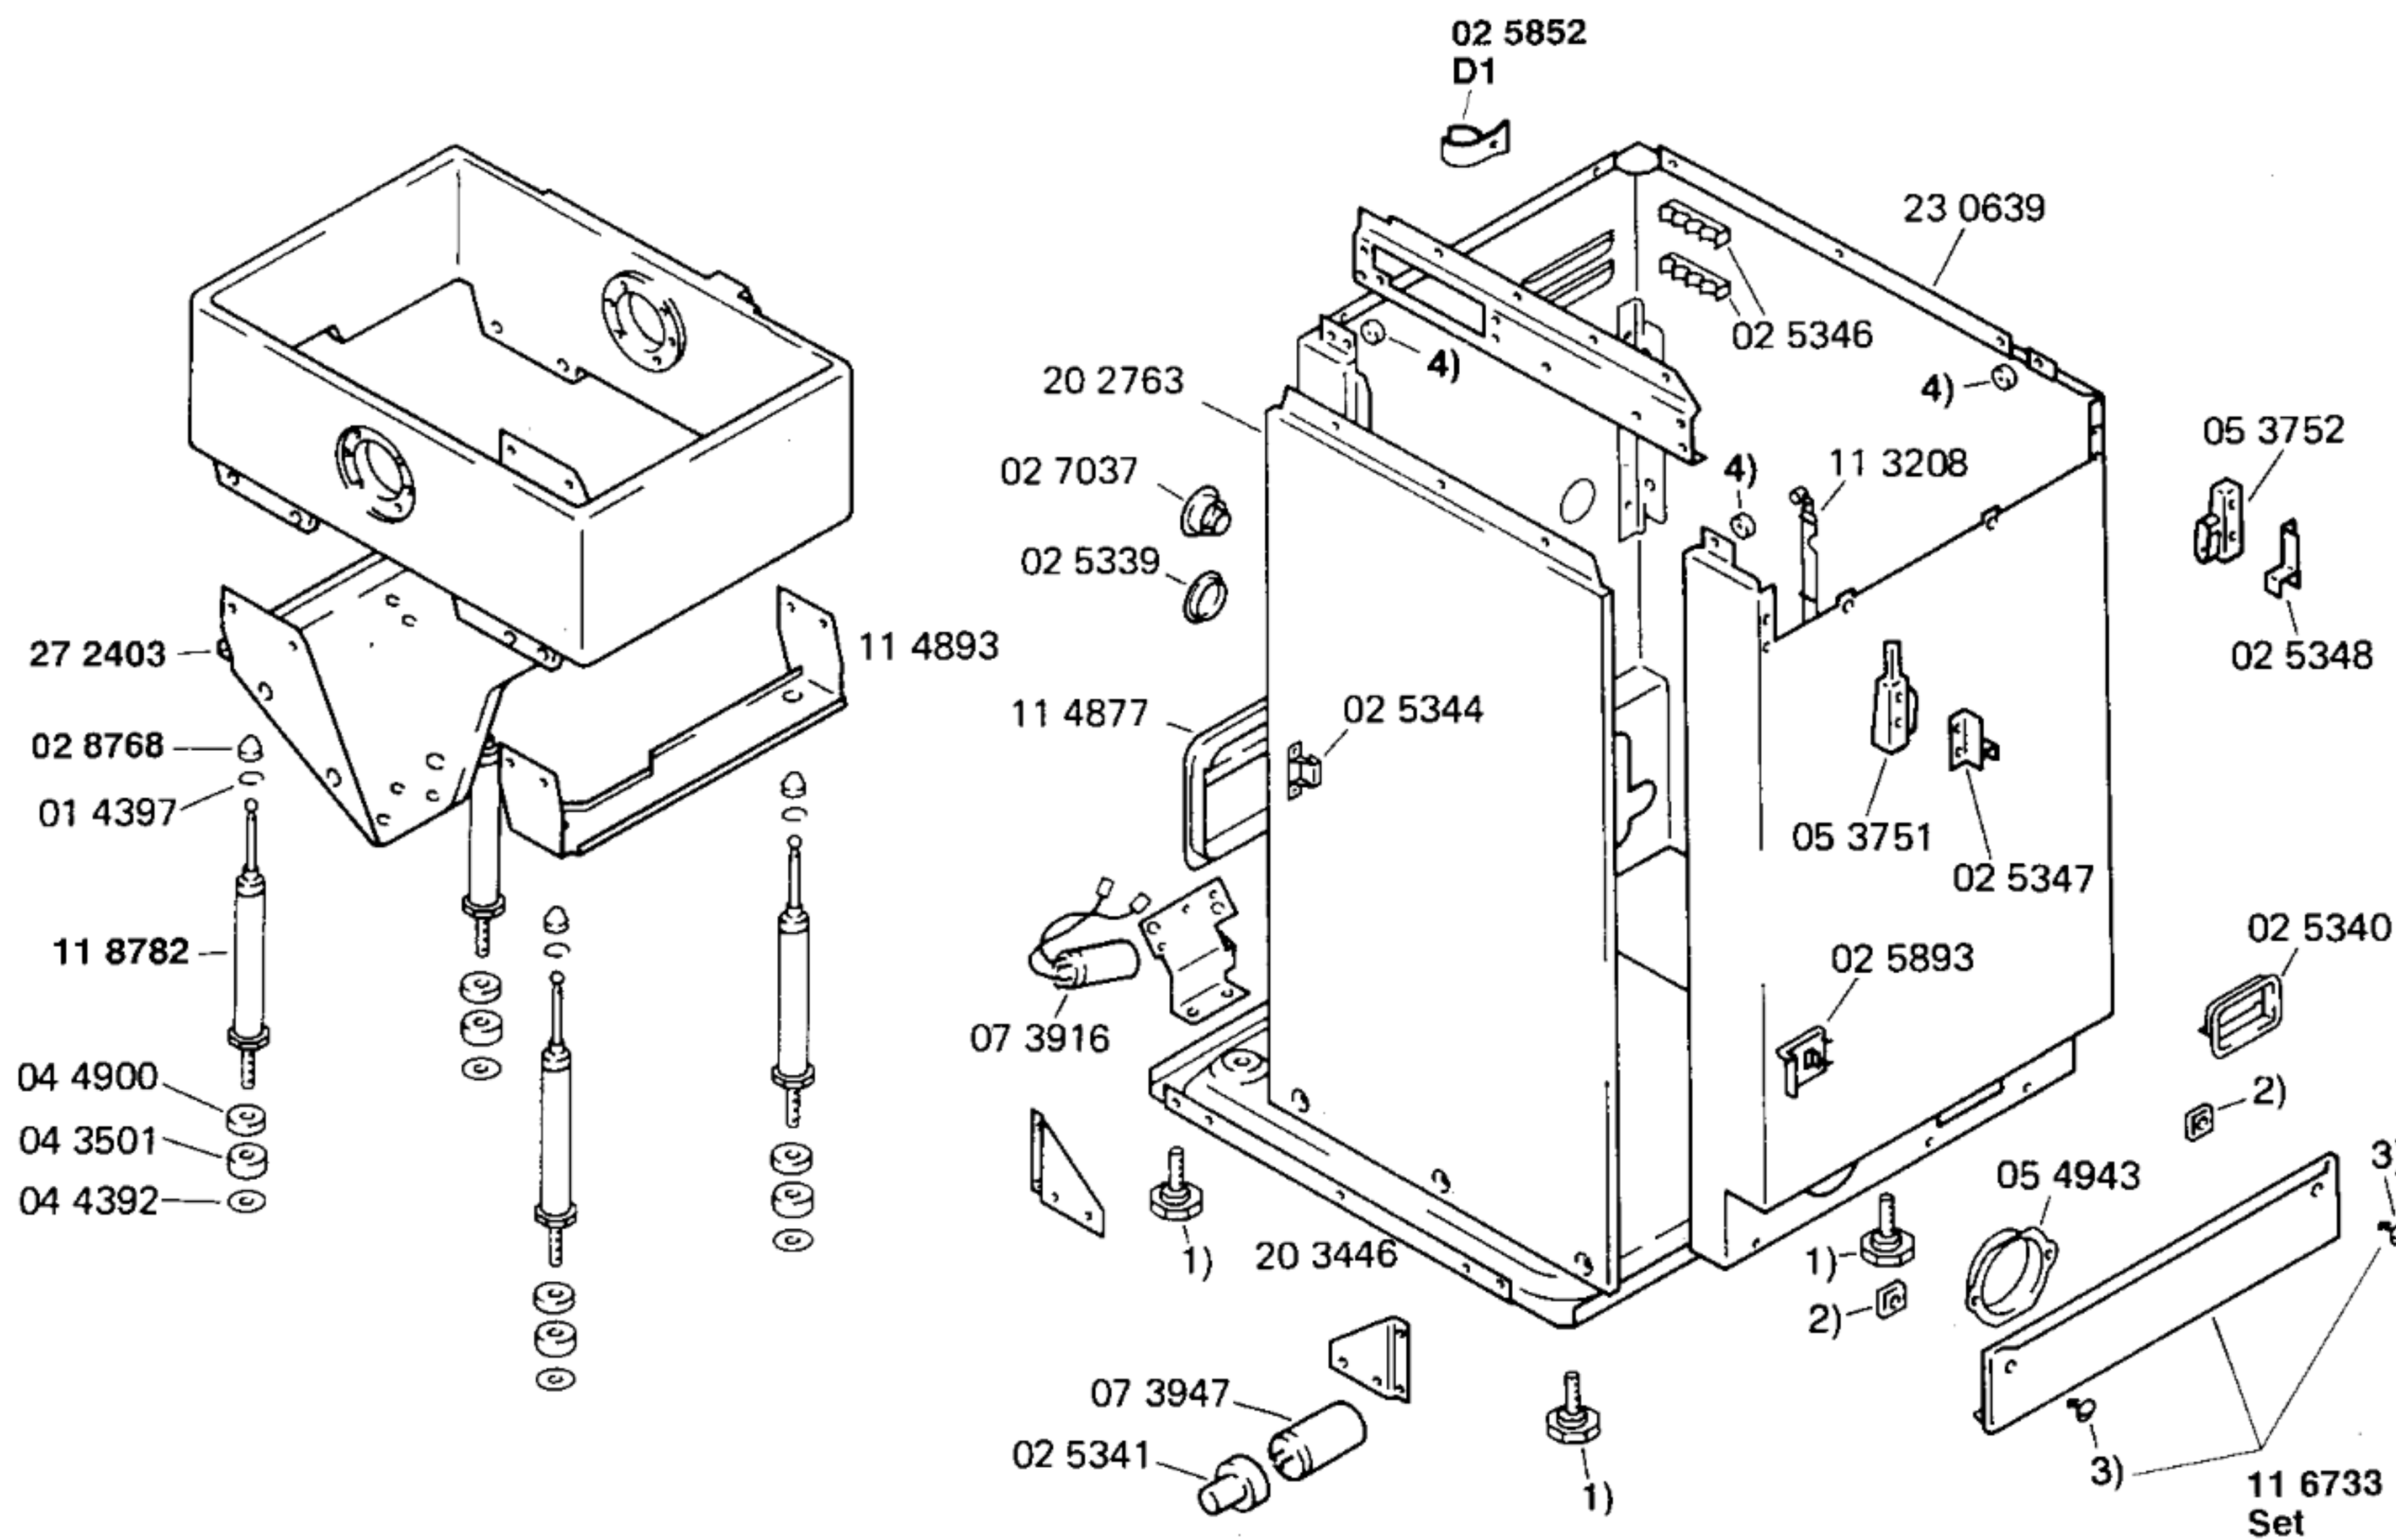




BOSCH

V344-WMV3444/01-D1
V344-WMV3444II/01-I1
V344-WMV344425/03-F1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

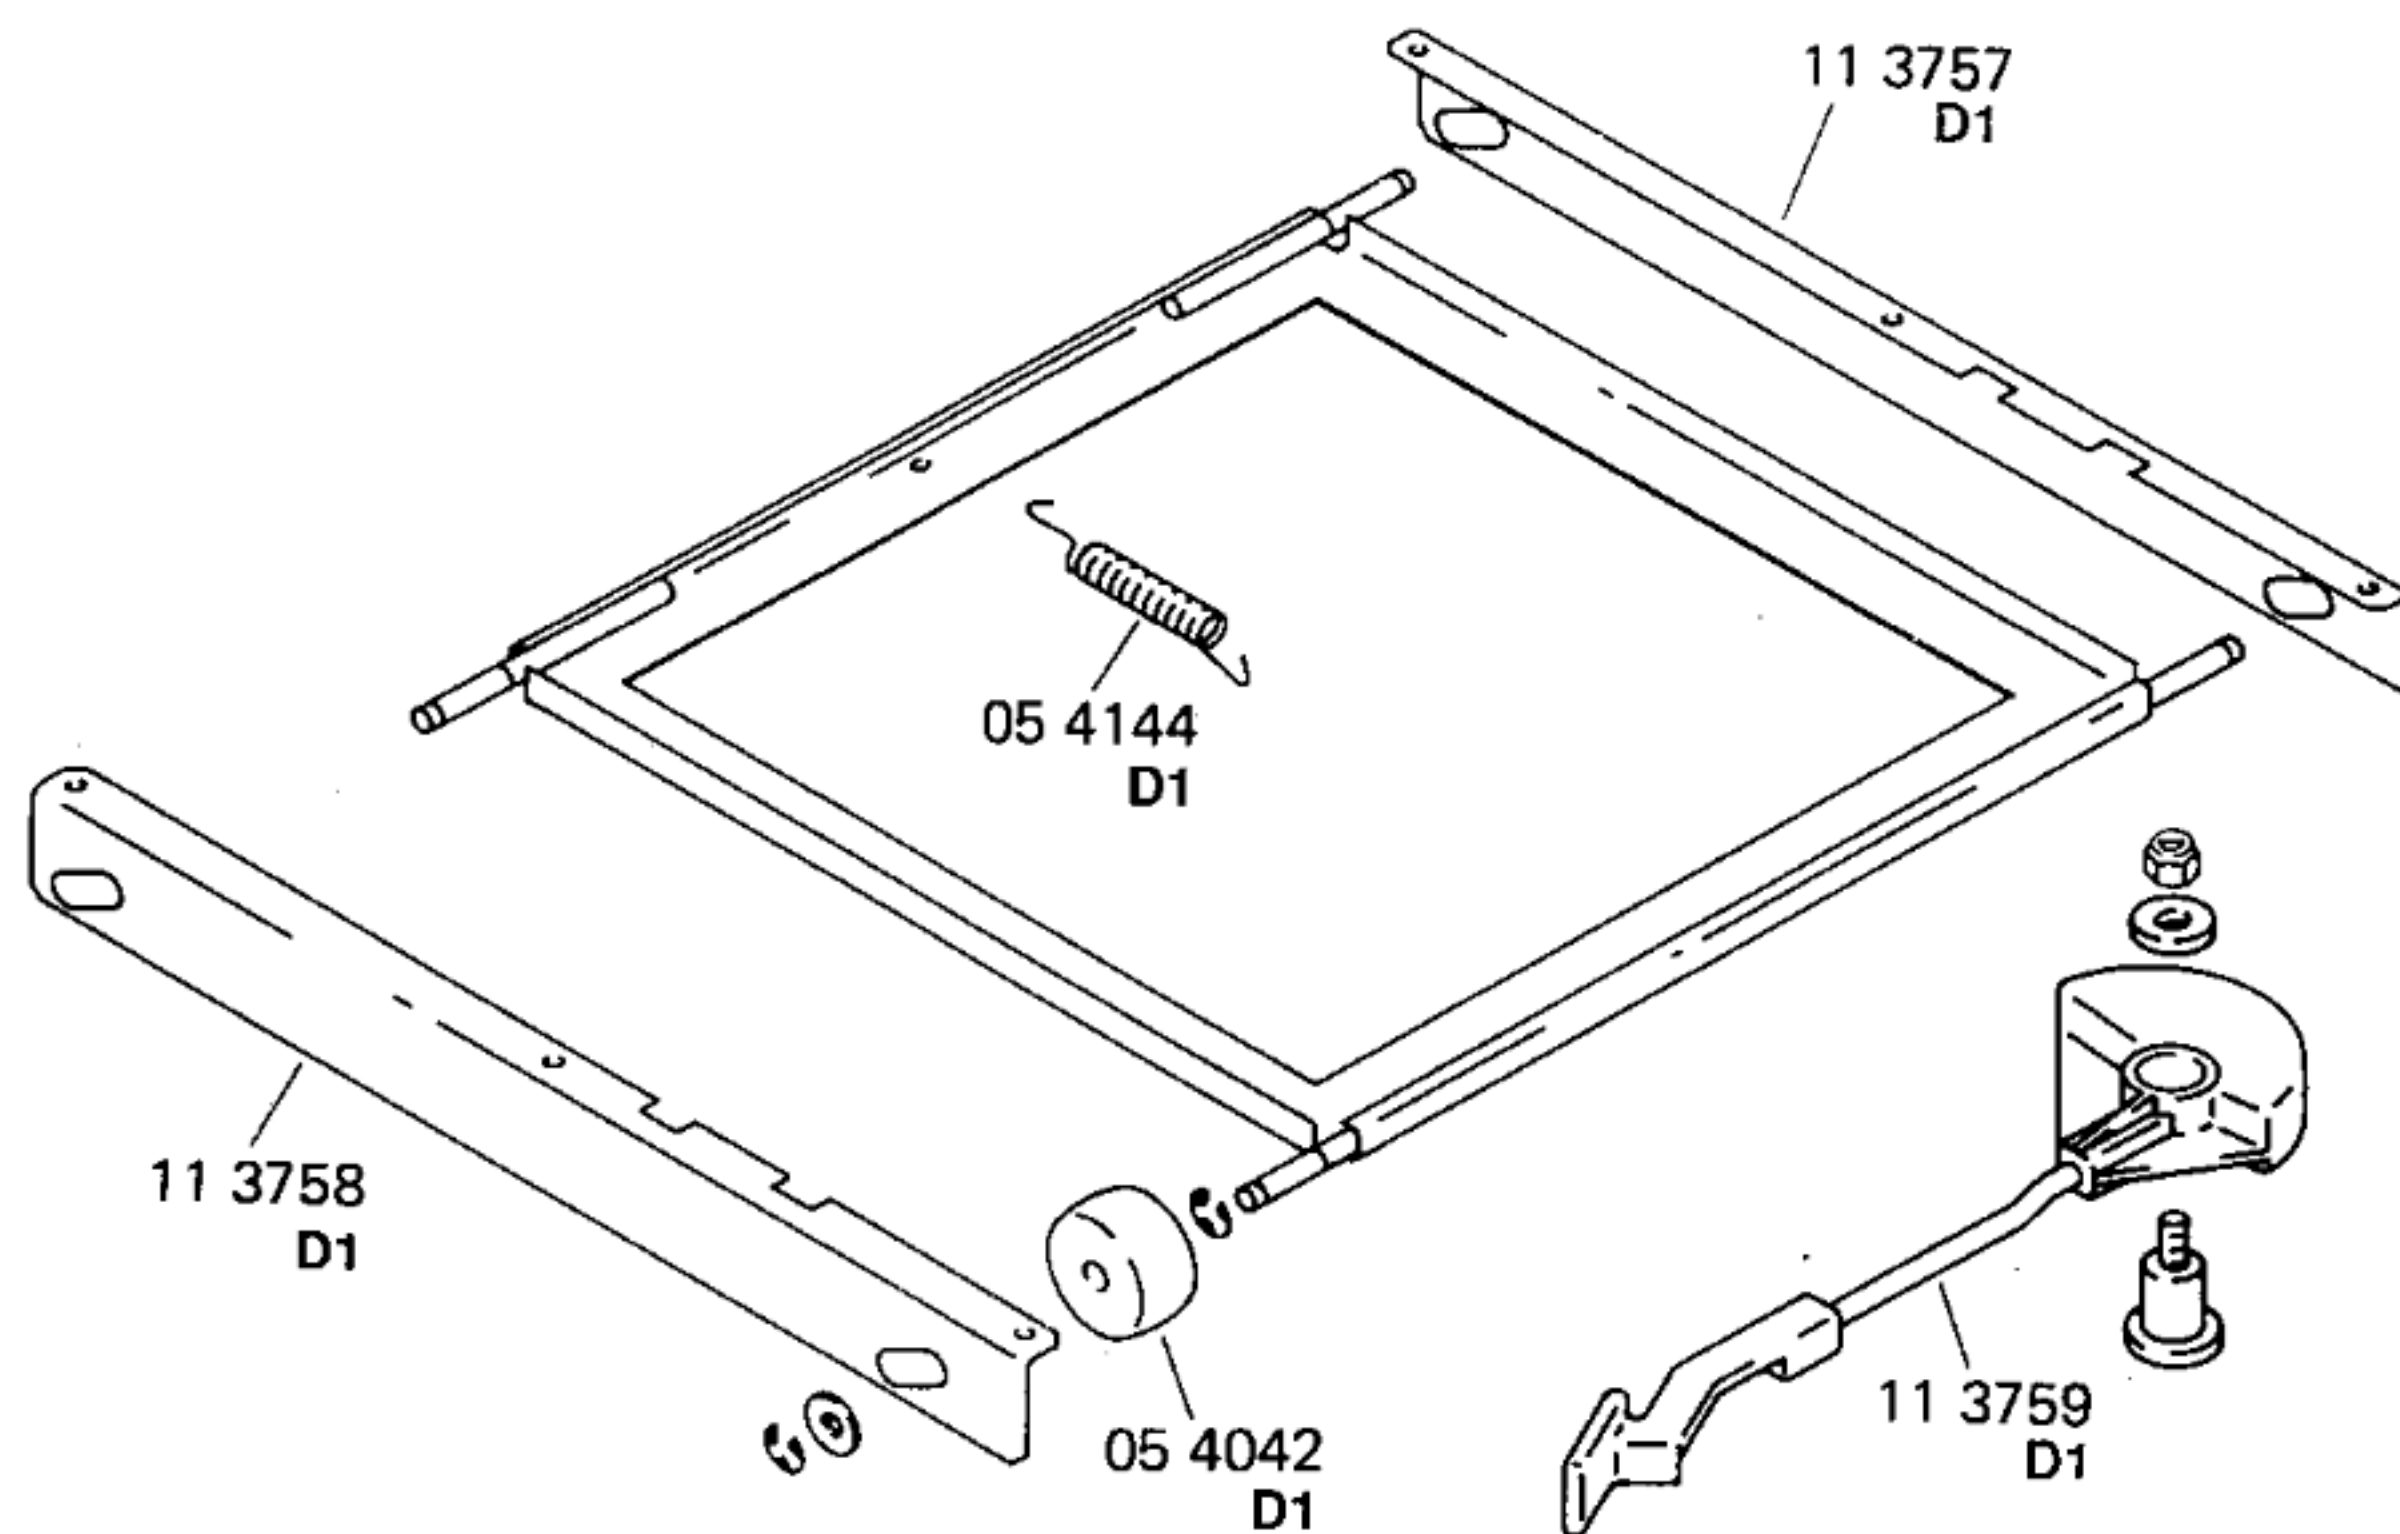


**BOSCH**

V344-WMV3444/01-D1
 V344-WMV3444II/01-I1
 V344-WMV344425/03-F1

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

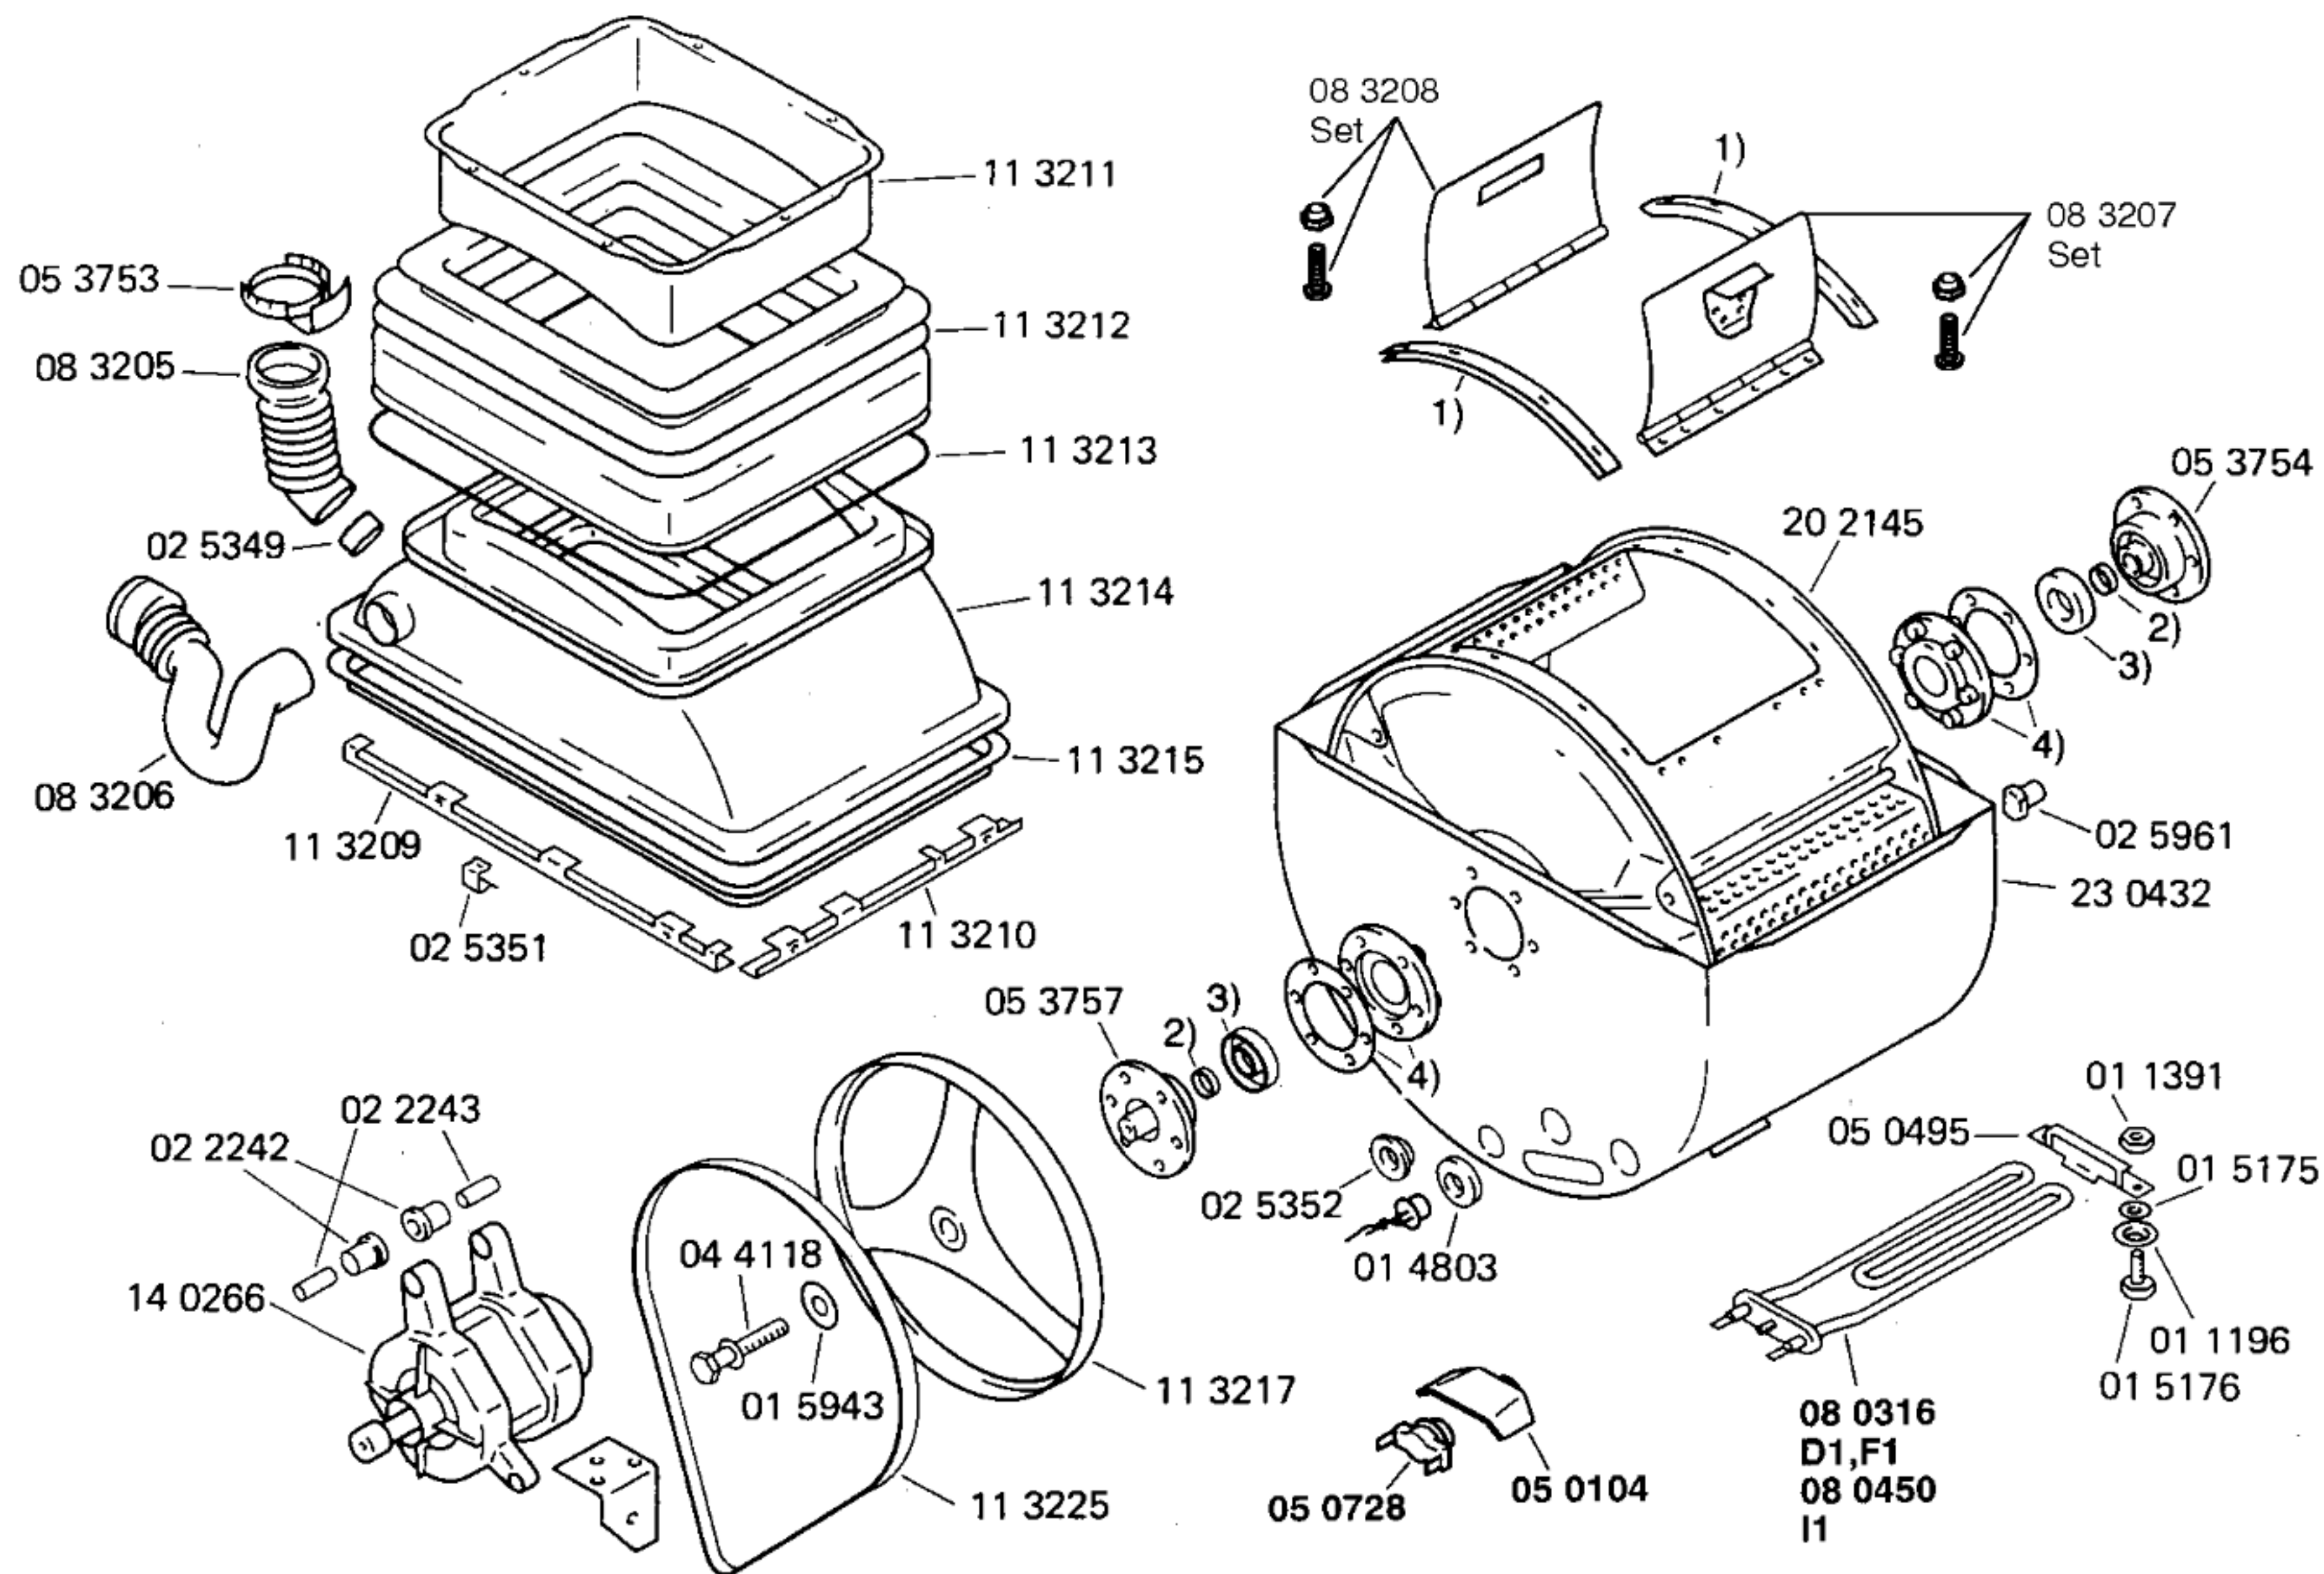

1) 11 3216

2) 04 2309

3) 02 5350

4) 05 7022

**BOSCH**

V344-WMV3444/01-D1
V344-WMV3444II/01-I1
V344-WMV344425/03-F1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

