


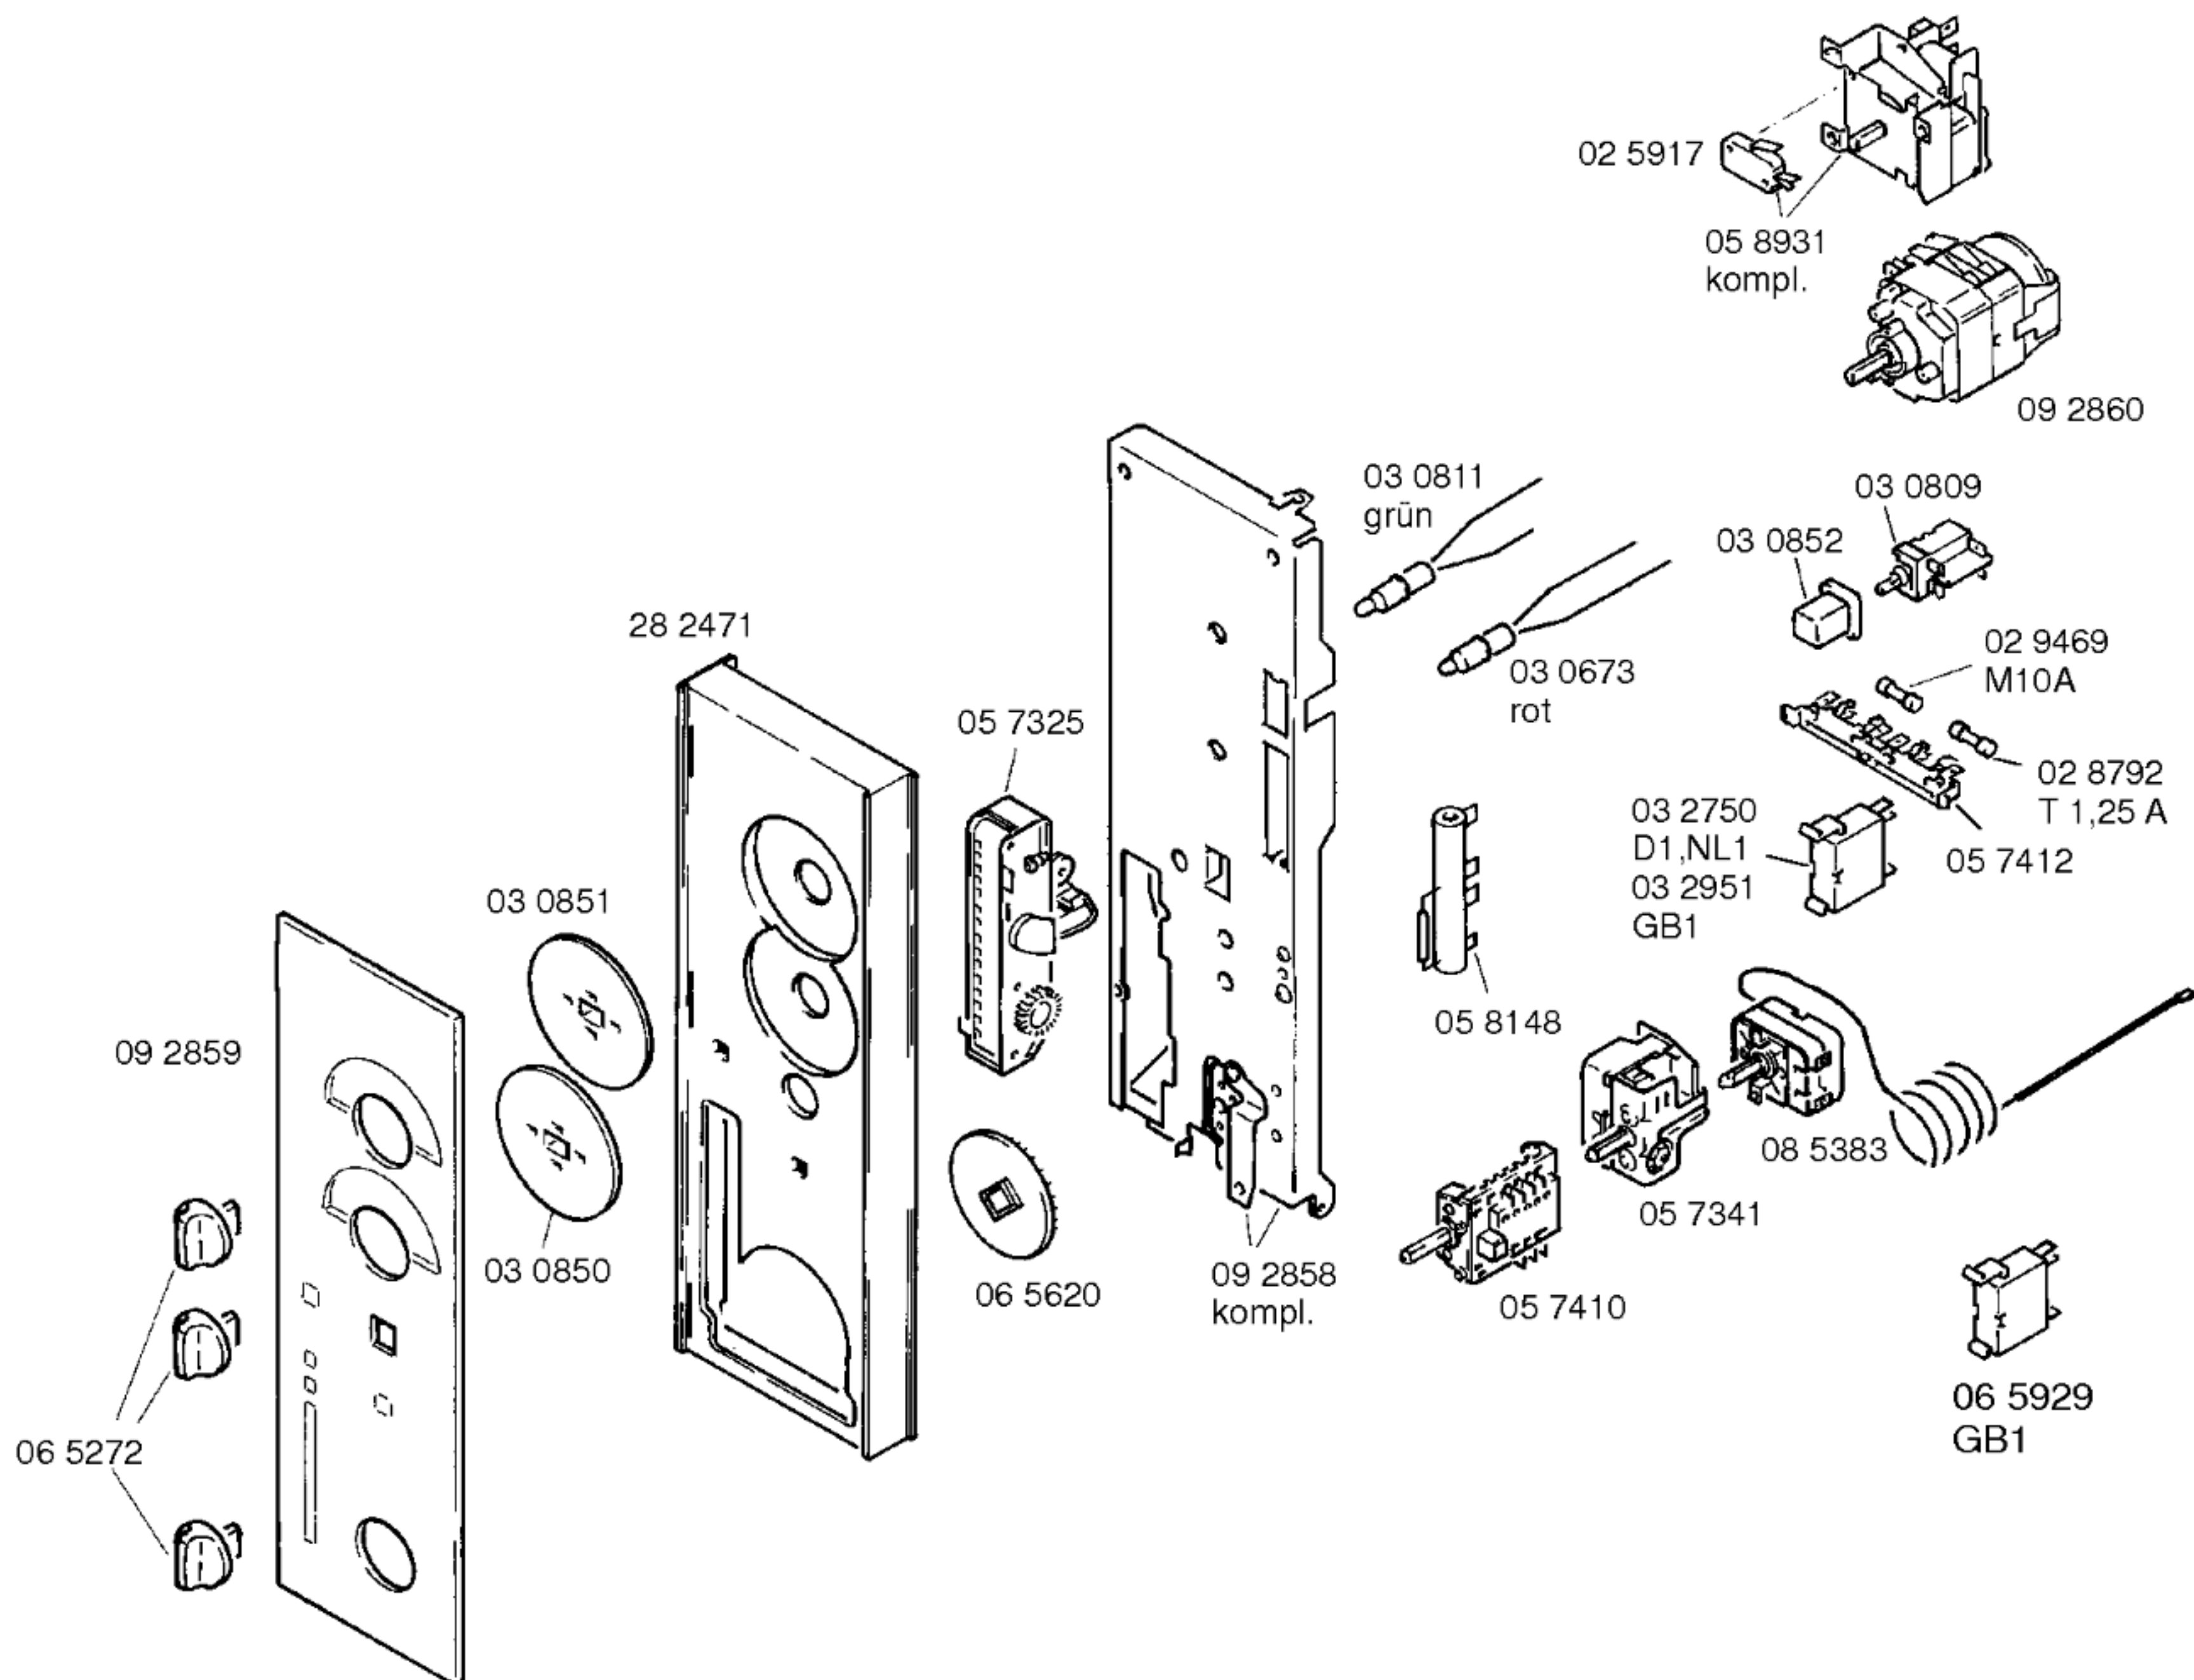


Gebrauchsanweisung

51 5832
(D,GB,NL)
D1,NL1
51 5930
(GB/10A)
GB1


Kurzanweisung
51 3973
(D)
Kochbuch
51 5833
(D)
51 5835
(GB)
51 5834
(NL)

Zubehör:

Einbaurahmen
HZ 67020
kratzfeste Abdeckung
HZ 67720
Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056
Glasbräter
HZ 9150

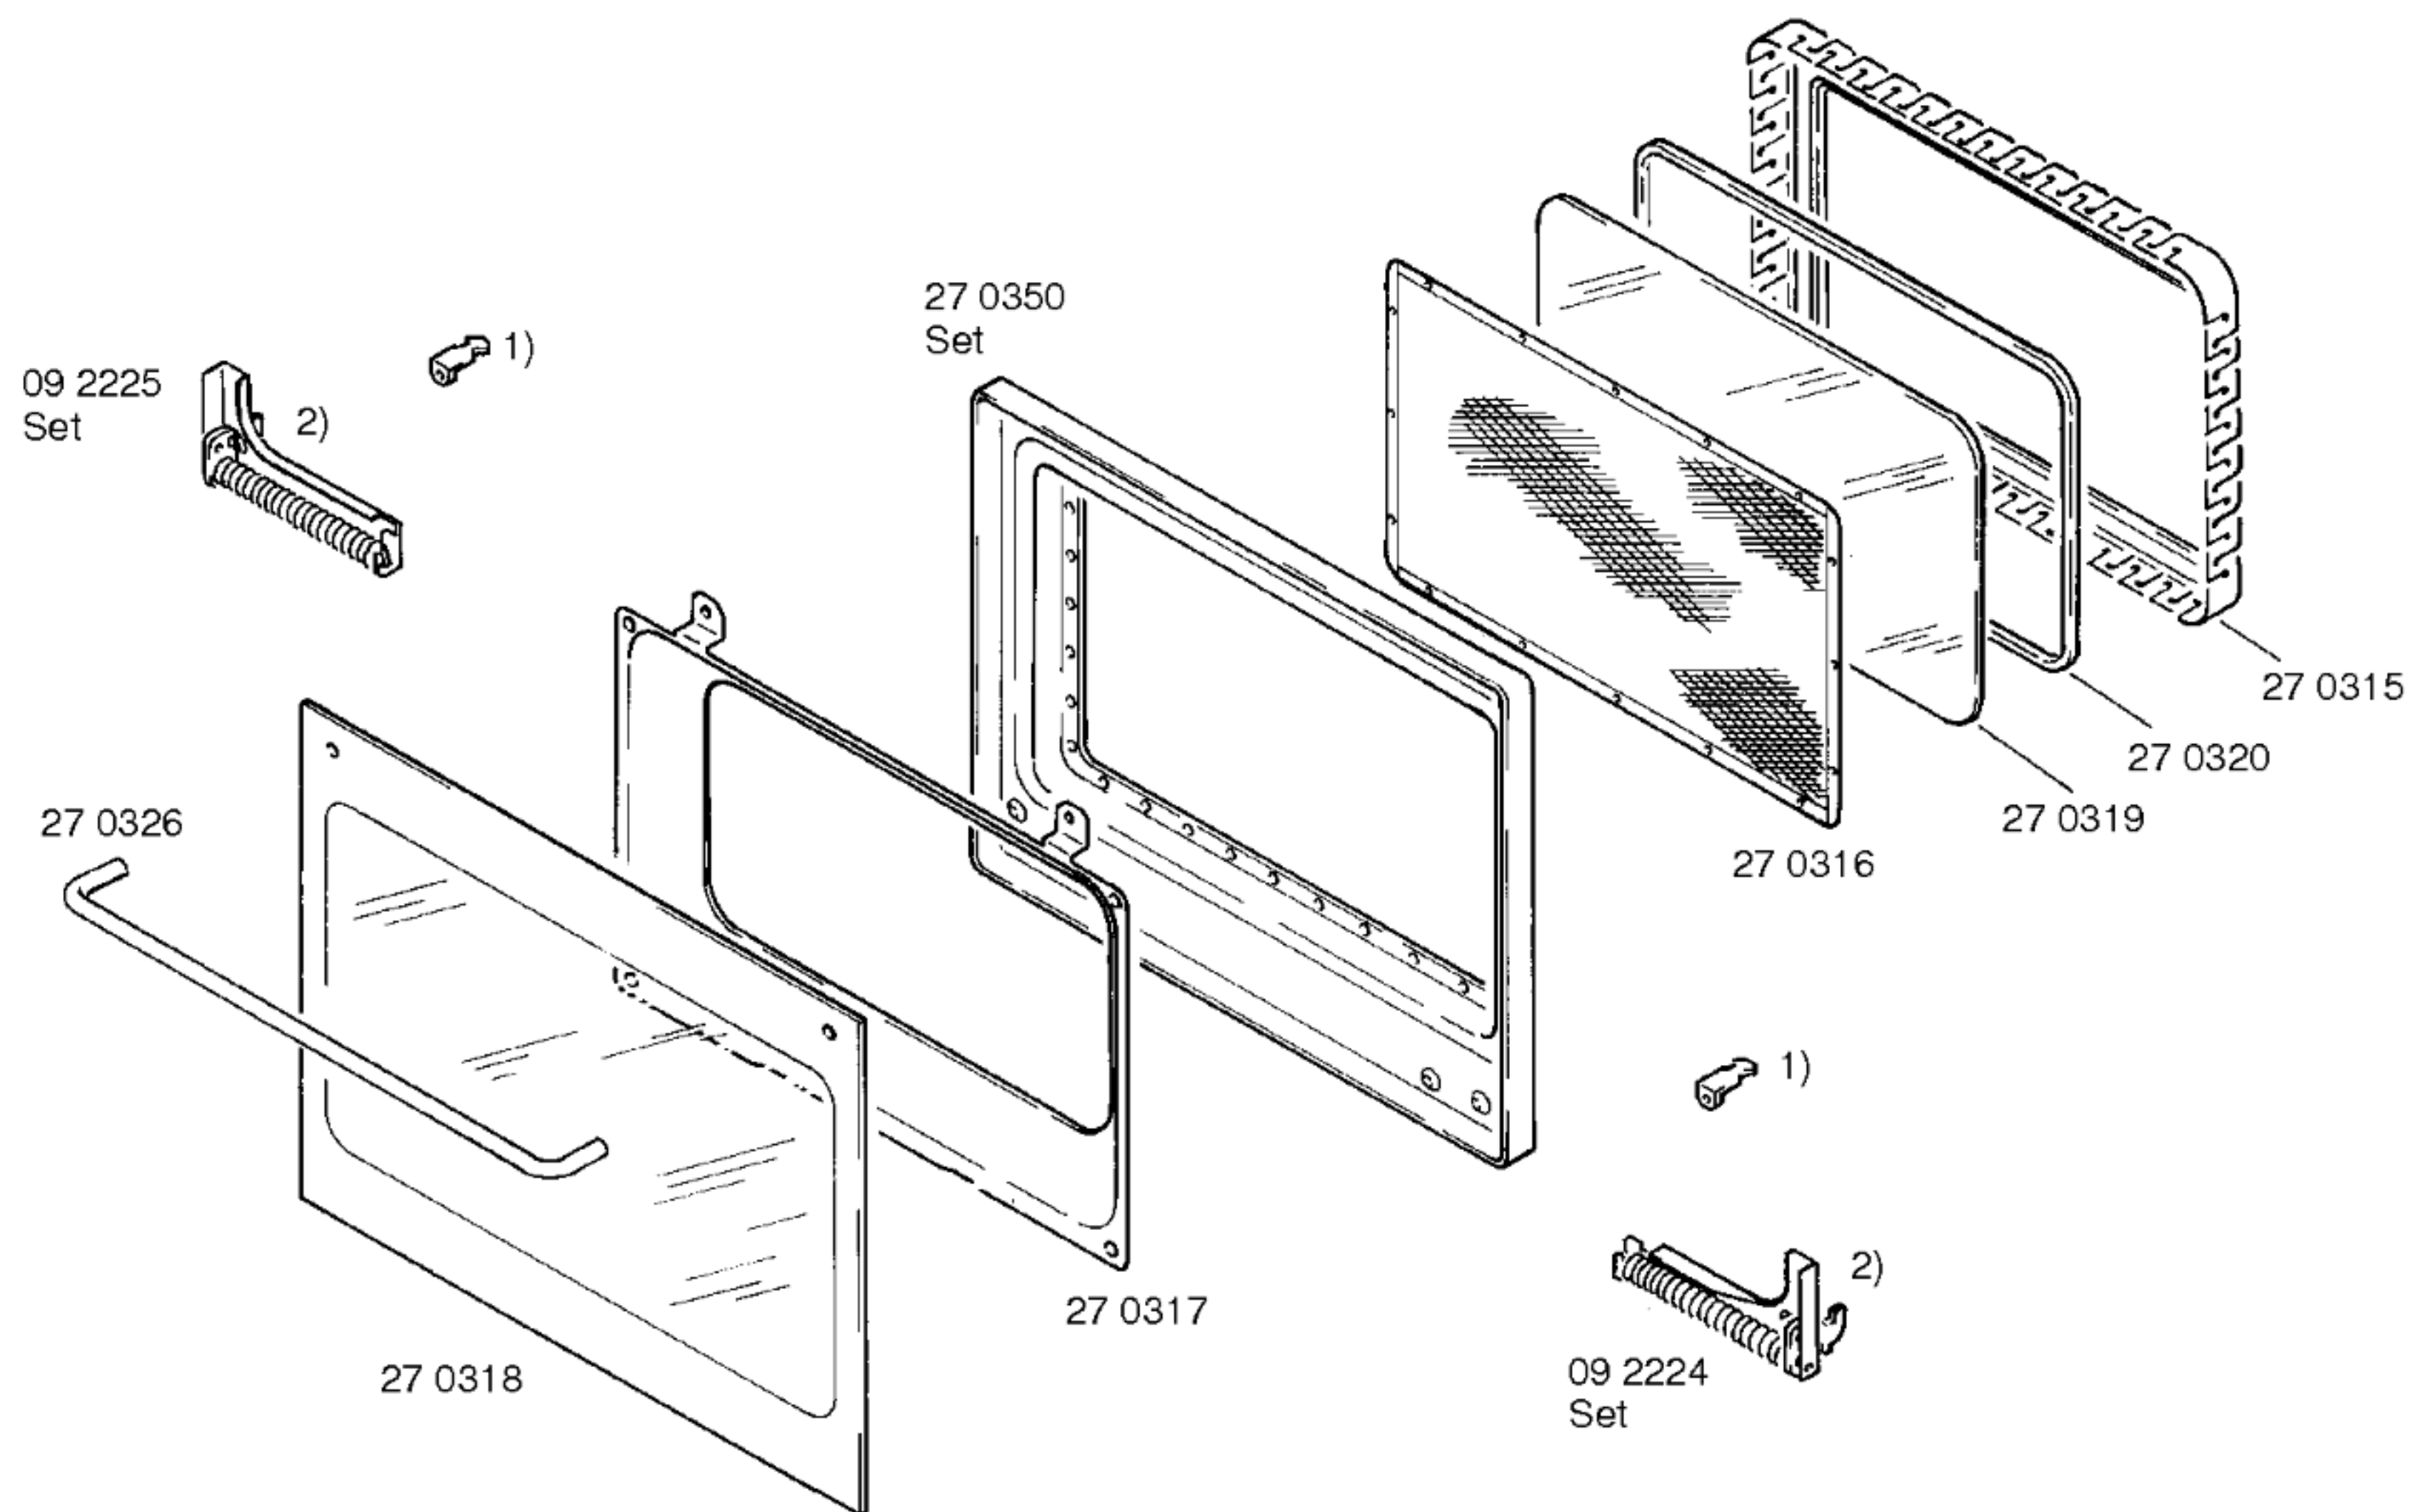

- 1) 03 0671
- 2) 03 0813
- Arretierstifte

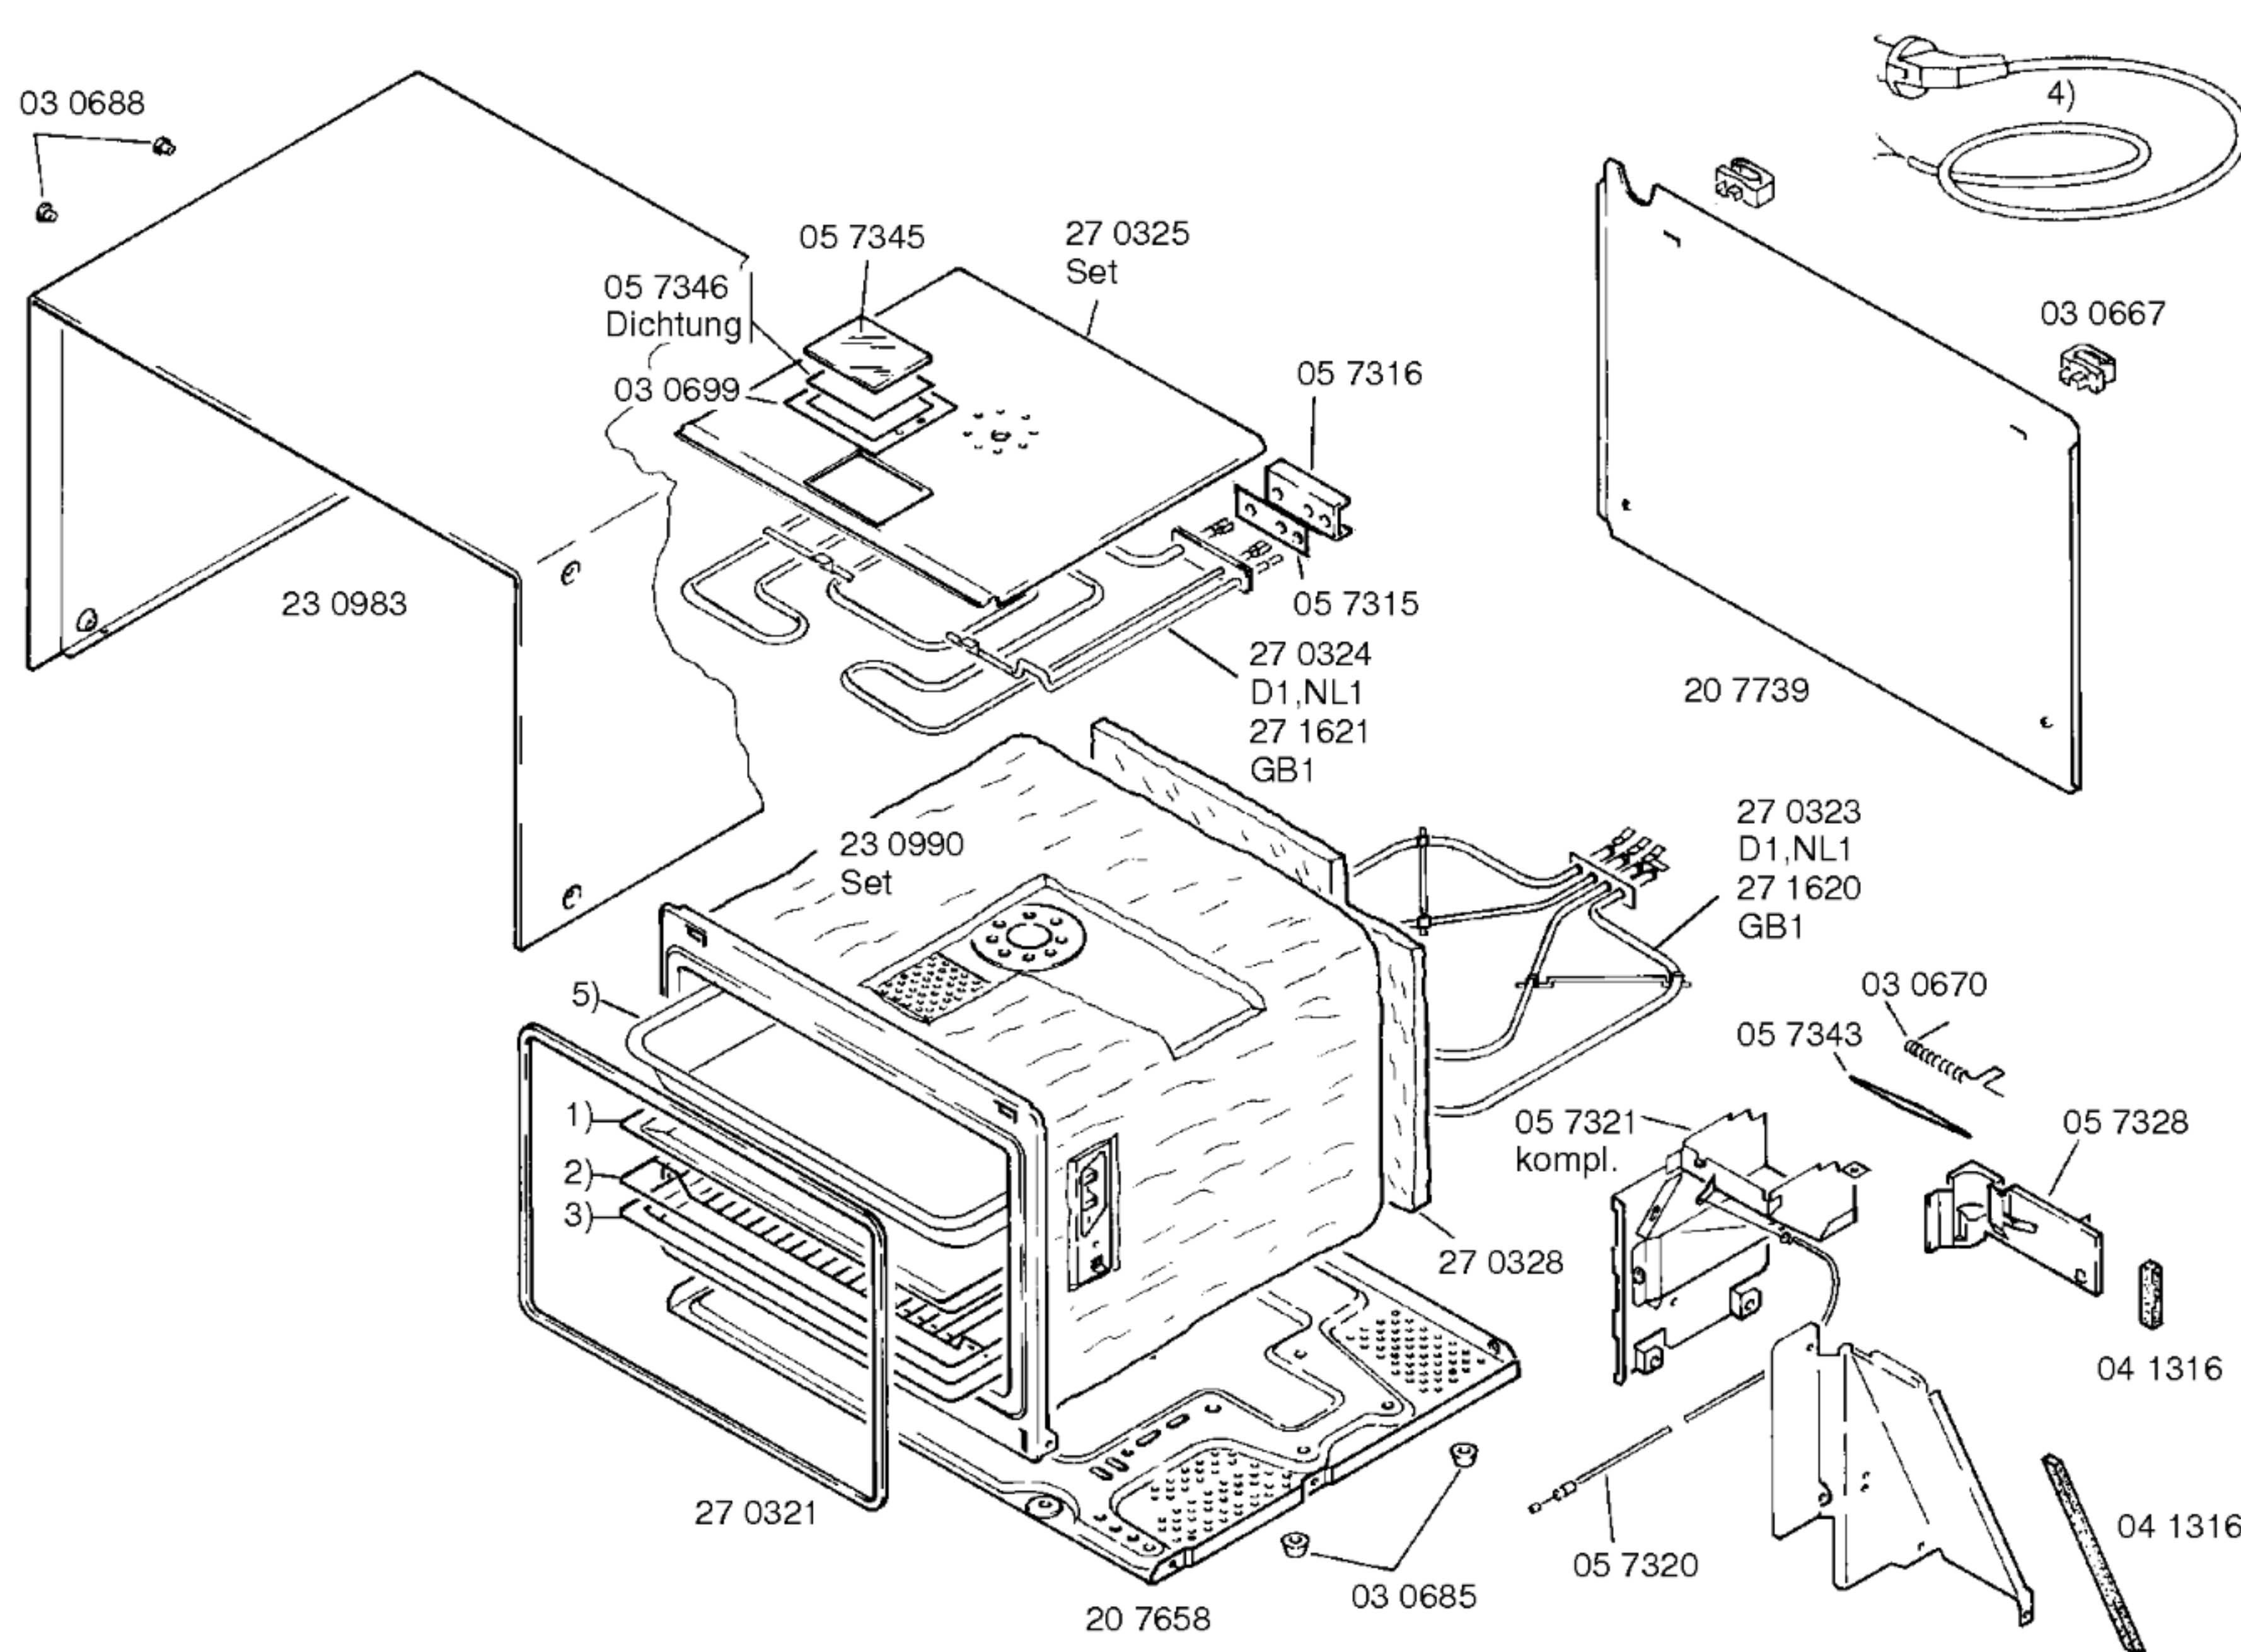

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
- 4) 08 8694
NL1,D1
09 2862
GB1
- 5) 27 3844
Kombipfanne
- 02 8732
Anschlag-Backblech

