


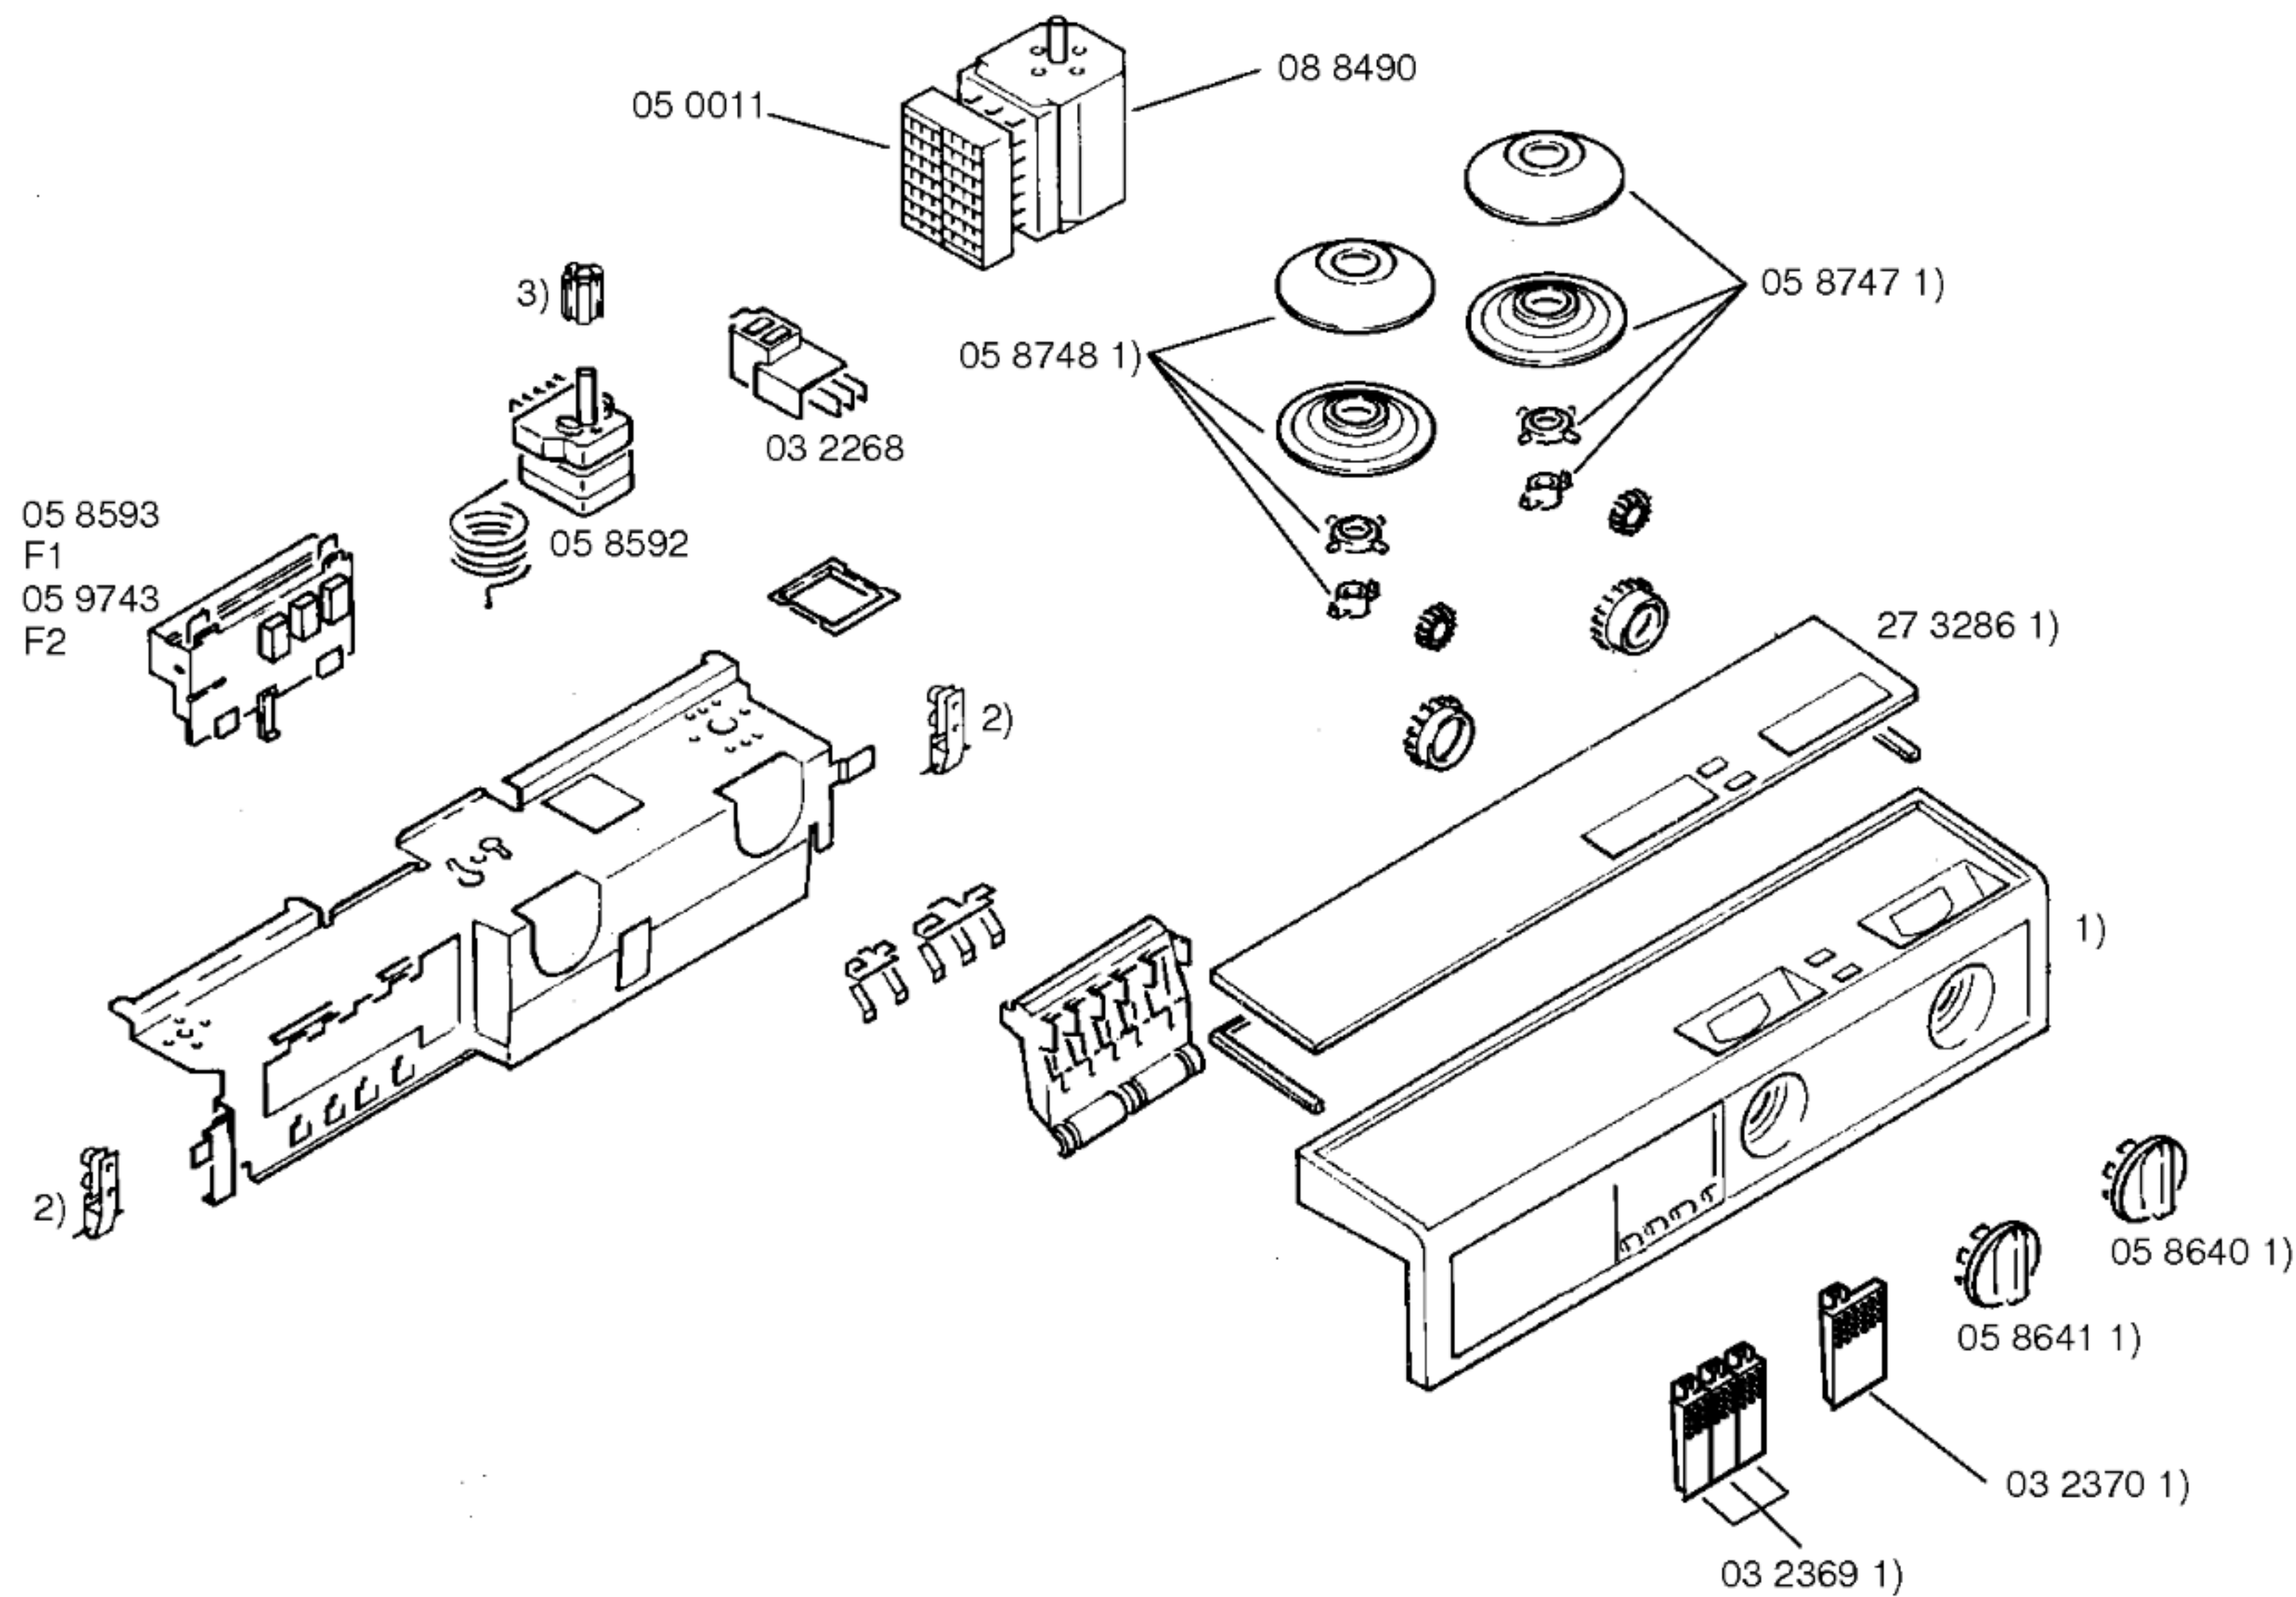



Gebrauchsanweisung
51 4837
(F)

Aufstellanweisung
51 4750
(D,GB,F,I,NL,E)

Programmtabelle
51 4838
(F)

- 1) 27 3285
Blende kompl.
- 2) 03 2288
- 3) 05 9694

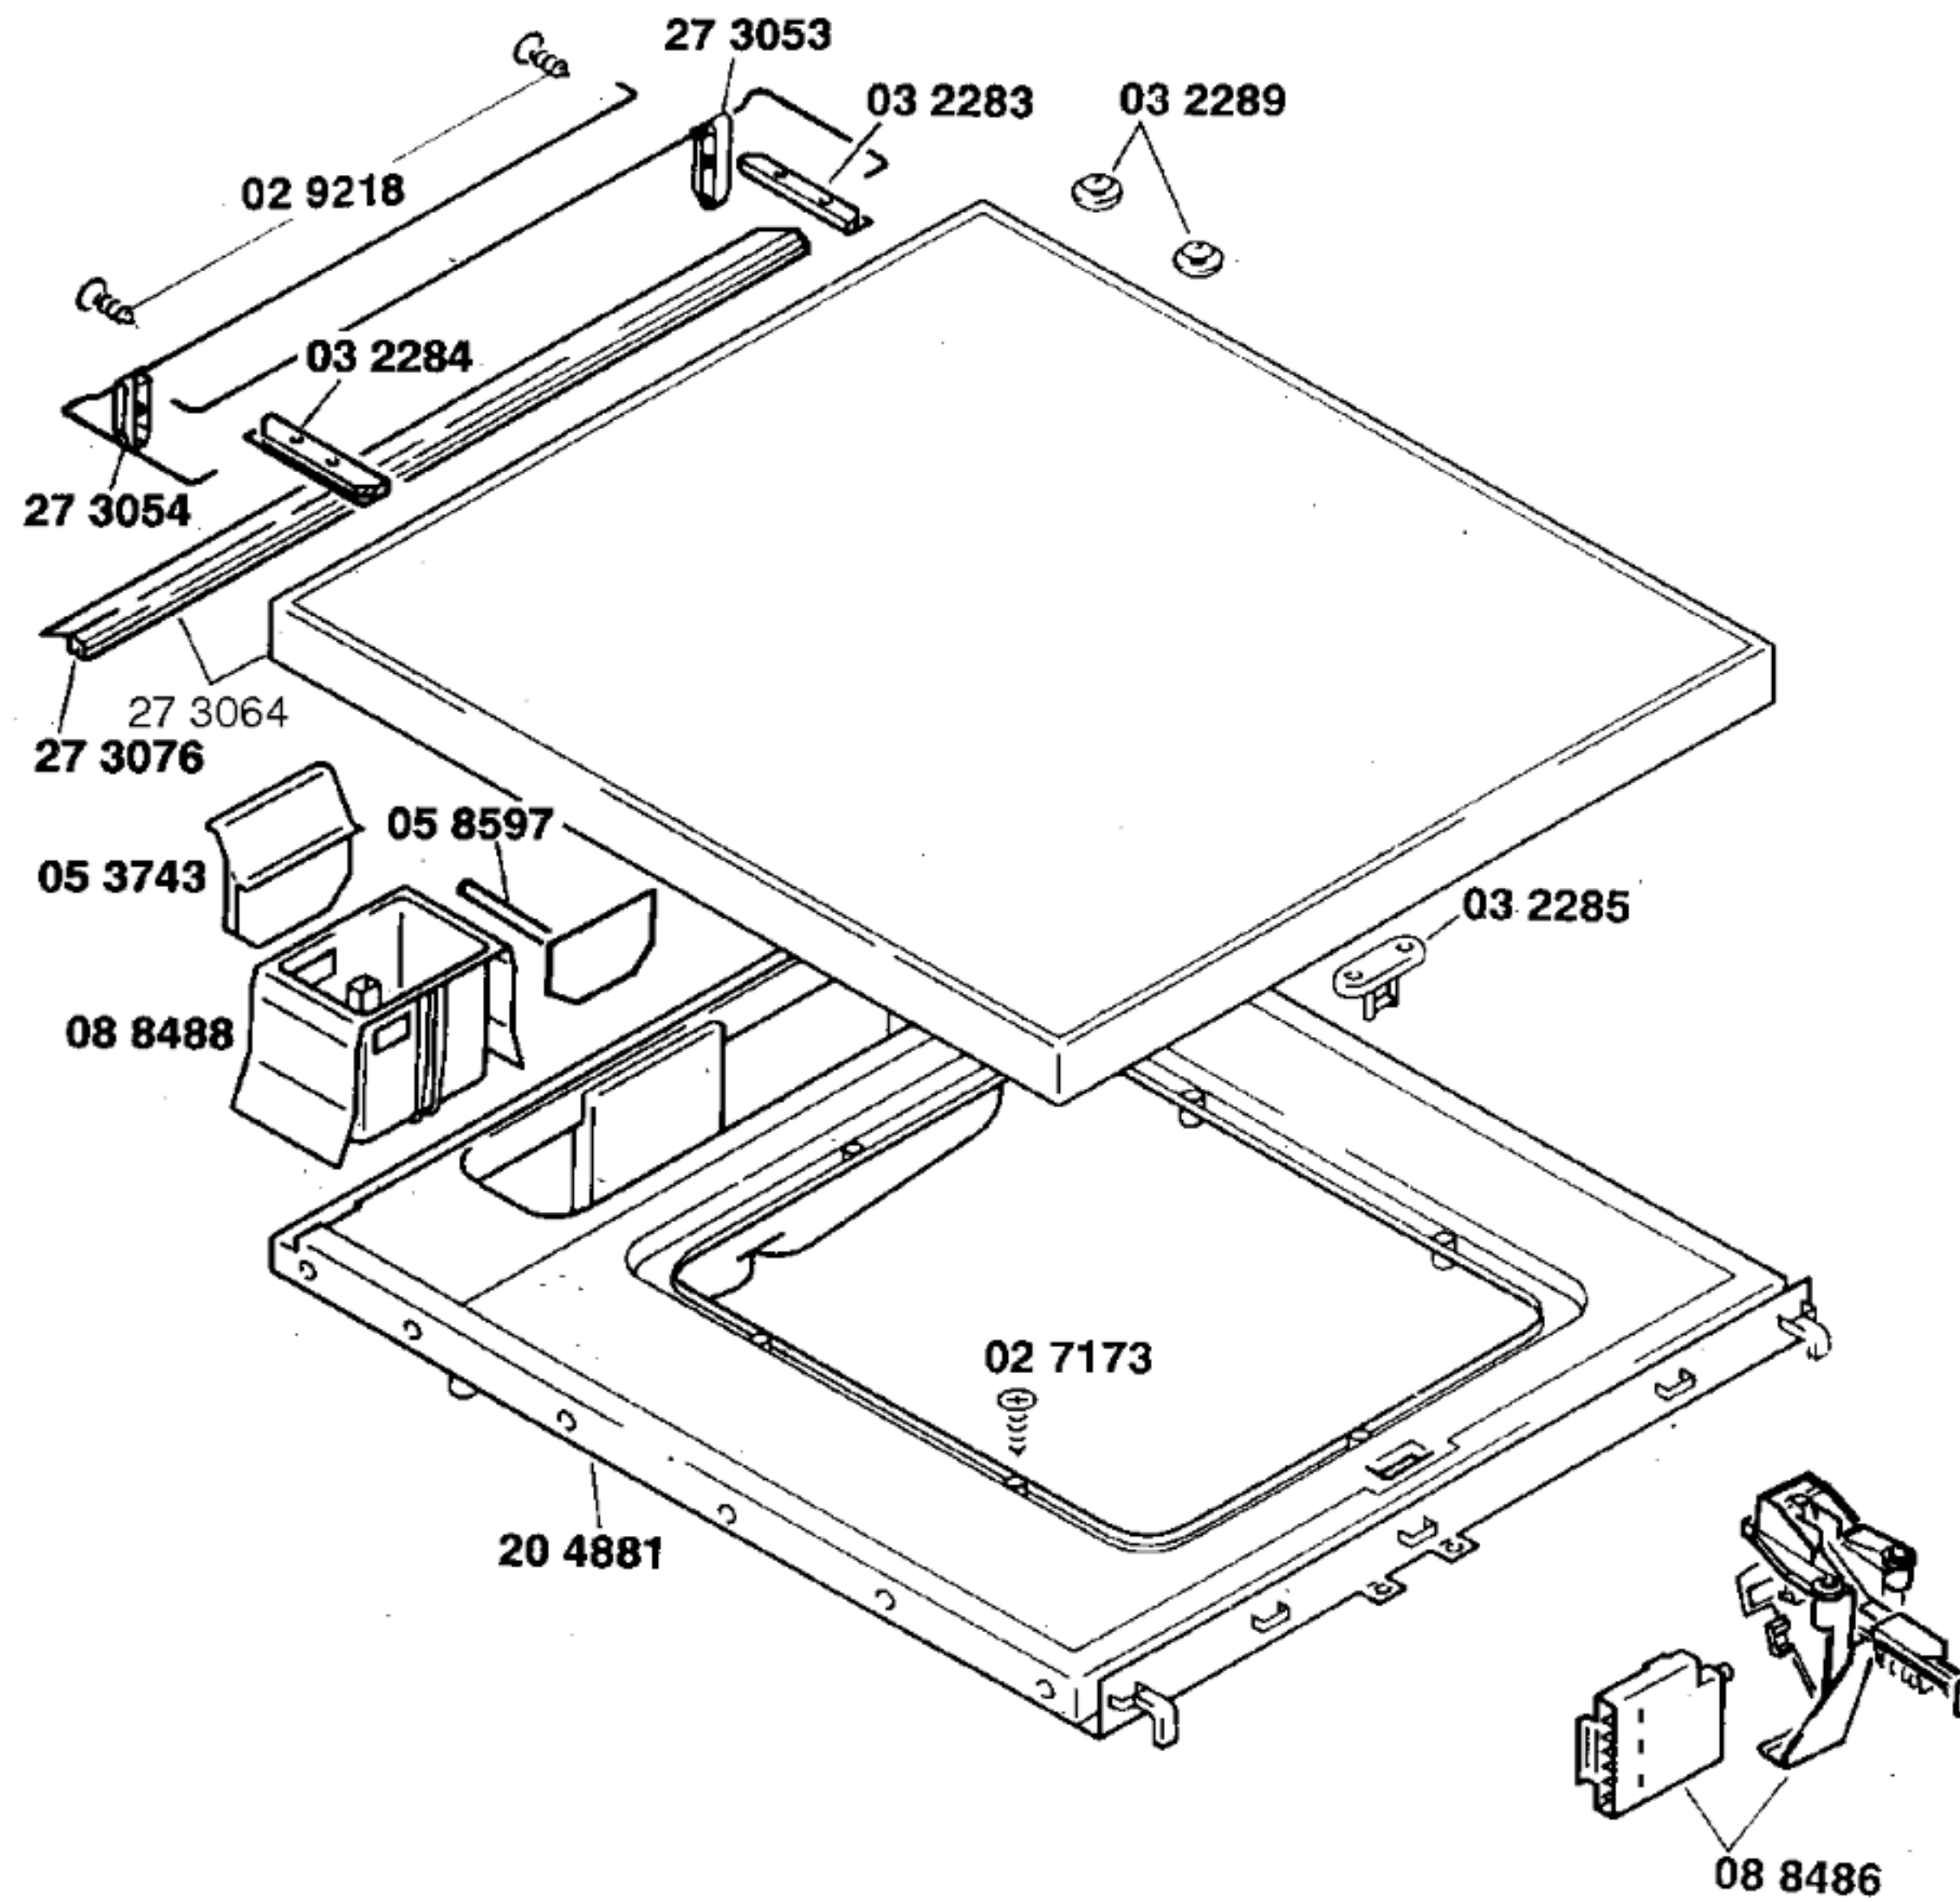

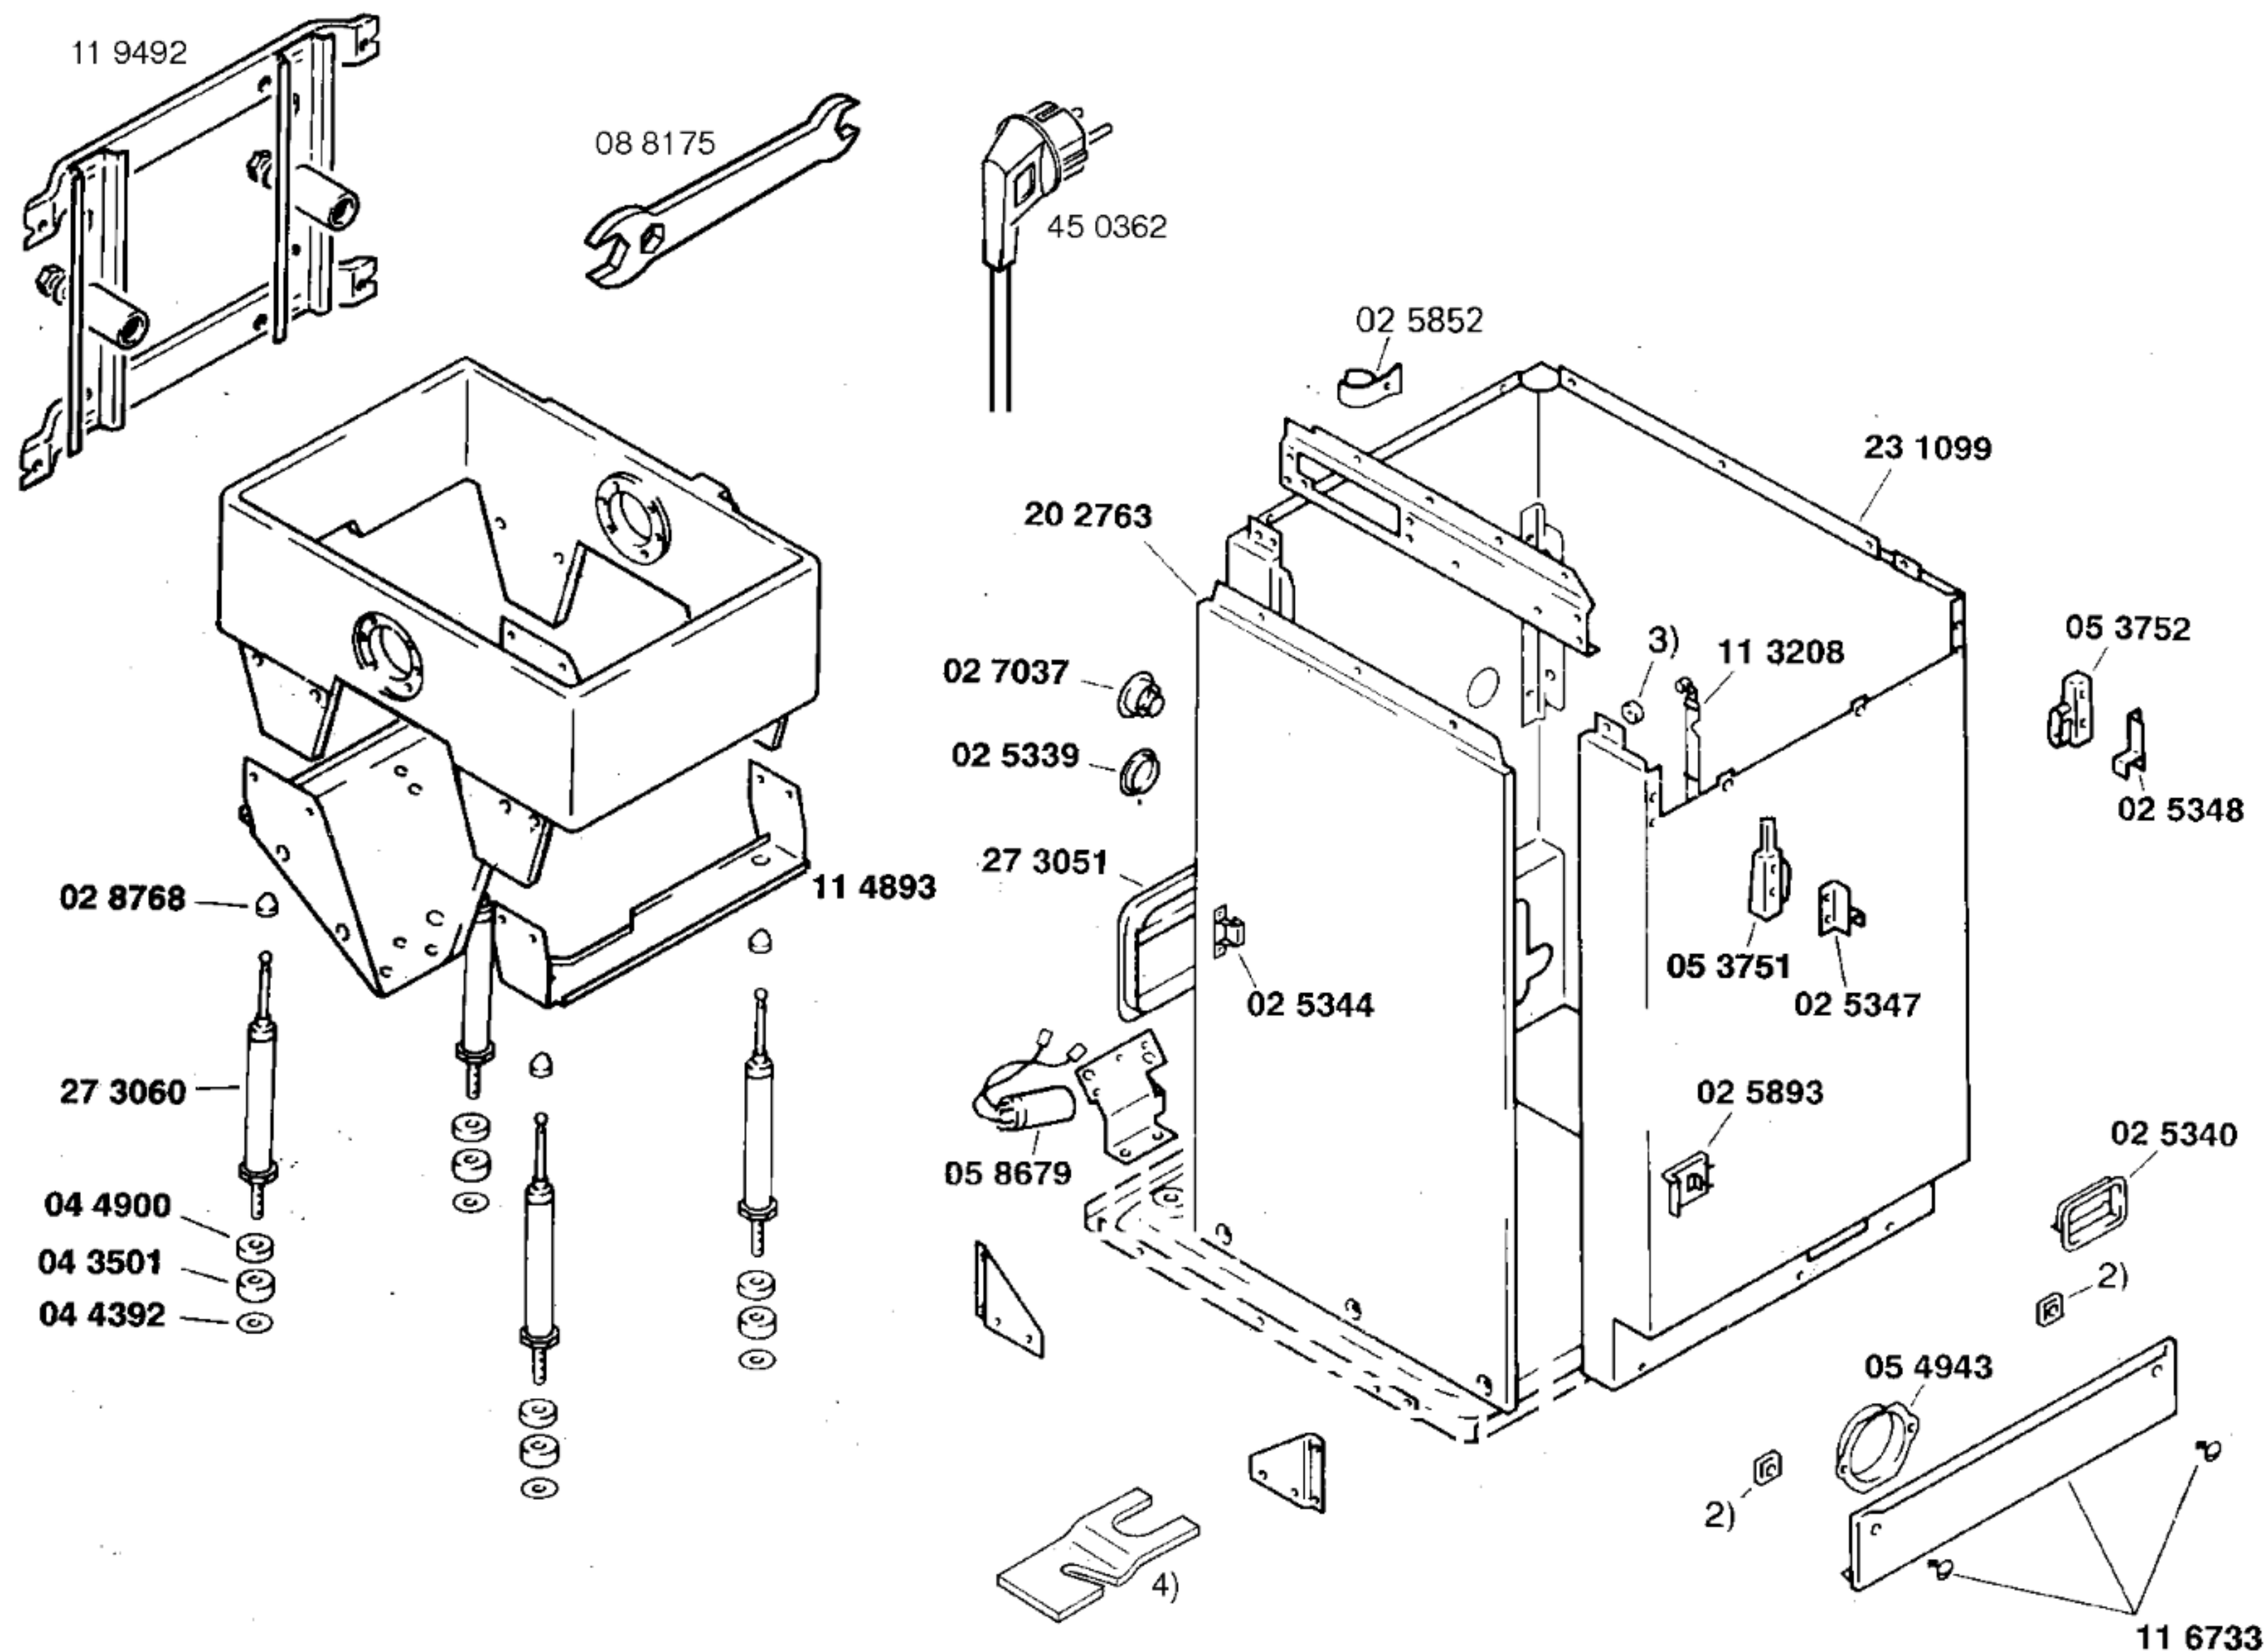

2) 01 4687

3) 02 5345

4) 08 0451

Set

Zubehör:

Bodenbefestigung

WX 9756

Wäsche-Top

WZ 10120

