




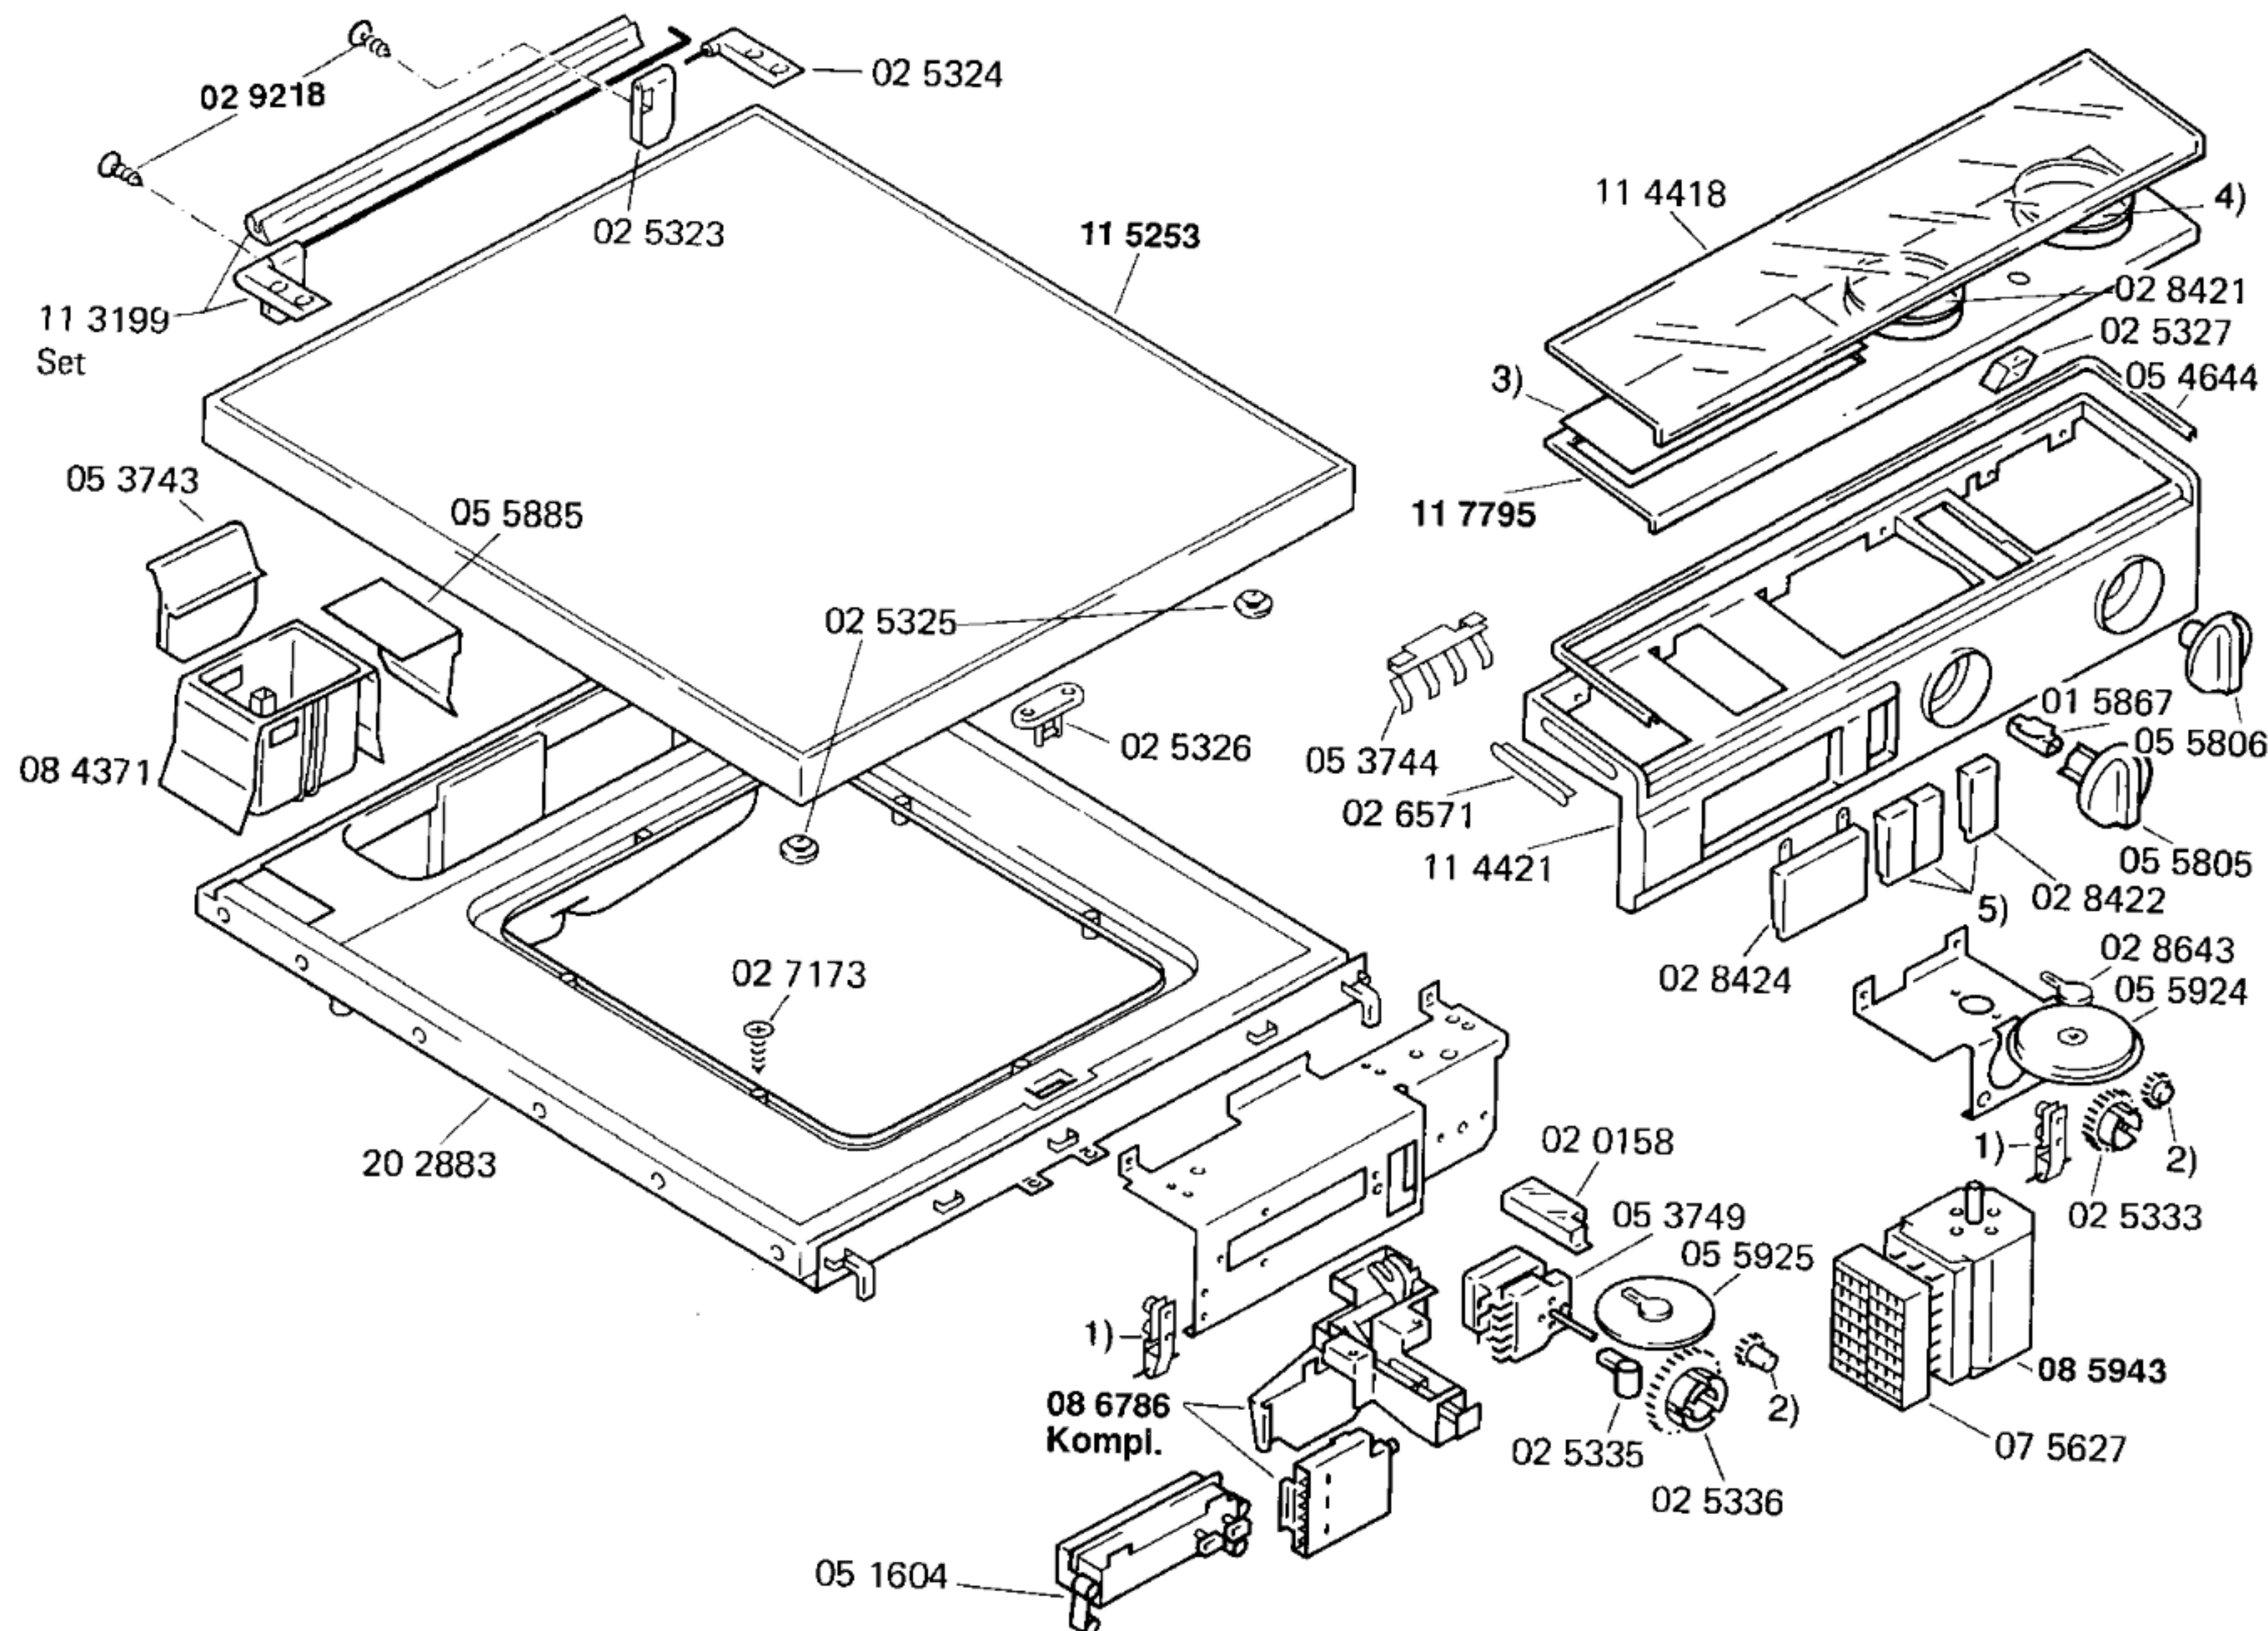


Aufstellanweisungen:
51 3182
(D,GB,F,I,NL,E)
51 1674
(D,I,S,DK,N,SF)
Gebrauchsanweisungen:
51 3180
(D,I,S,DK,N,SF)
51 3181
(F)
Programmtabellen:
51 3178
(D,GB,F,I,NL,E)
51 3177
(D,I,S,DK,N,SF)
51 3163
(TR,YU,GR,E)

- 1) 02 5334
- 2) 02 5332
- 3) 08 5638
(D,Symbole)
08 5639
(F,NL)
08 5640
(I,GB)
08 5641
(S,N)
08 5642
(SF,DK)
08 5643
(TR,YU)
08 5644
(GR,E)
- 4) 02 8641
- 5) 02 8639
Set

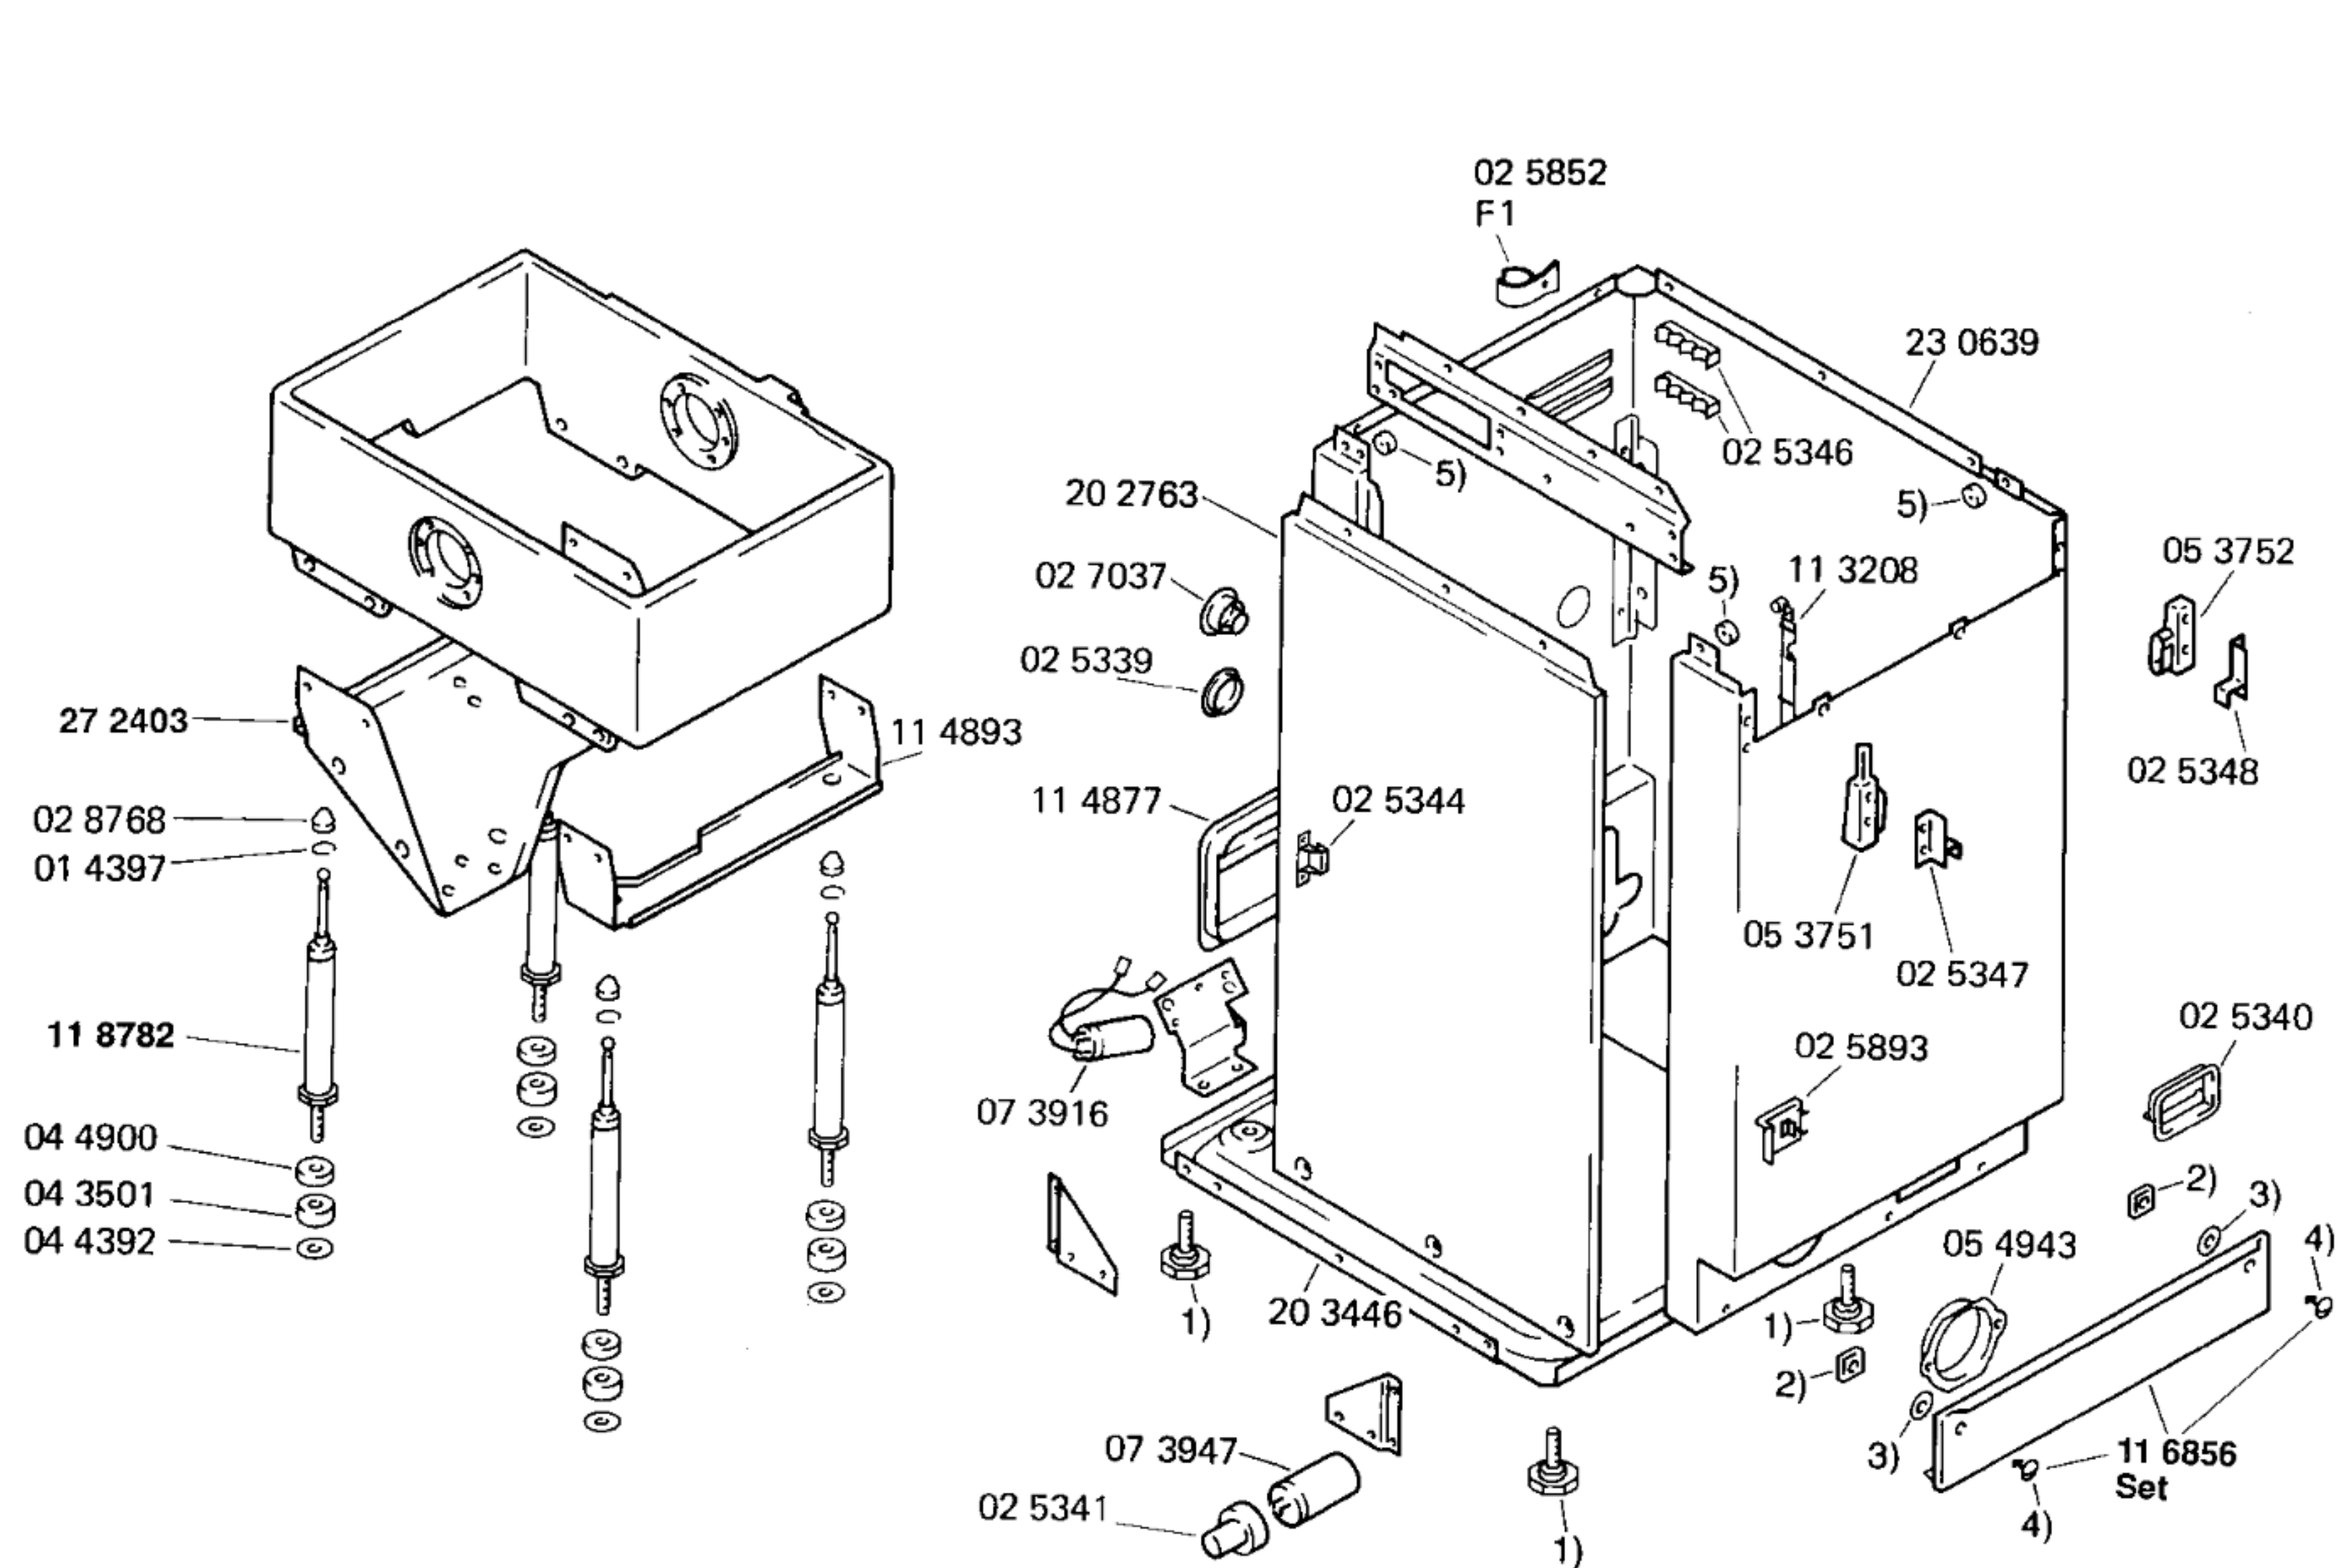

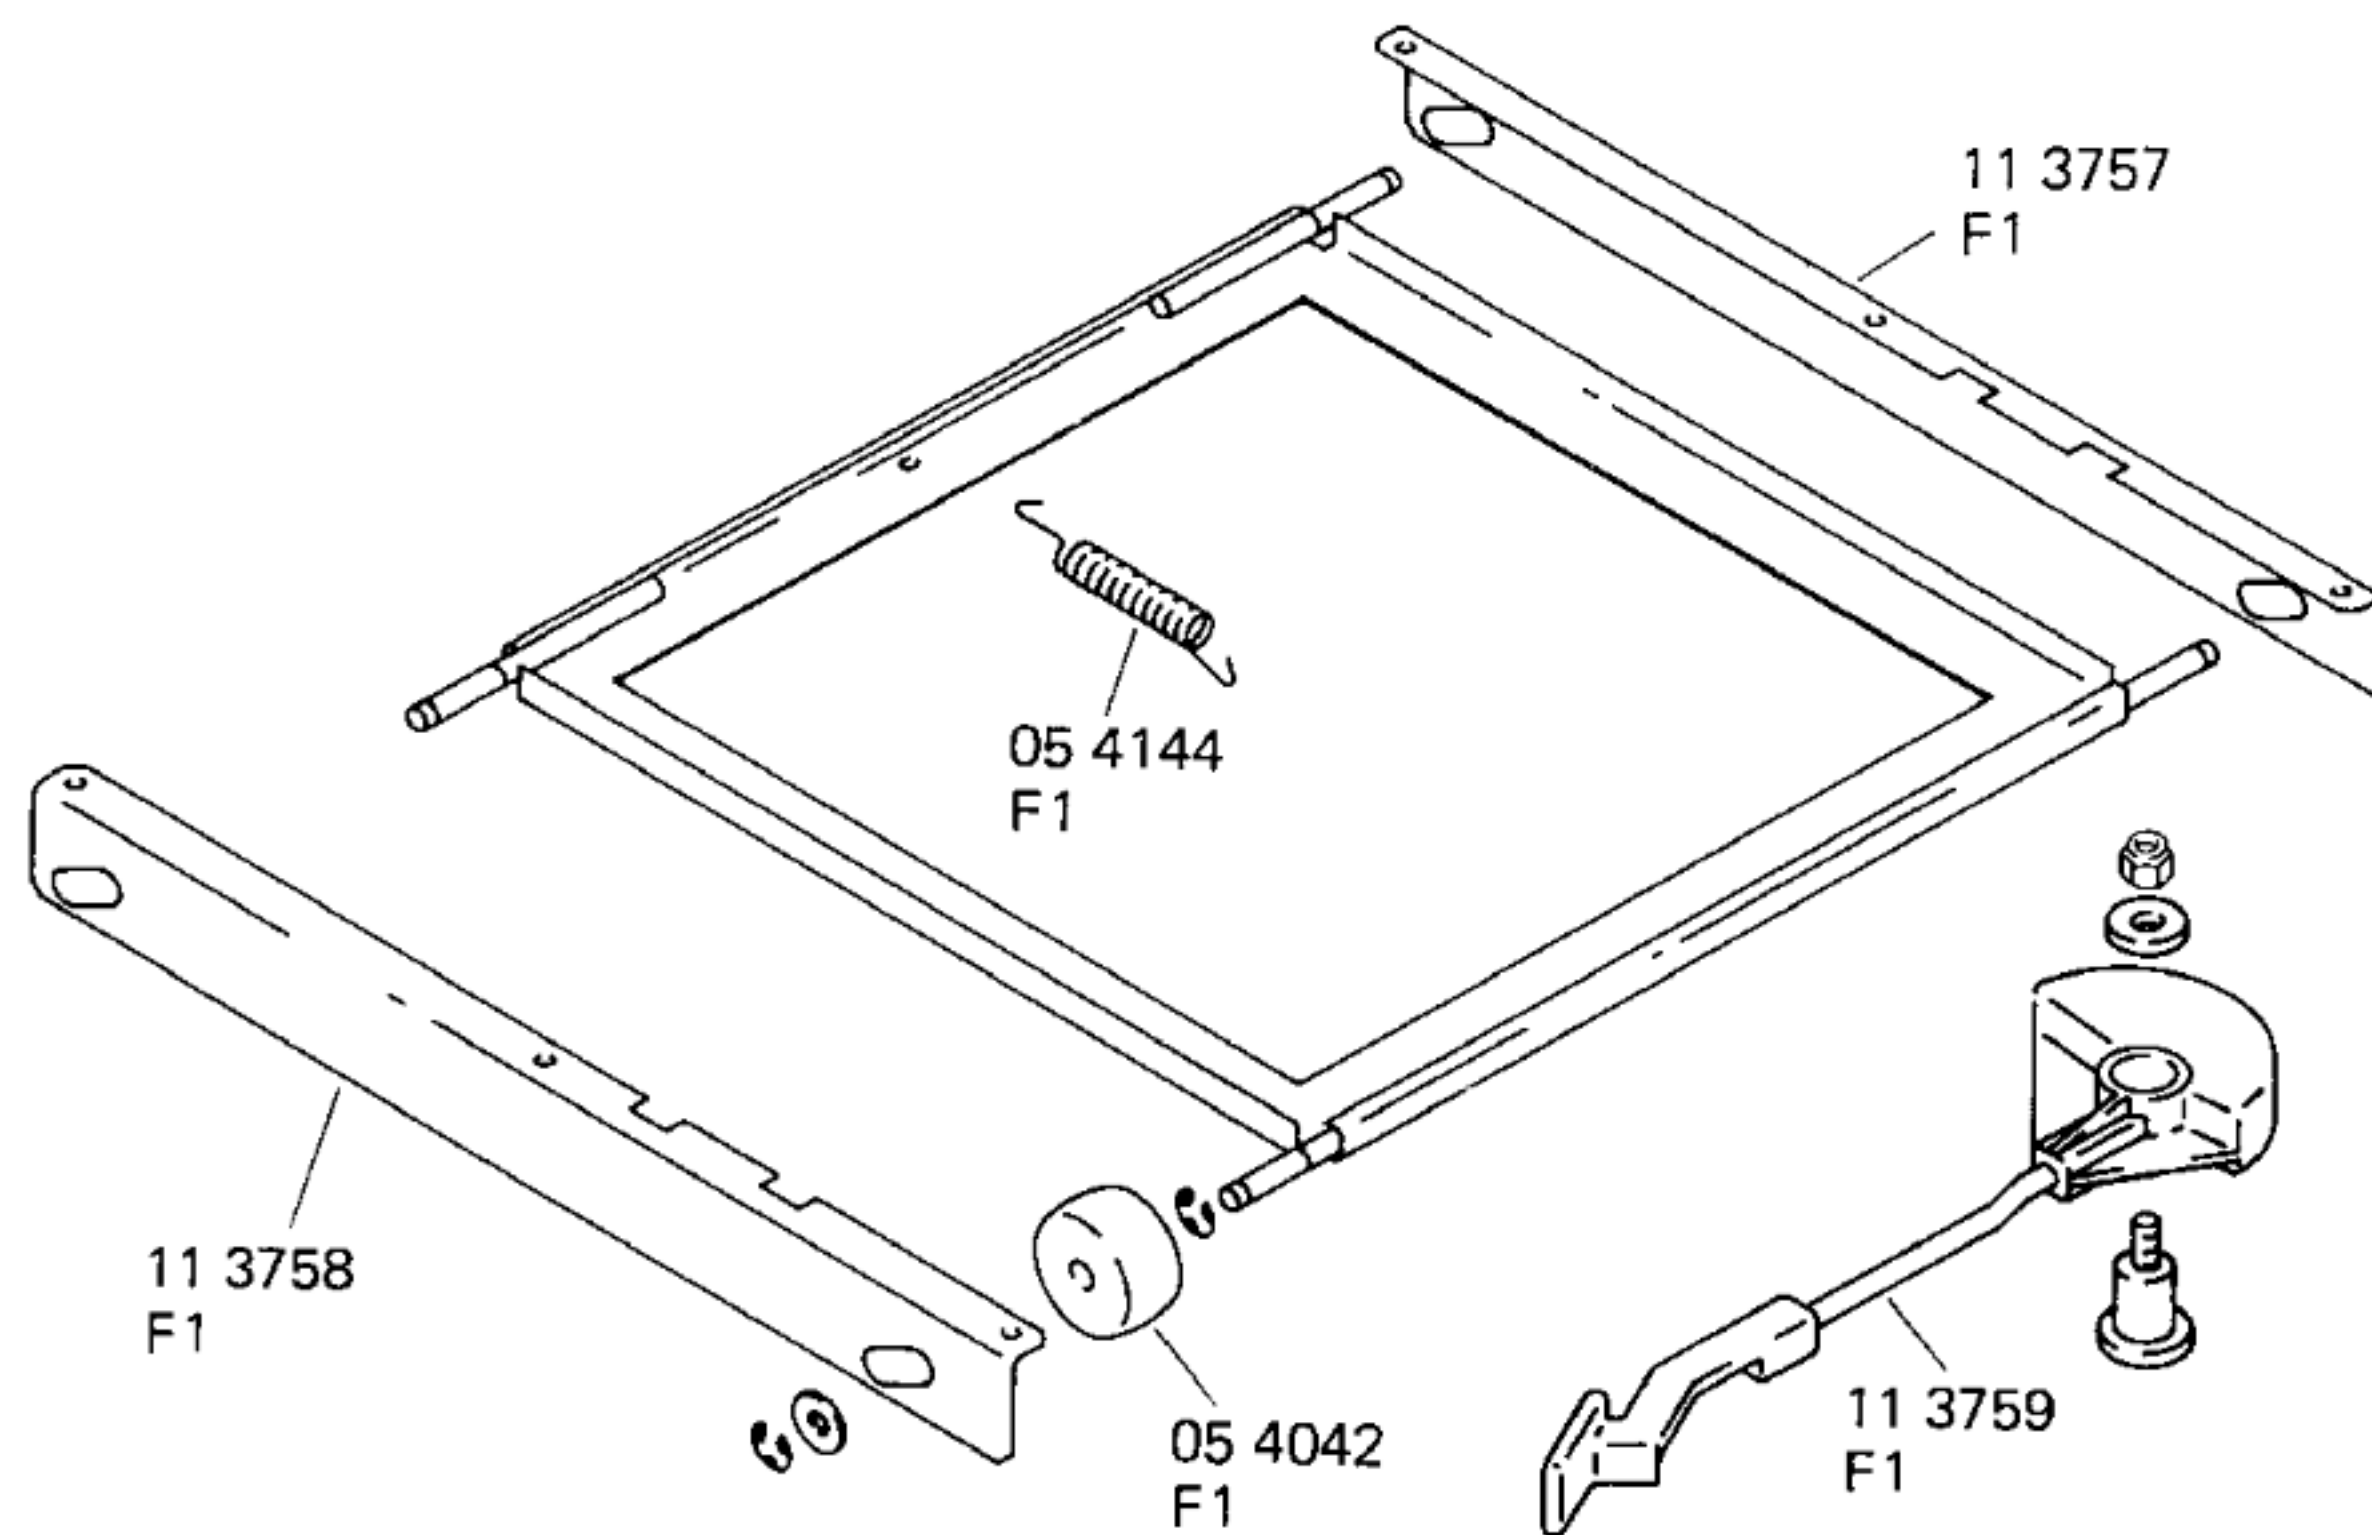

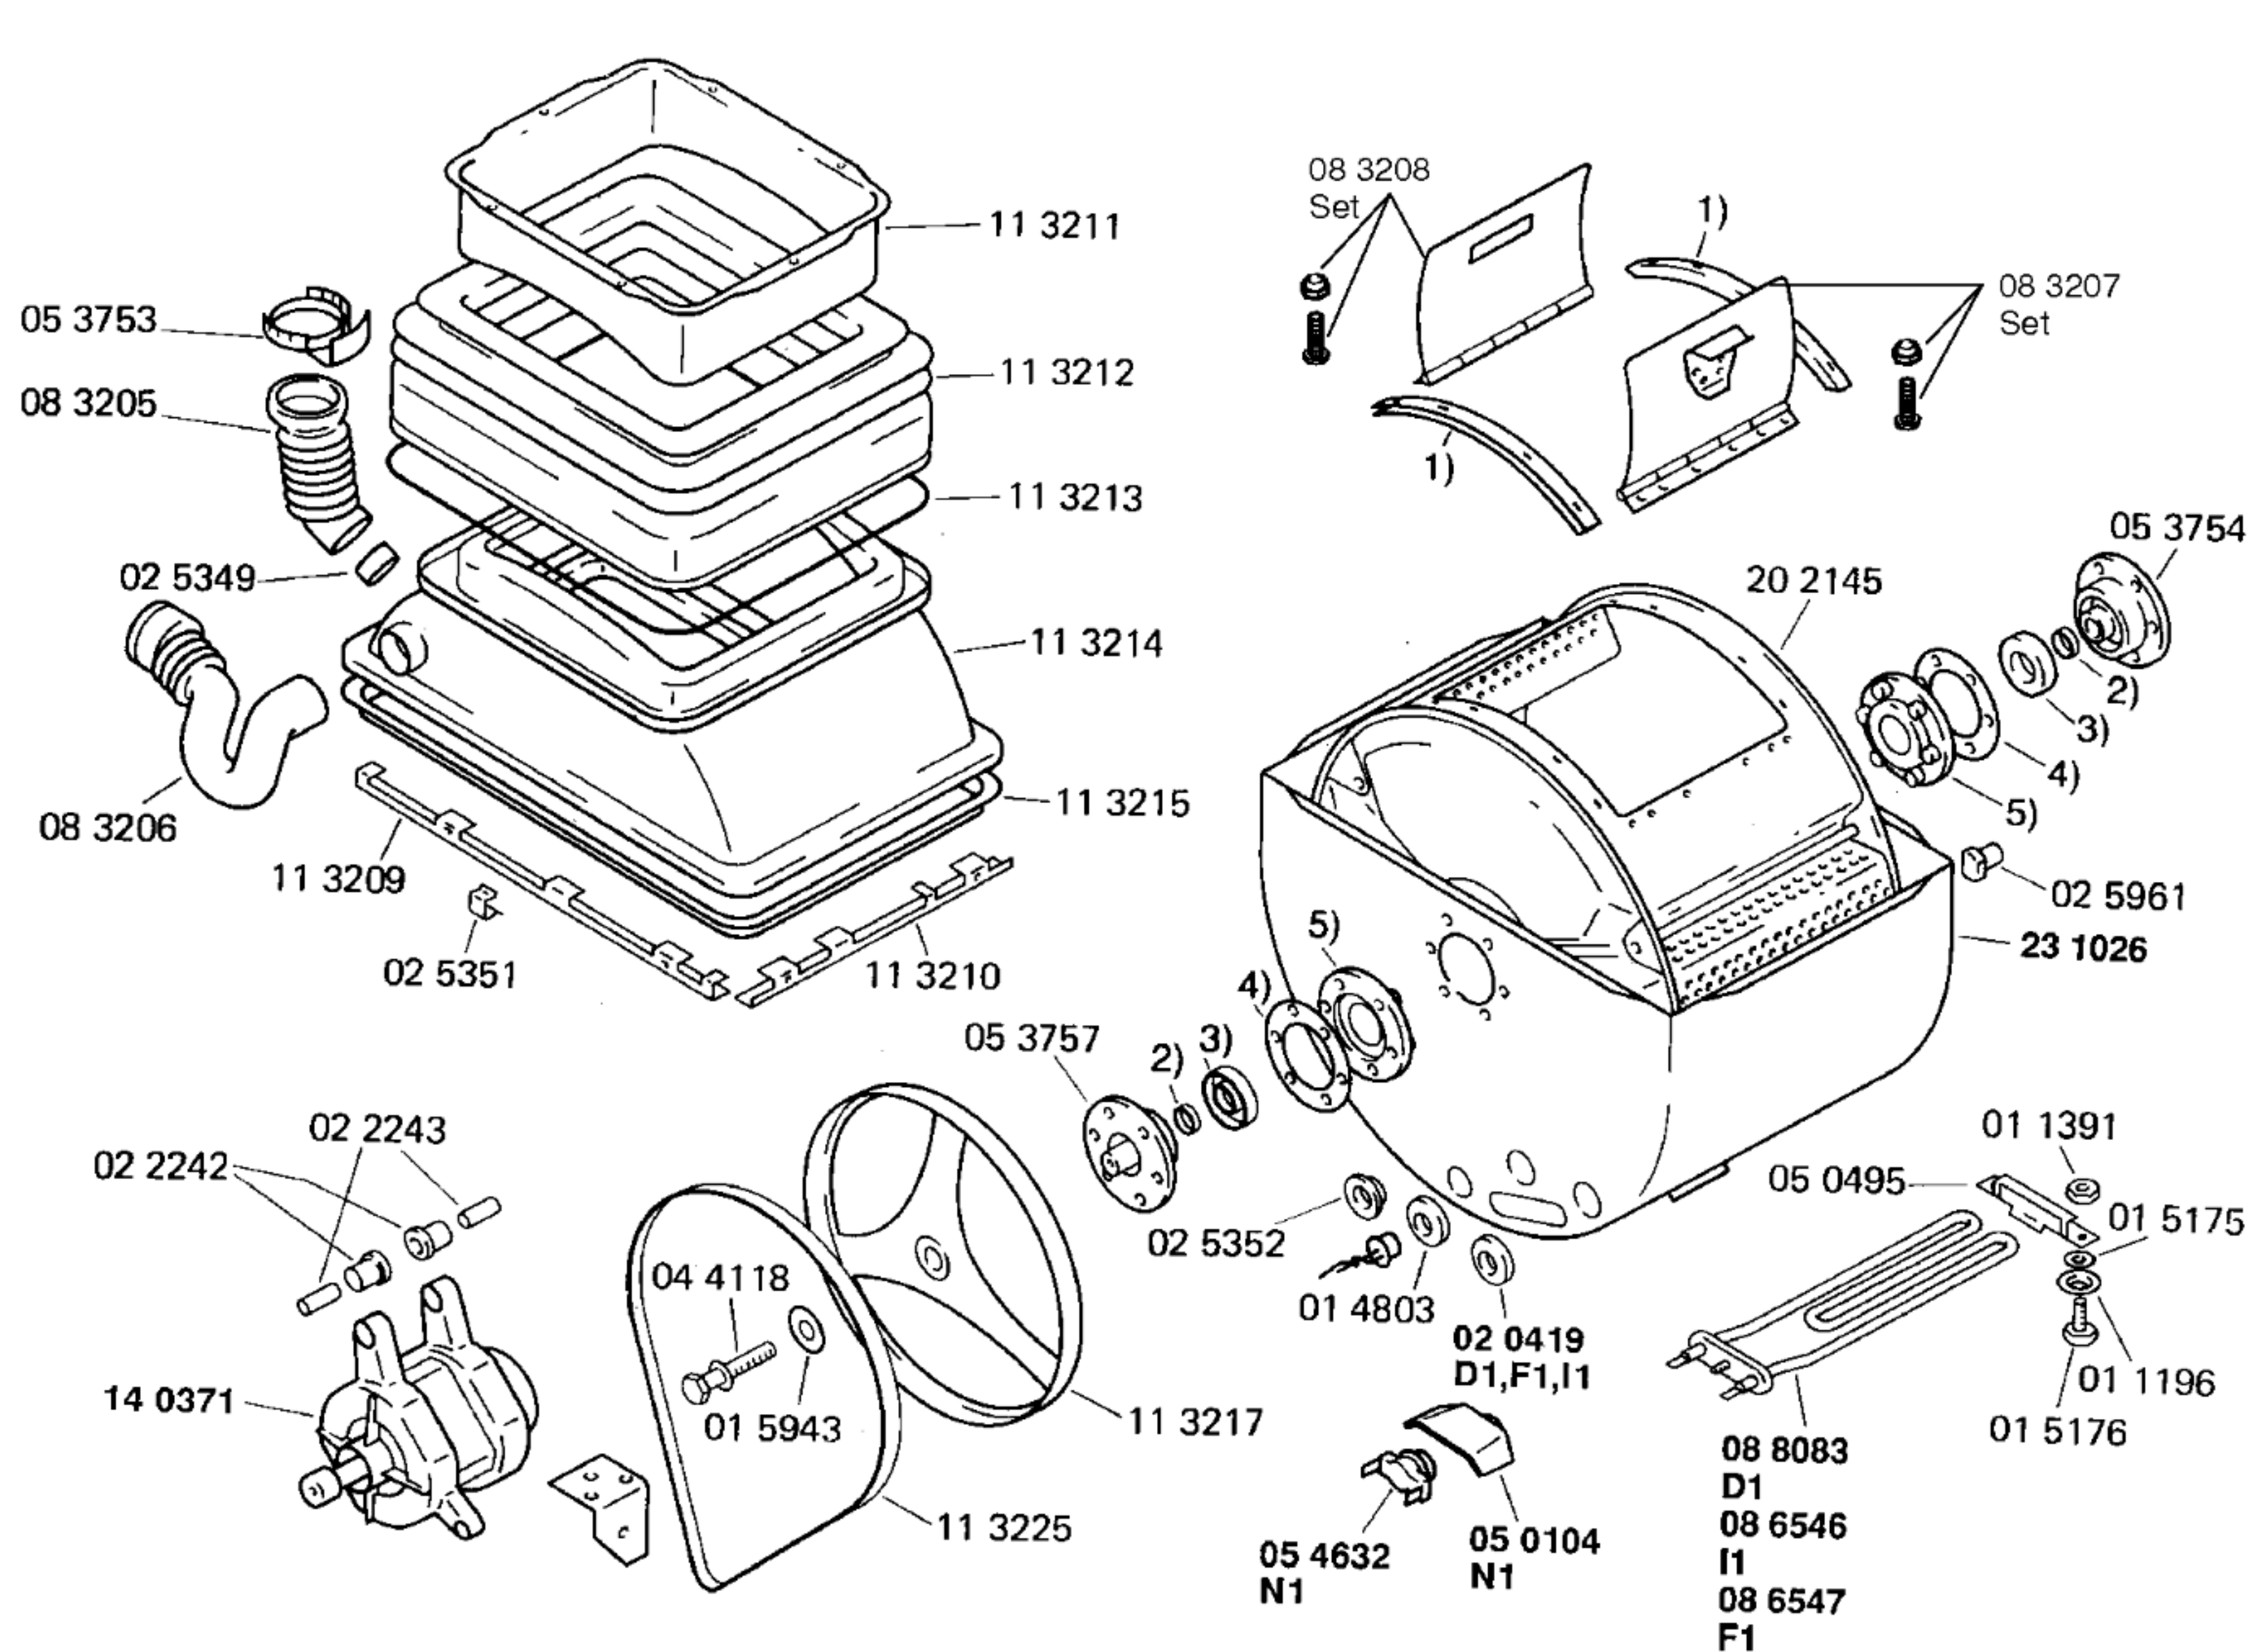

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756

