



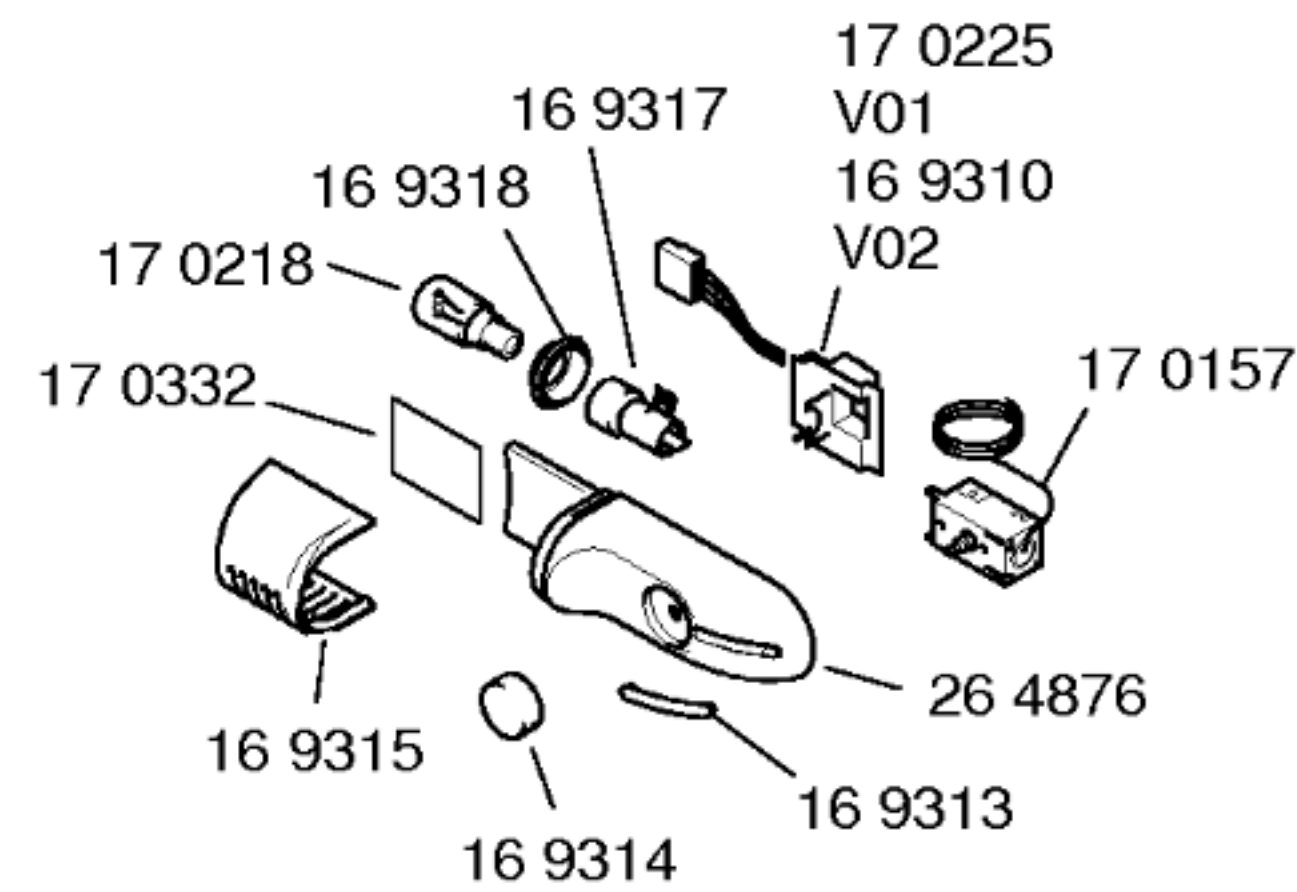

07 4445

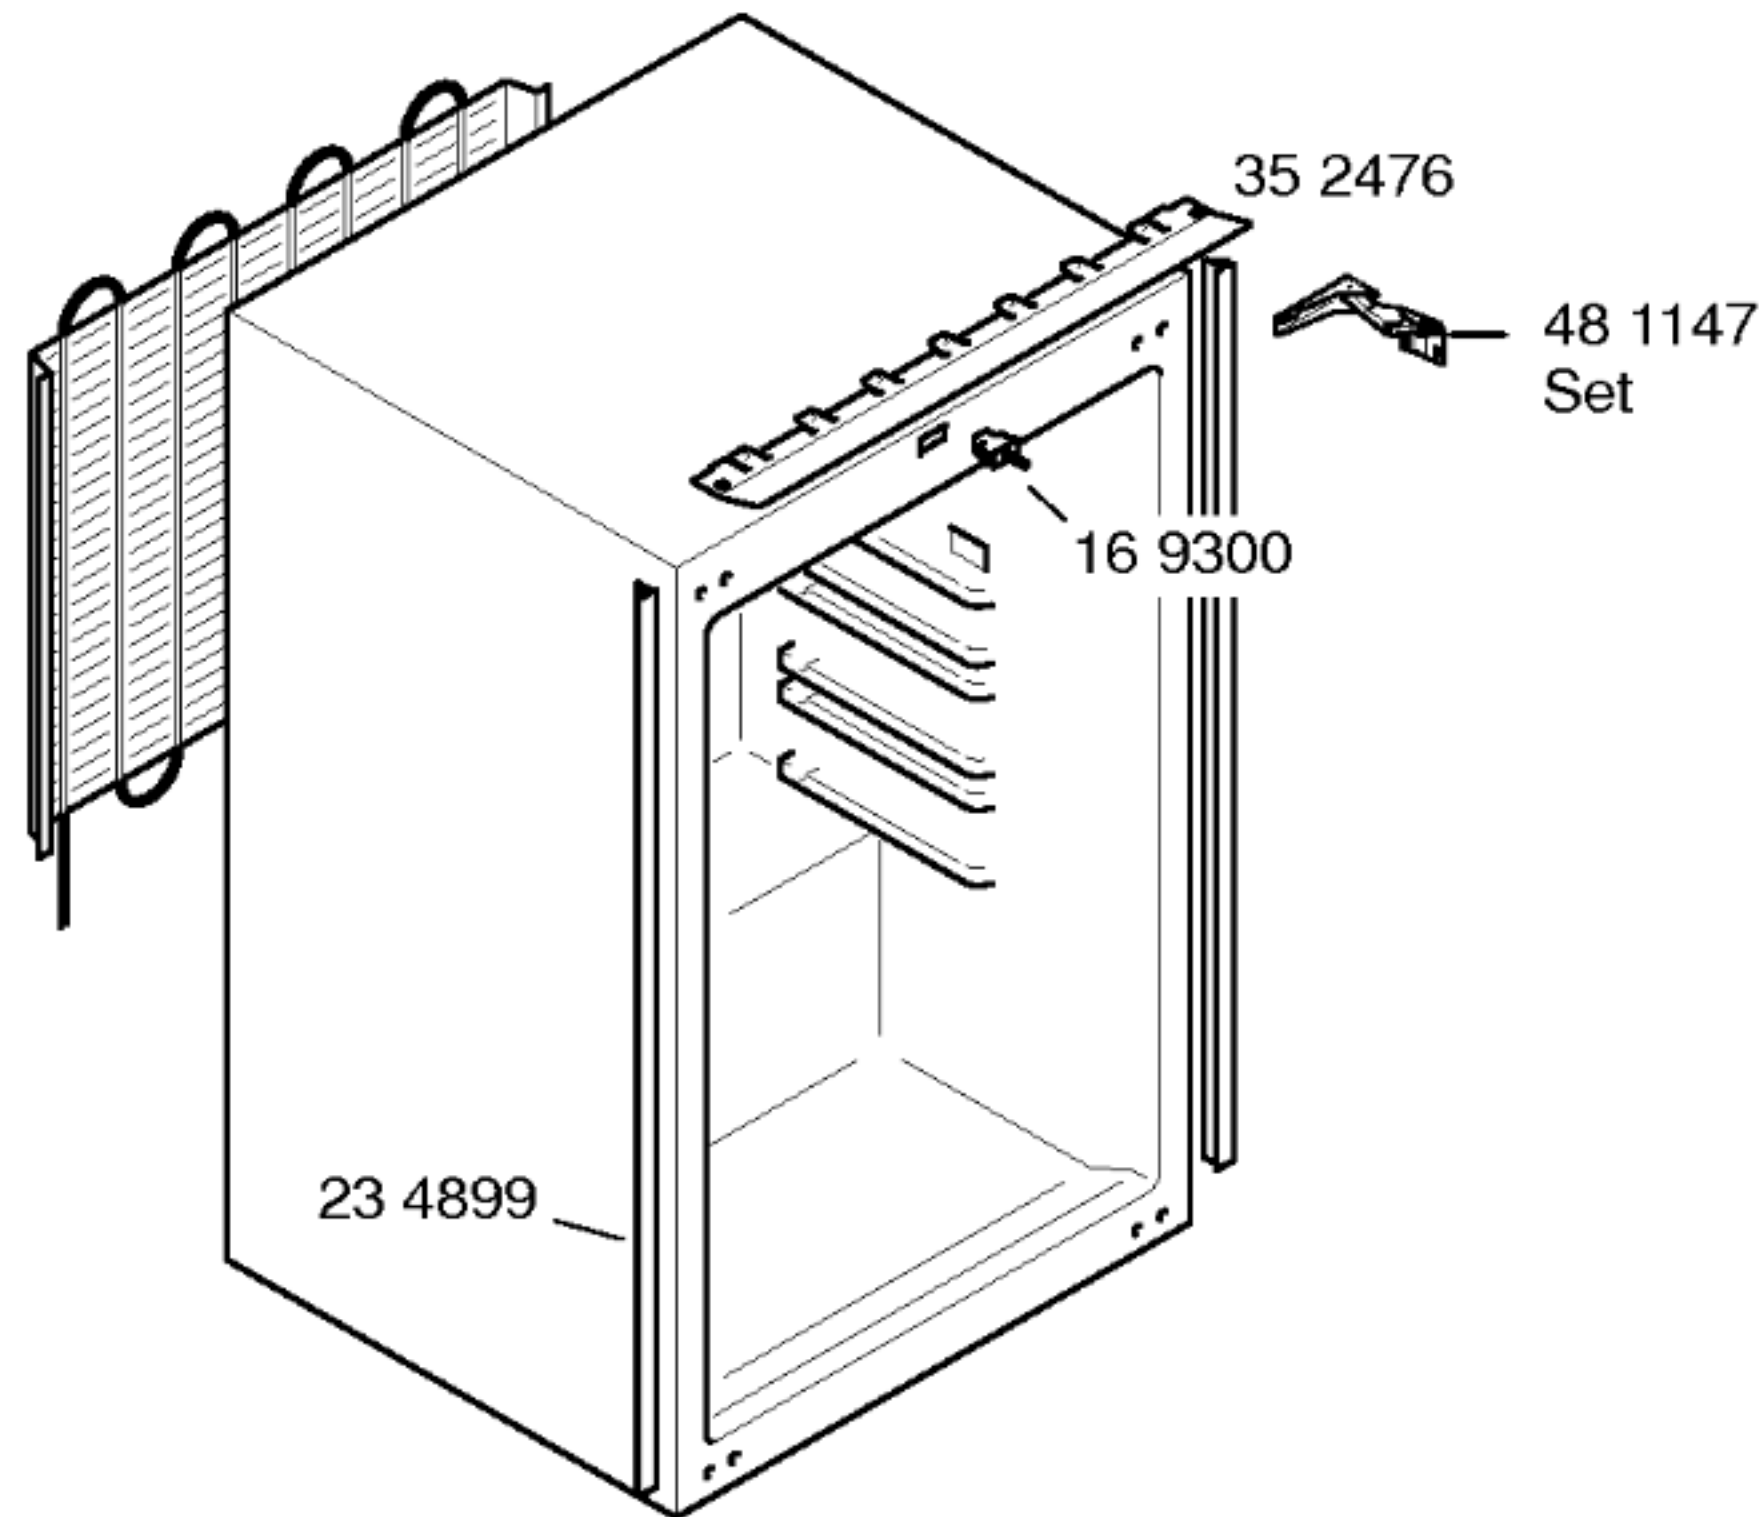

09 3110





06 5644

Gebrauchsanweisung
52 2493
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

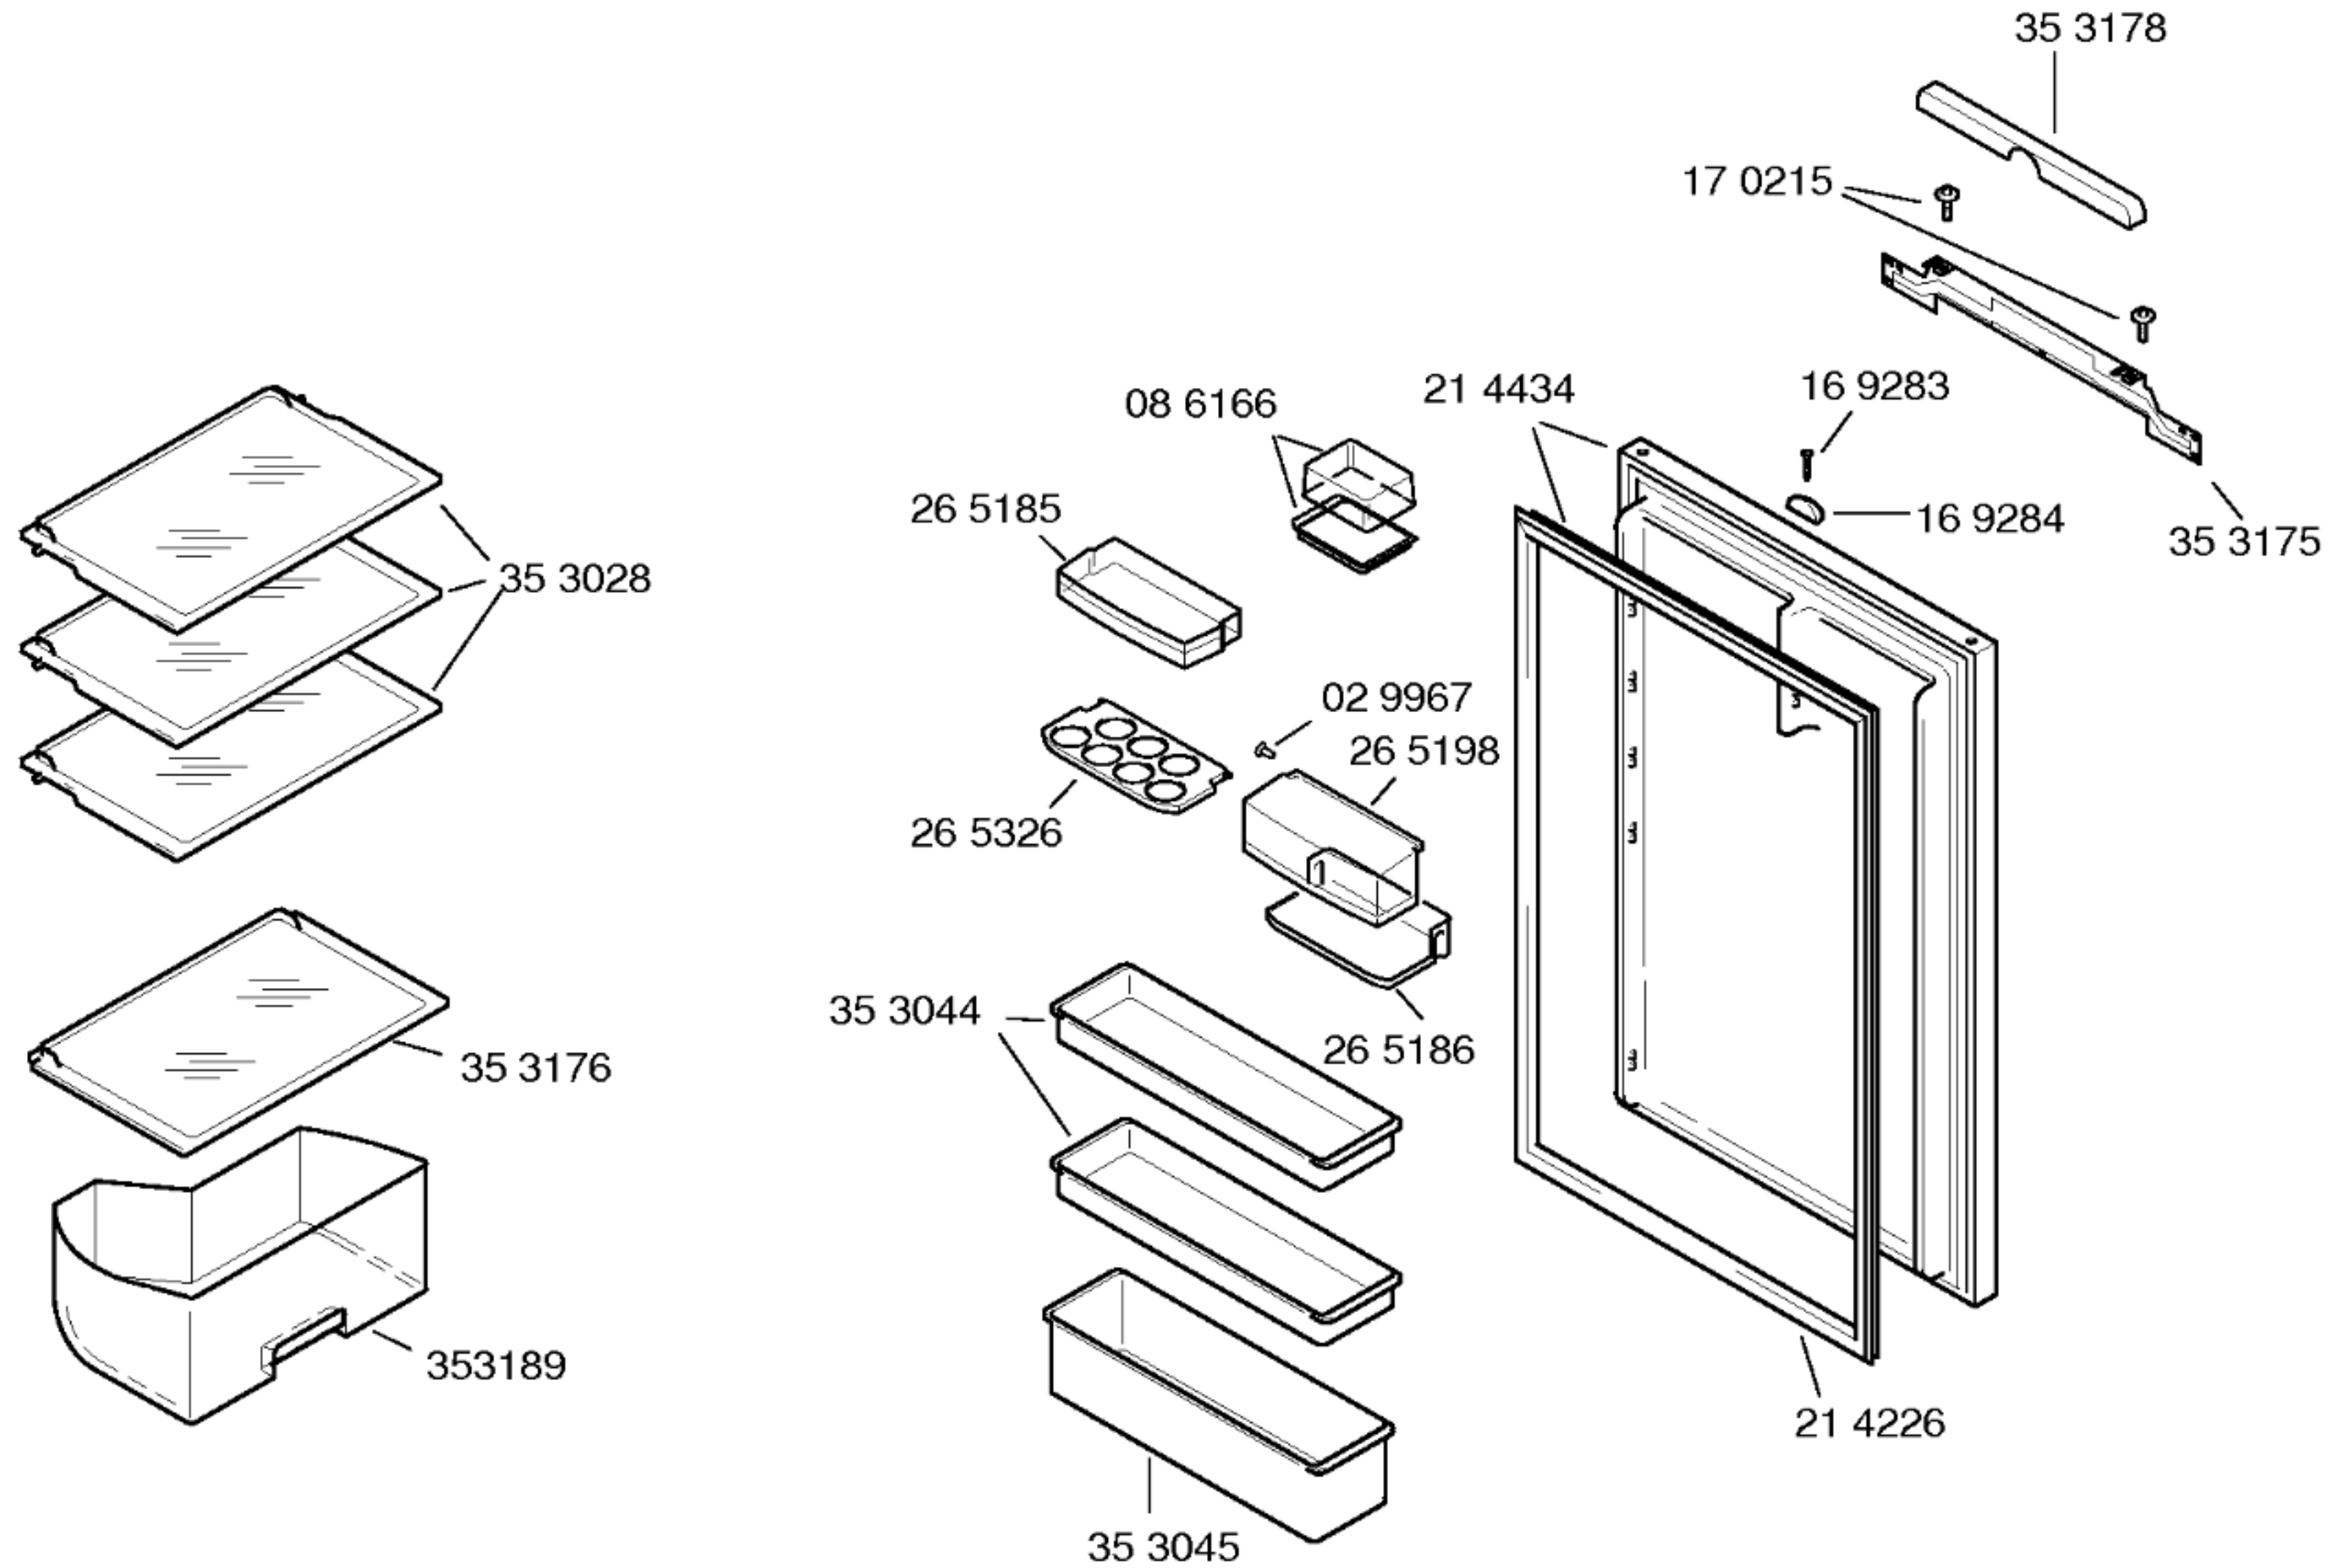

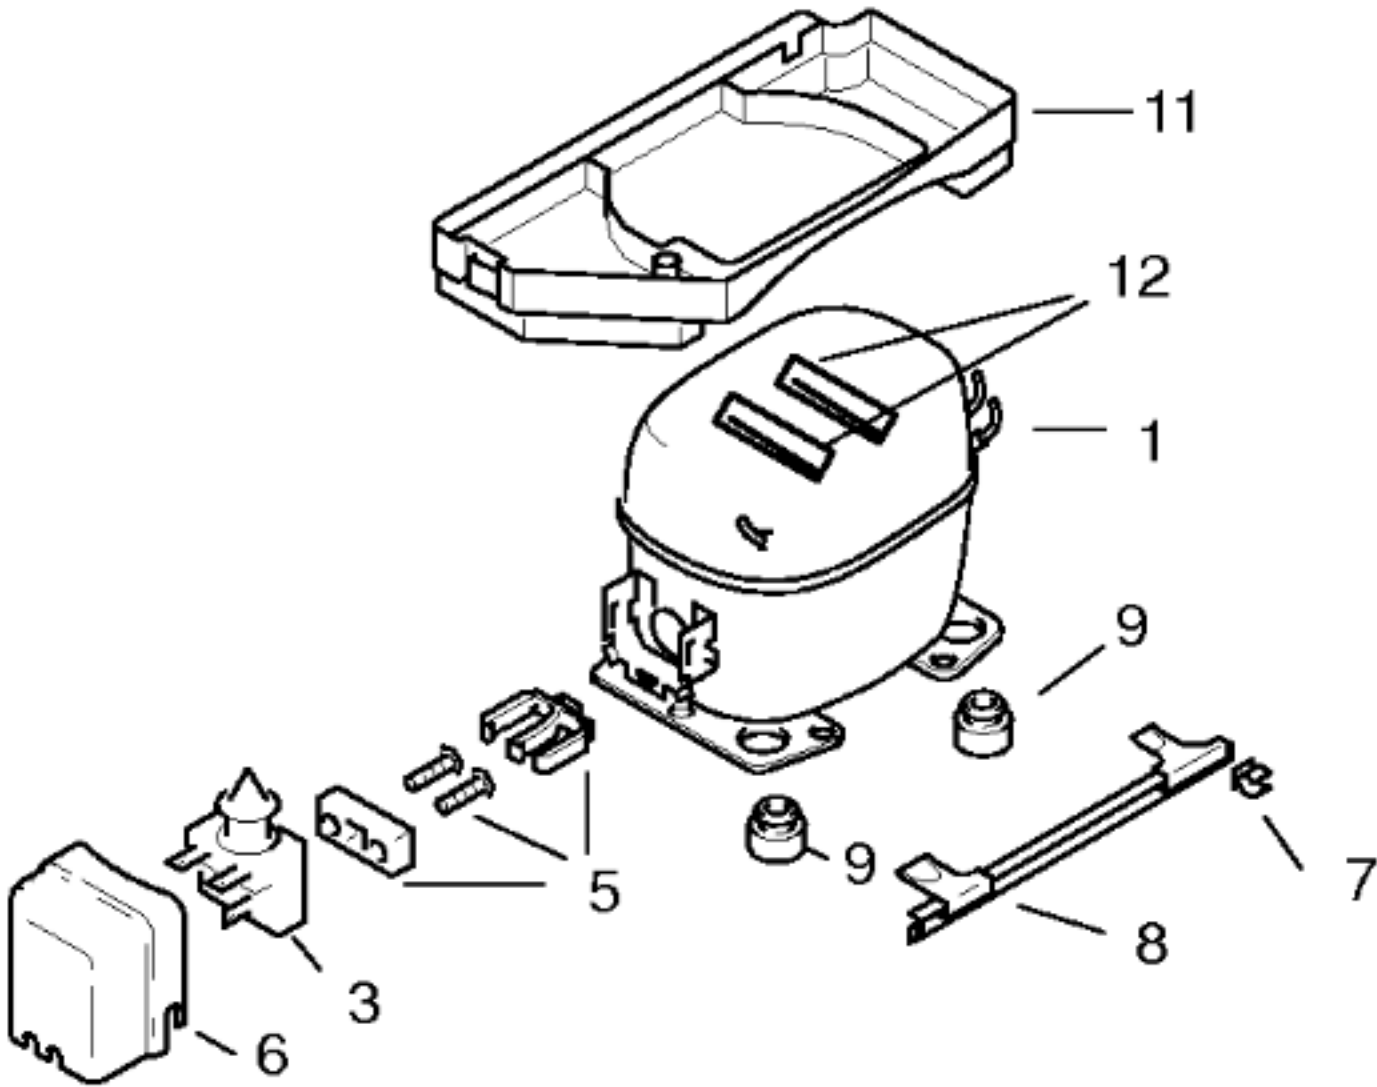

Pos.	Danfoss TLES4K		
1	14 1663		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	050166		
10			
11	26 4878		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES4K		
Förderleistung/Delivery/Débit		l/h	698	
Anlaufstrom/Starting current/Cour de démarrage		A	6,9	
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	29,0
		Hi/aux	Ω	19,0
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		"warm"	+5,0	+5,0
Valeurs de commutation		"kalt"	-25,0	-10,0
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	+	
Anschlußwert/Conn.load/Puiss. connectée		W	79	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		