


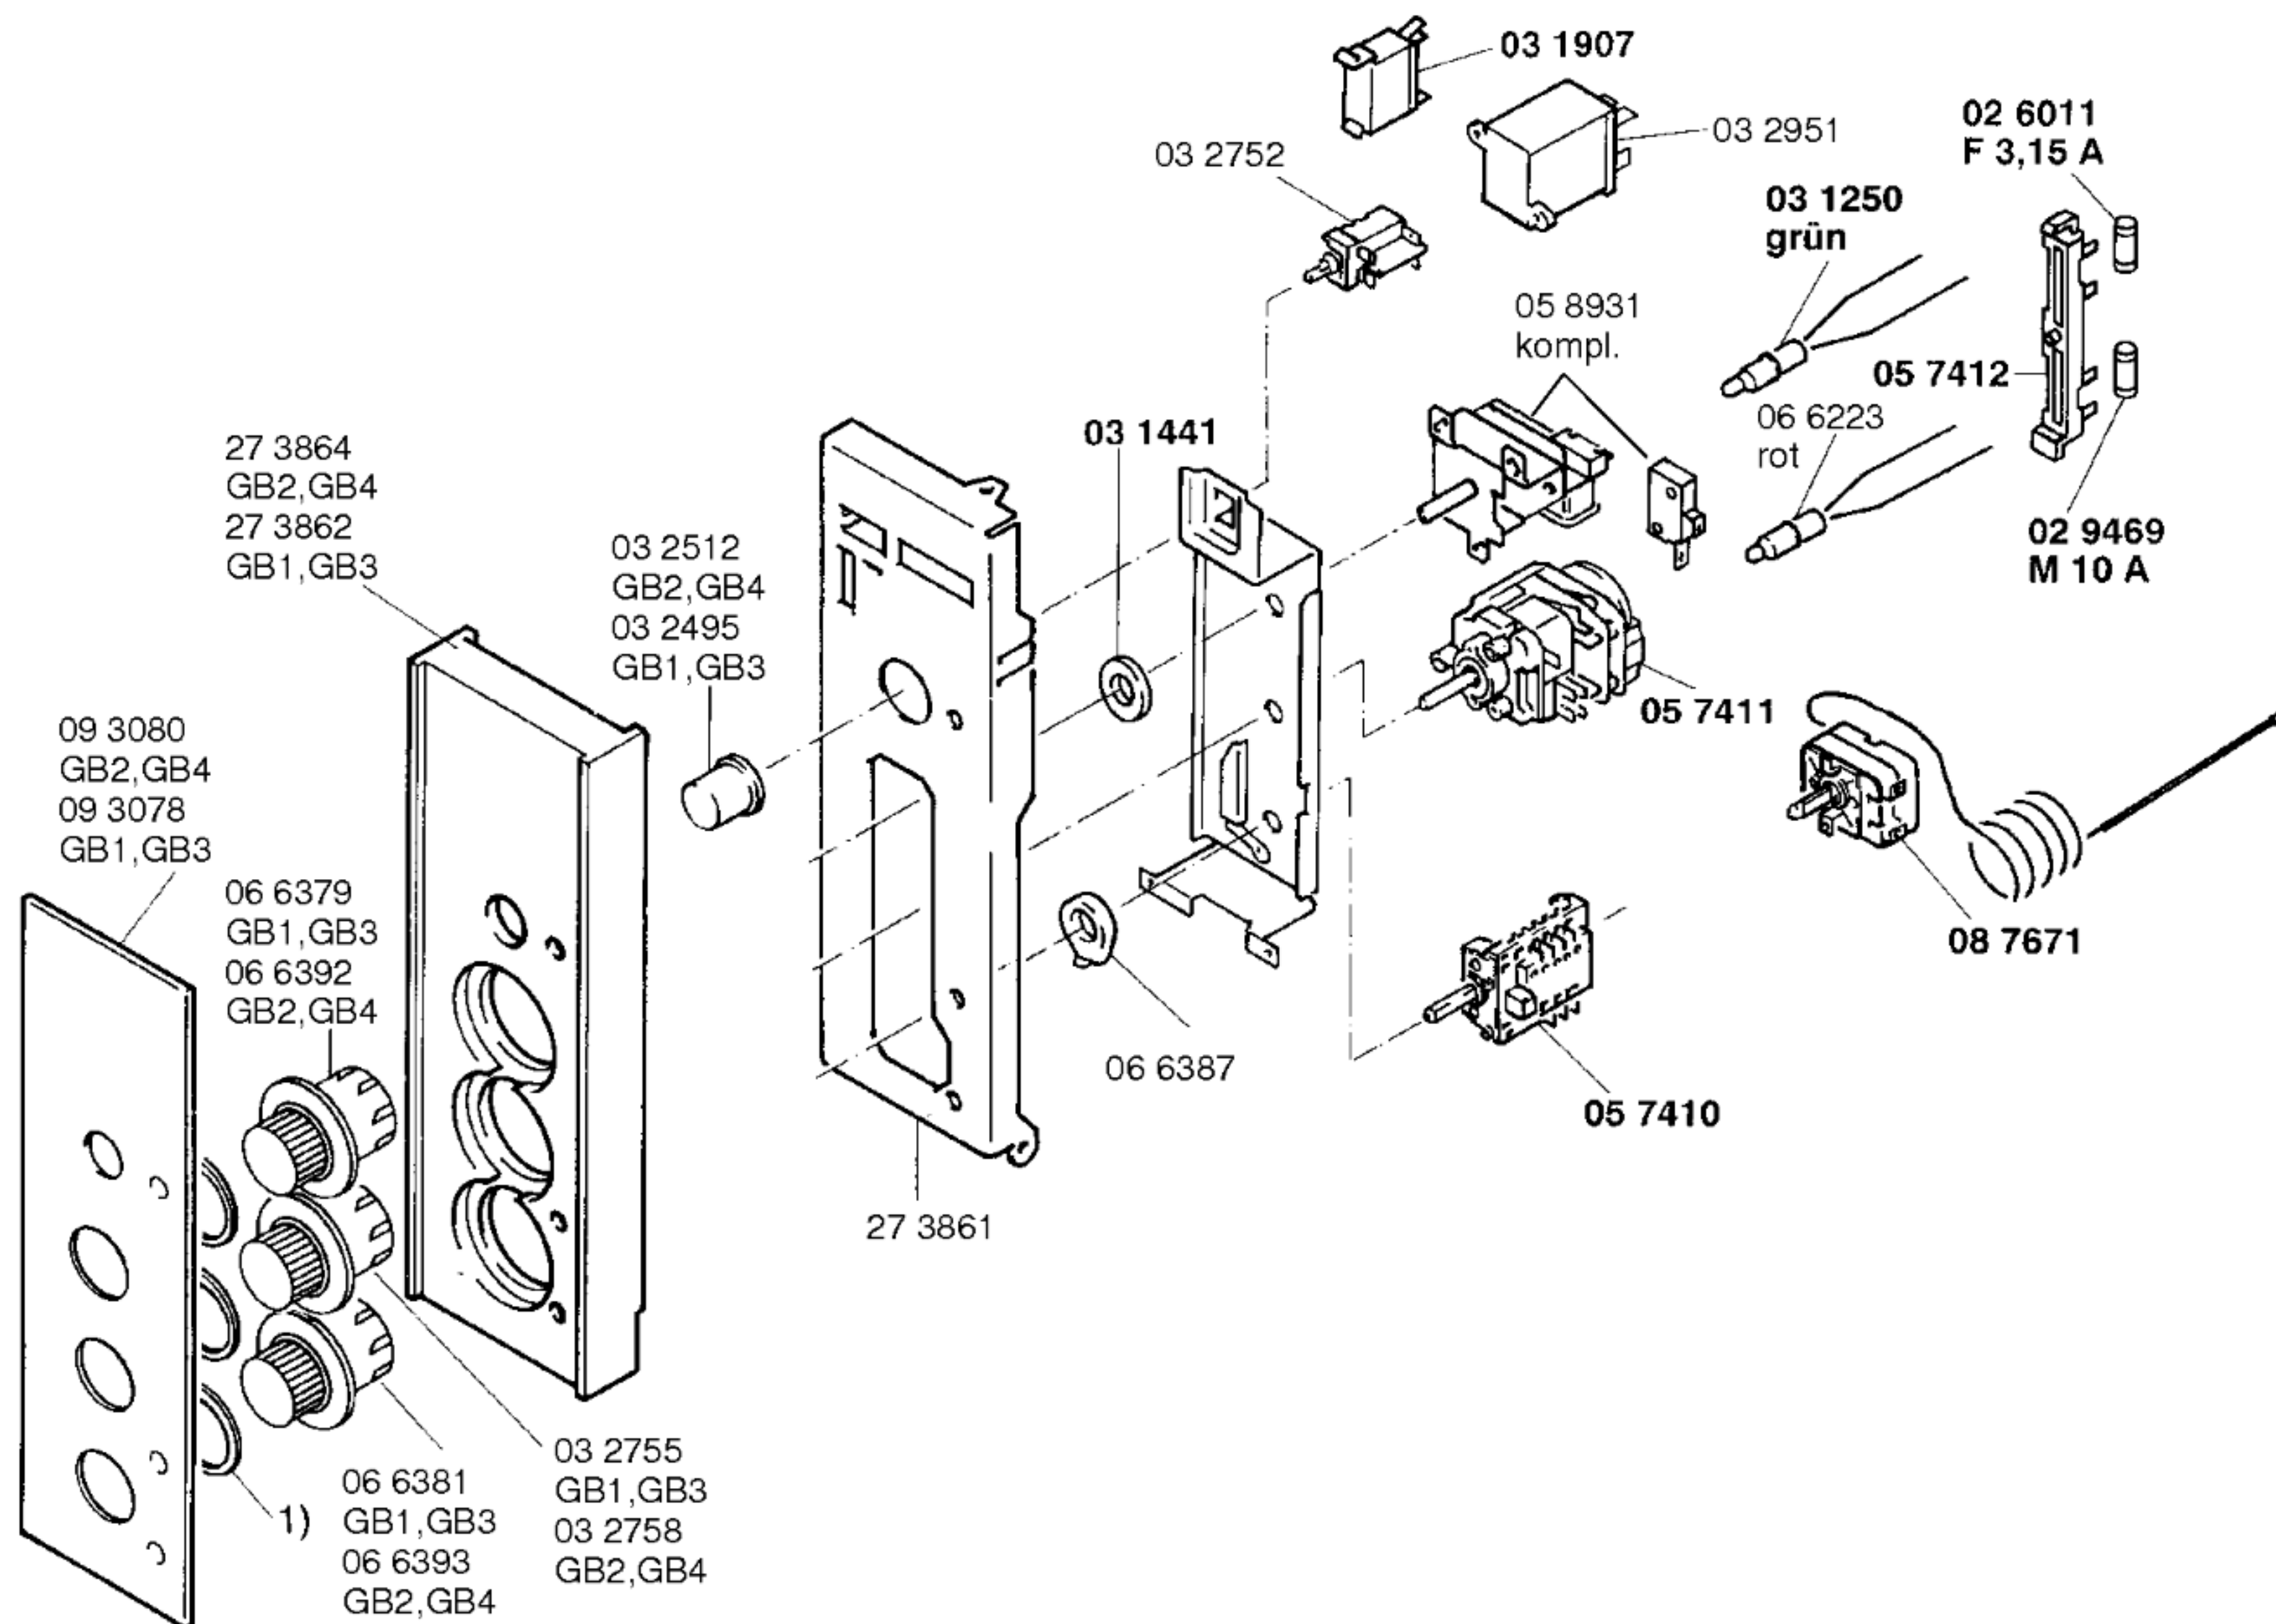

Gebrauchsanweisung
51 6014
(GB)


1) 03 1439
GB1, GB3
03 1438
GB2, GB4

Zubehör:


Einbaurahmen
Z6180W1
GB1
Z6180G1
GB2

Alu-Backblech
Z6380X0

Glaspfanne
Z6290X0

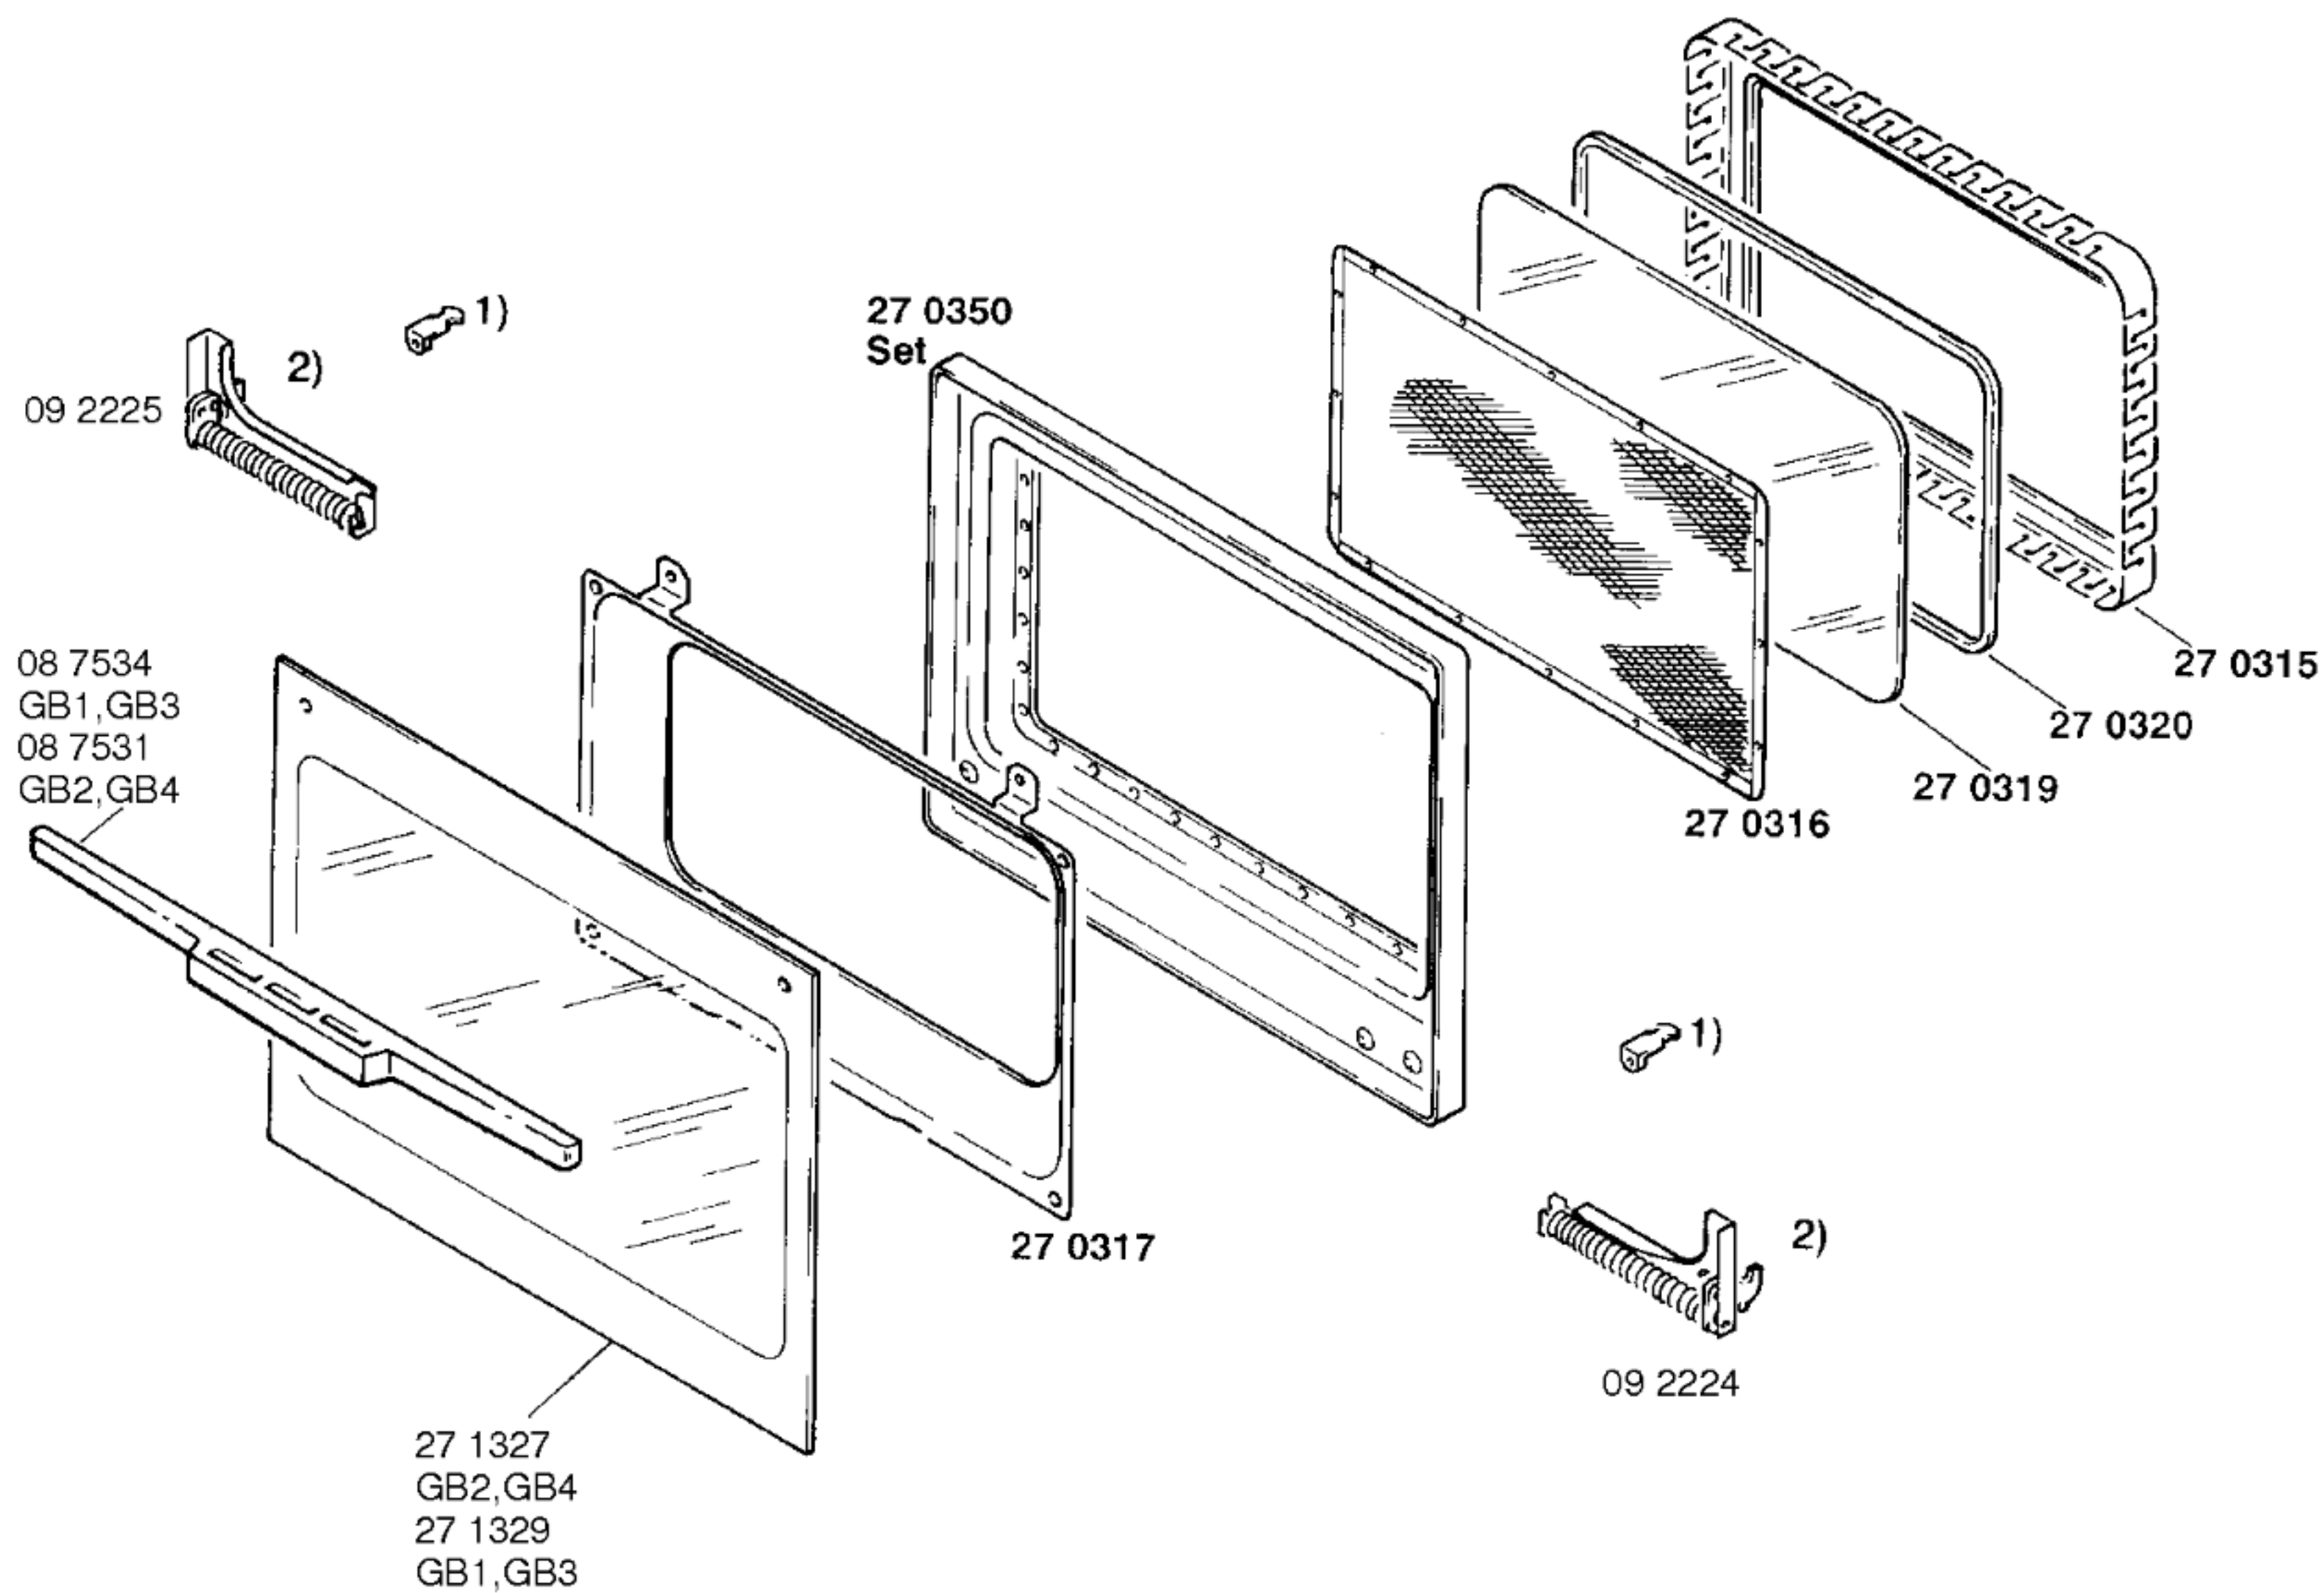

- 1) 03 0671
2) 03 0813
Arretierstifte

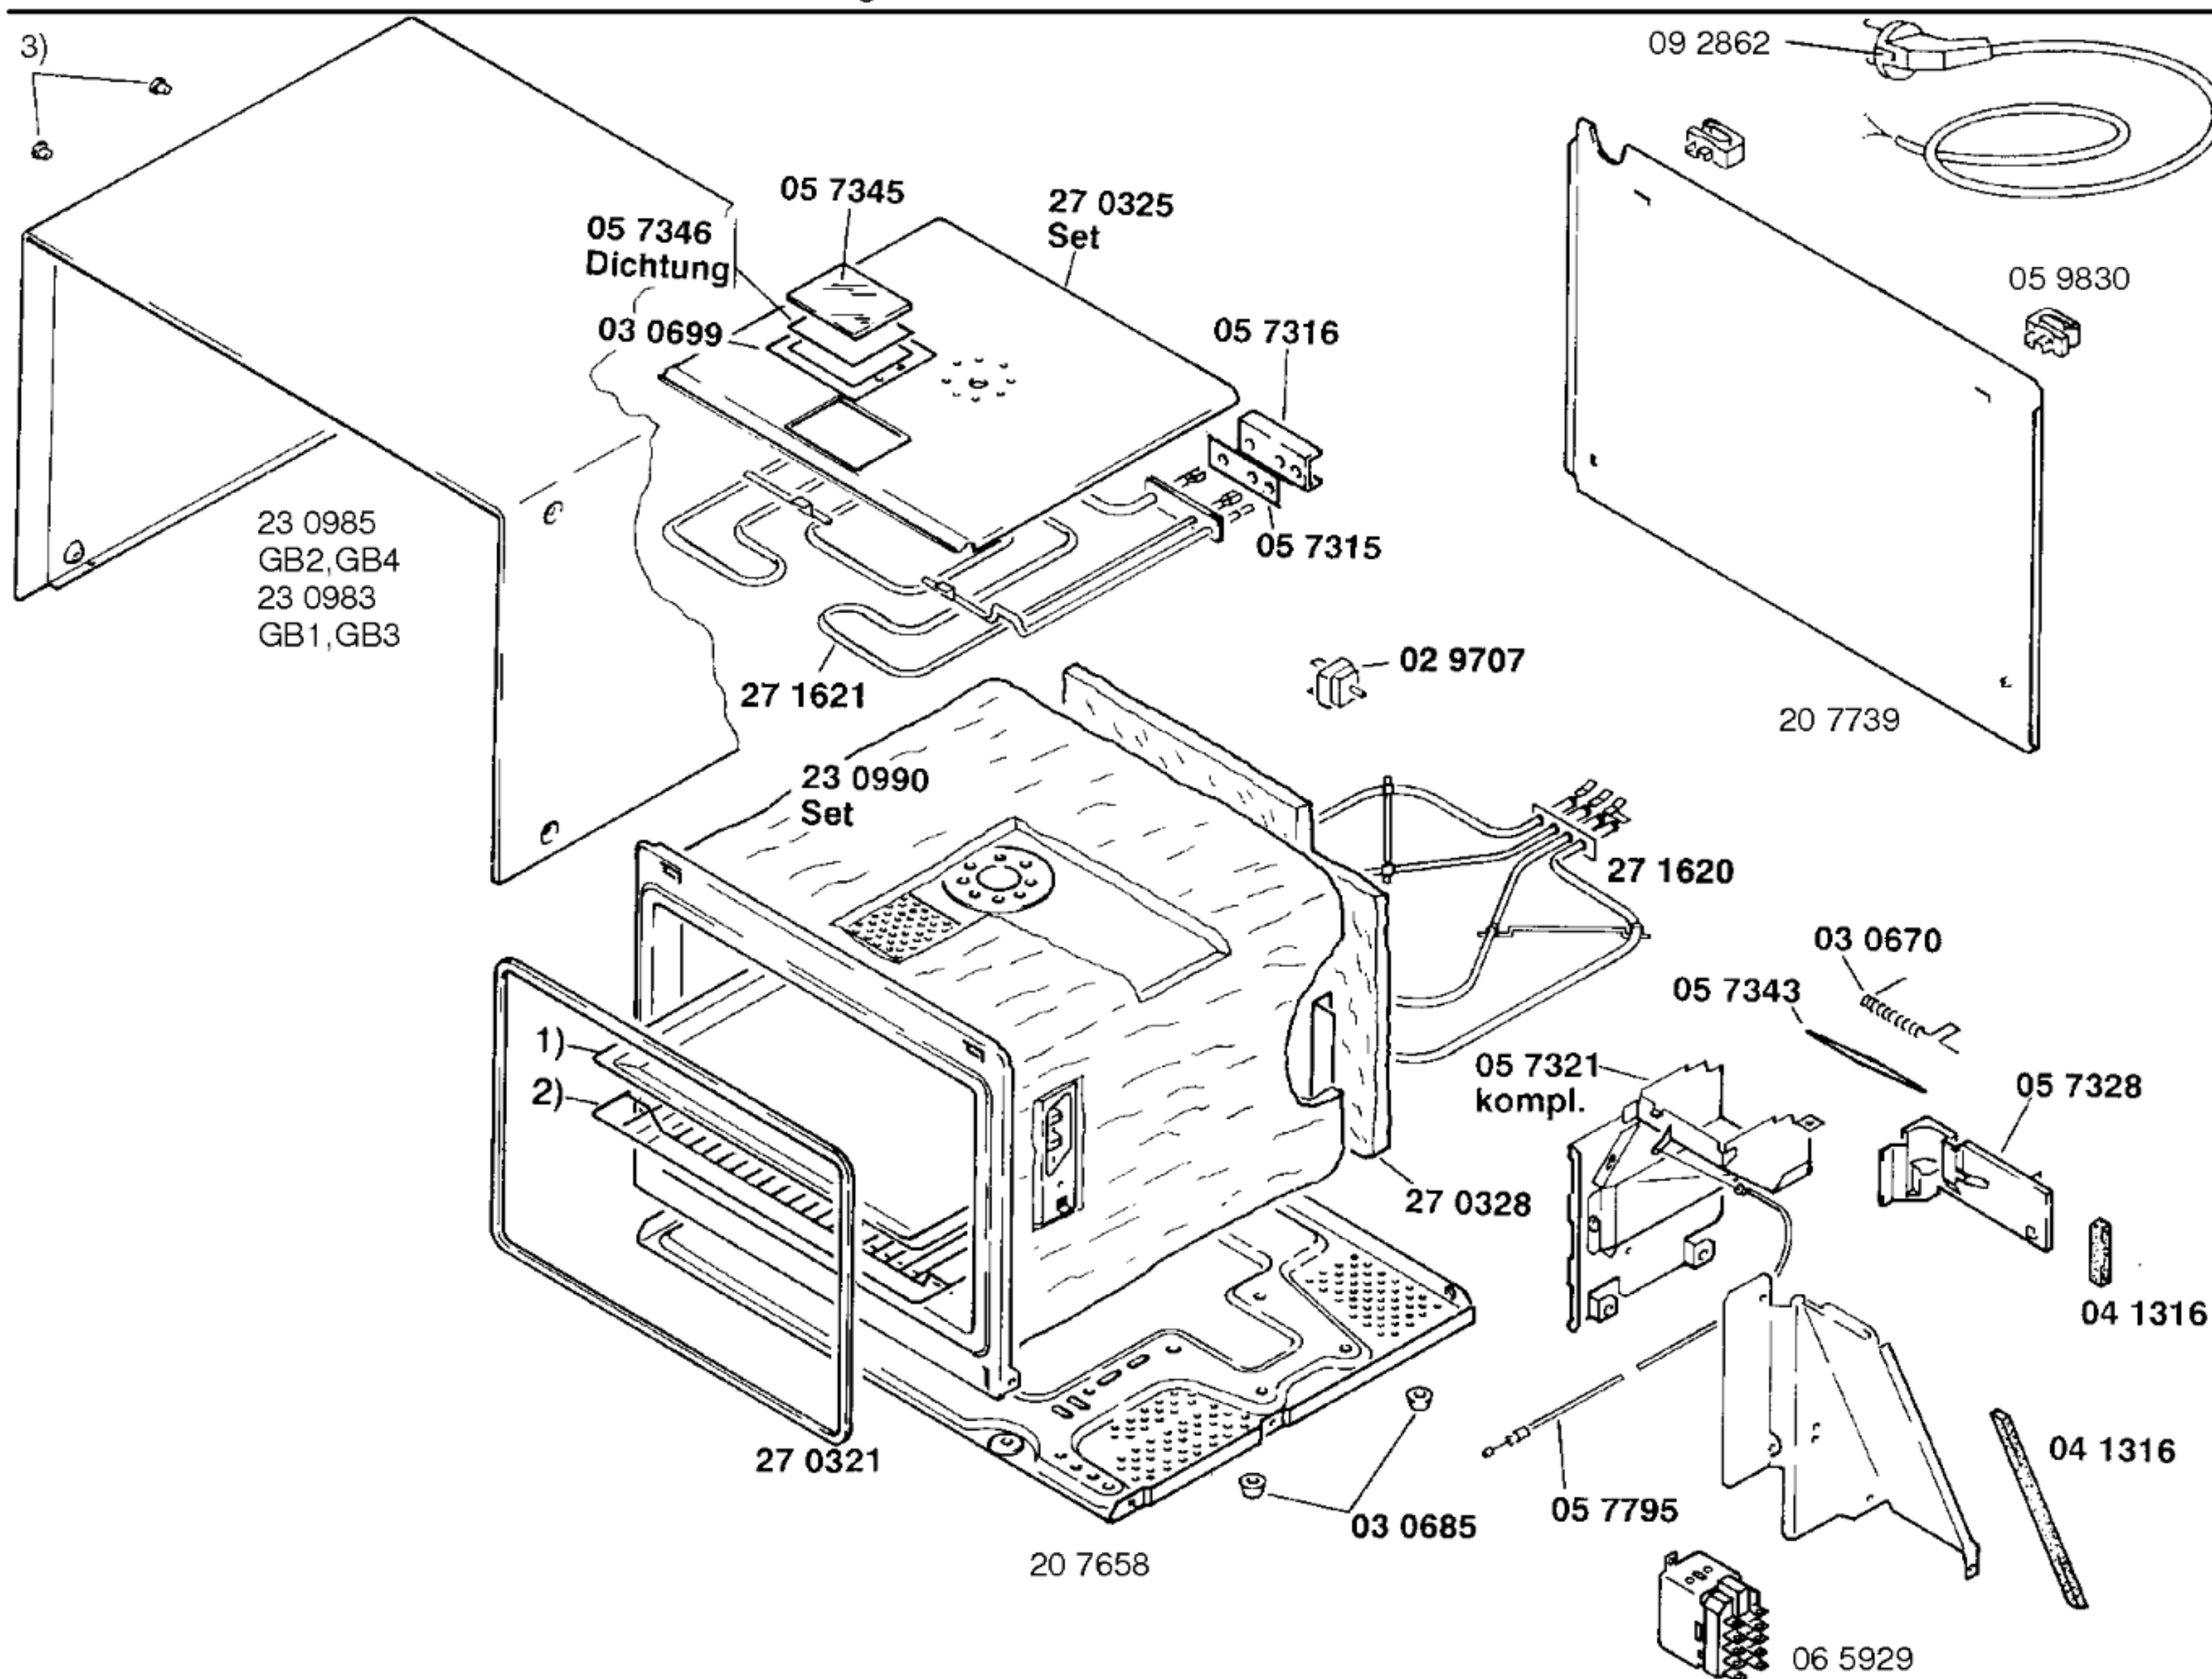

- 1) 27 3844 Kombipfanne
- 2) 11 4539
- 3) 03 0694 GB2, GB4
03 0688 GB1, GB3

