



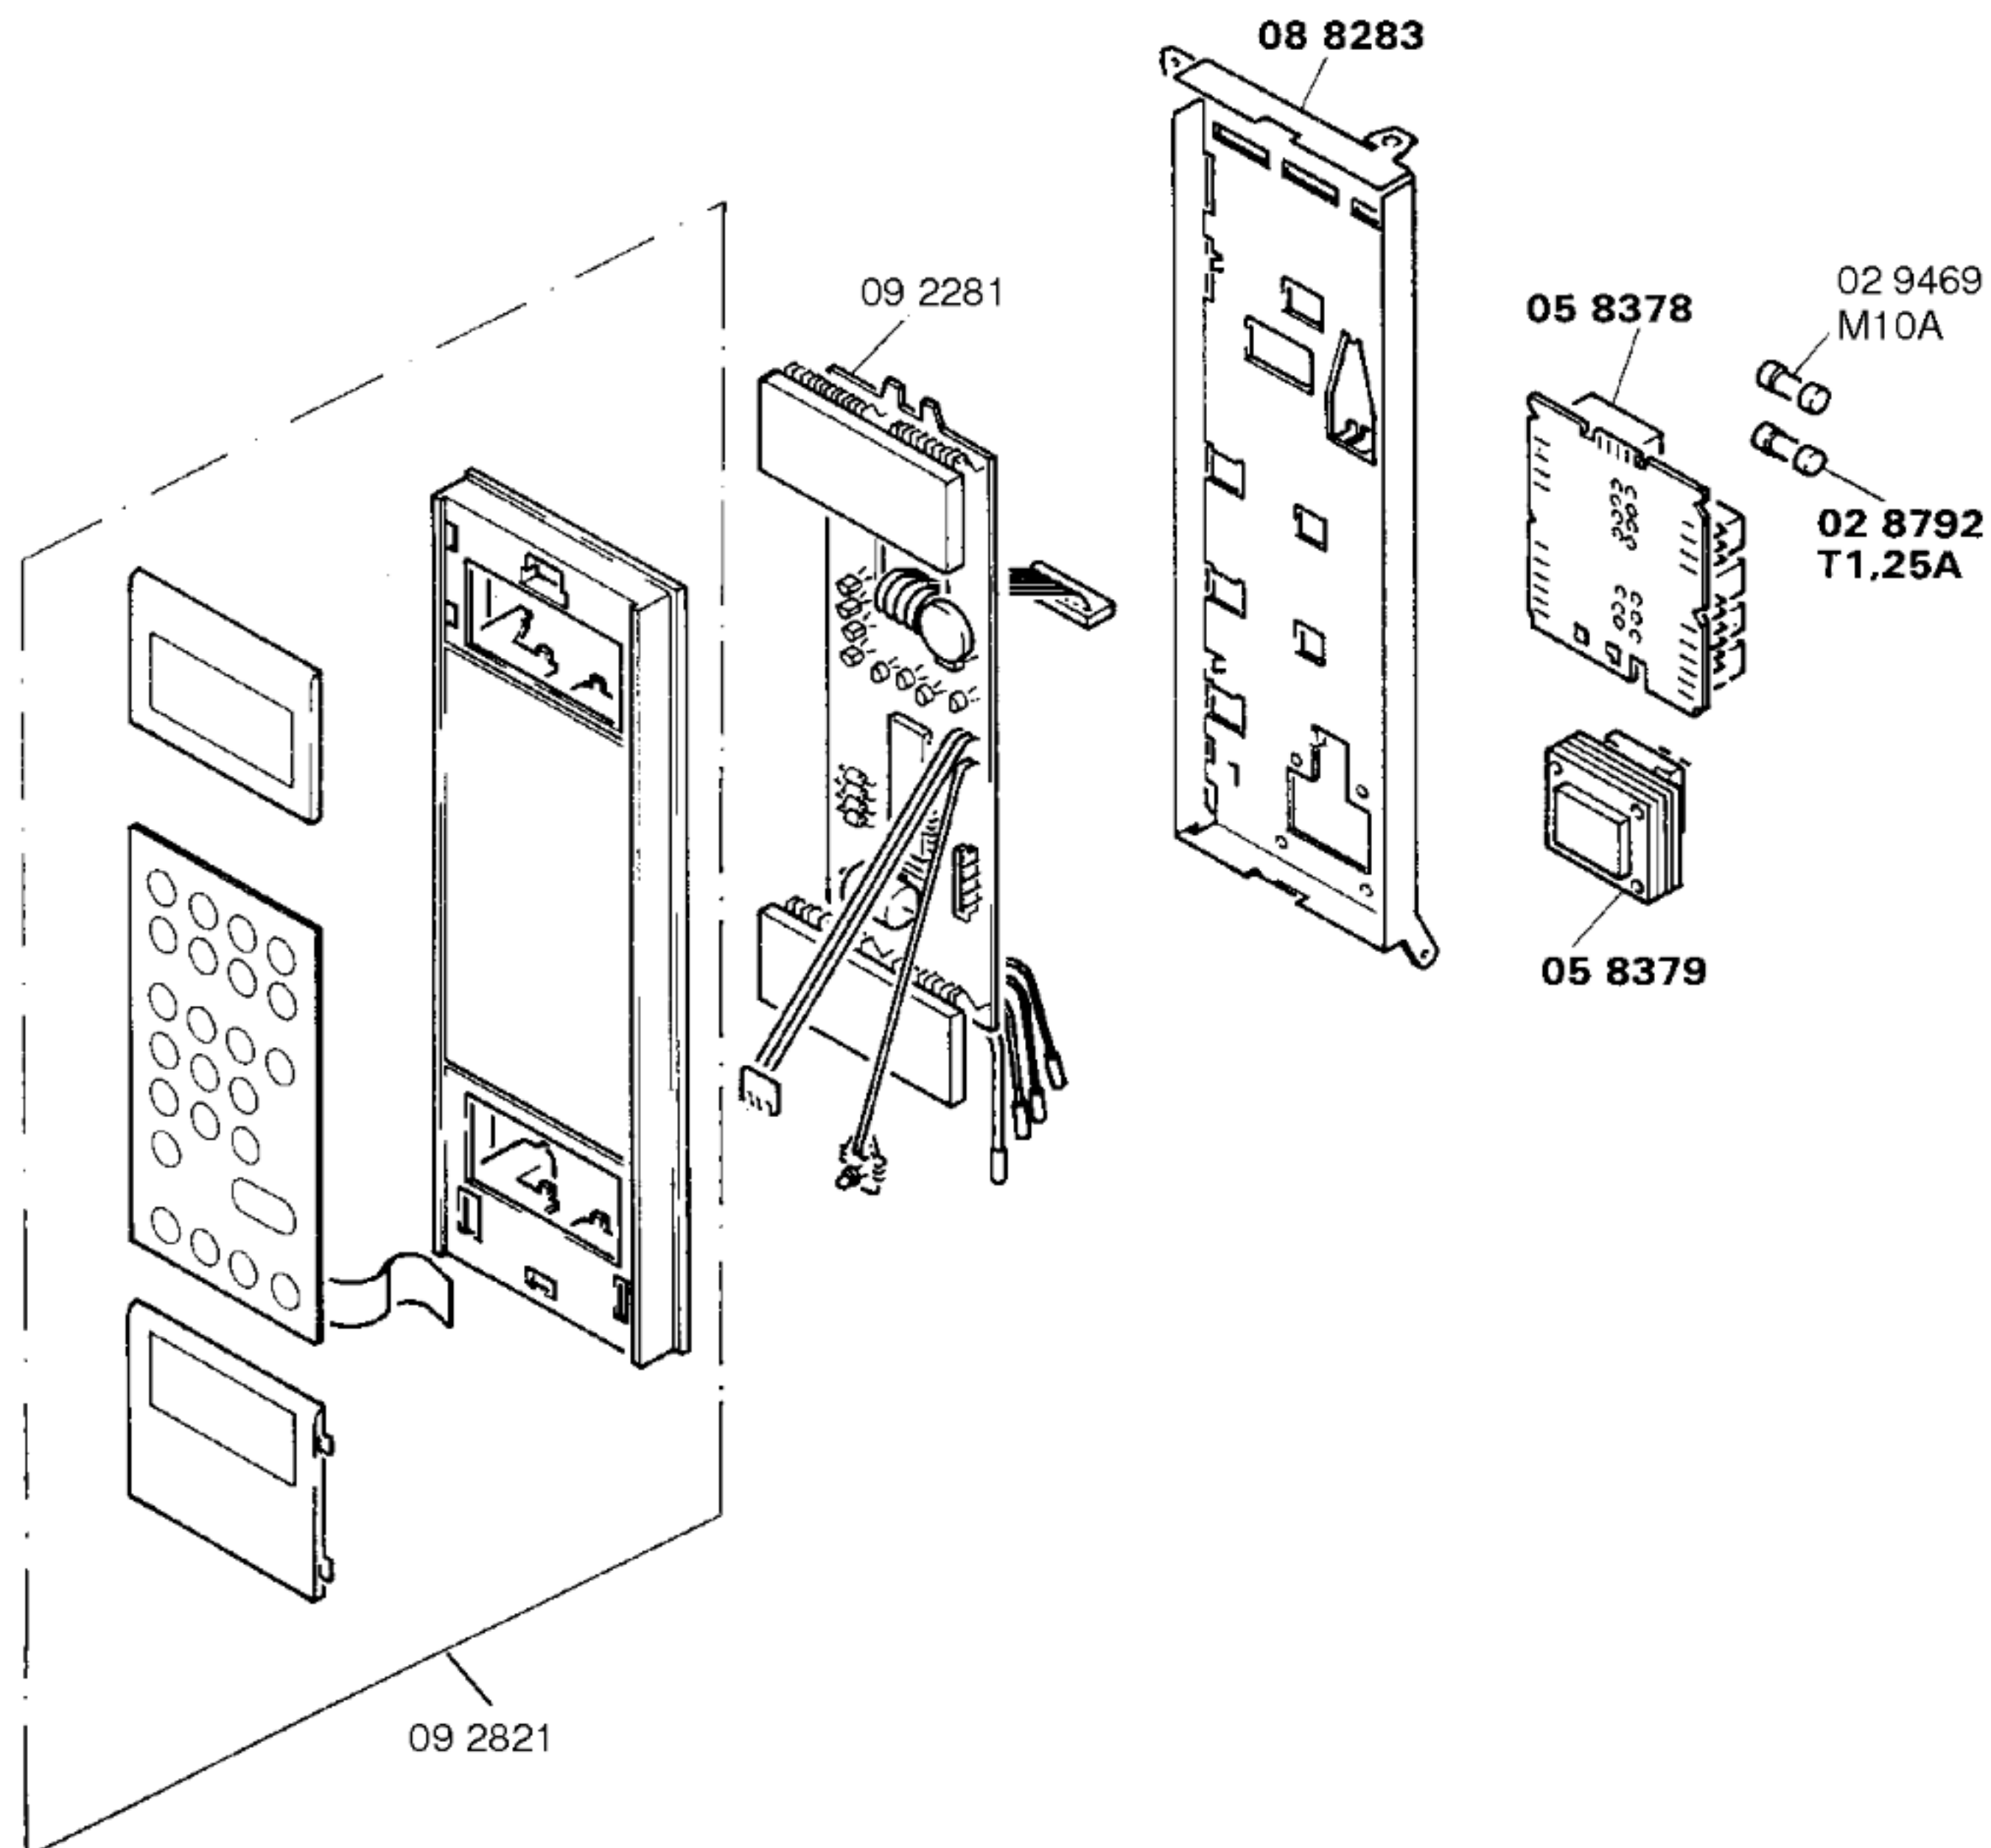


Gebrauchsanweisung
51 5602
(D,GB,F,I,NL,E)
Tips und Rezepte
51 4999
(D)

Zubehör:

Einbaurahmen
Z 6180S0
Alu-Backblech
Z6380X0
Glaspfanne
Z6290X0

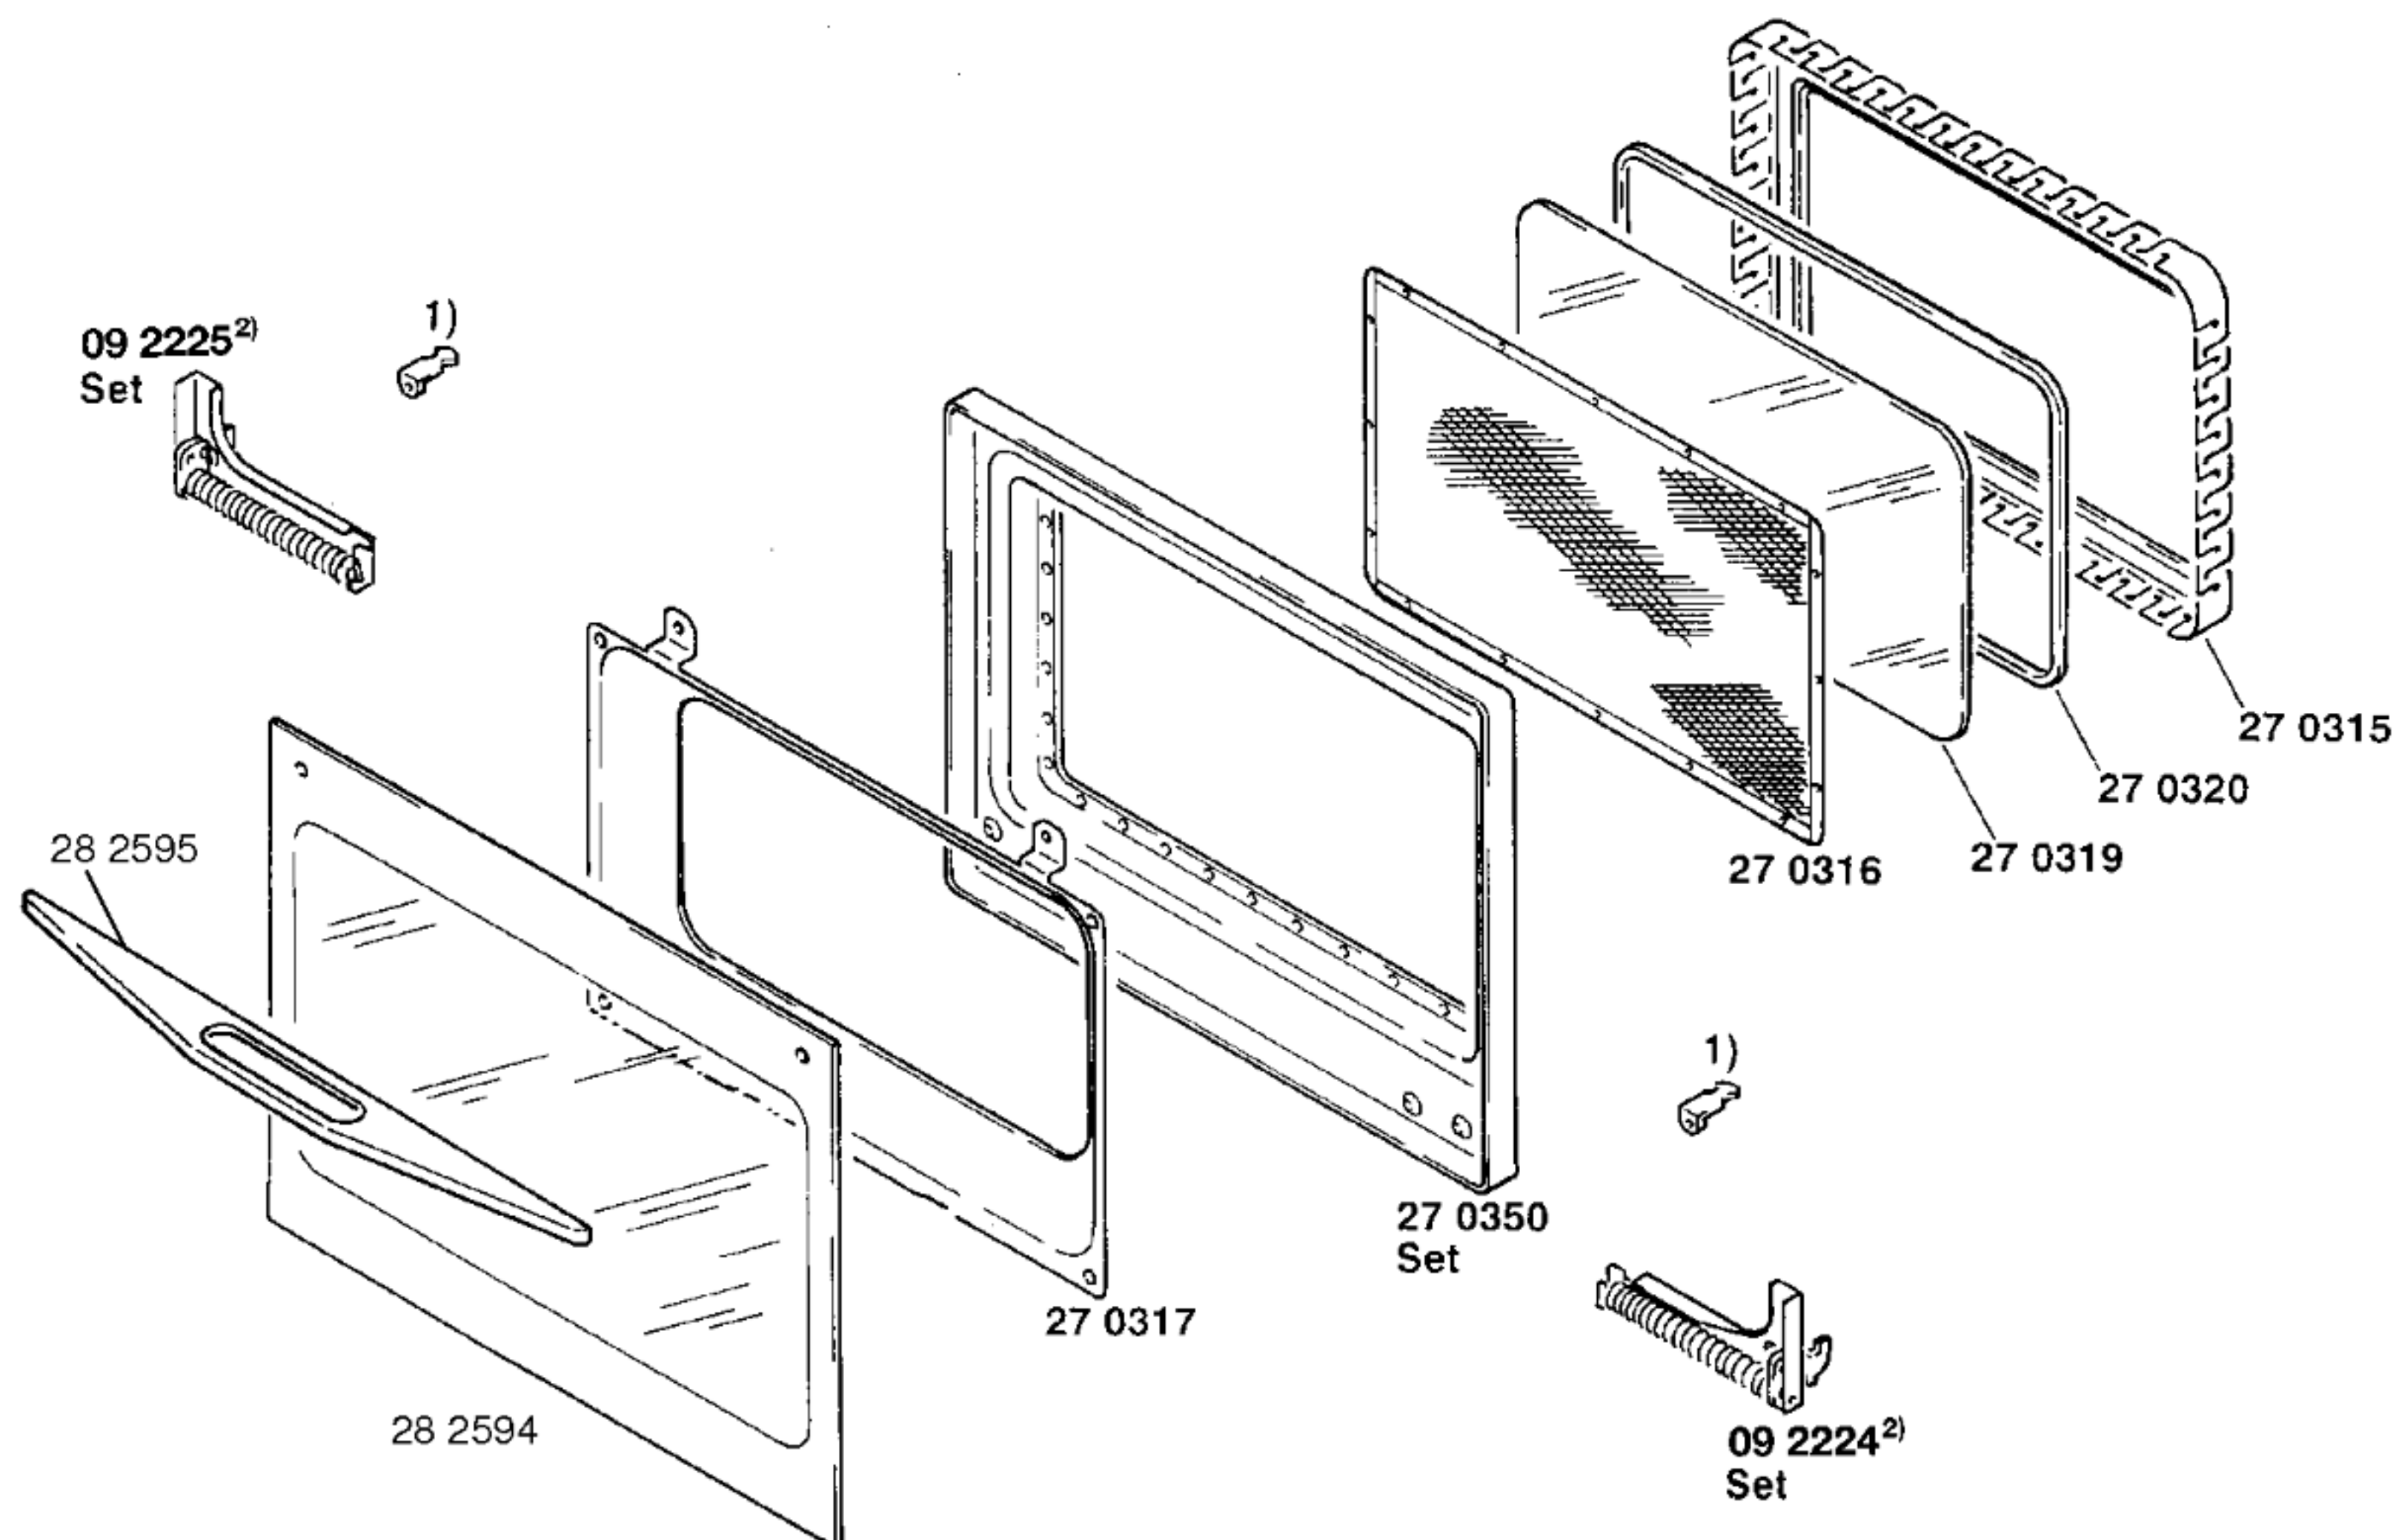

- 1) 03 0671
2) 03 0813
Arretierstift

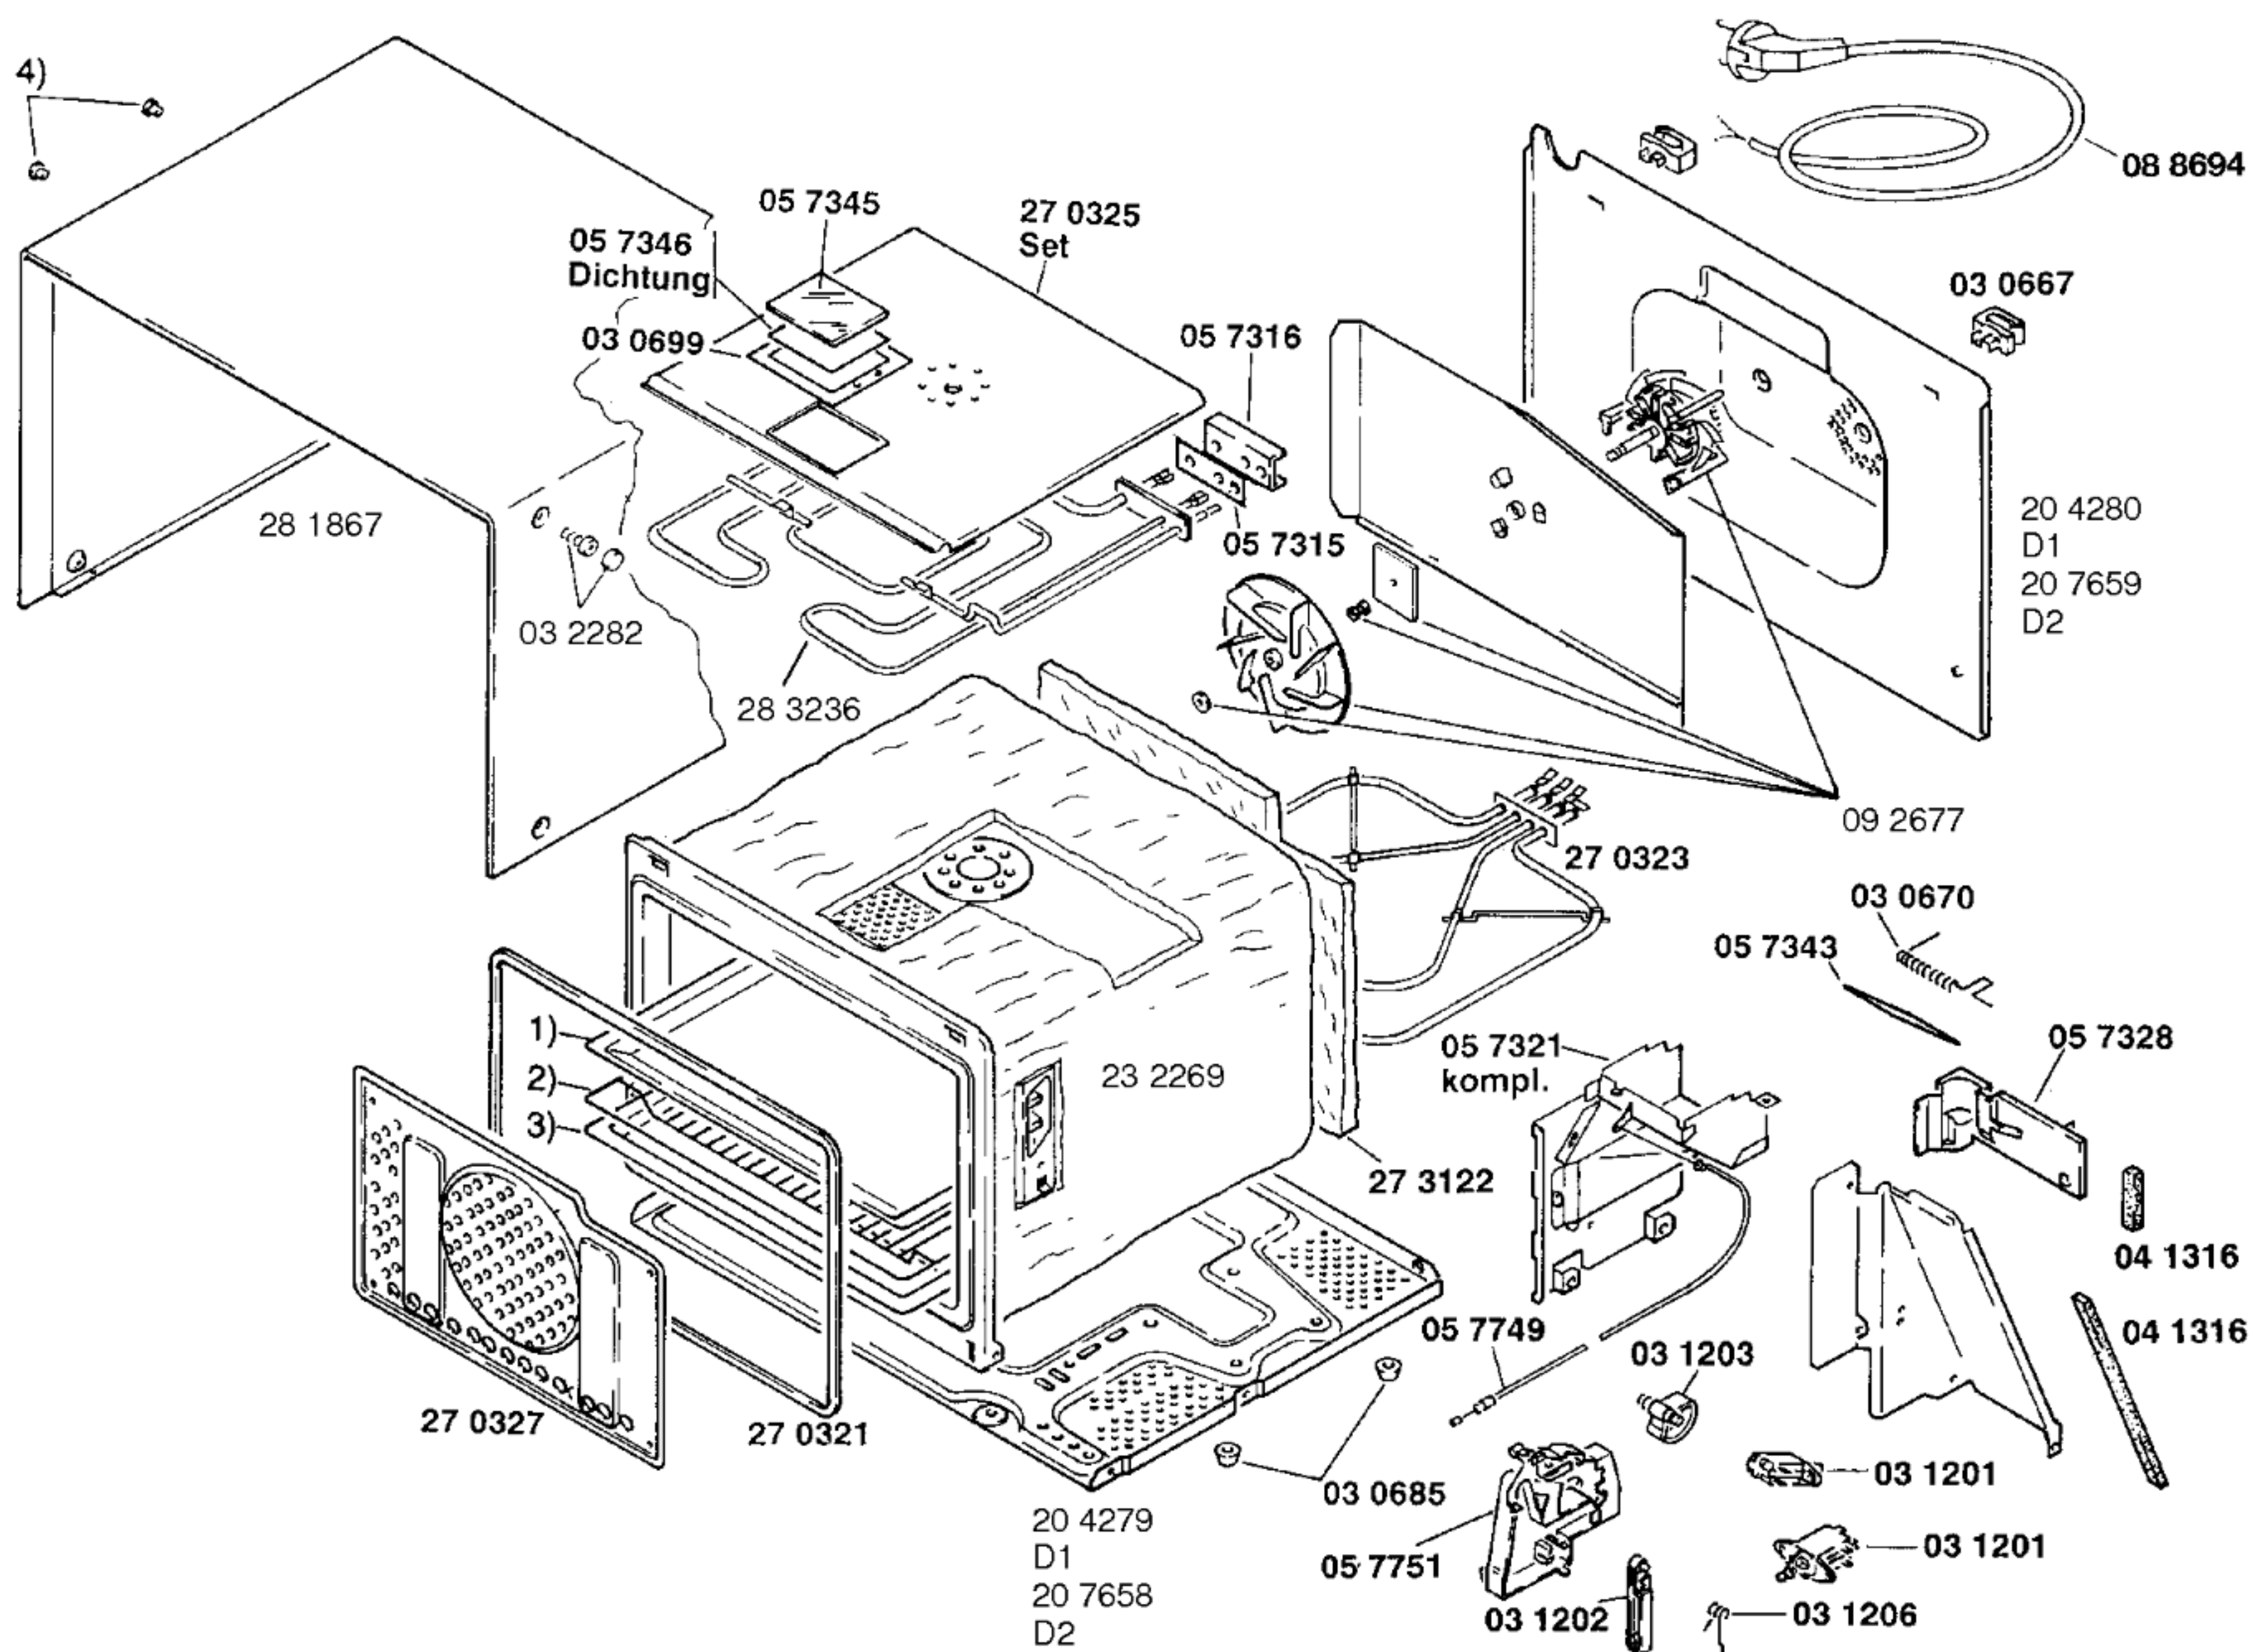

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale
- 4) 05 9833

02 8732
Anschlag-Backblech

