



Gebrauchsanweisung
51 3948
(D)

Kochbuch
51 3949
(D)

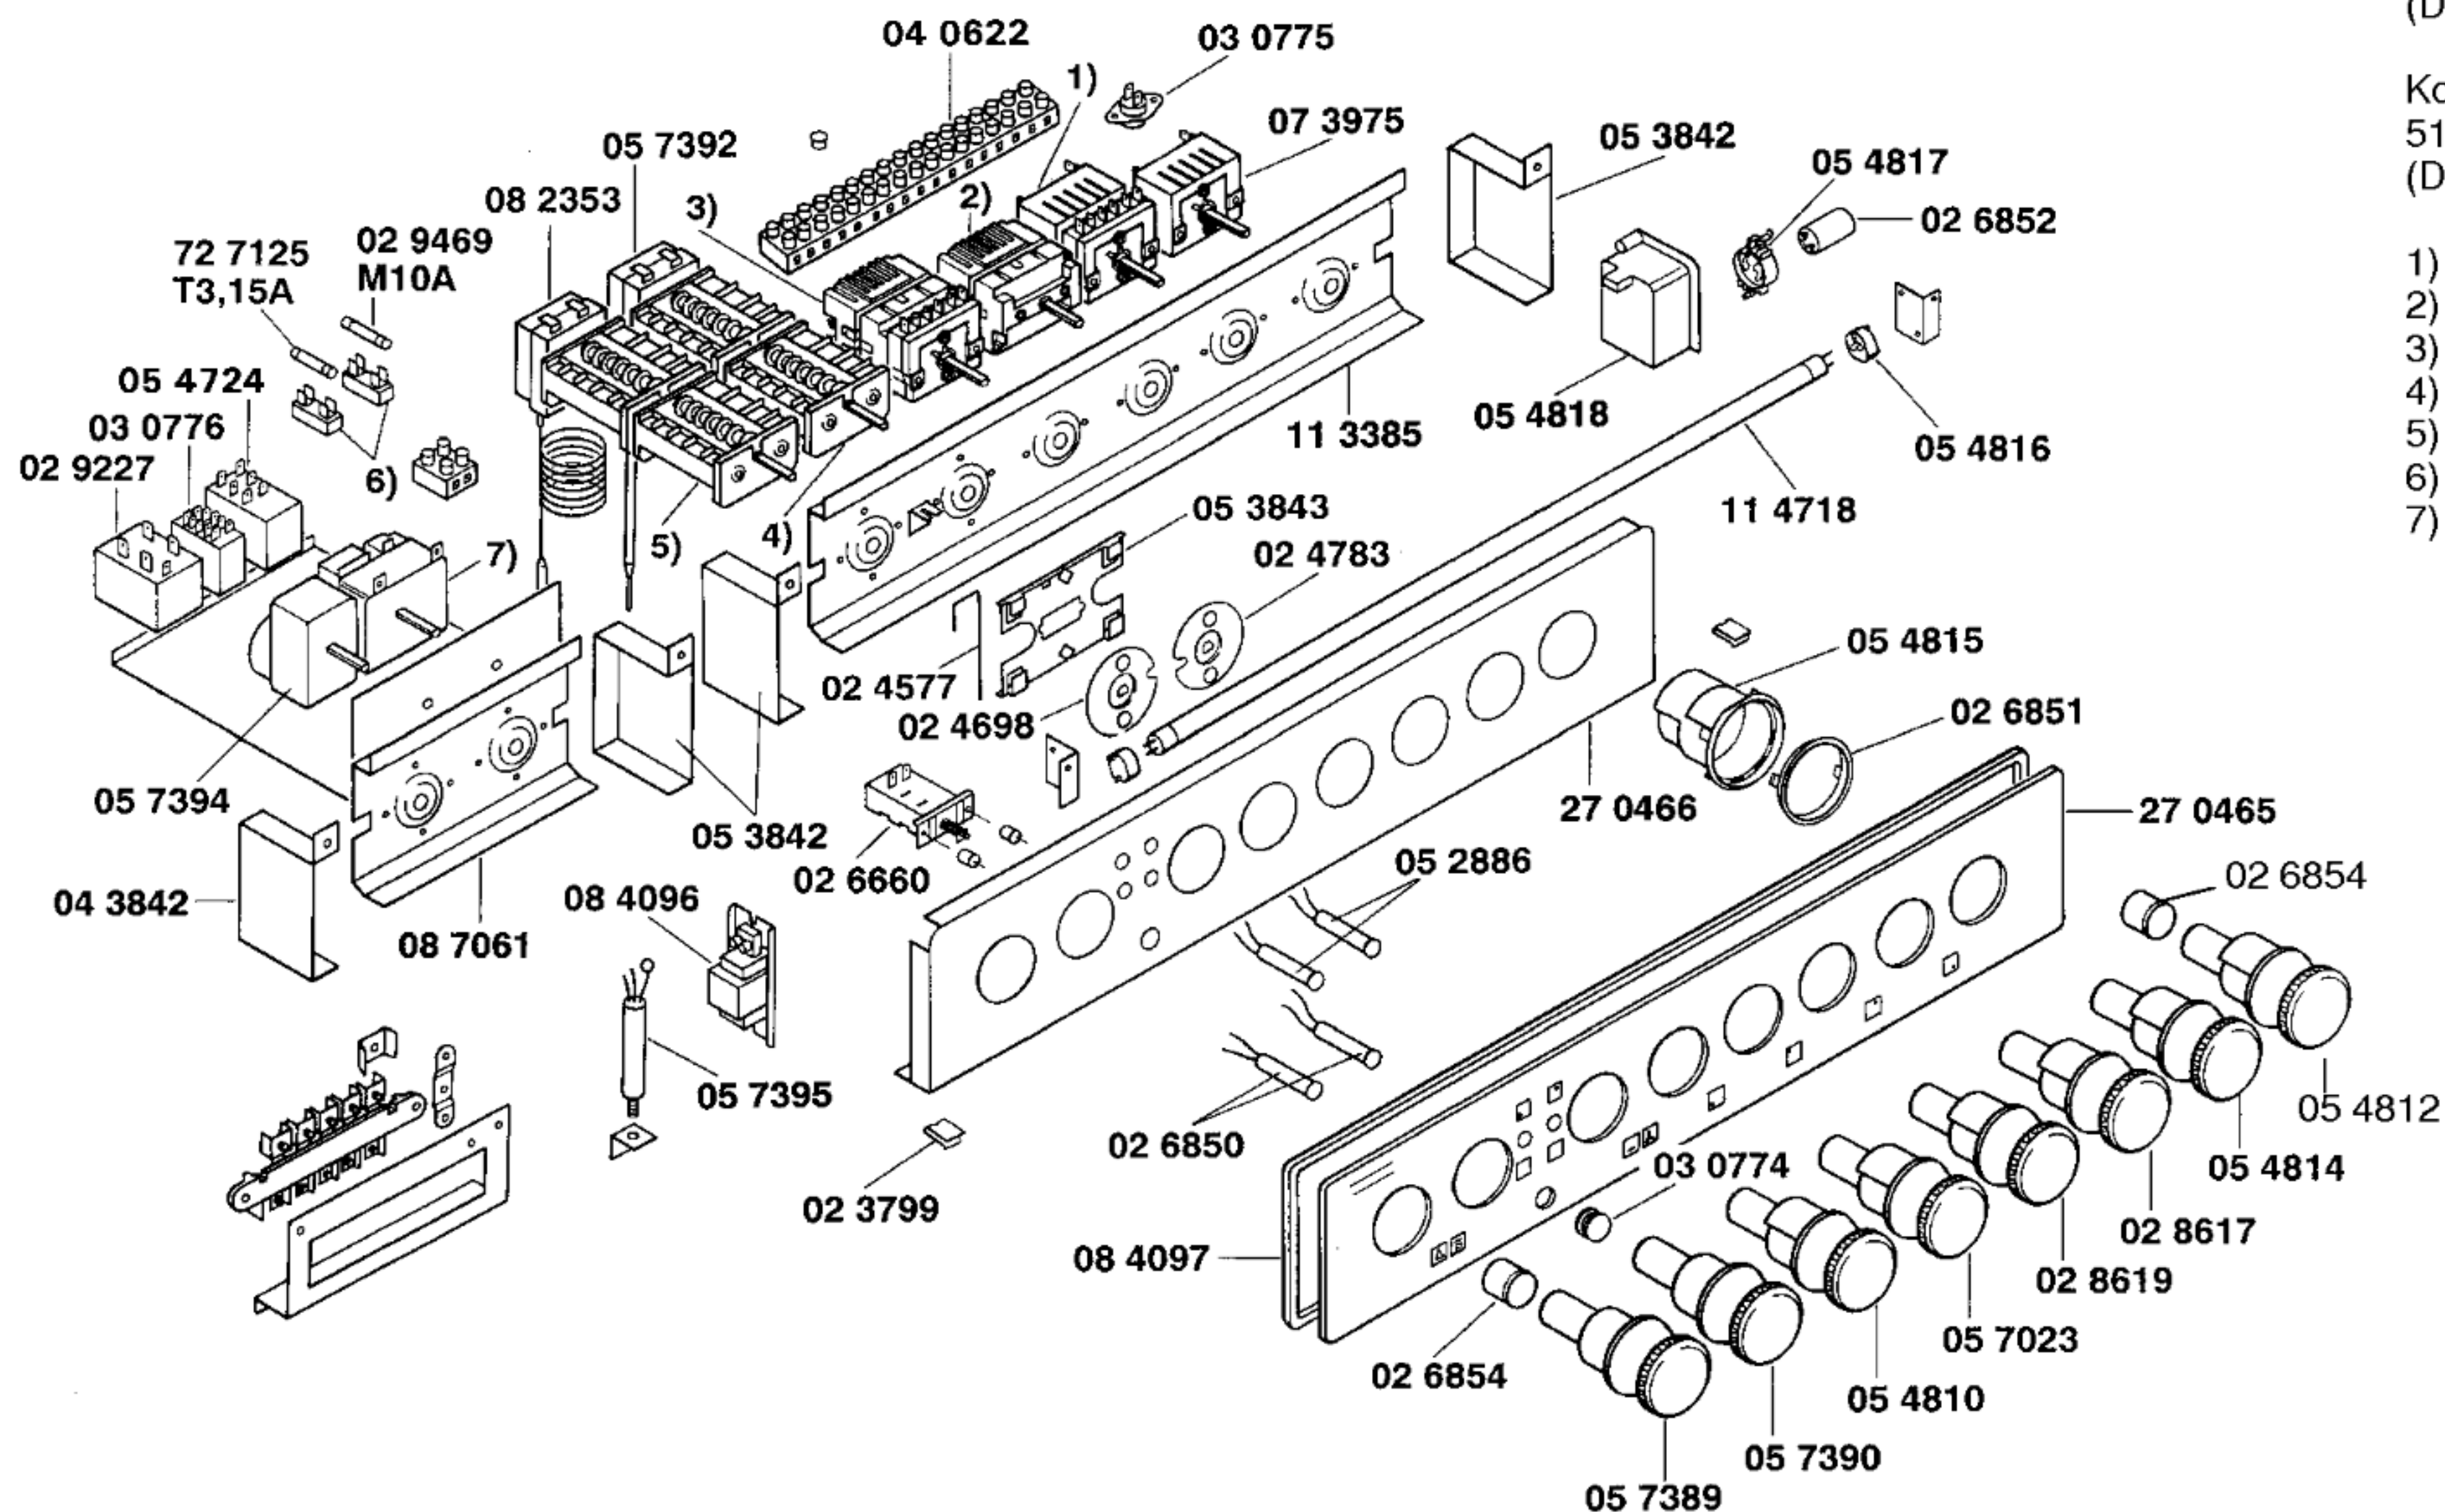

- 1) 08 3579
- 2) 05 5748
- 3) 05 5749
- 4) 05 7391
- 5) 05 7393
- 6) 02 6704
- 7) 05 7195

1) 02 6859

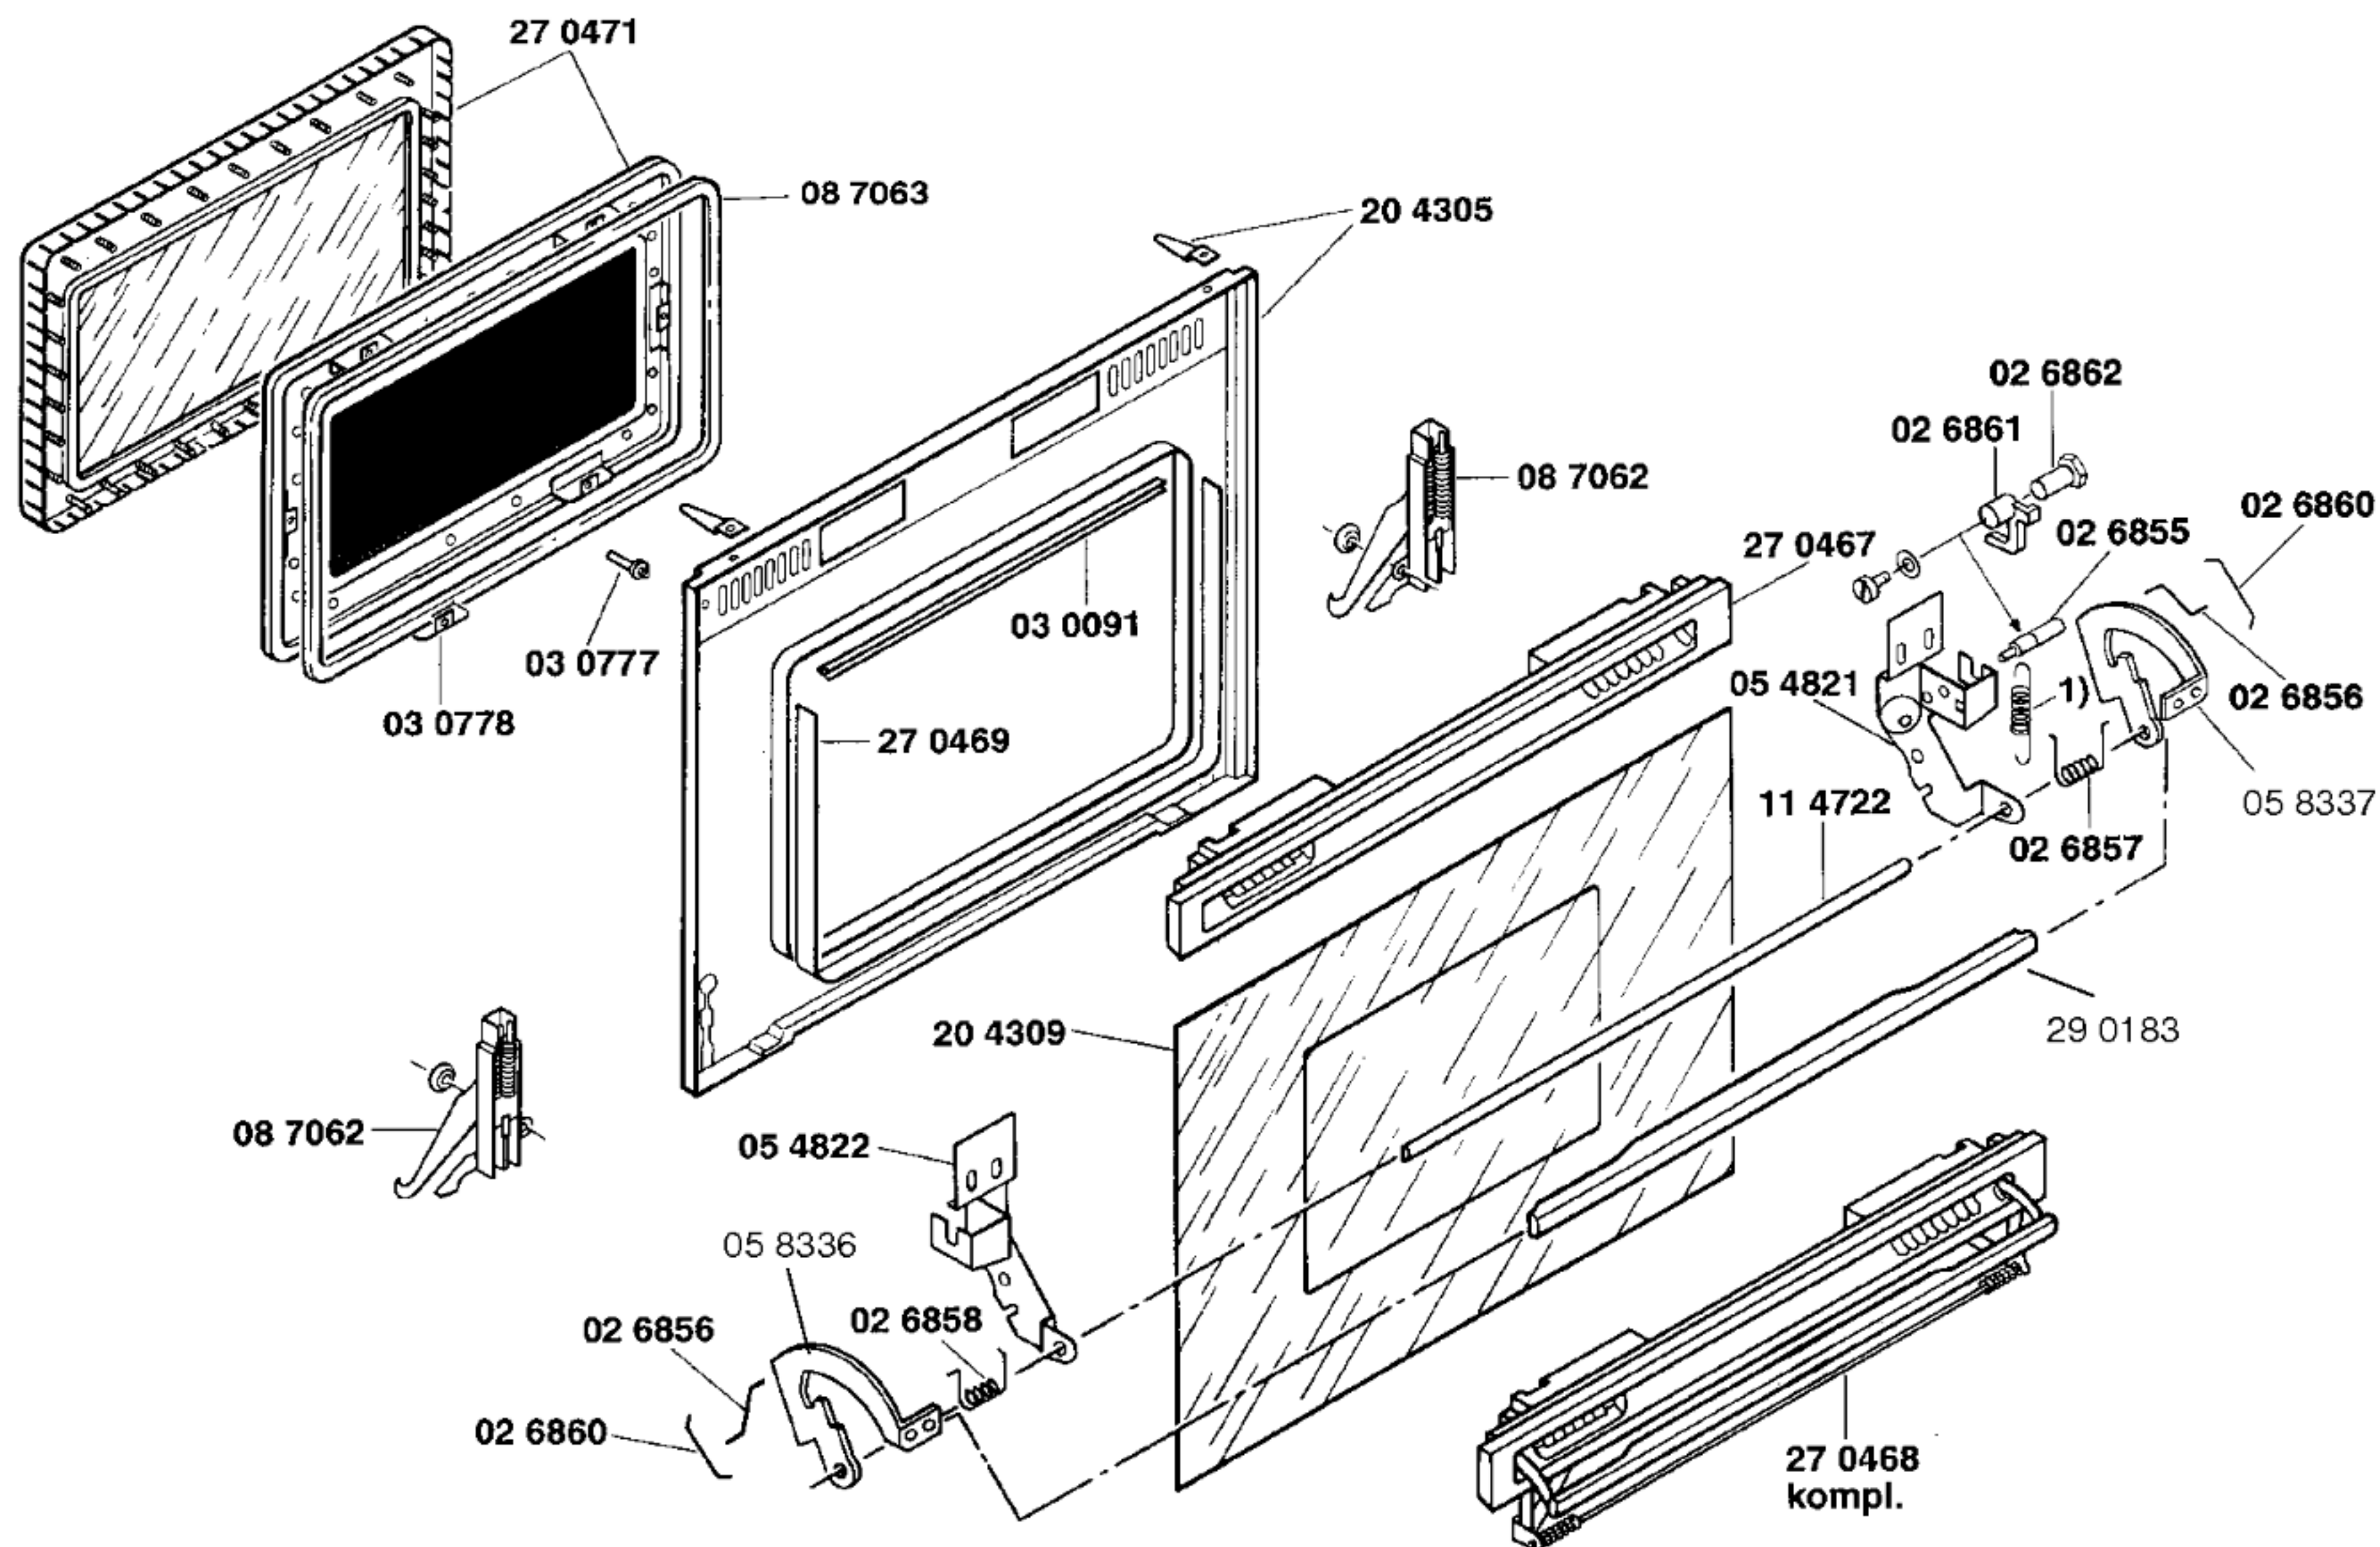

1) 02 5876

