


**BOSCH**

HES662H/01-D1, weiss
 HES662H/02-D2, weiss
 HES662H/03-D3, weiss
 HES672HNL/01-NL1, weiss

HES672KNL/01-NL2, weiss
 HES662HDK/01-DK1, weiss
 HES662H/04-D4, weiss
 HES672KNL/02-NL03, weiss

HERDE
 Stand-Herde

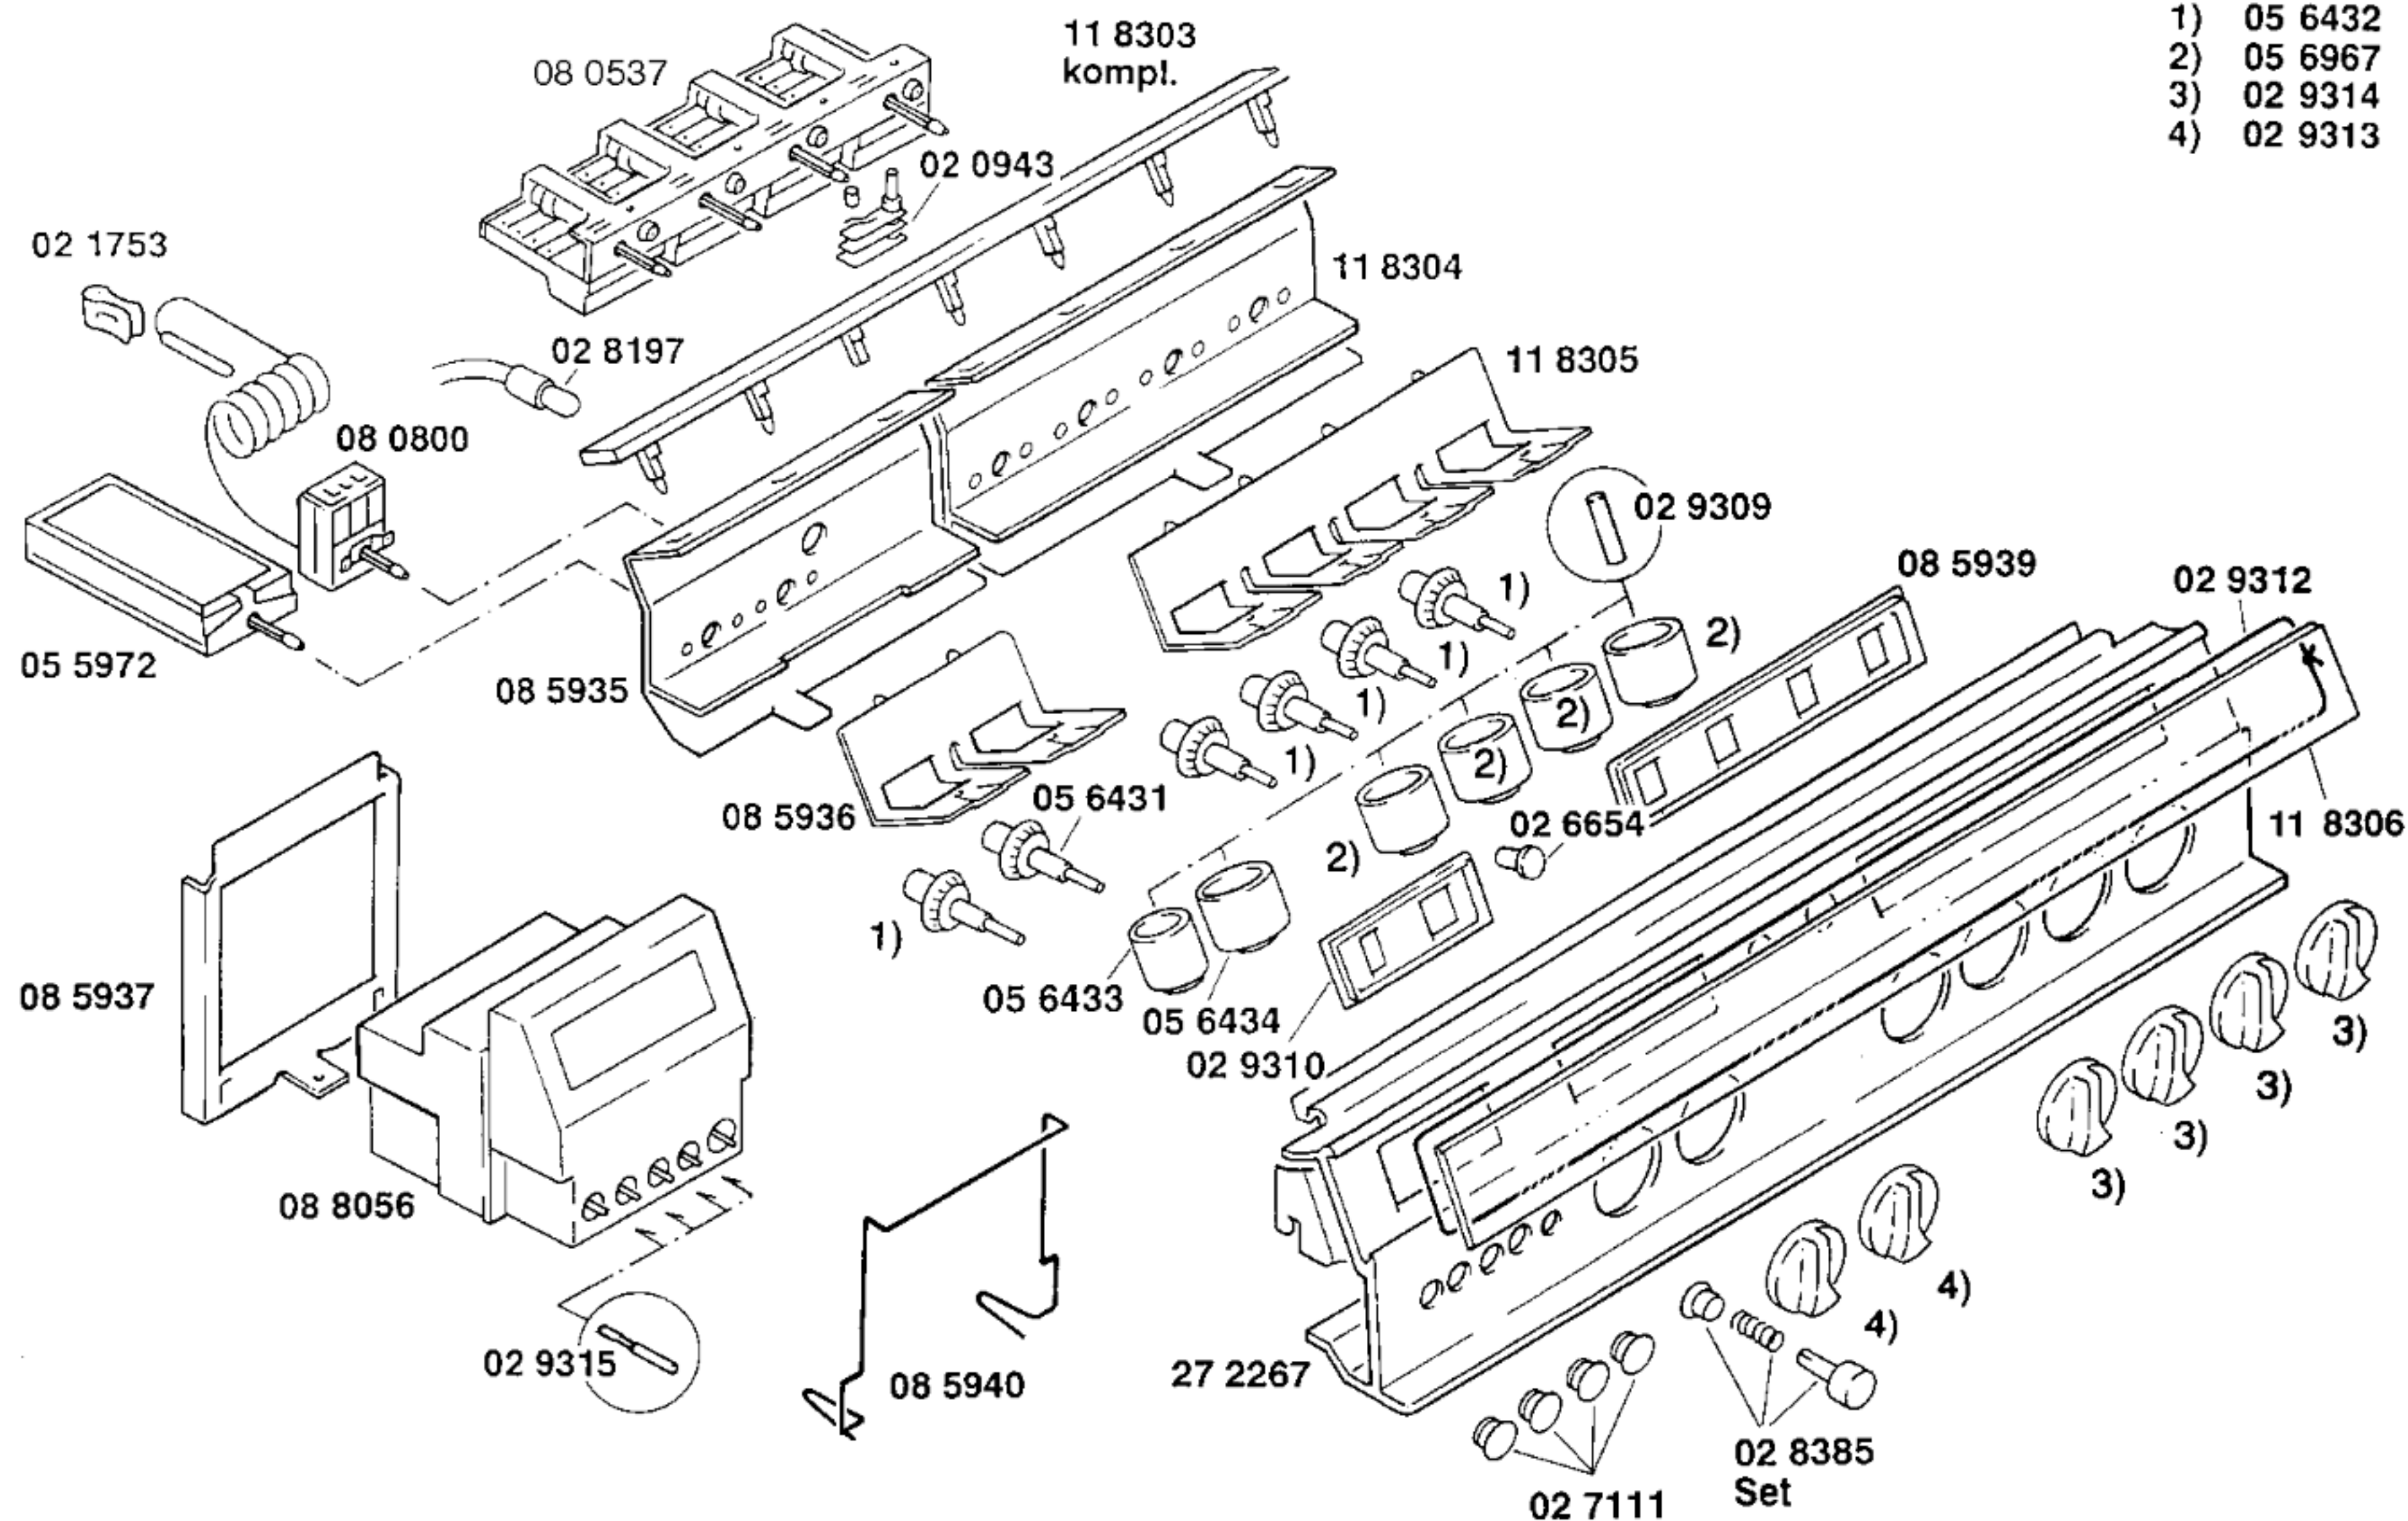

- 1) 05 6432
- 2) 05 6967
- 3) 02 9314
- 4) 02 9313

Ident - Nummern - Konstante
 3740

Gebrauchsanweisung

51 4500
 D1, D2
 (D, F, GB, I, NL)
 51 4772
 NL1, D3, DK1, D4
 (D, F, GB, NL, GR, DK)
 51 5527
 NL2, NL3
 (D, GB, F, NL, GR, DK)

Tips und Rezepte


51 2091
 D1, D2
 (D)
 51 3819
 D3, D4
 (D)
 51 3507
 NL1, NL2, NL3
 (NL)


Bratautomatik-Scheibe

51 3359
 (D, F, GB, I, NL)
 Zubehör:
 HEZ14BB
 Alu-Backblech
 HEZ21BB
 Backblech emaliert
 HEZ16BP
 Bratpfanne
 HEZ16KP
 Kombipfanne
 HEZ10SP
 Spritzschutzpfanne
 HEZ64KS
 Katalyse-Set
 HMZ21GB
 Glasbräter

Ident – Nummern – Konstante
3740

1) 04 4473
2) 02 8895

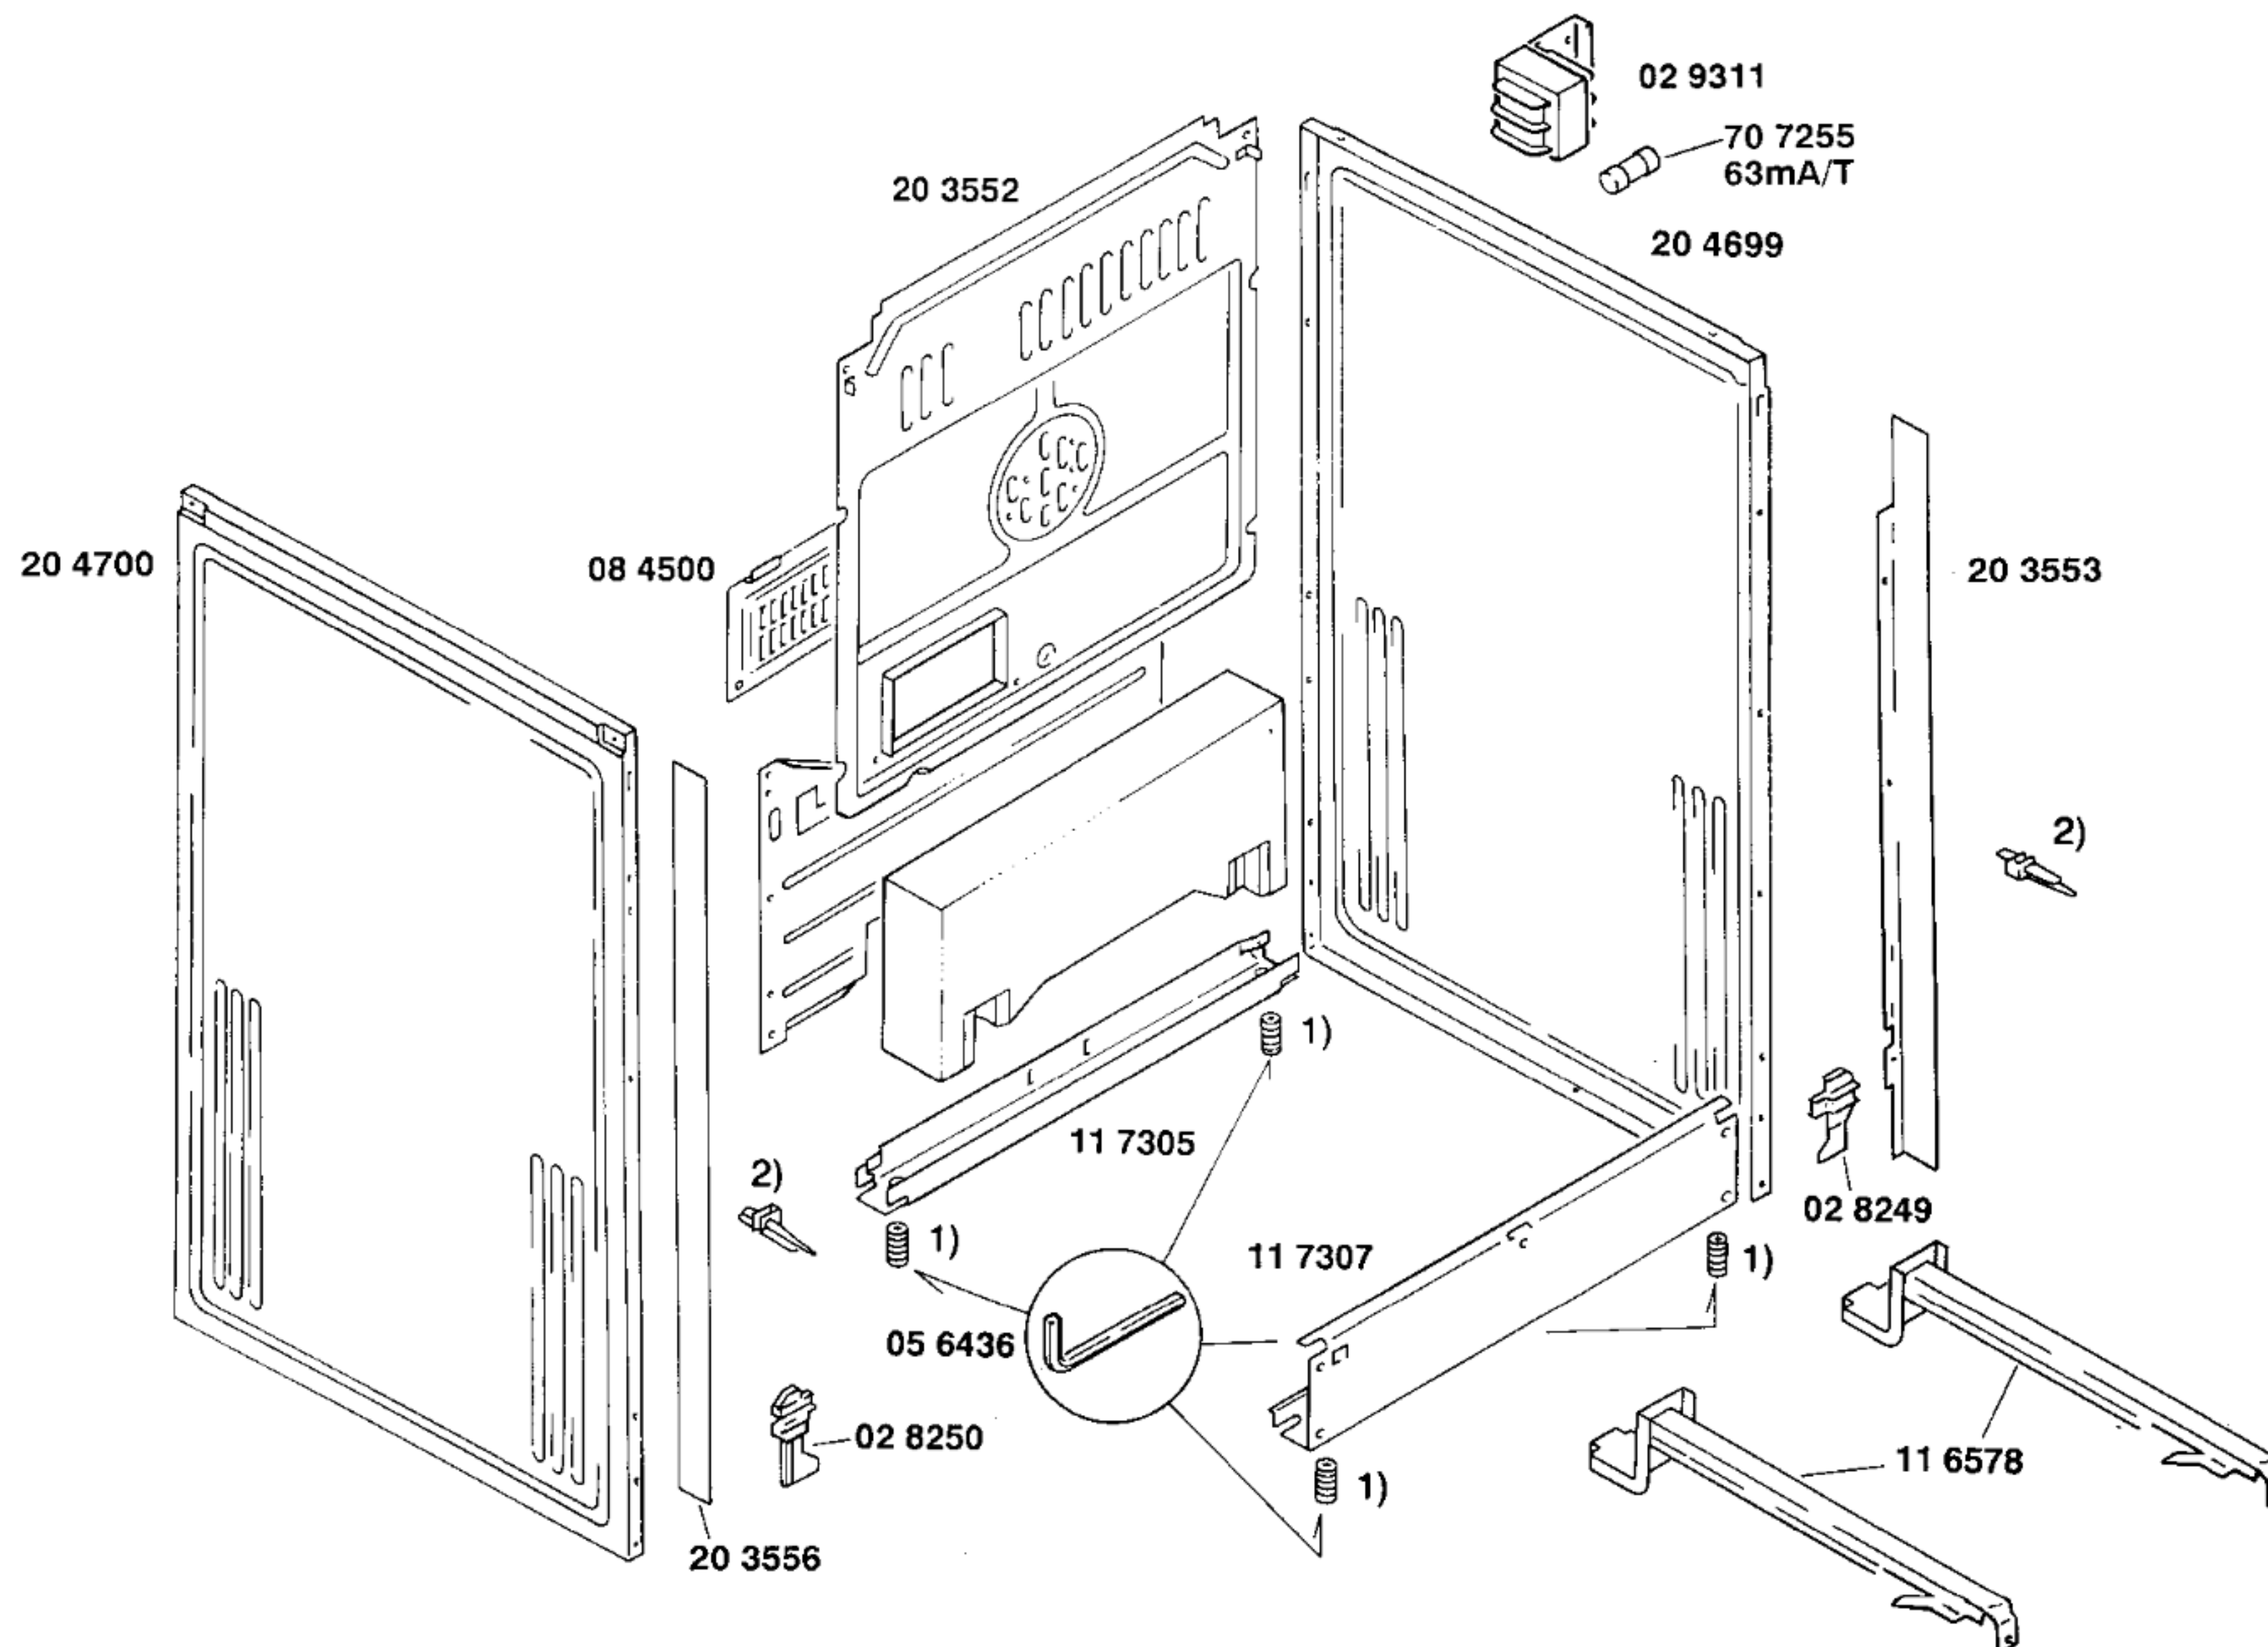

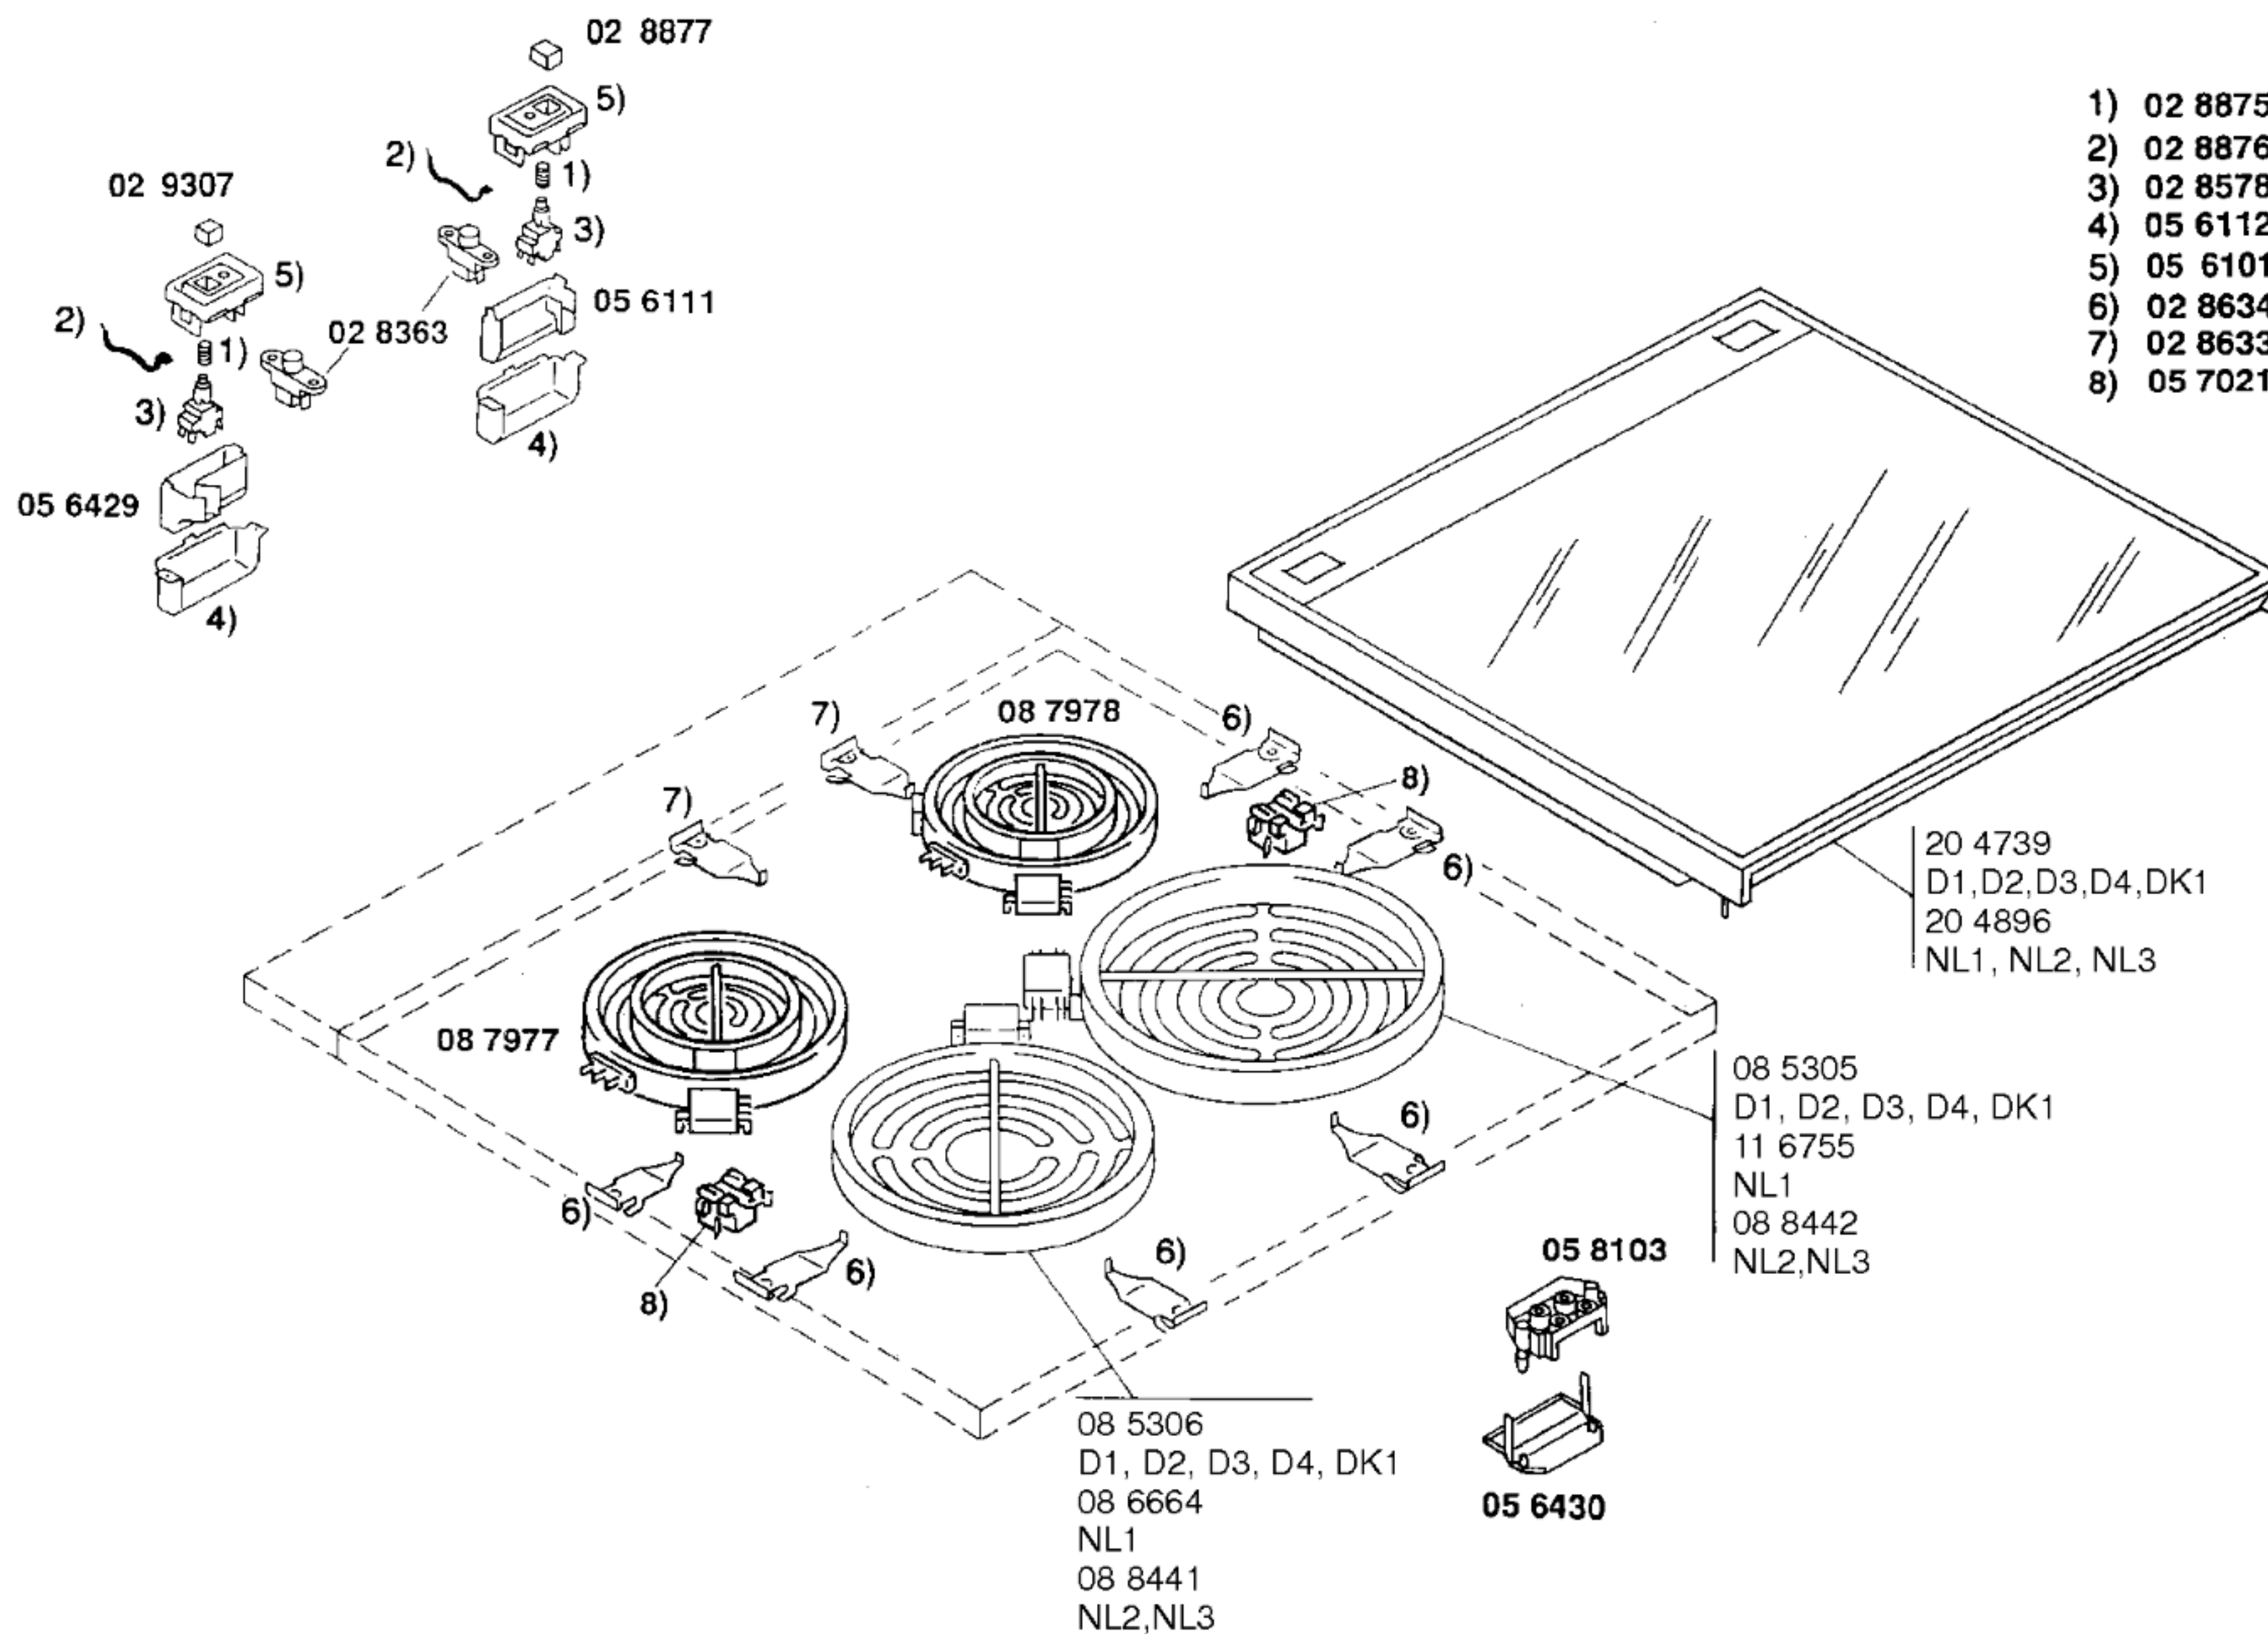Ident – Nummern – Konstante
3740


**BOSCH**

HES662H/01-D1, weiss
 HES662H/02-D2, weiss
 HES662H/03-D3, weiss
 HES672HNL/01-NL1, weiss

HES672KNL/01-NL2, weiss
 HES662HDK/01-DK1, weiss
 HES662H/04-D4, weiss
 HES672KNL/02-NL03, weiss

HERDE
 Stand-Herde

Ident - Nummern - Konstante
 3740

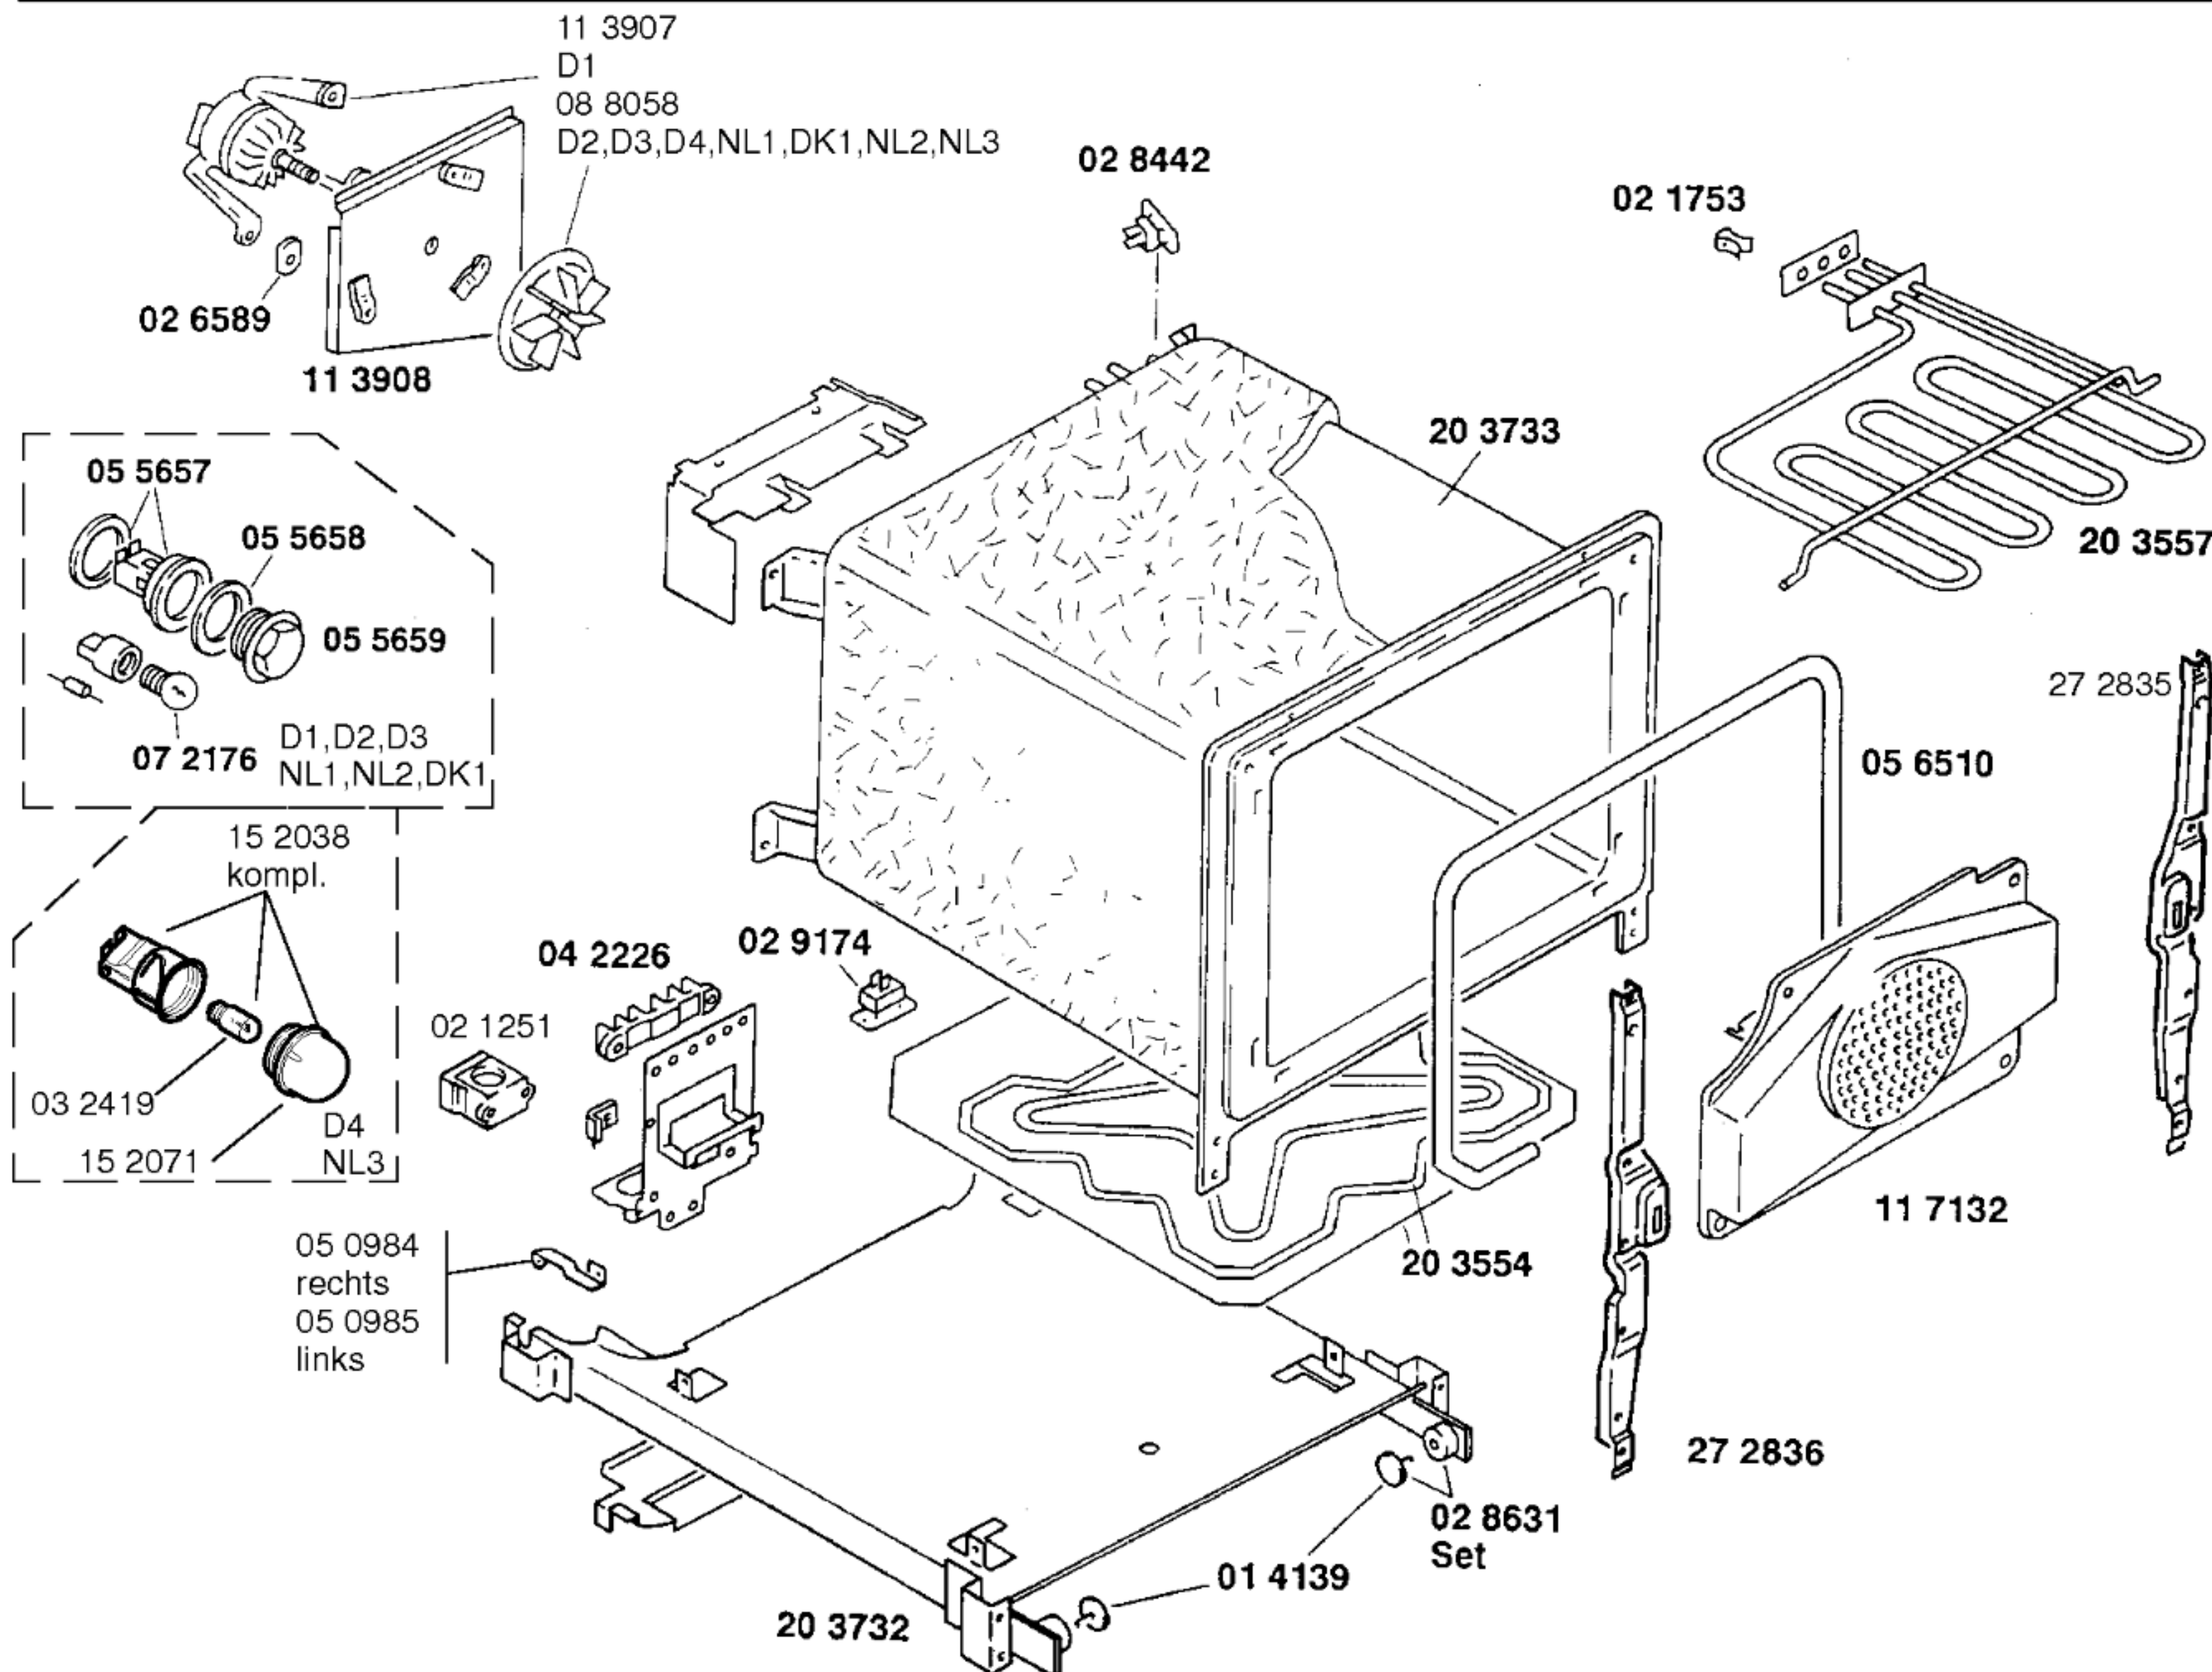

**BOSCH**

HES662H/01-D1, weiss
HES662H/02-D2, weiss
HES662H/03-D3, weiss
HES672HNL/01-NL1, weiss

HES672KNL/01-NL2, weiss
HES662HDK/01-DK1, weiss
HES662H/04-D4, weiss
HES672KNL/02-NL03, weiss

HERDE
Stand-Herde

Ident - Nummern - Konstante
3740

