



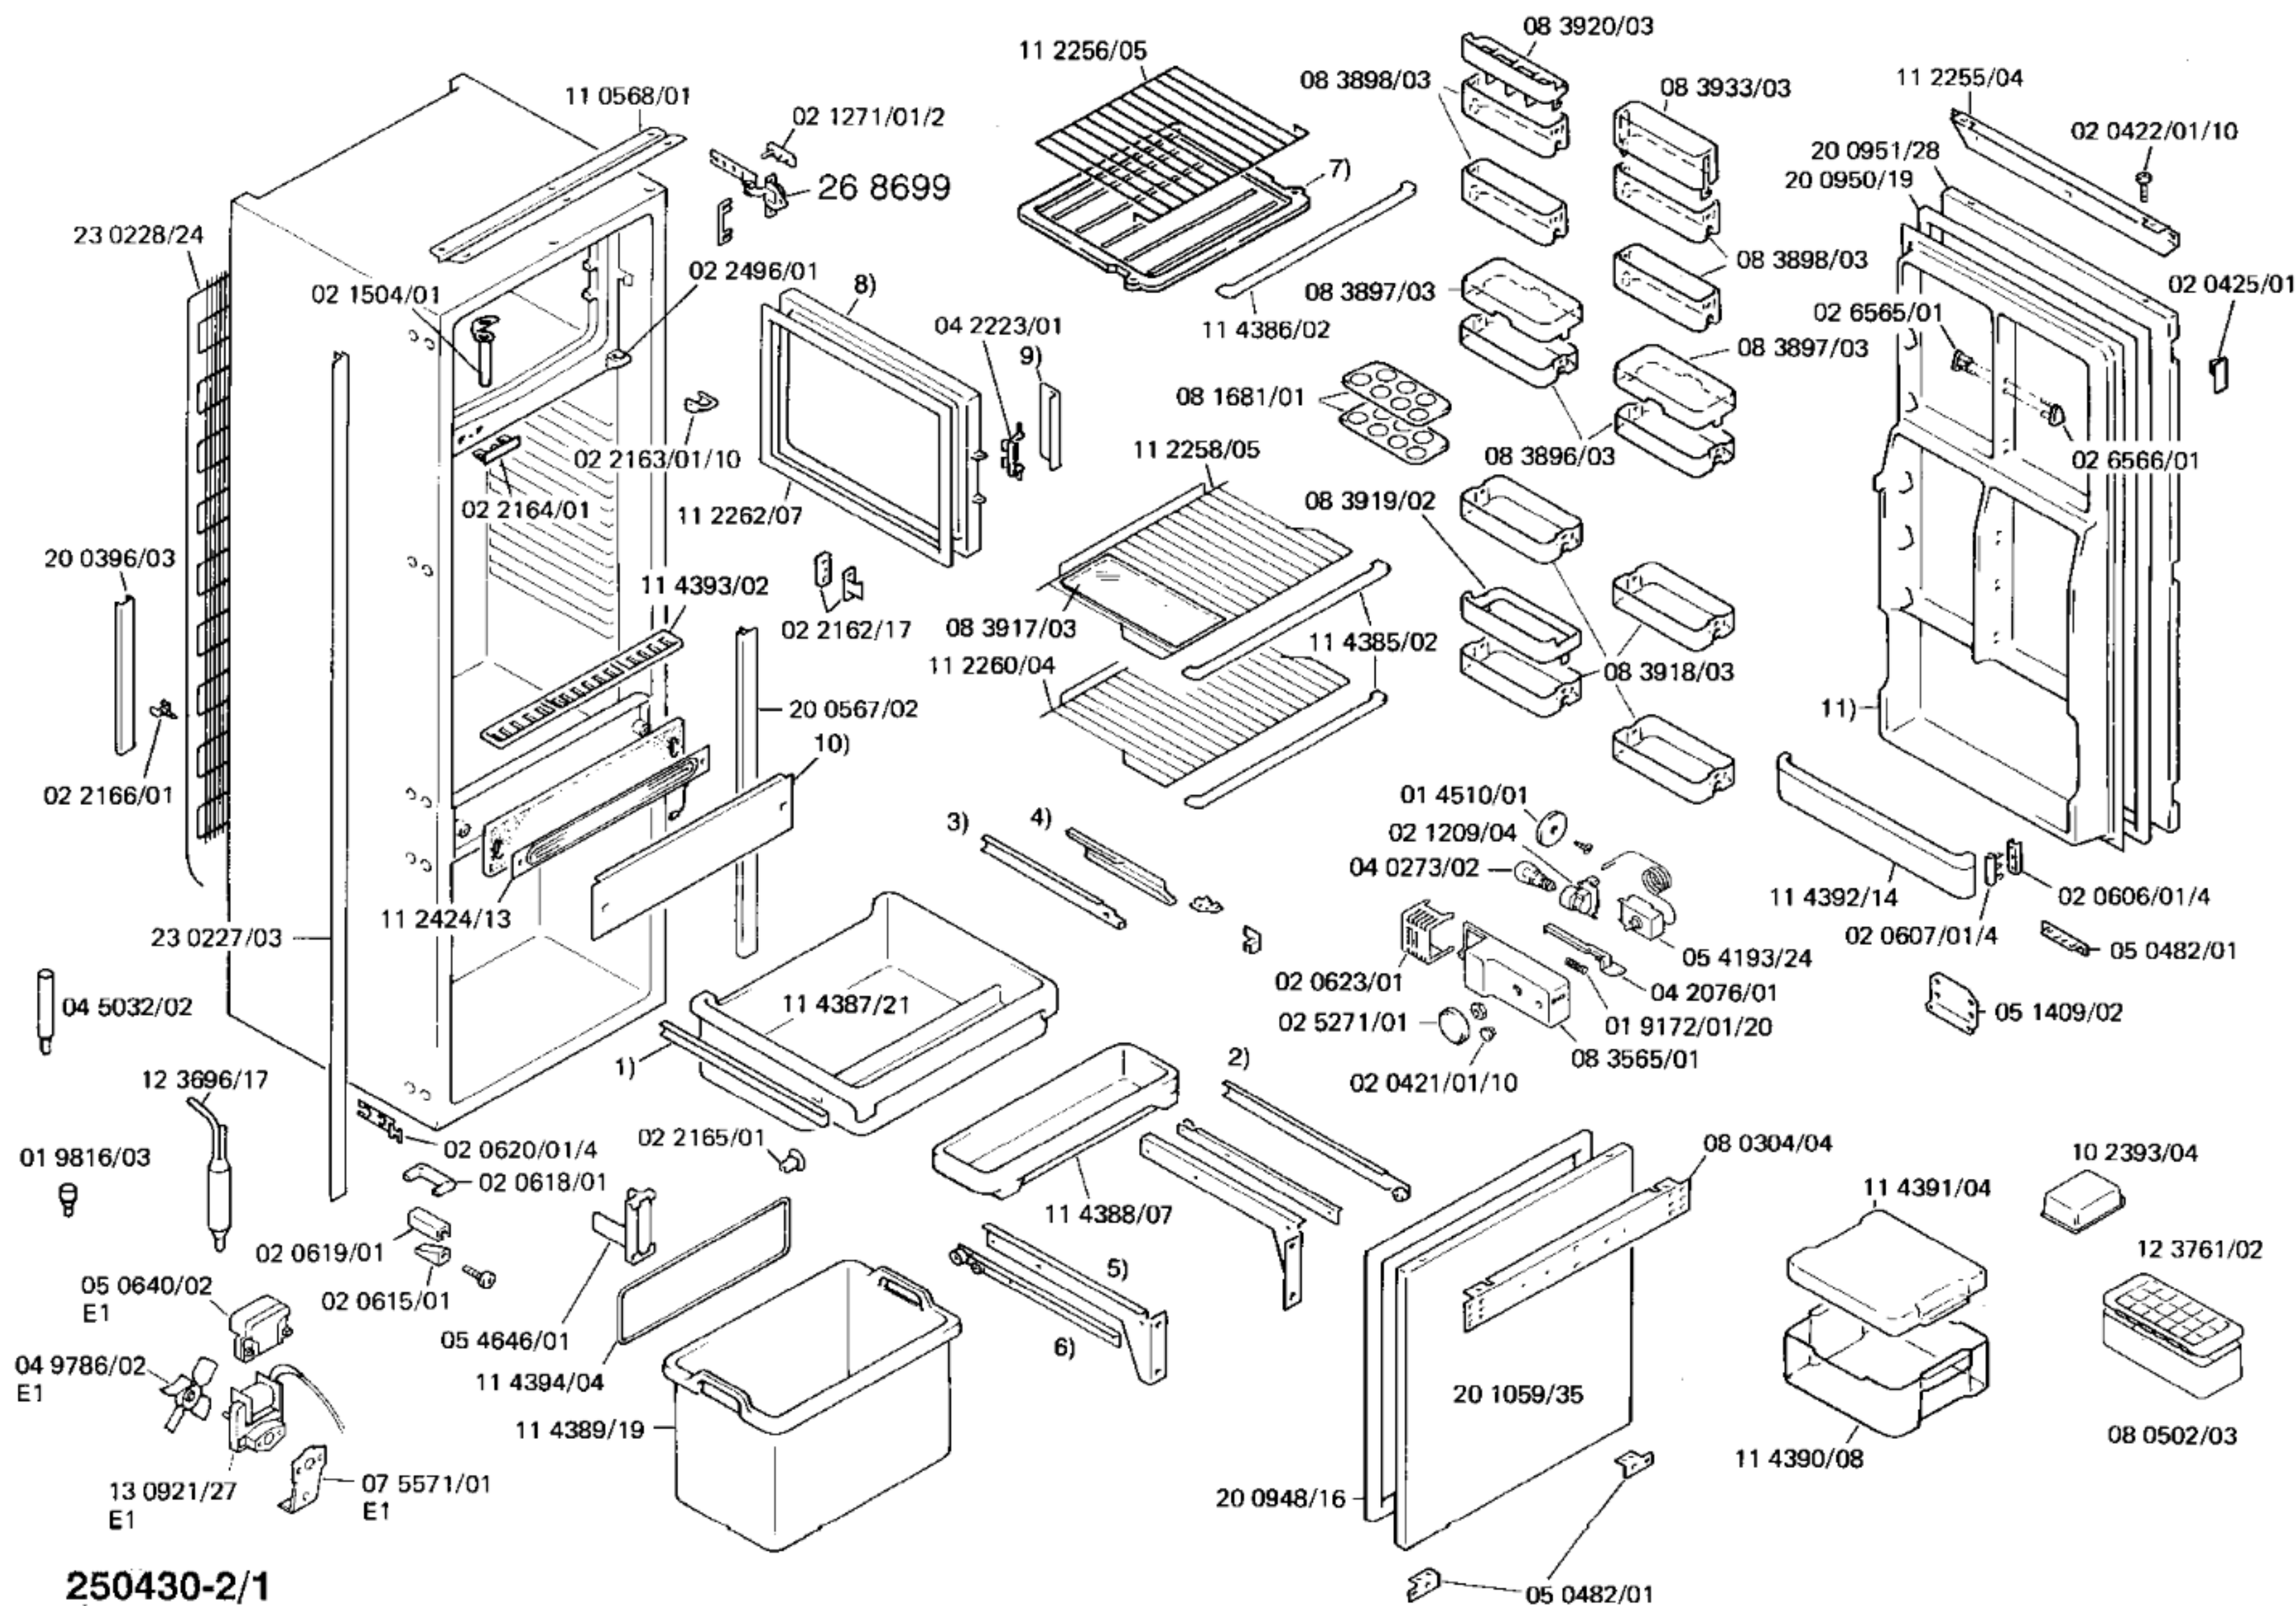

51 1181/00
EU1,CH1,E1,F1
Gebrauchsanweisung
(D,GB,F,I,NL,E,S,N)
51 1179/00
EU1,CH1,E1,F1
Montageanleitung
(D,GB,F,I,NL,E,S,N)

- | | |
|--|---|
| 1) 11 2267/03
rechts
11 2268/03
links | 9) 08 3916/02
bis FD 6411
08 4372/01
ab FD 6412 |
| 2) 11 2272/09
rechts
11 2273/09
links | 10) 11 2265/07
bis FD 6411
11 5165/07
ab FD 6412 |
| 3) 11 2270/03
rechts
11 2271/03
links | 11) 23 0249/14
bis FD 6411
23 0671/14
ab FD 6412 |
| 4) 07 5574/02
rechts
07 5575/02
links | |
| 5) 11 2276/08
rechts
11 2277/08
links | |
| 6) 11 2274/09
rechts
11 2275/09
links | |
| 7) 11 2598/07
F1 | |
| 8) 11 4384/32
kompl.
bis FD 6411
11 5164/32
kompl.
ab FD 6412 | |

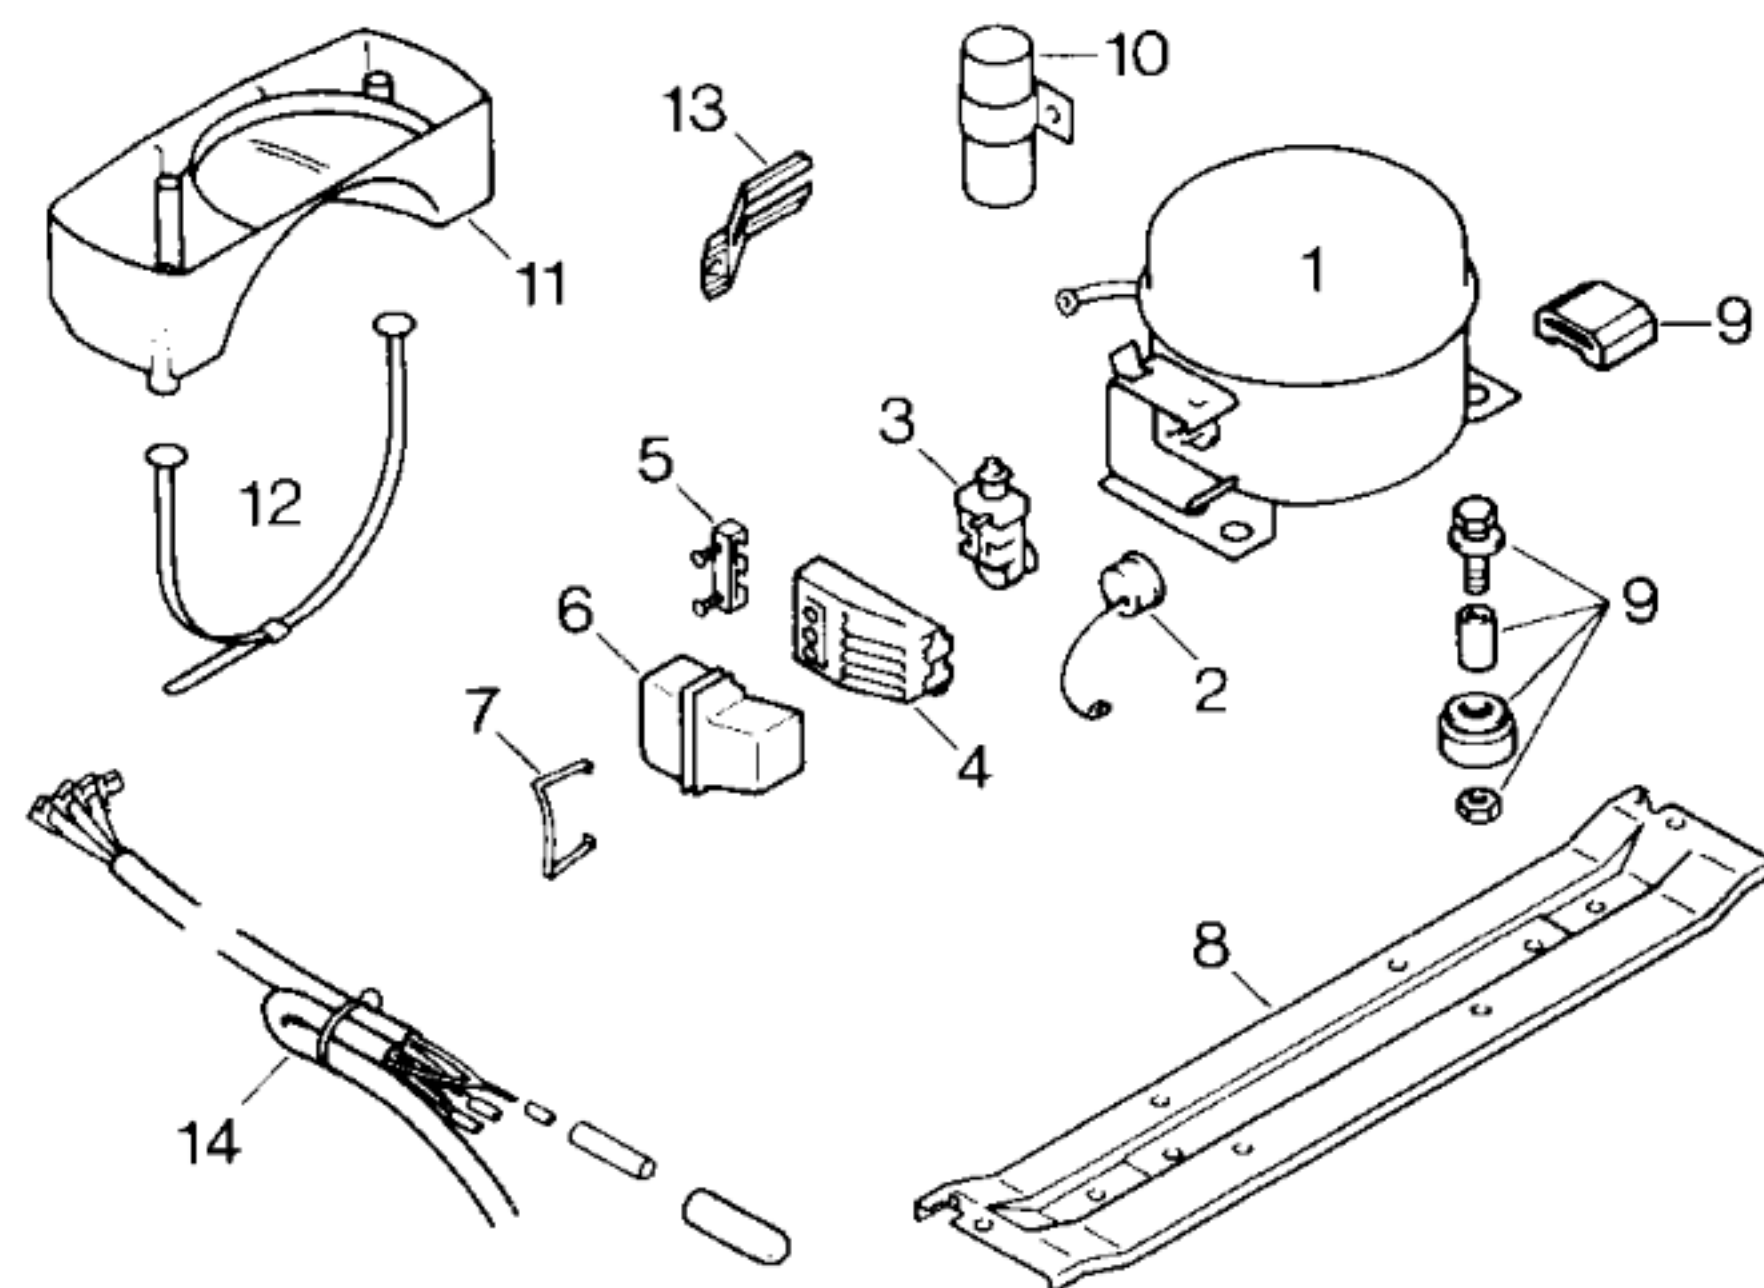

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Aspera	
Typ/Type		FR 8,5 A	BY 1116 A	
Förderleistung/Delivery/Débit		l/h	1430	1450
Anlaufstrom/Starting current/Cour. de démarrage		A	10,3	9,9
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	12,2	11,7
		Hi/aux Ω	13,7	37,7
Temp.-Regler/Thermostat		M + J		
Typ/Type		TF 57		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		+ 4 + 4		
Valeurs de commutation		- 28 - 13		
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R12 g	180	
Anschlußwert/Conn.load/Puiss. connectée		W	150	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω	8800	
Leistung/Power/Puissance		W	5,5	
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.	F1	EU1,CH1,E1		
	Danfoss	Aspera		
1	14 0157/45	14 0312/45		
2		02 6559/04		
3	02 0108/27	02 2342/16		
4		05 1748/06		
5	02 1361/04			
6	05 1413/05	05 1746/01		
7		02 2339/01		
8	11 1838/03	11 1919/01		
9	05 0166/05/4	05 0166/05/4		
10				
11	10 7331/02	10 7331/03		
12				
13		04 2688/01/2		
14				