




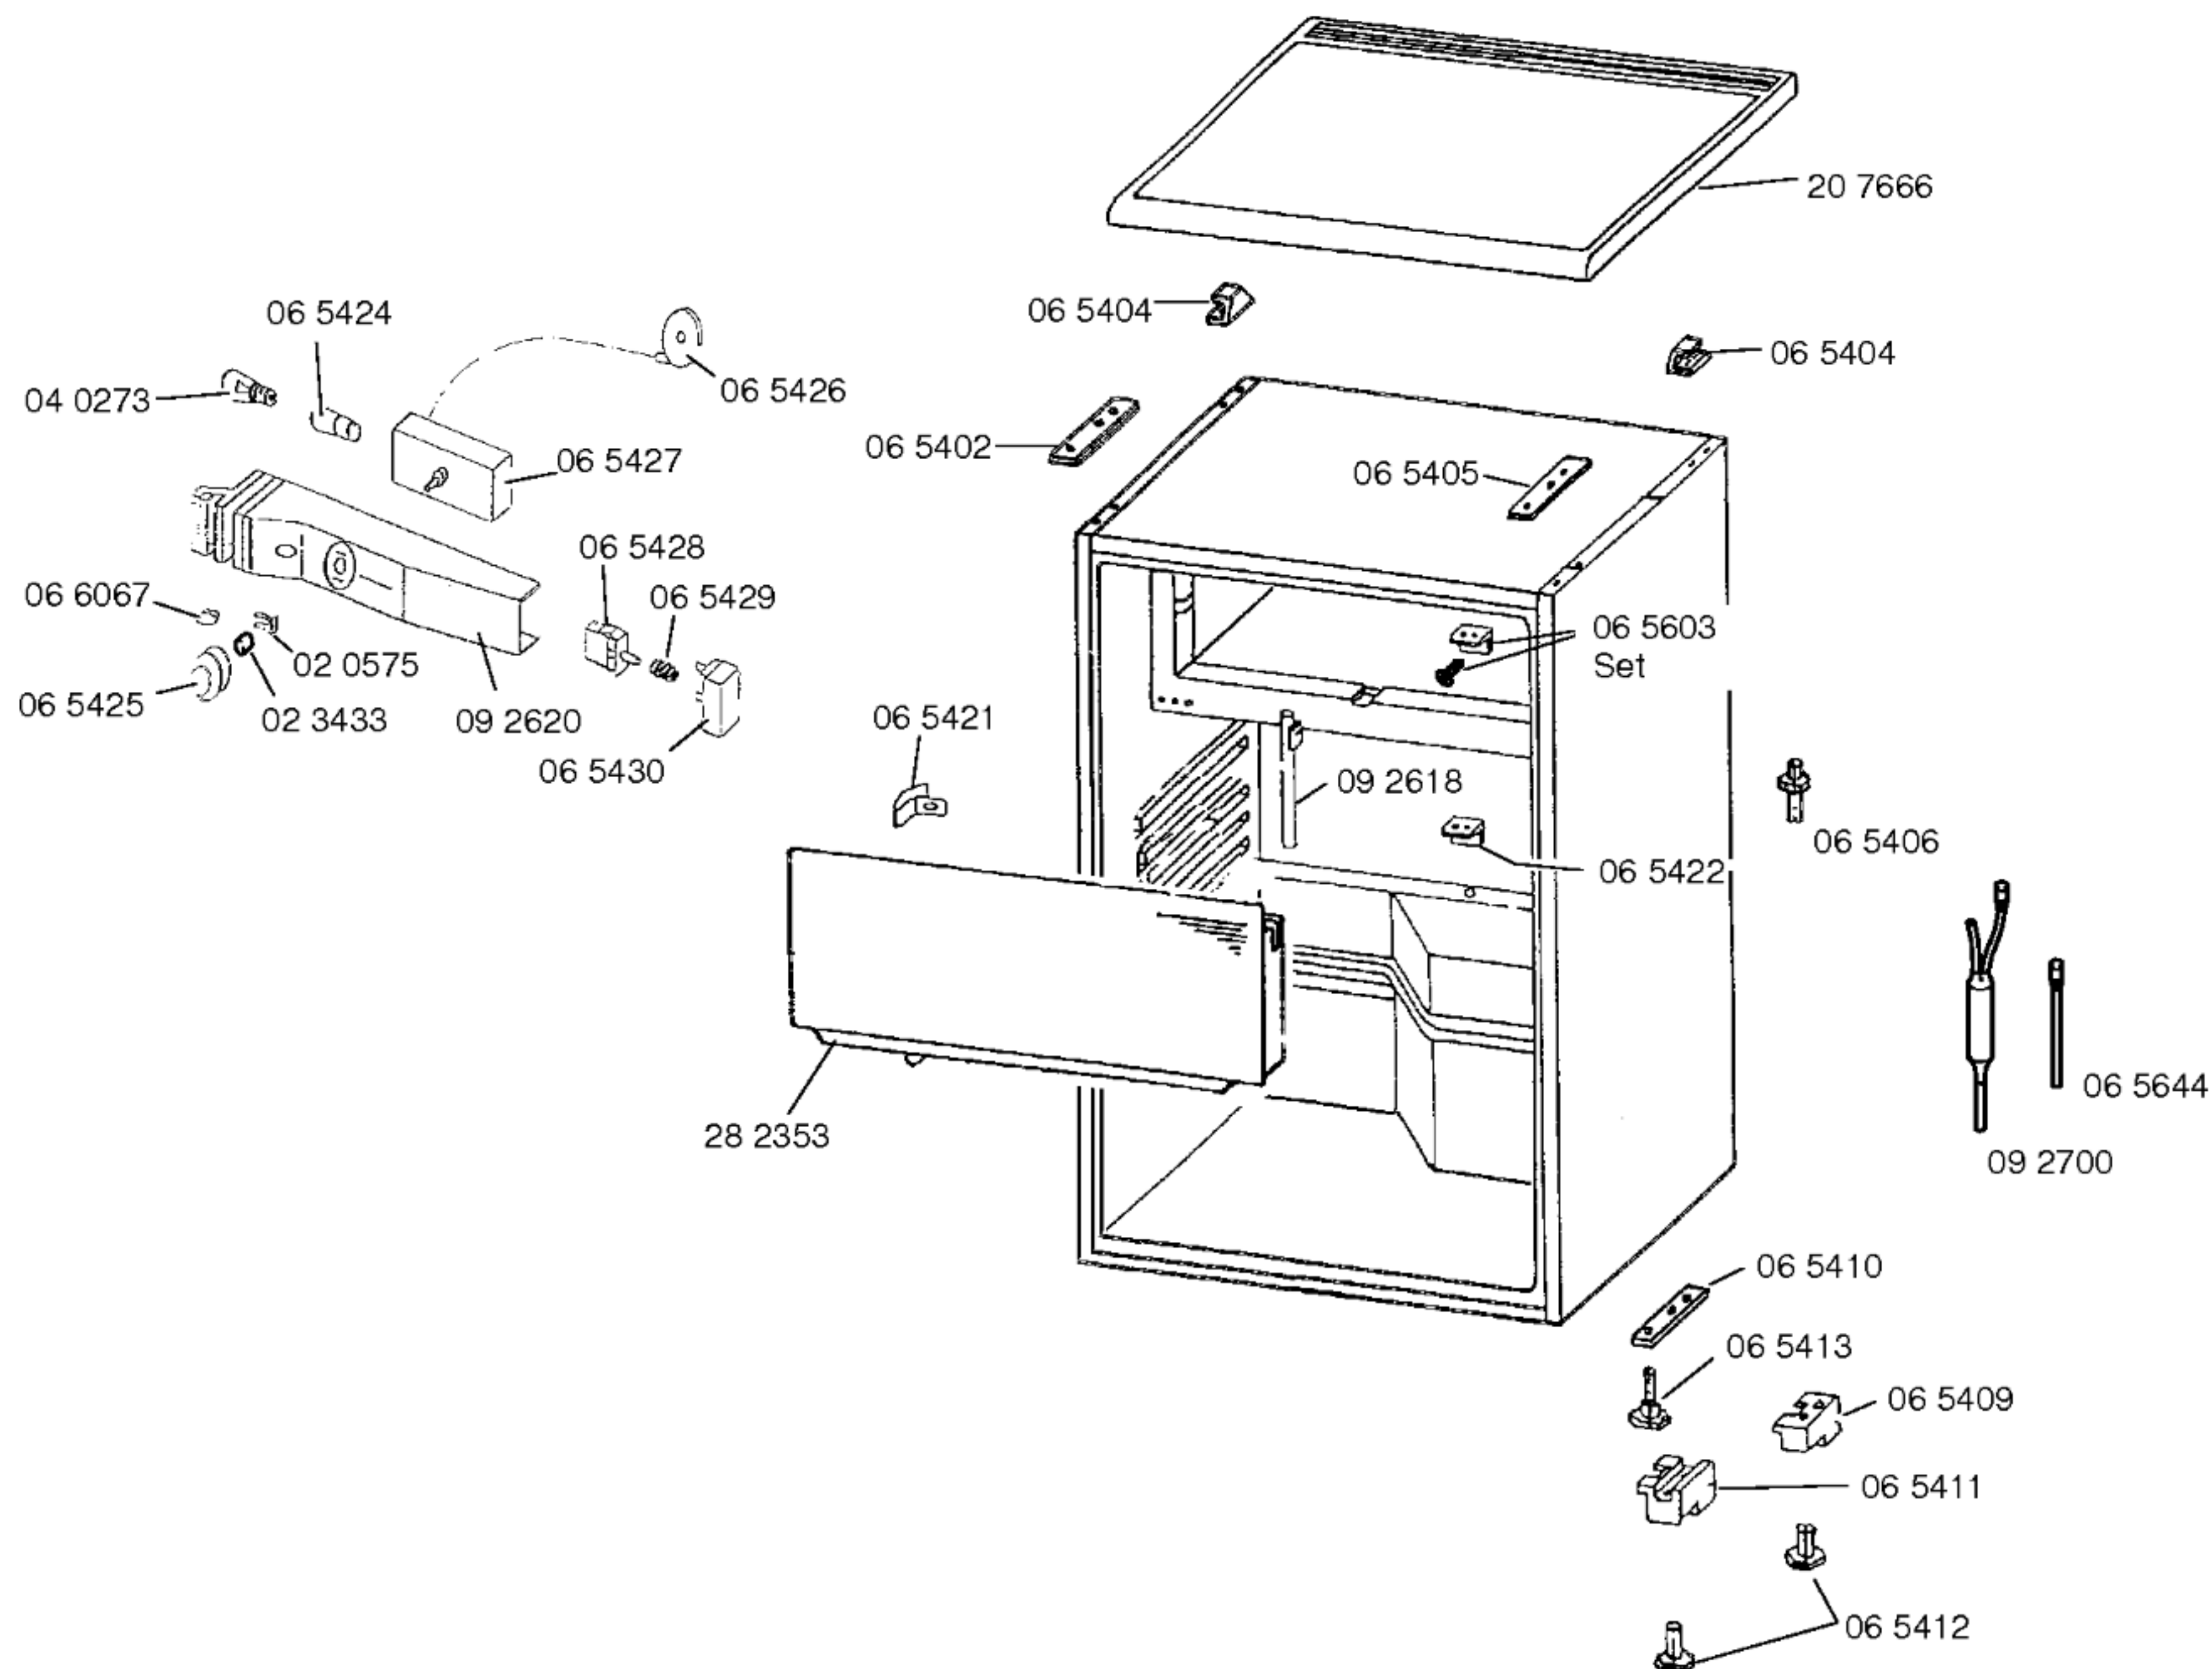

Gebrauchsanweisung
51 5687
(D,GB,I,F,E,NL)

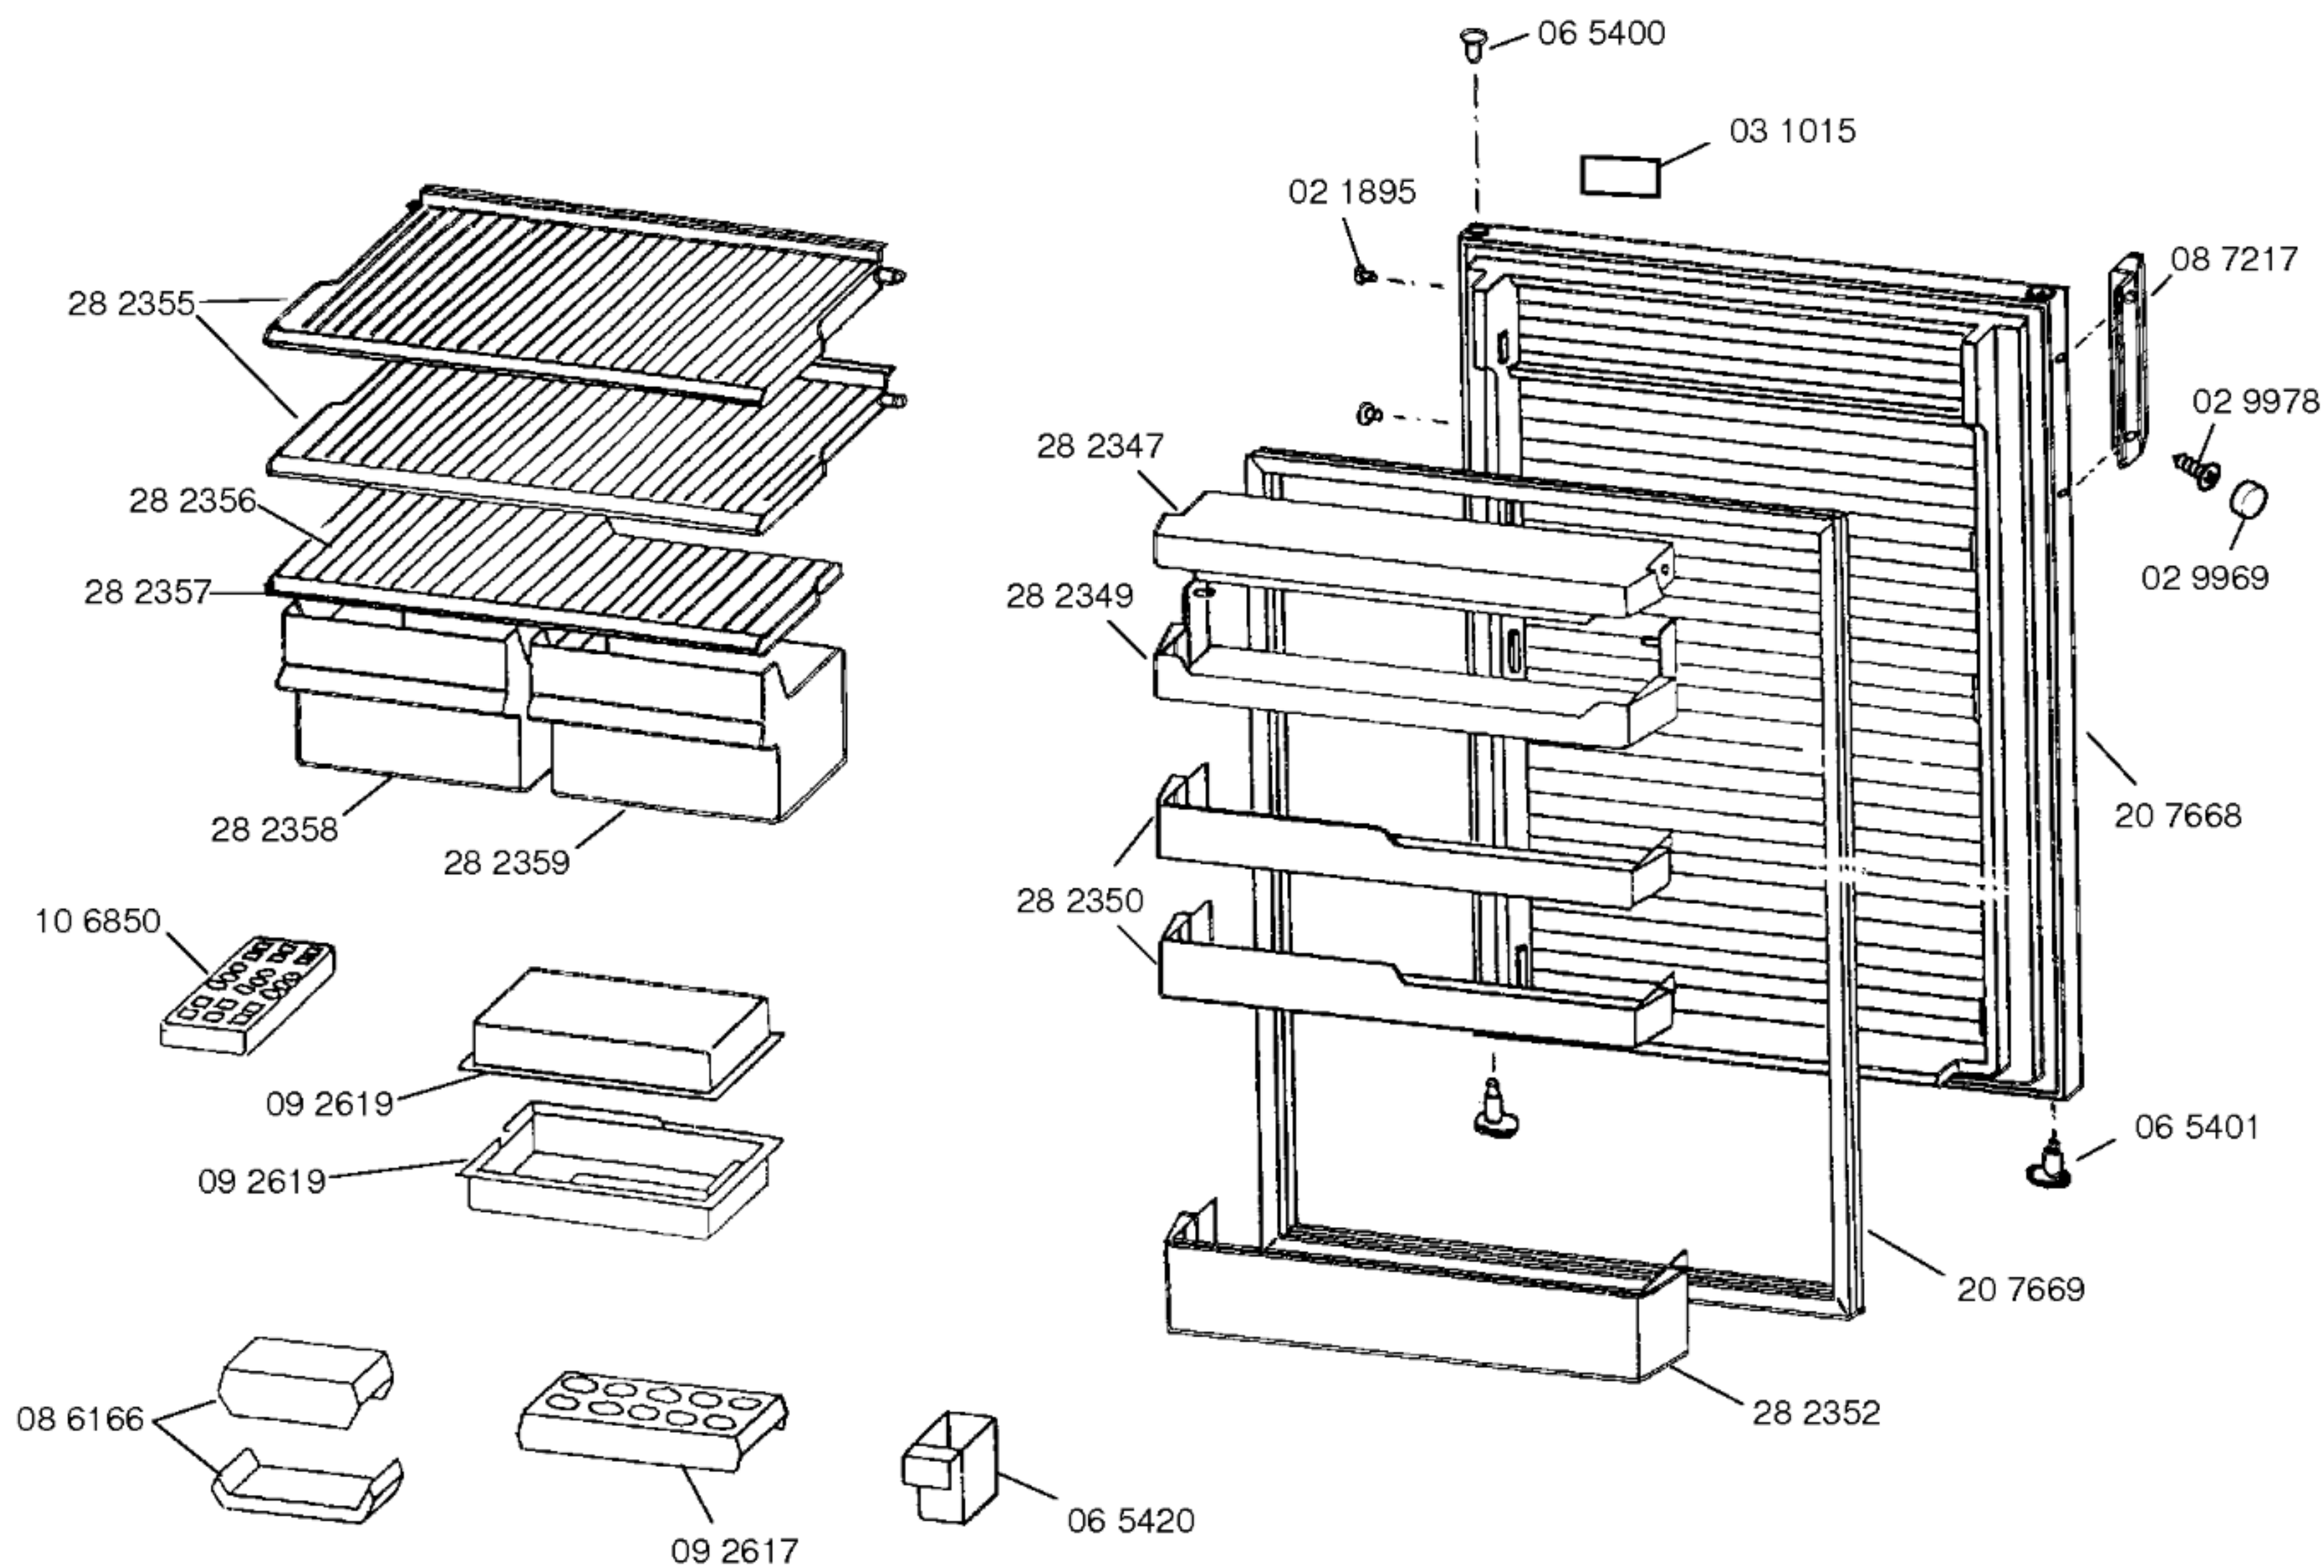

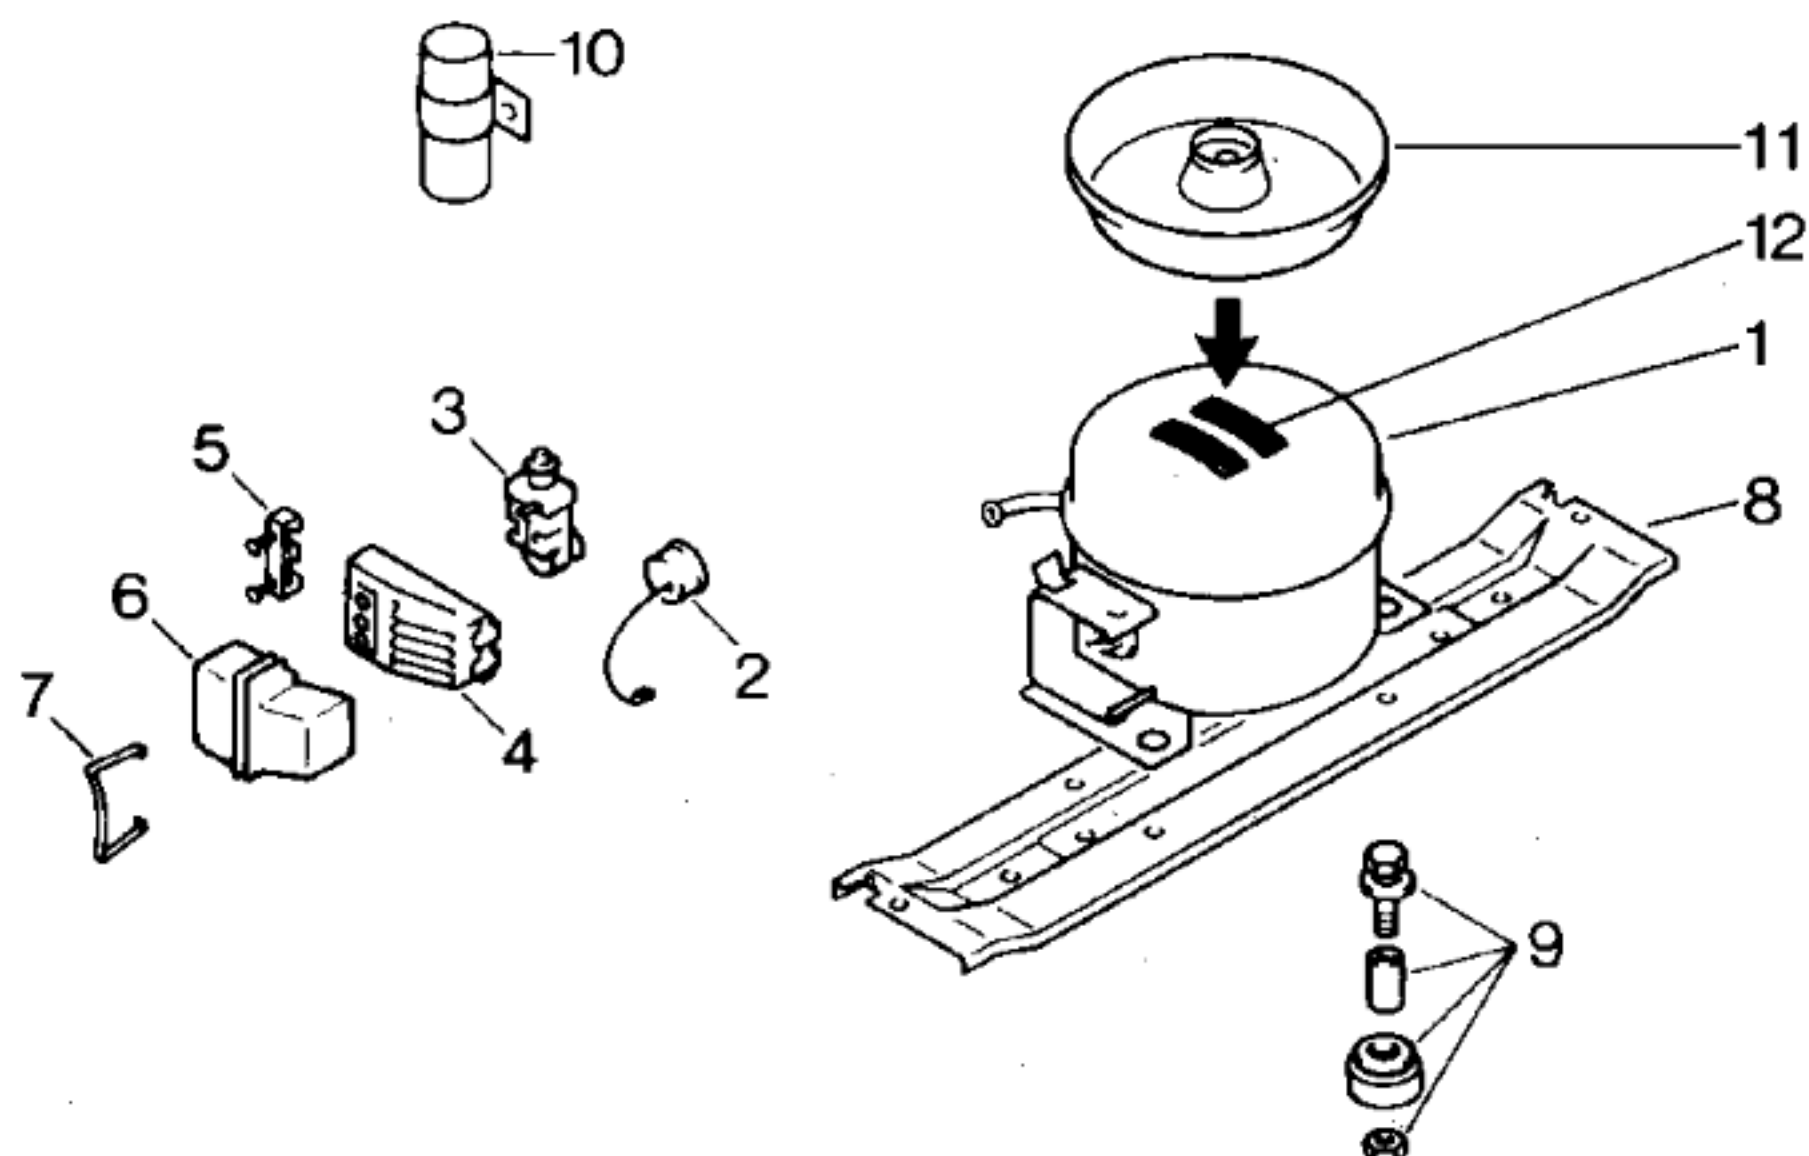

Pos.	Danfoss	Unidad	
	TL 3 A	L33AS	
1	14 0080		
2		06 5605	
3	05 9191	06 5604	
4		06 5607	
5	02 7310		
6	05 1413	06 5608	
7		06 5609	
8			
9	05 0166		
10			
11	08 4744	09 5157	
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Unidad	
Typ/Type		TL3A	L33AS	
Förderleistung/Delivery/Débit	l/h	563	-	
Anlaufstrom/Starting current/Cour de démarrage	A	7,2	-	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	31,4	41,7	
	Hi/aux Ω	15,5	69,6	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57		
Reglerstellung/Position		warm kalt		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+4 +4		
Valeurs de commutation	„aus“	-16 -28,5		
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge	R12	g	80	
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			