

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
ELEKTRISCHE TEILE ELECTRICAL PARTS PIECES ELECTRIQUE			
IC1 IC2 IC3 IC4	73 5025 73 5024 73 2401 73 5023	 CXA20111 AN7415S TA7376P TA74HC02	
Q2 Q101 Q102 Q103 Q104	73 3408 73 6284 73 6284 73 6284 72 7850	 2SC2603F 2SB815B7 2SB815B7 2SB815B7 2SC2812	
VR1	73 8133	 Lautstärke 2x20K	volume
S101 S103 S104	79 1637 79 1637 79 1637	 Stereo FM AM	
	75 5103	Teleskopantenne	telescopic antenna antenne télescopique
JK1	73 5026	Kopfhörerbuchse	phones socket douille p. recepteur serre-tete
JK2	73 5027	DC-Buchse	power socket douille p. secteur

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		GEHÄUSETEILE	PARTS OF CASING PARTI DU BOITIER
	75 5104	Gehäusevorderteil	cabinet front part ébénisterie partie anérieure
	75 5105	Gehäuserückteil	cabinet rear part ébénisterie partie derrière
	75 5106	Handschlaufe	hand strap dragone
	73 5029	Batteriefachdeckel	cover f. battery compartment couvercle f. boitier de batterie
	73 5028	Lautstärkeknopf	volume knob bouton p. volume
	73 5030	Abstimmknopf	tuning knob bouton p. réglage
	43 0124	Austauschgerät	Exchange apparatus Appareil d'échange
	53 0501	Gebrauchsanweisung	Instruction manual Instruction d'emploi
	53 5271	Service-Anleitung	service booklet brochure service