 
 
 
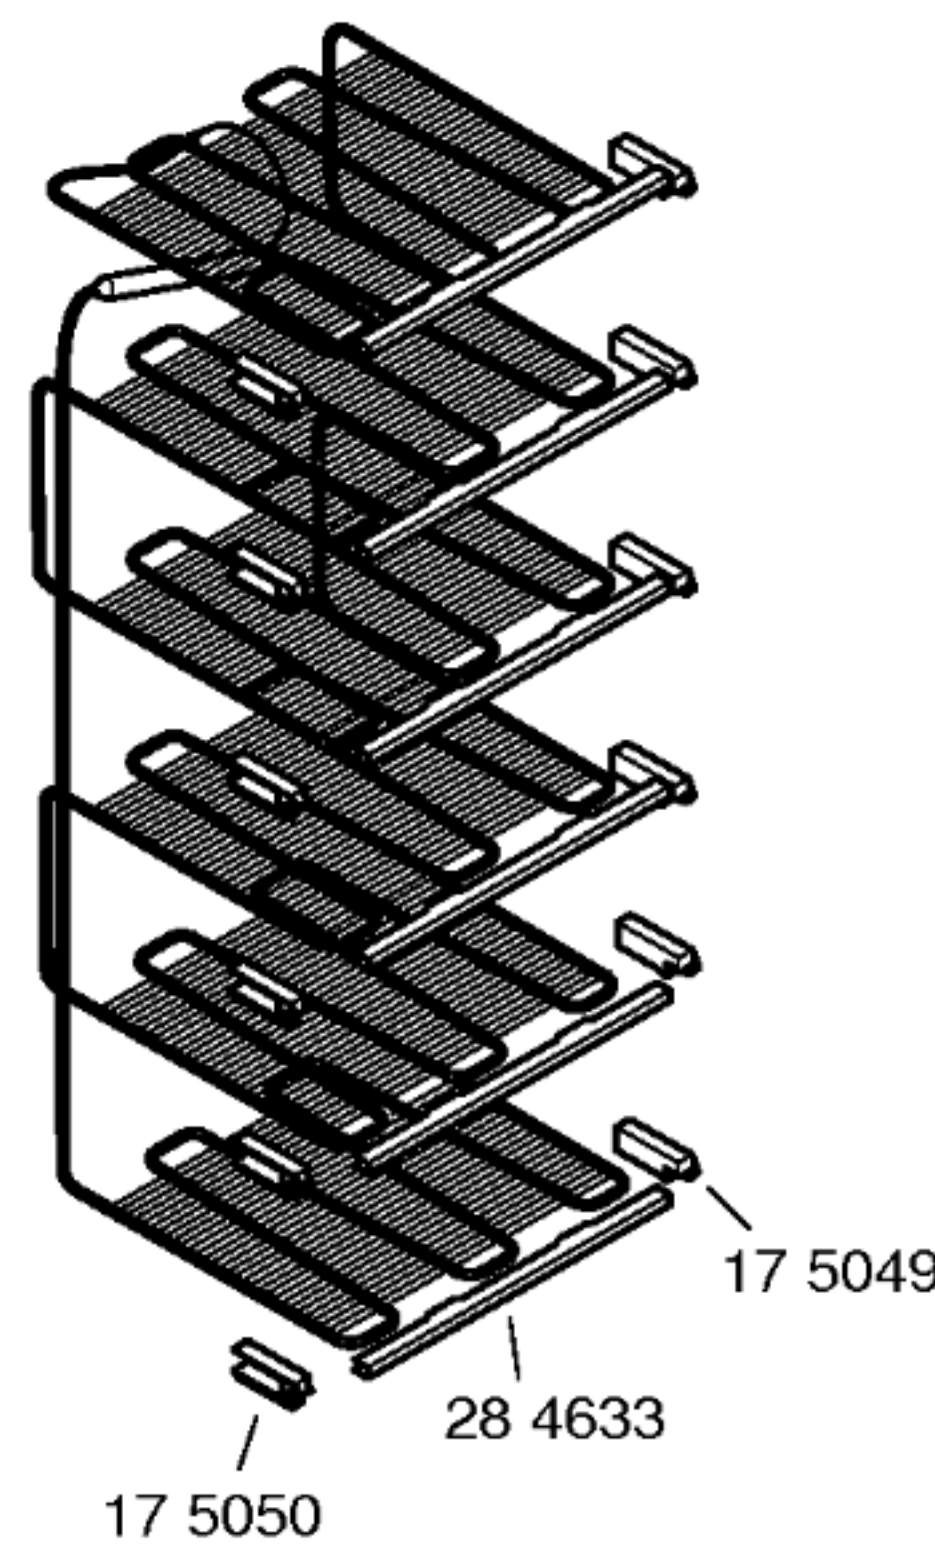 
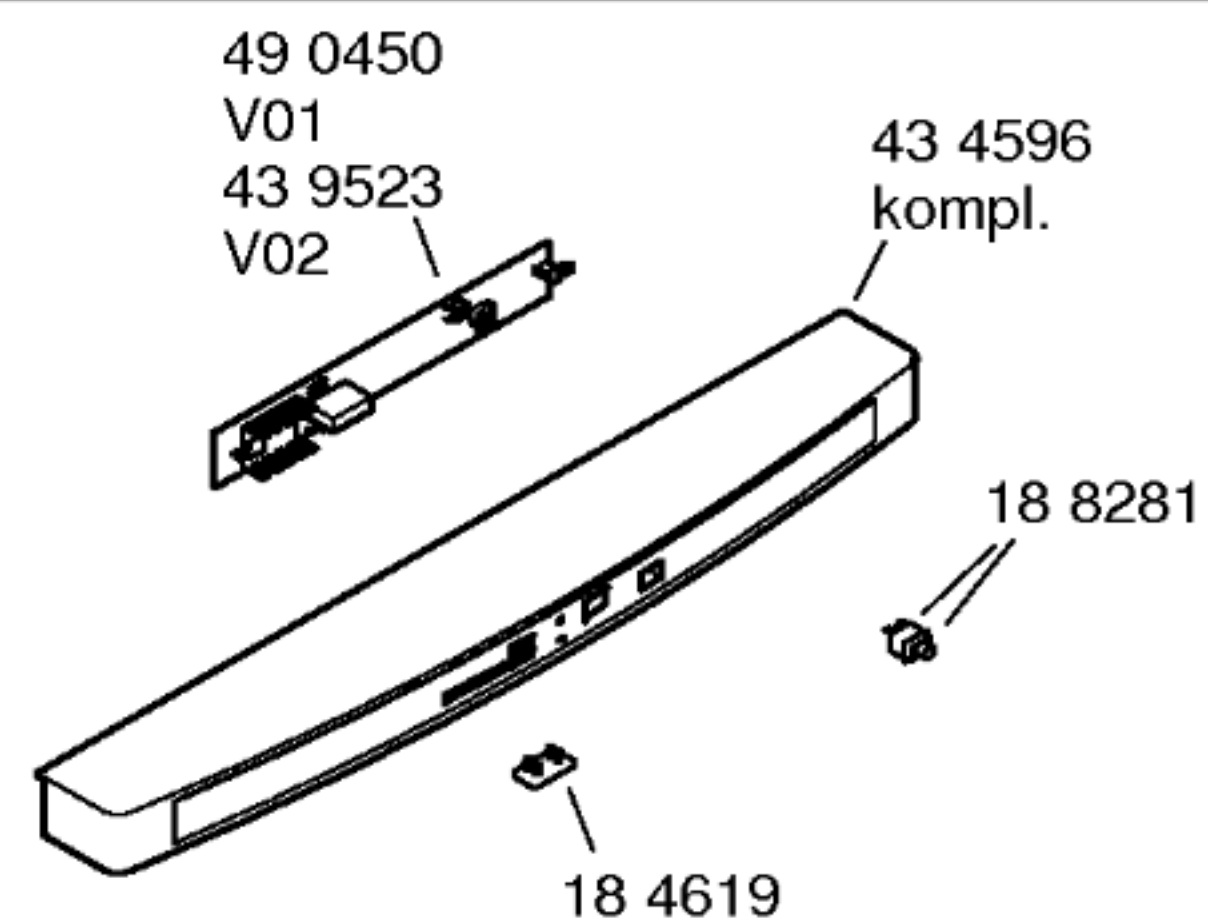 
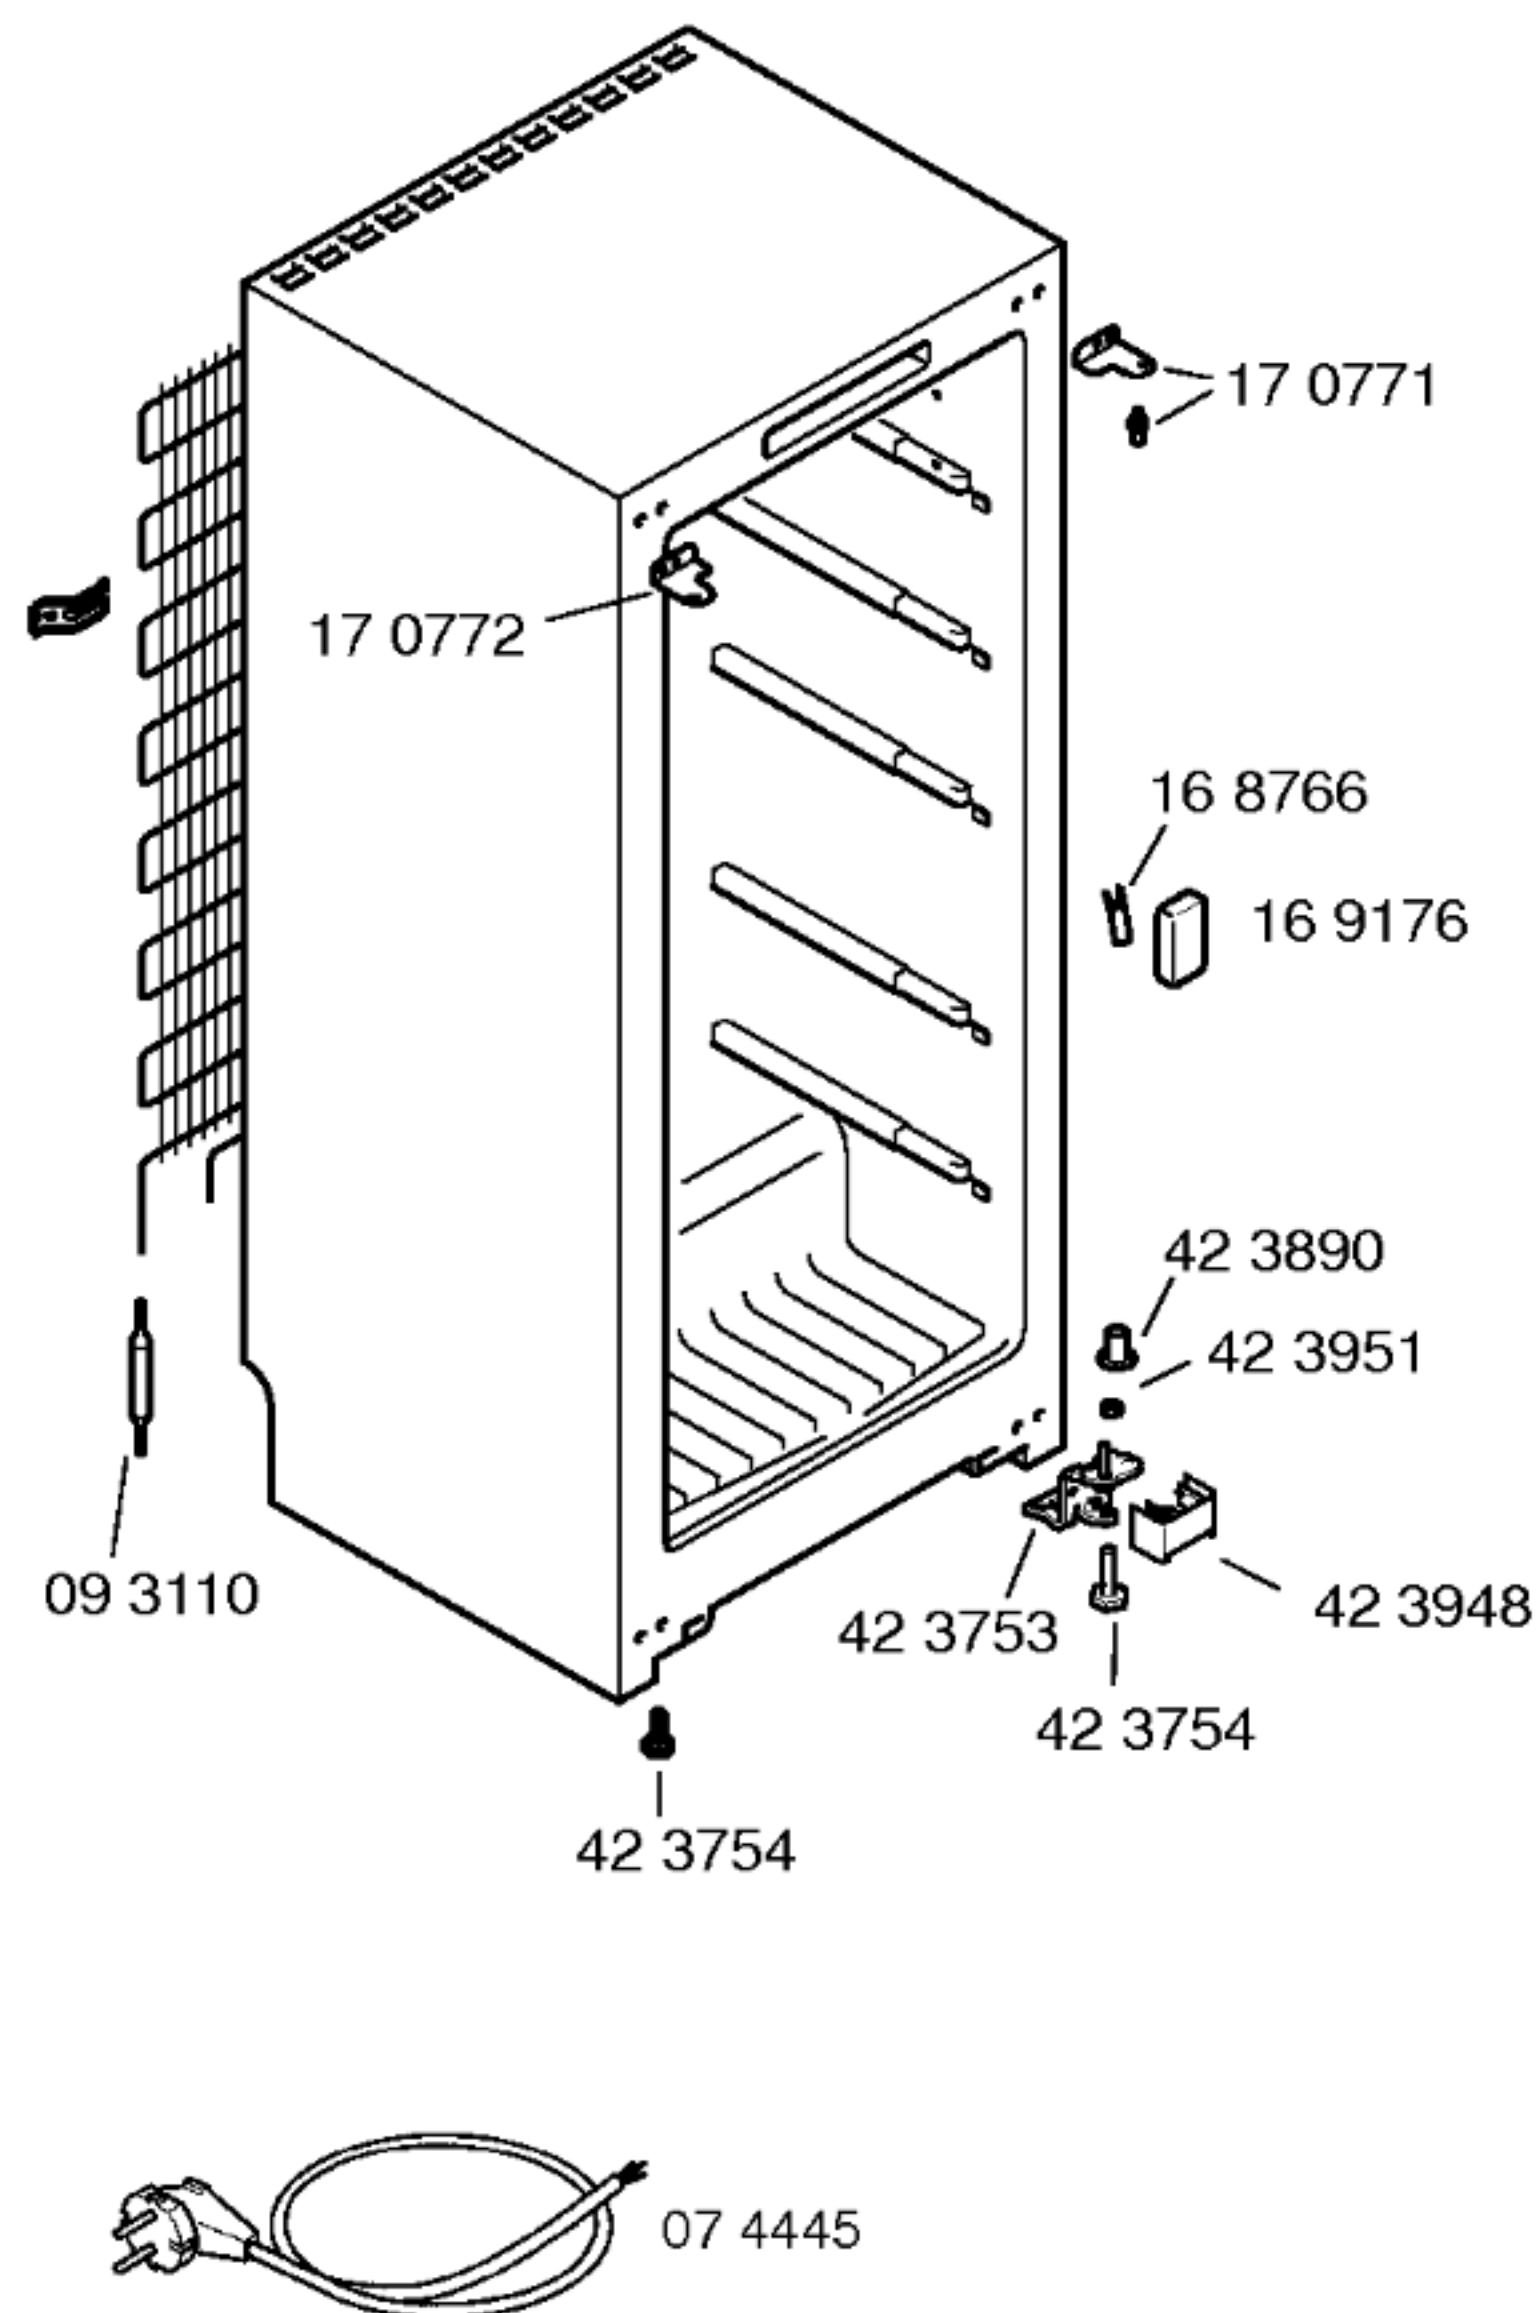 
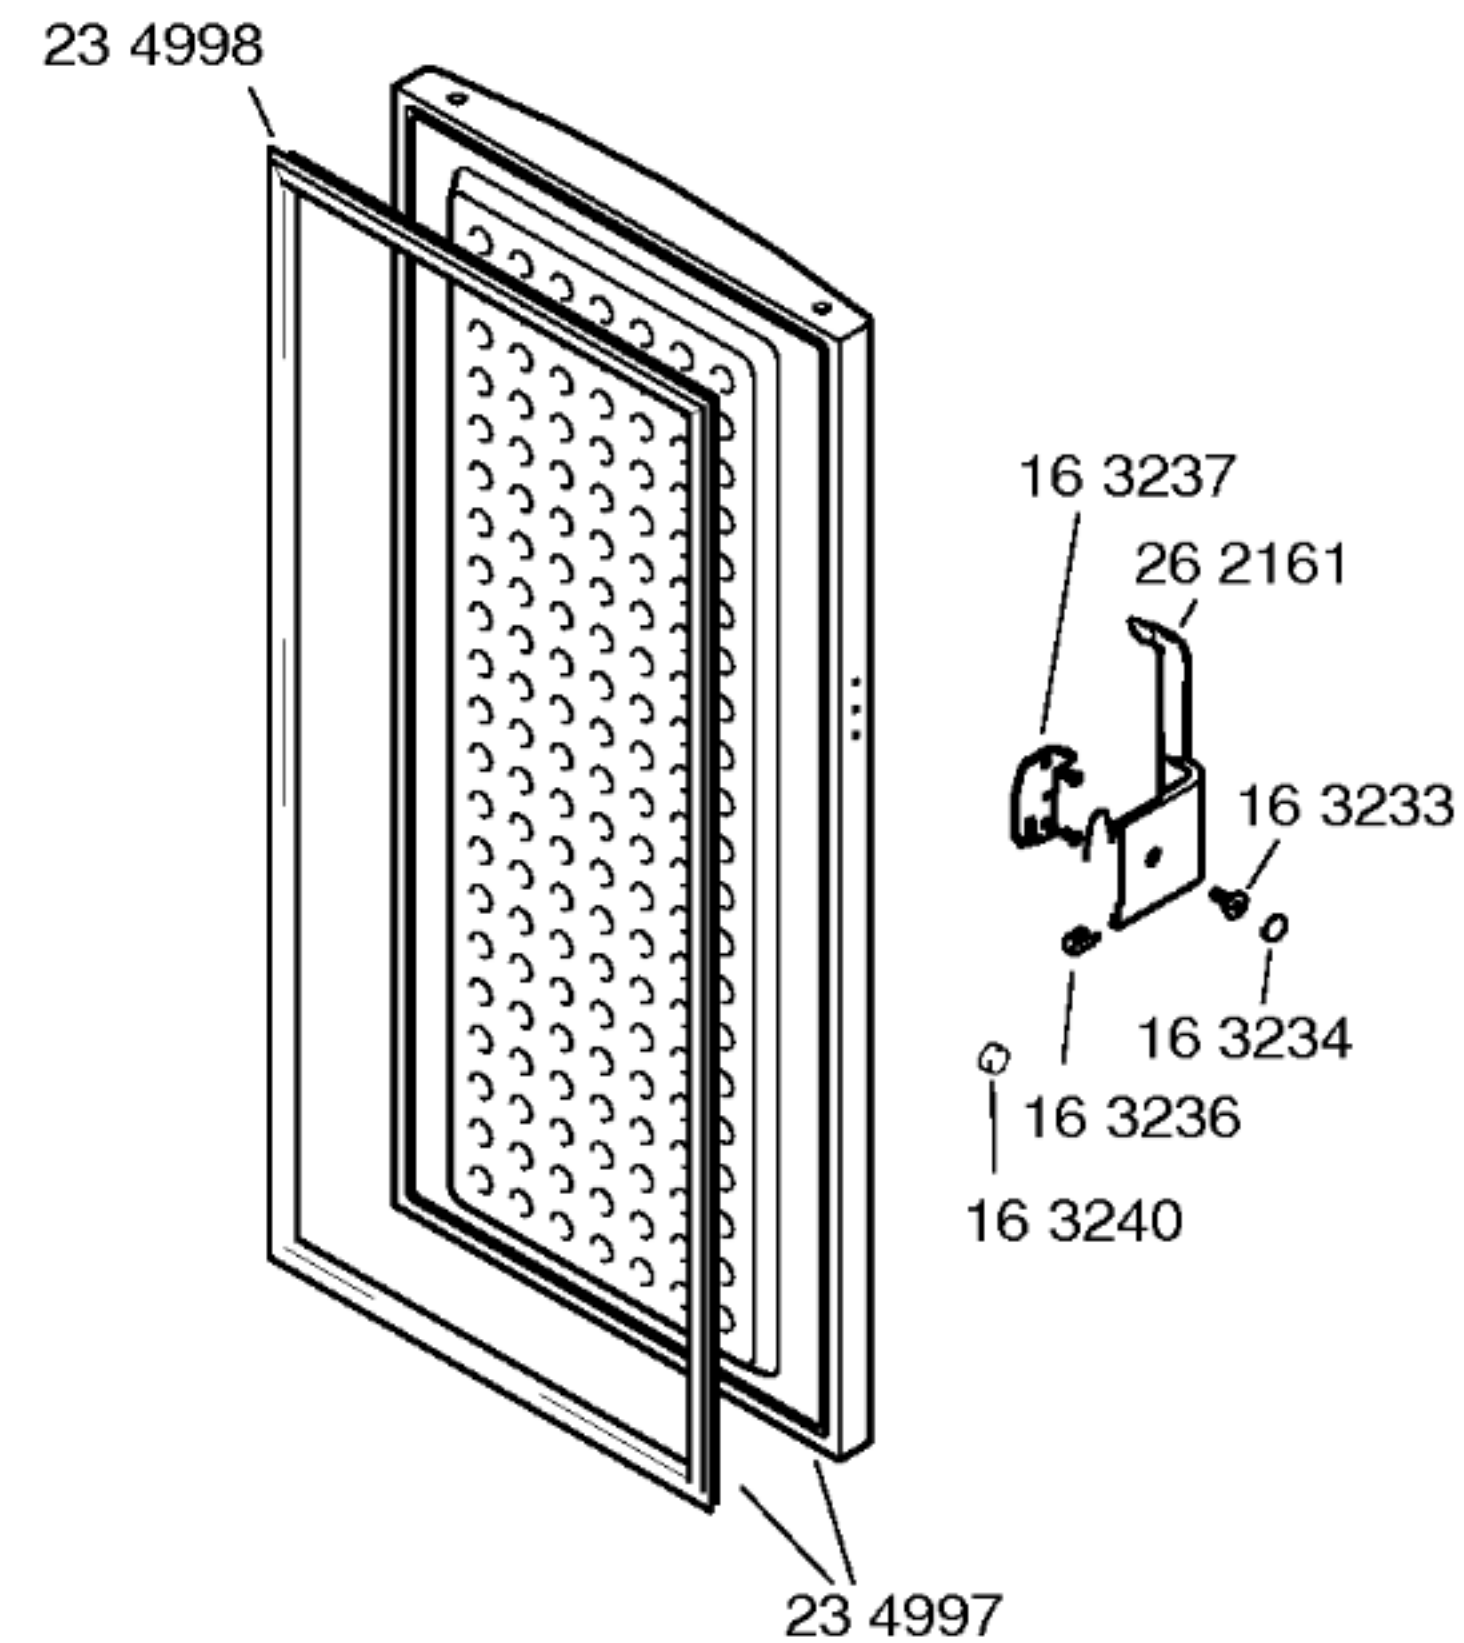 


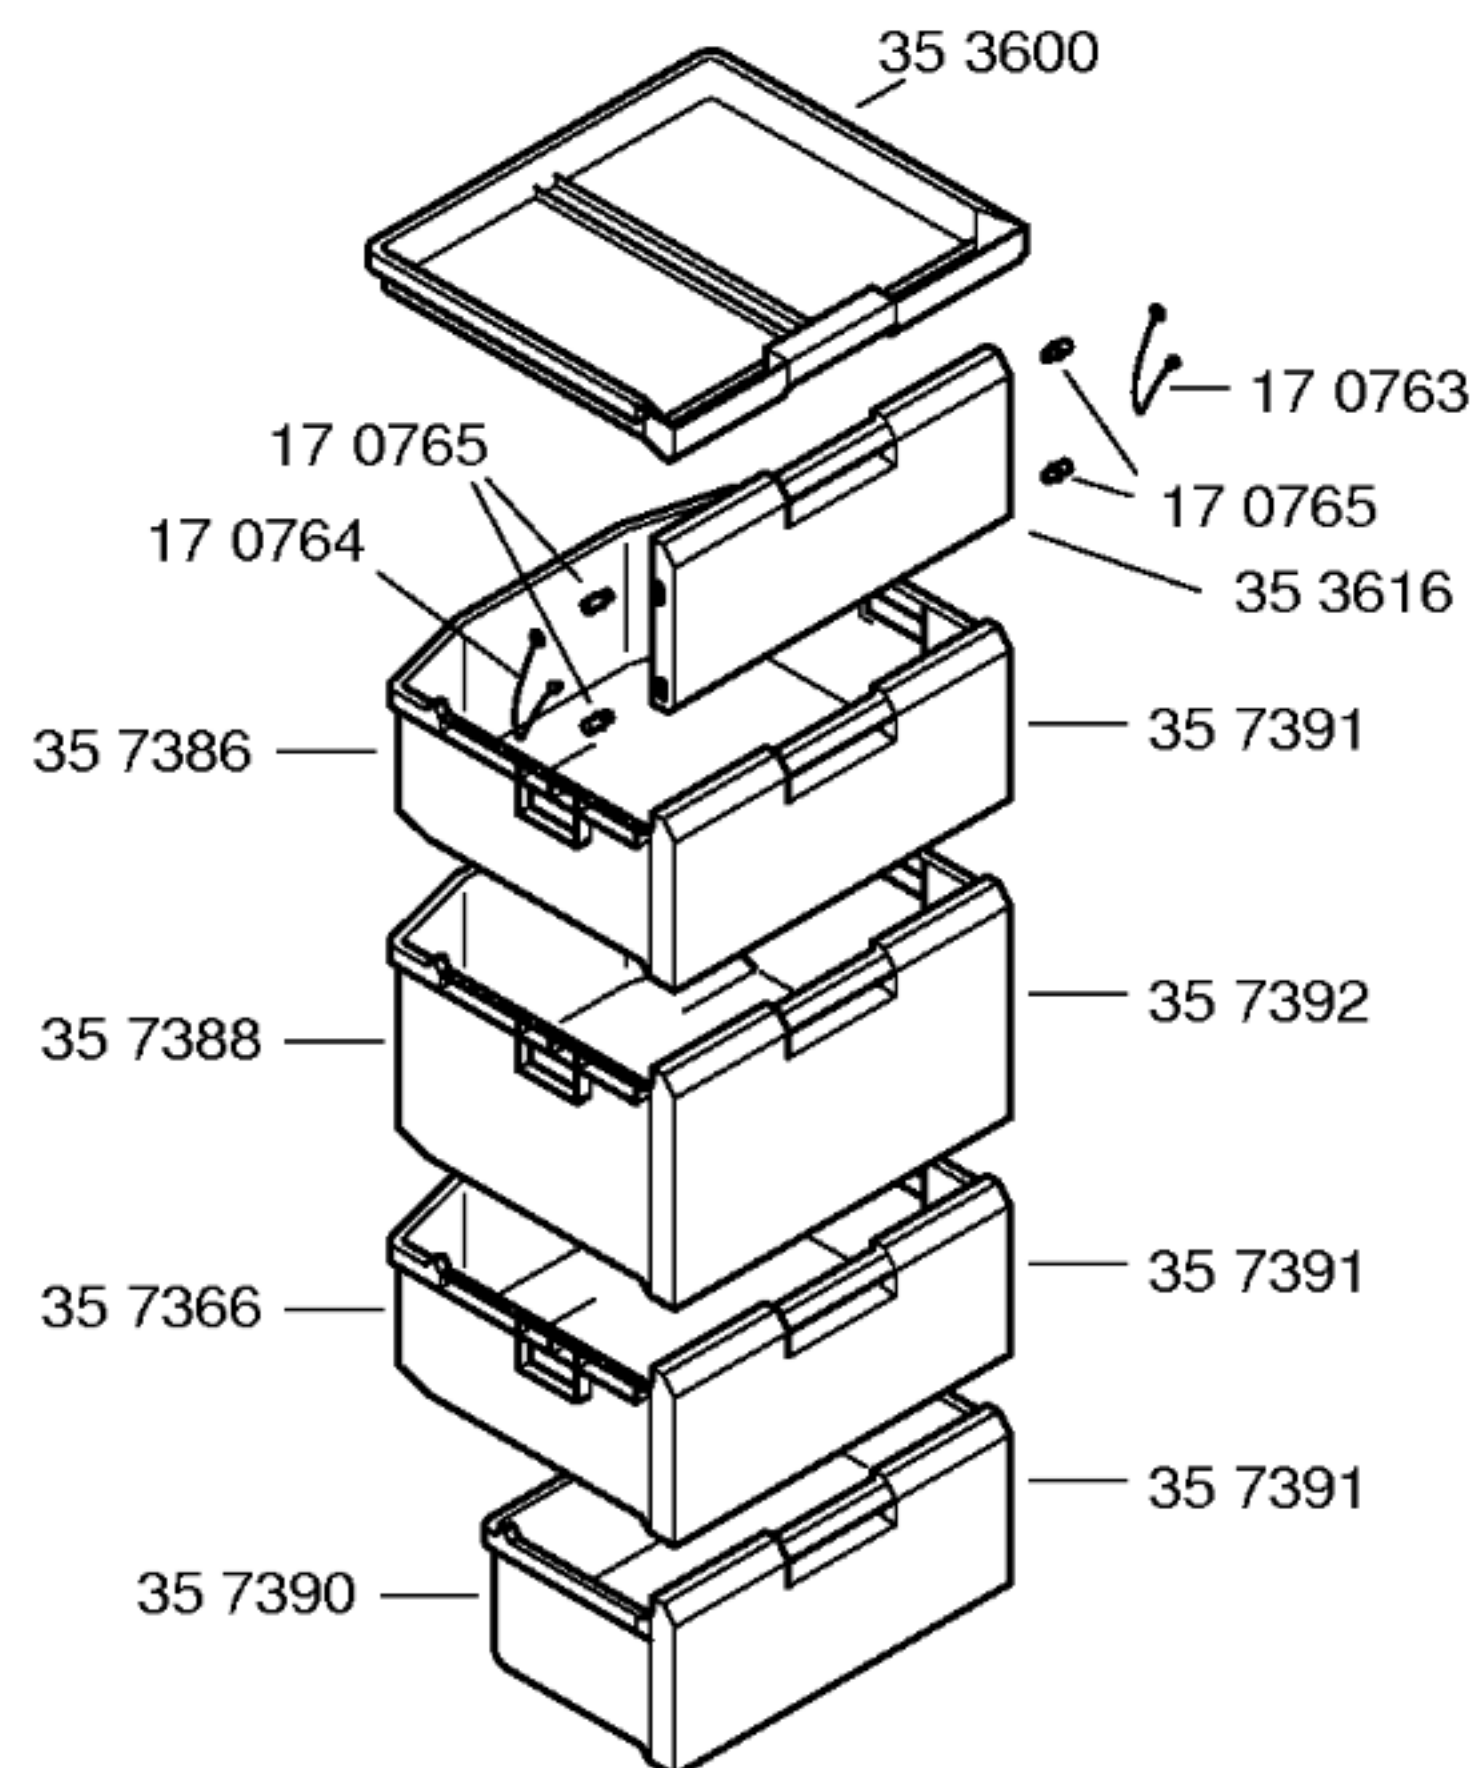

Mat. – Nr. – Konstante
3740
Gebrauchsanweisung
58 6511
(de,en,fr,it,nl)
Montageanleitung
58 9231
Beistellsatz
42 3948

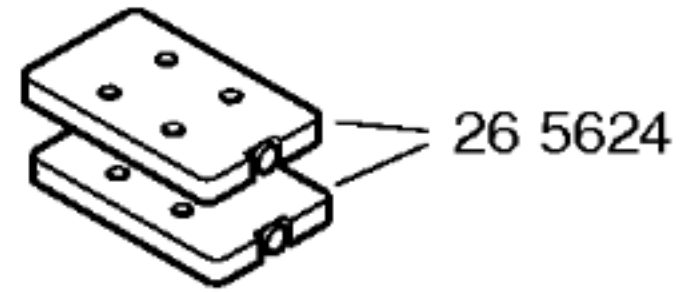

Ident – Nummern – Konstante
3740

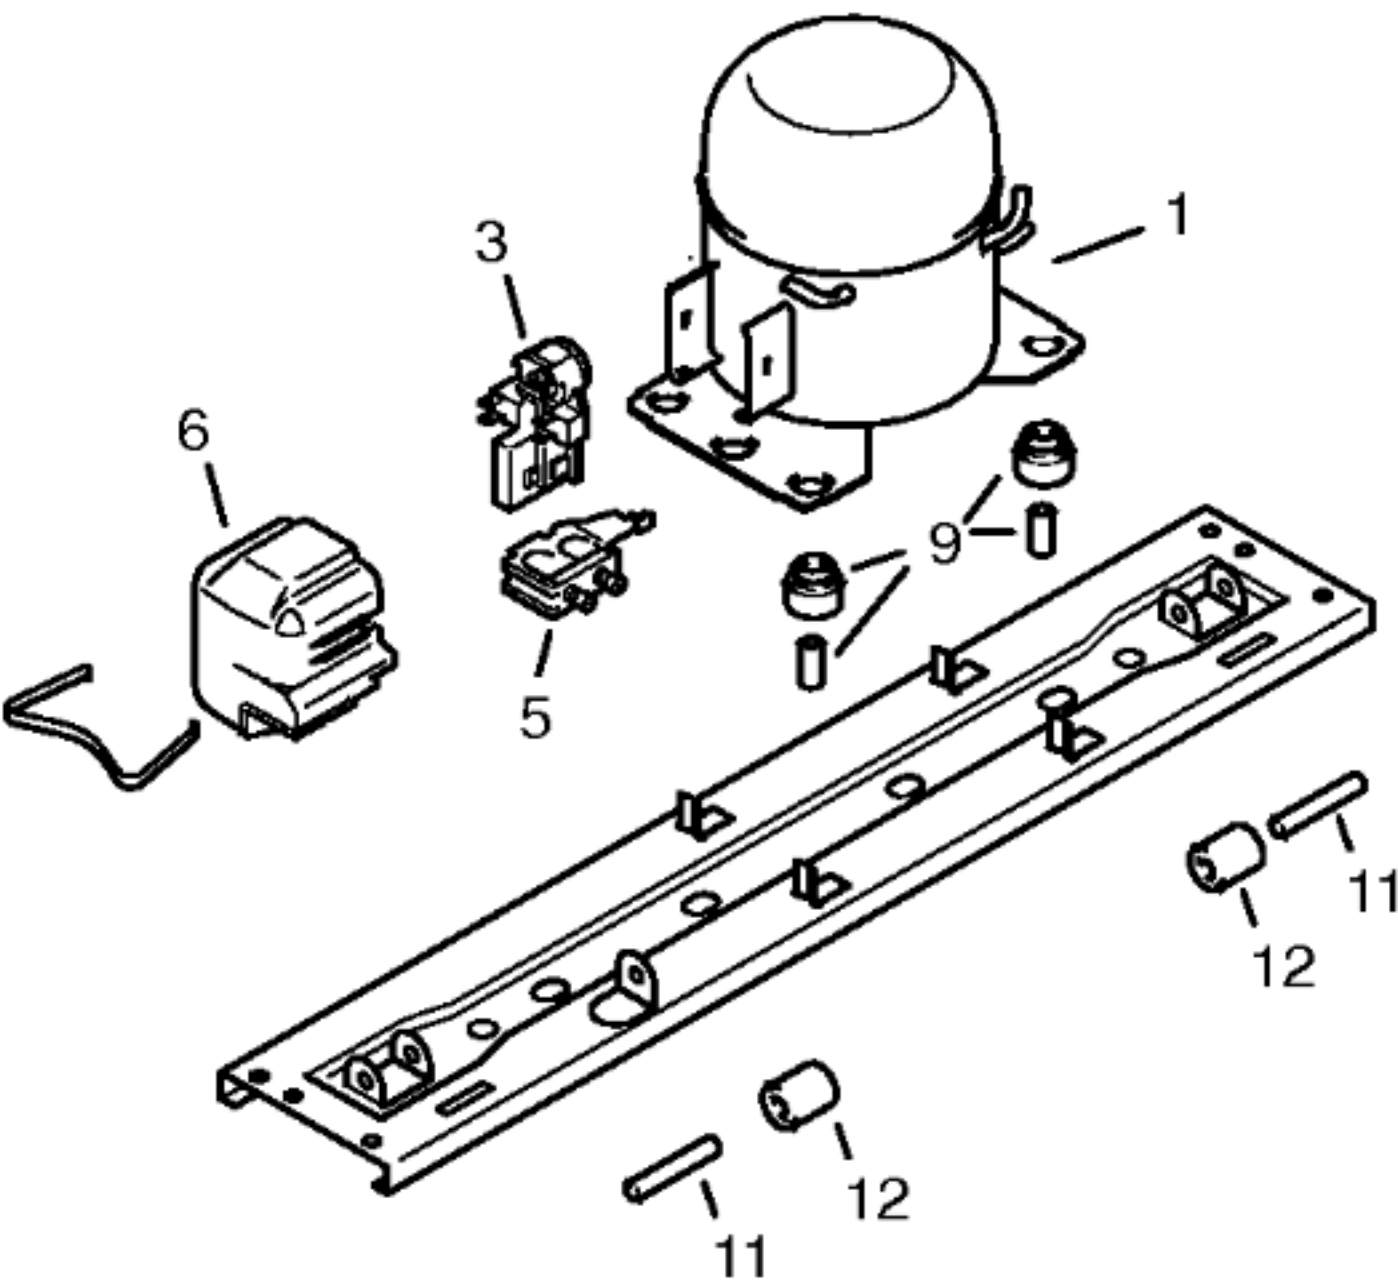

Pos.	V01		
	Matsushita		
	DC 110E		
1	14 2130		
2			
3	17 2671		
4			
5	16 6781		
6	16 6782		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 9016		
13			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC 110E		
Förderleistung/Delivery/Débit		1974		
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance		Ω		
Hi/main/prin		Ω		
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Temp.-Regler/Thermostat		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω	1650	
Spannung/Voltage/Tension		V	220	