




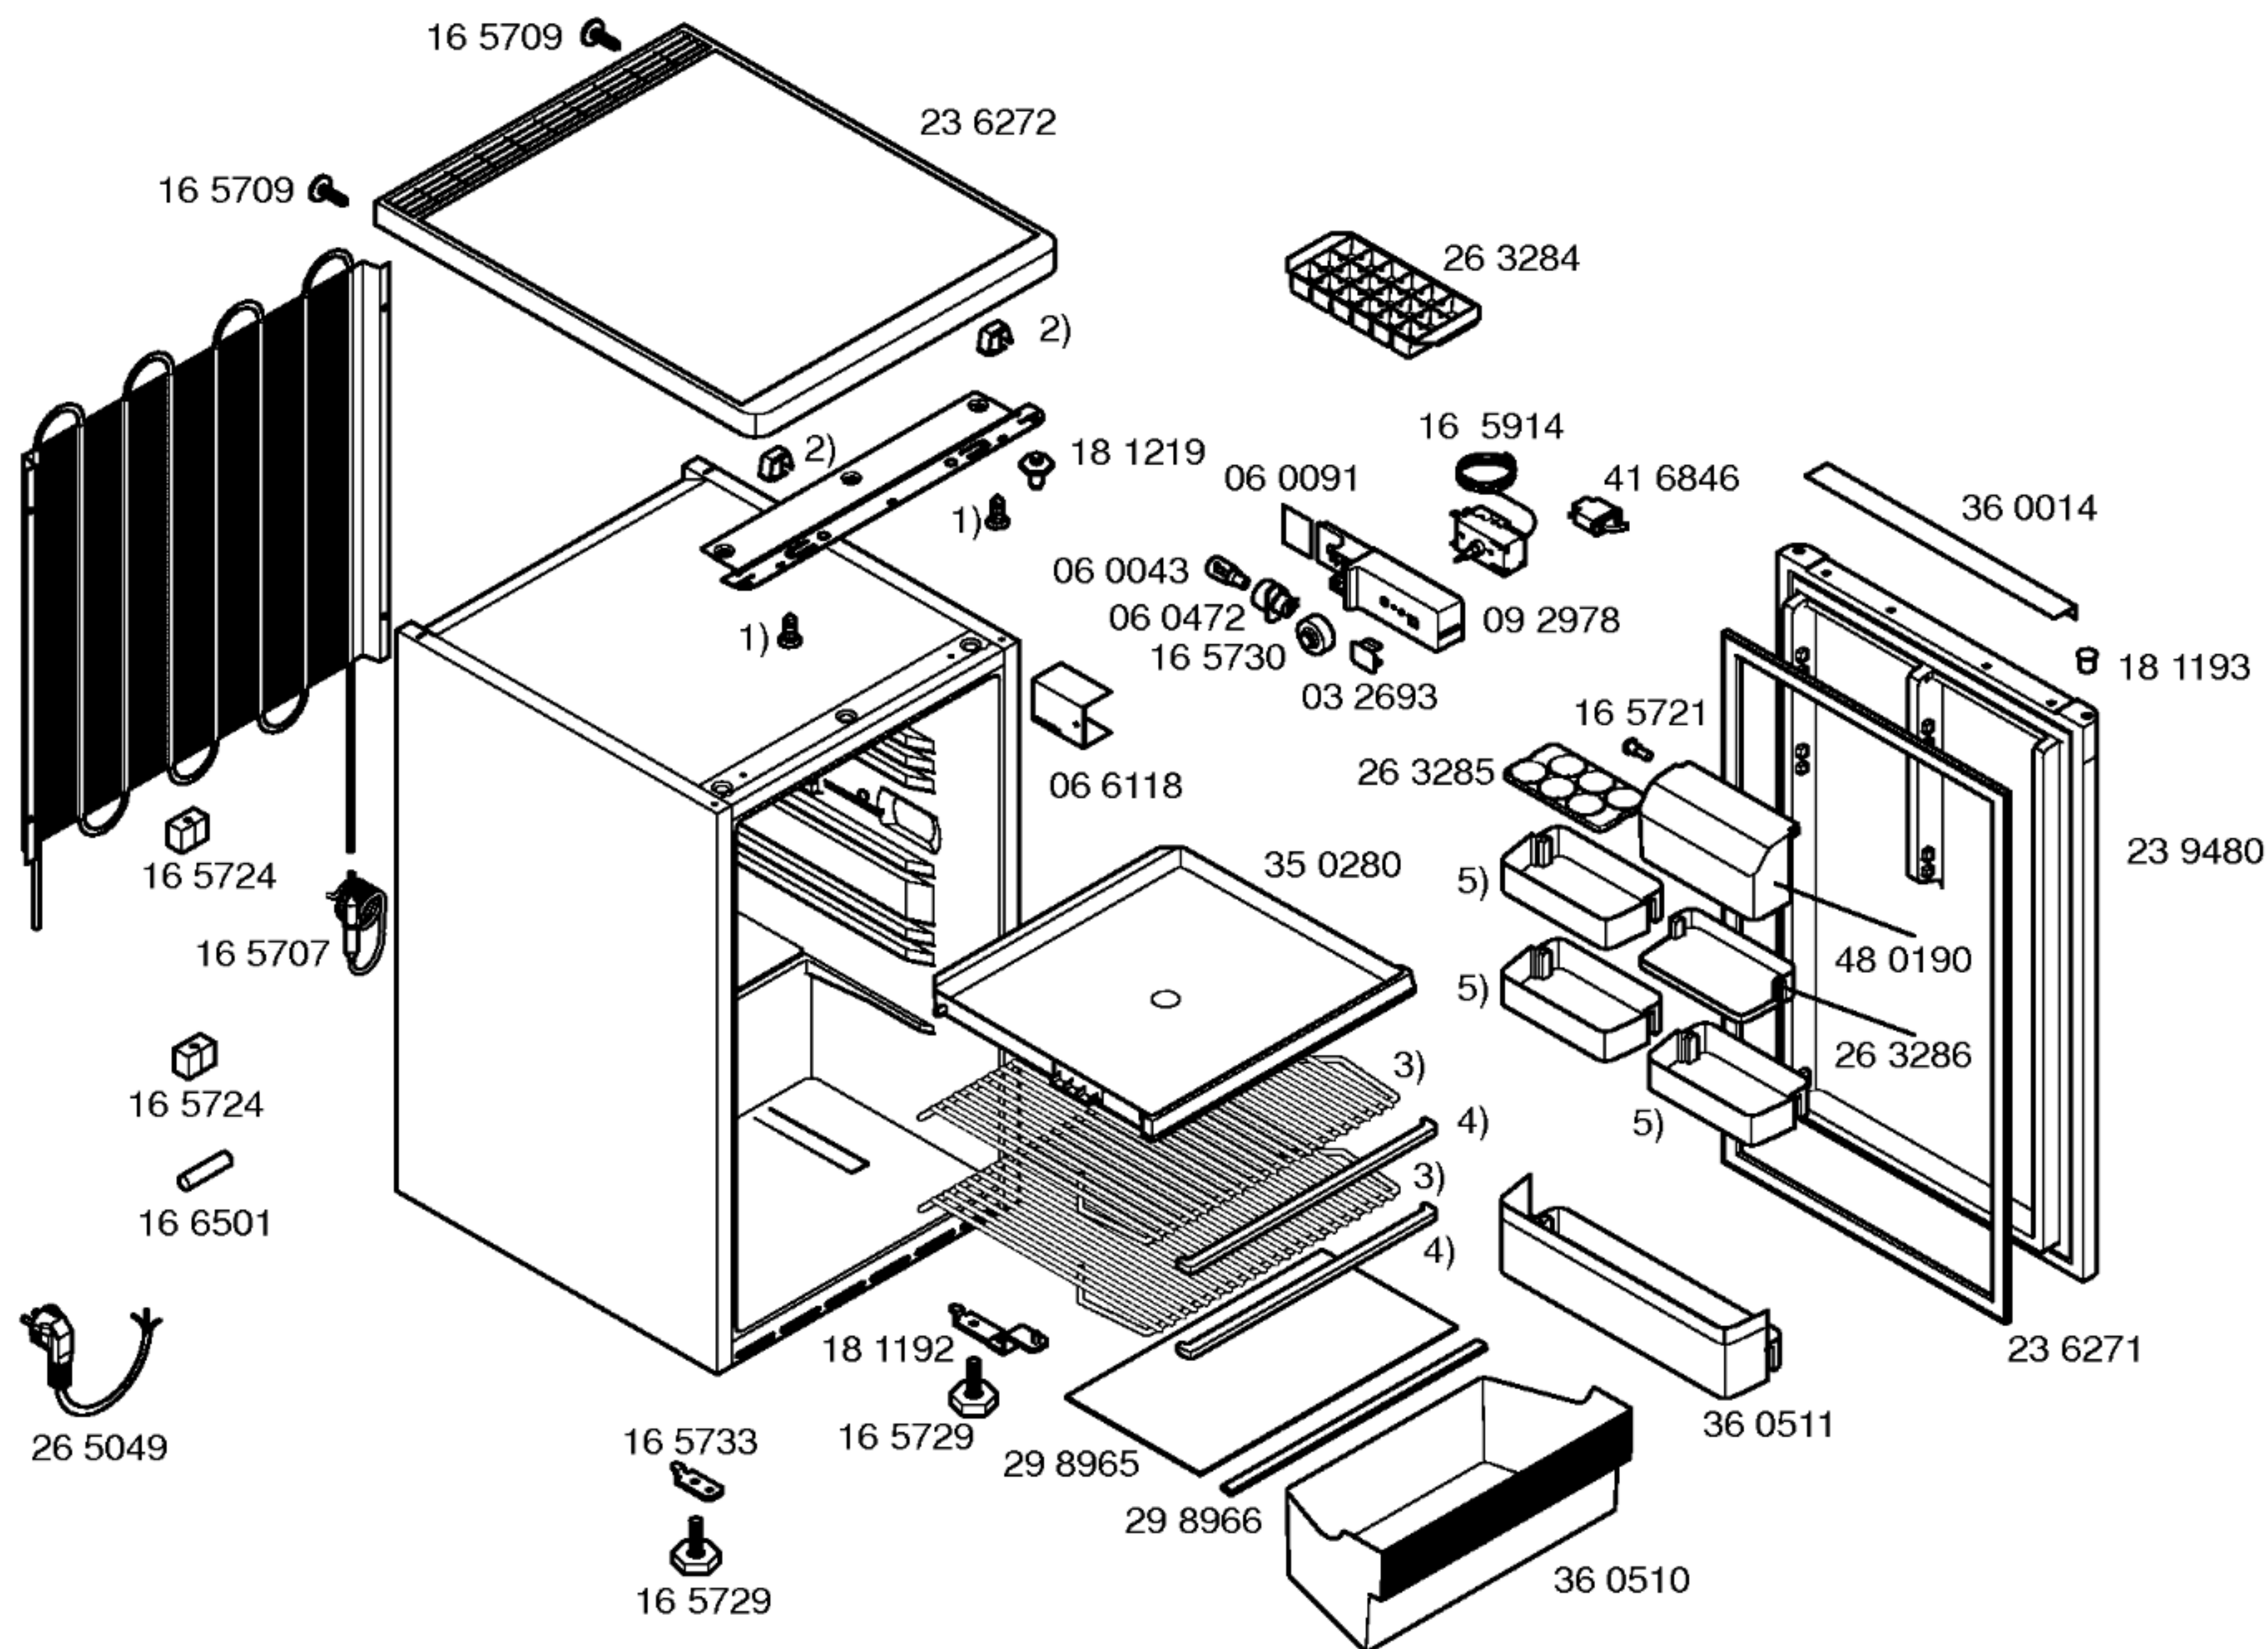

Gebrauchsanweisung
(dk,en,fr,it,nl,el
sv,fi,no,pt,es,tr)
52 3735

- 1) 16 5727
- 2) 16 5720
- 3) 29 8964
- 4) 29 8963
- 5) 48 0477

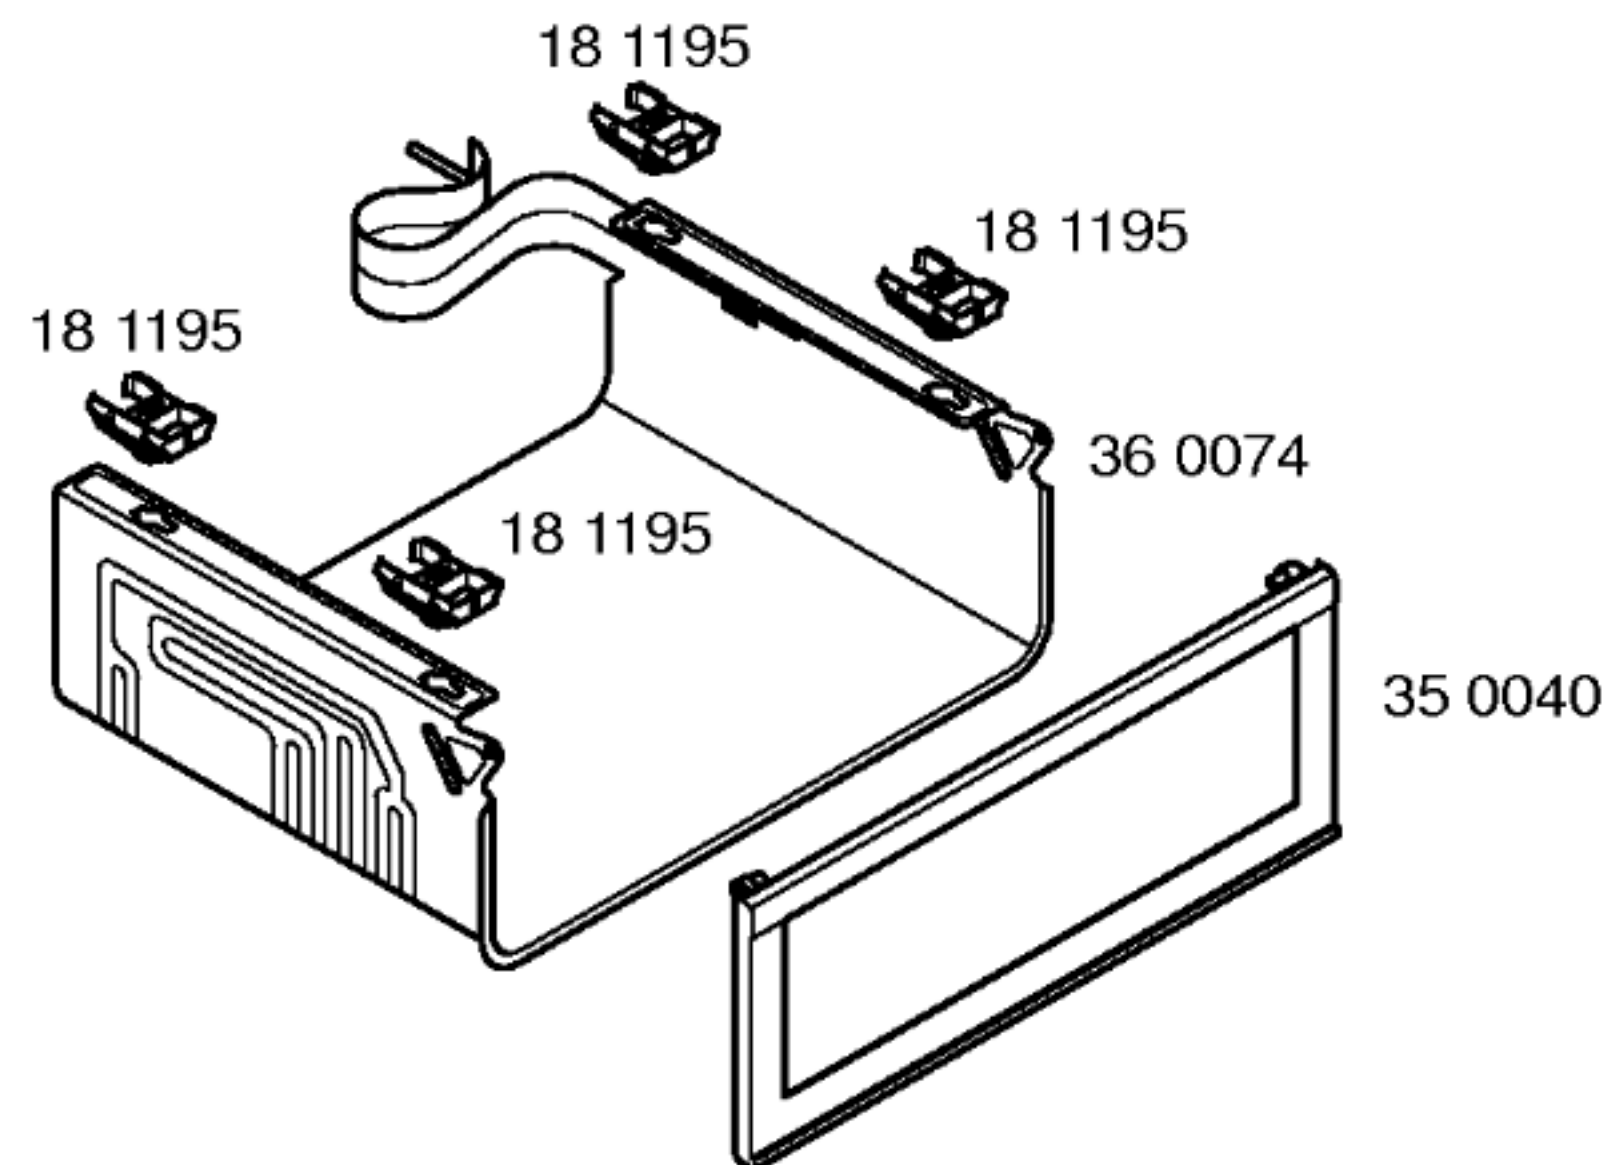

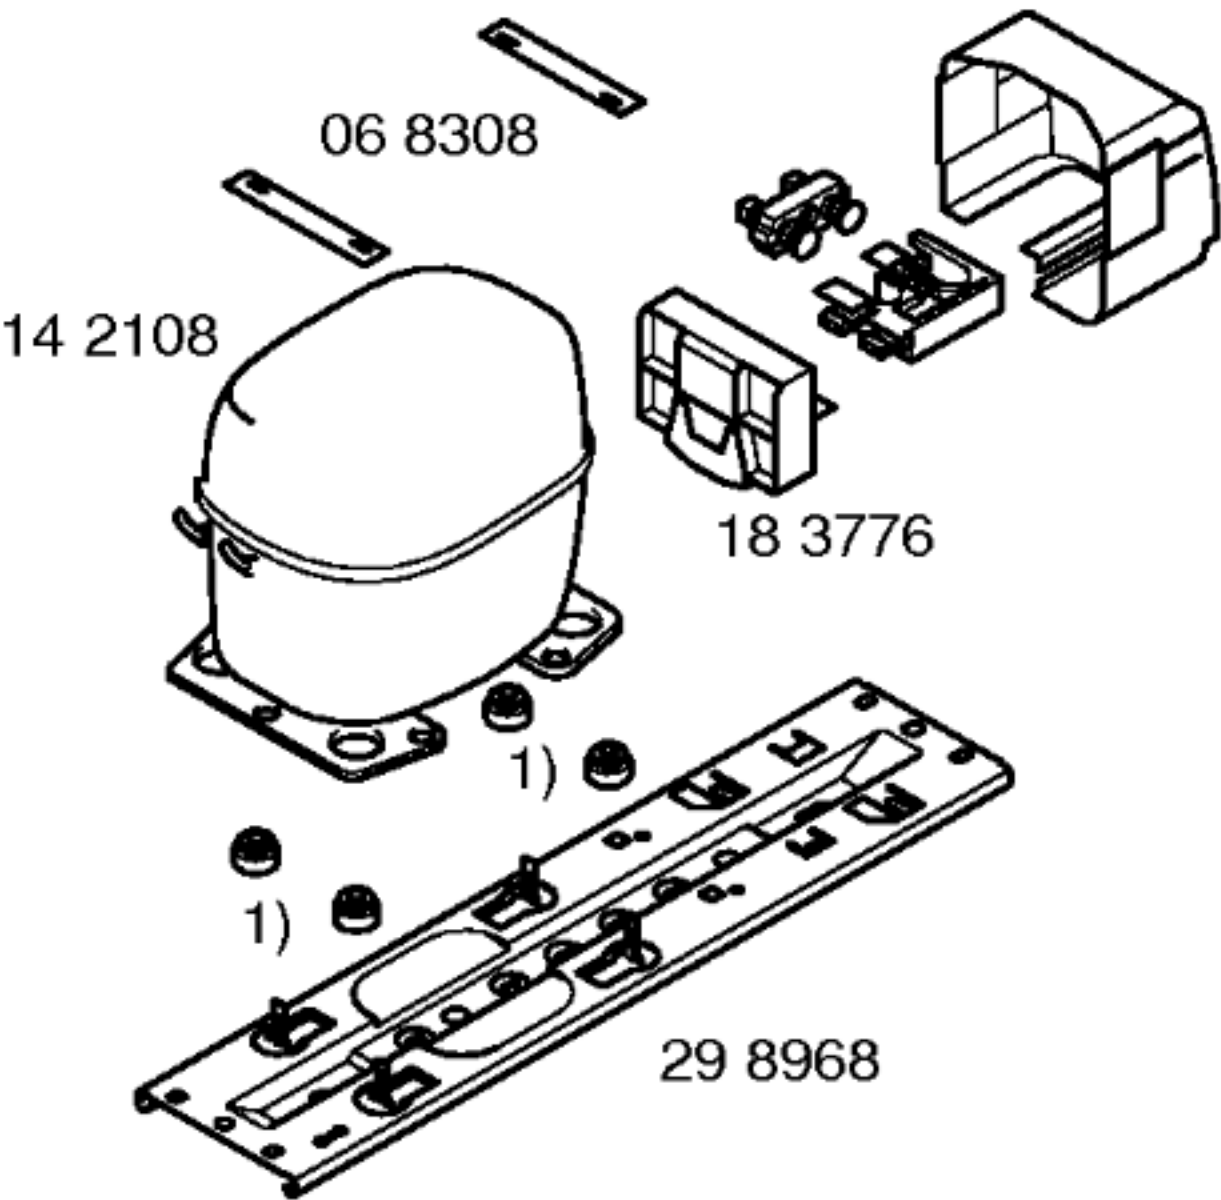

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS		
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Goldstar NR 69NAEM 1240 20,4 +/-5% 29,6 +/-10%	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	Danfoss 077B6167 -24 +/-1,5 -8 +/-2,0	
Füllmenge/Fill. quantily/Charge/Carga R600a g	30	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	160	
Ventilator/Blower/Ventilateur Widerstand/Resistance Ohm		

1) 06 0182