




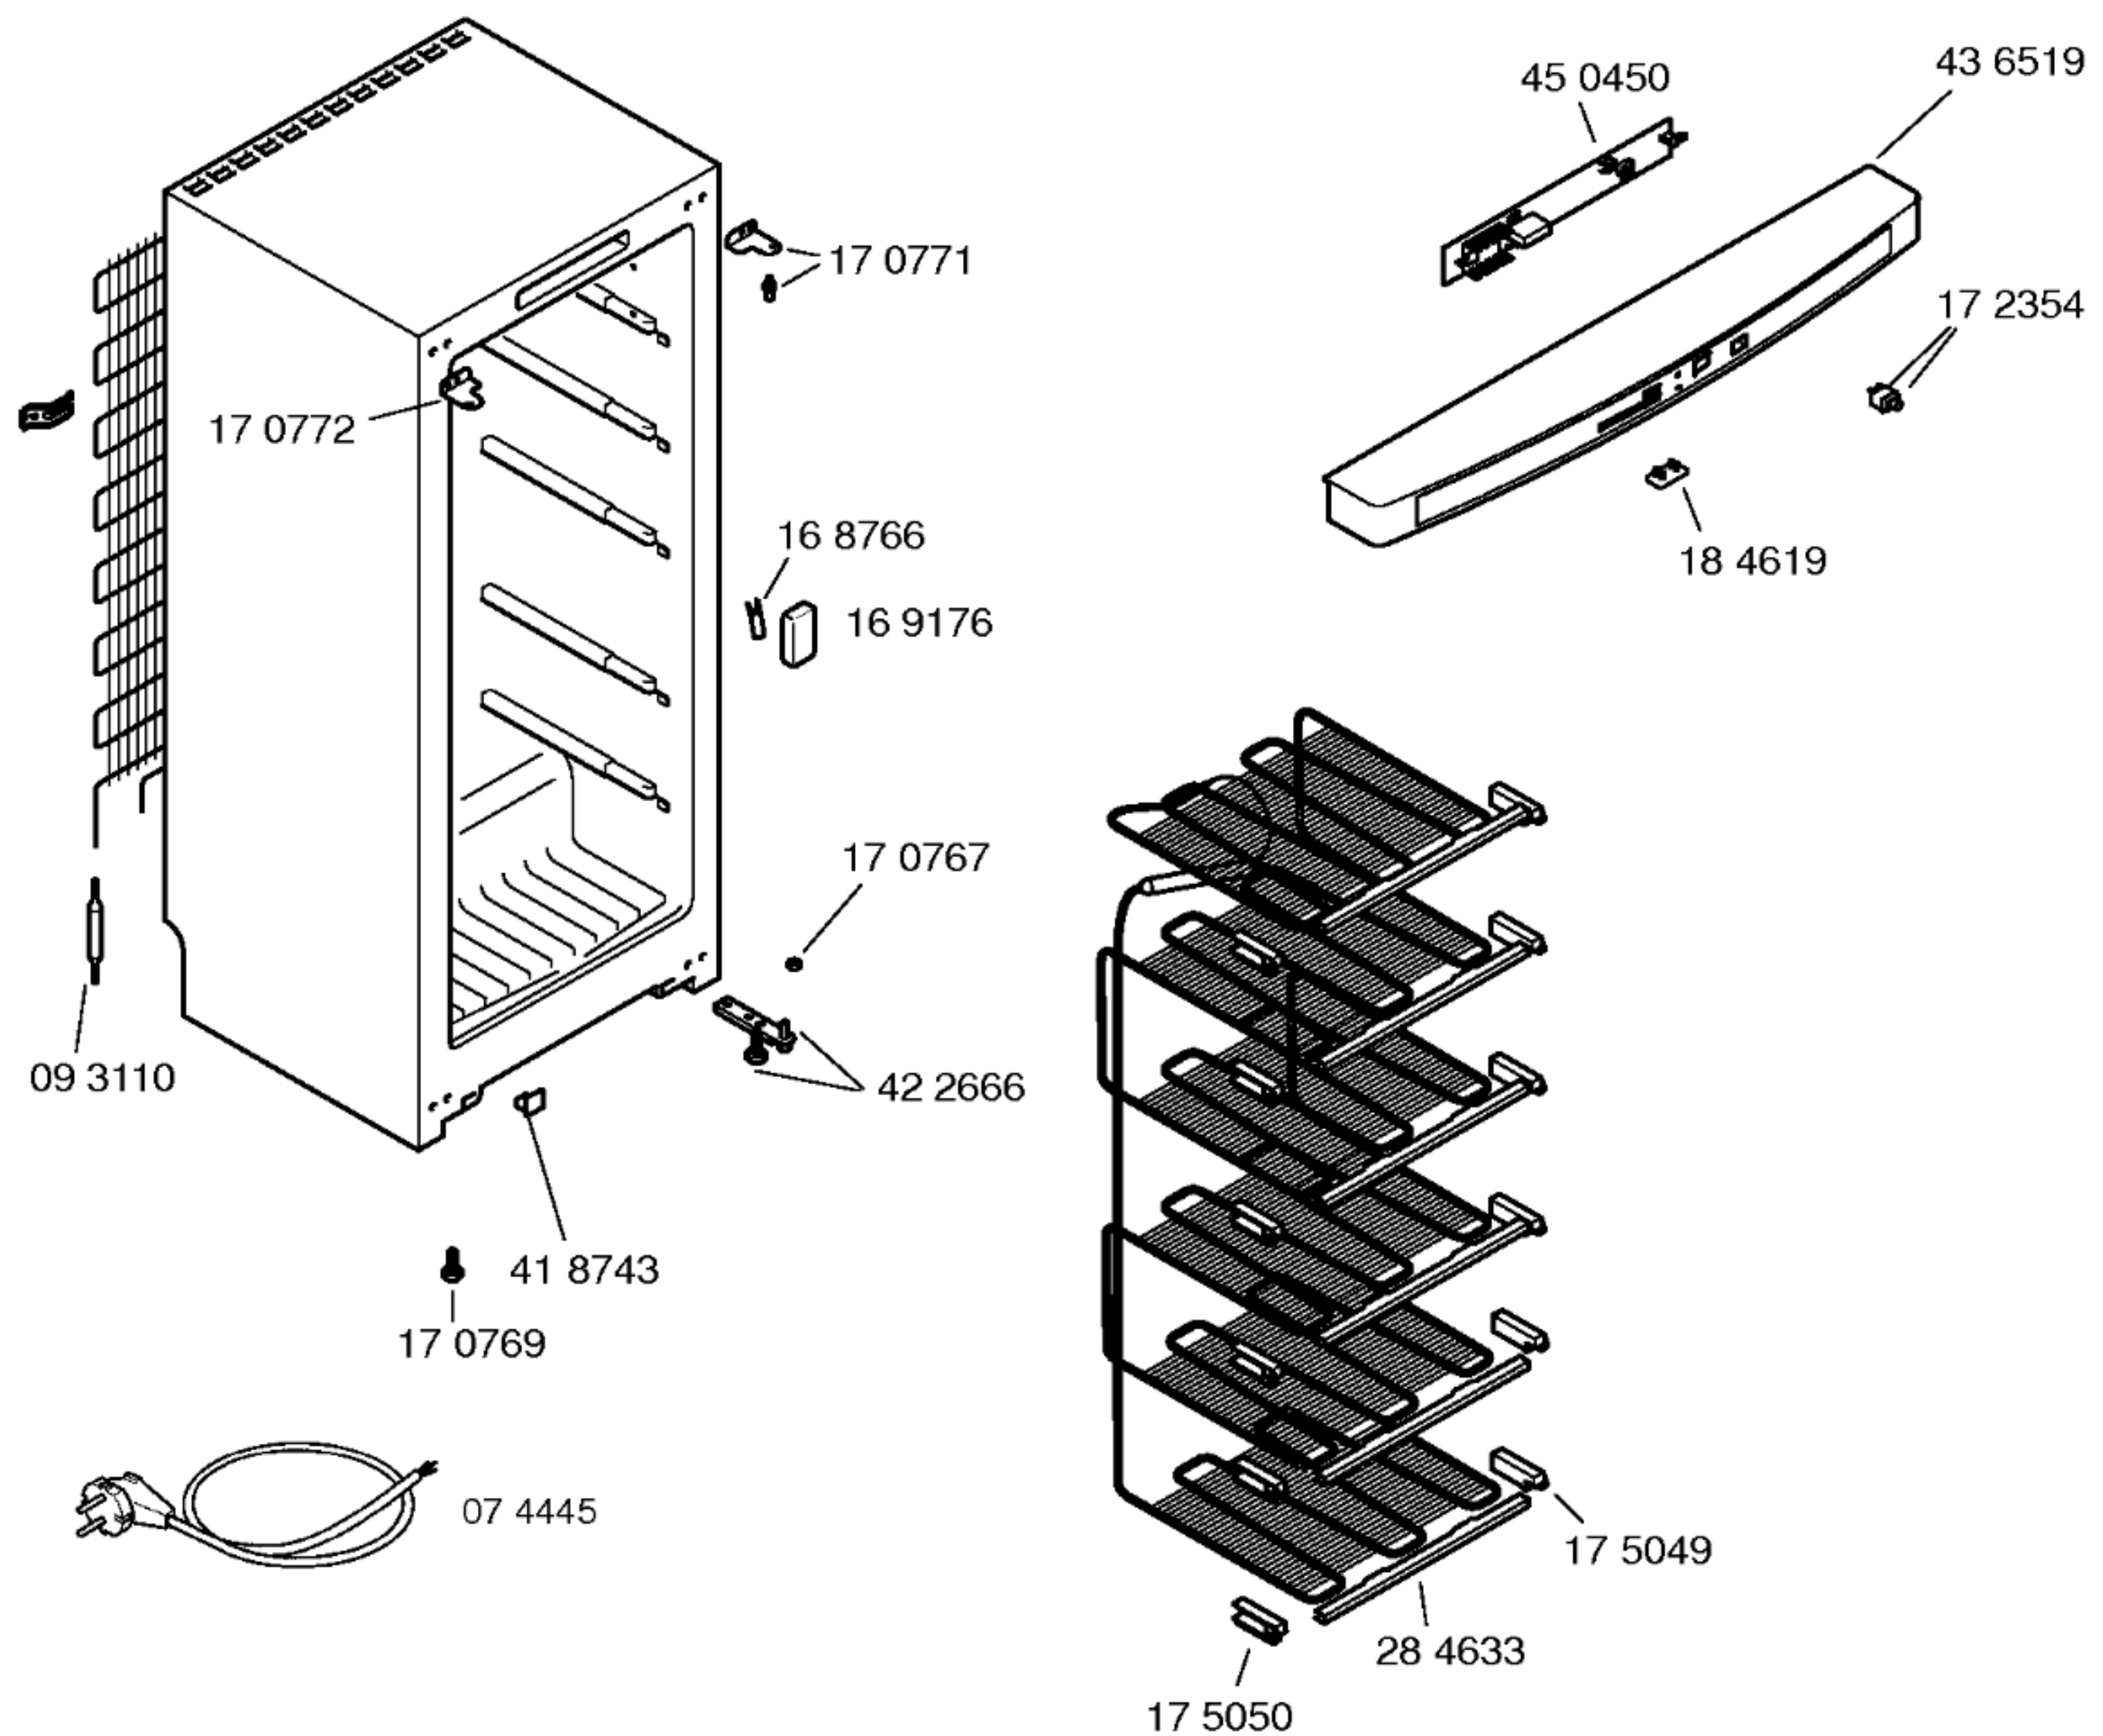

Mat. – Nr. – Konstante
3740
Gebrauchsanweisung
58 6511
(de,en,fr,it,nl)
58 6709
(da,no,sv,fi,es,pt)
Montageanleitung
58 0241
Beistellsatz
26 5627

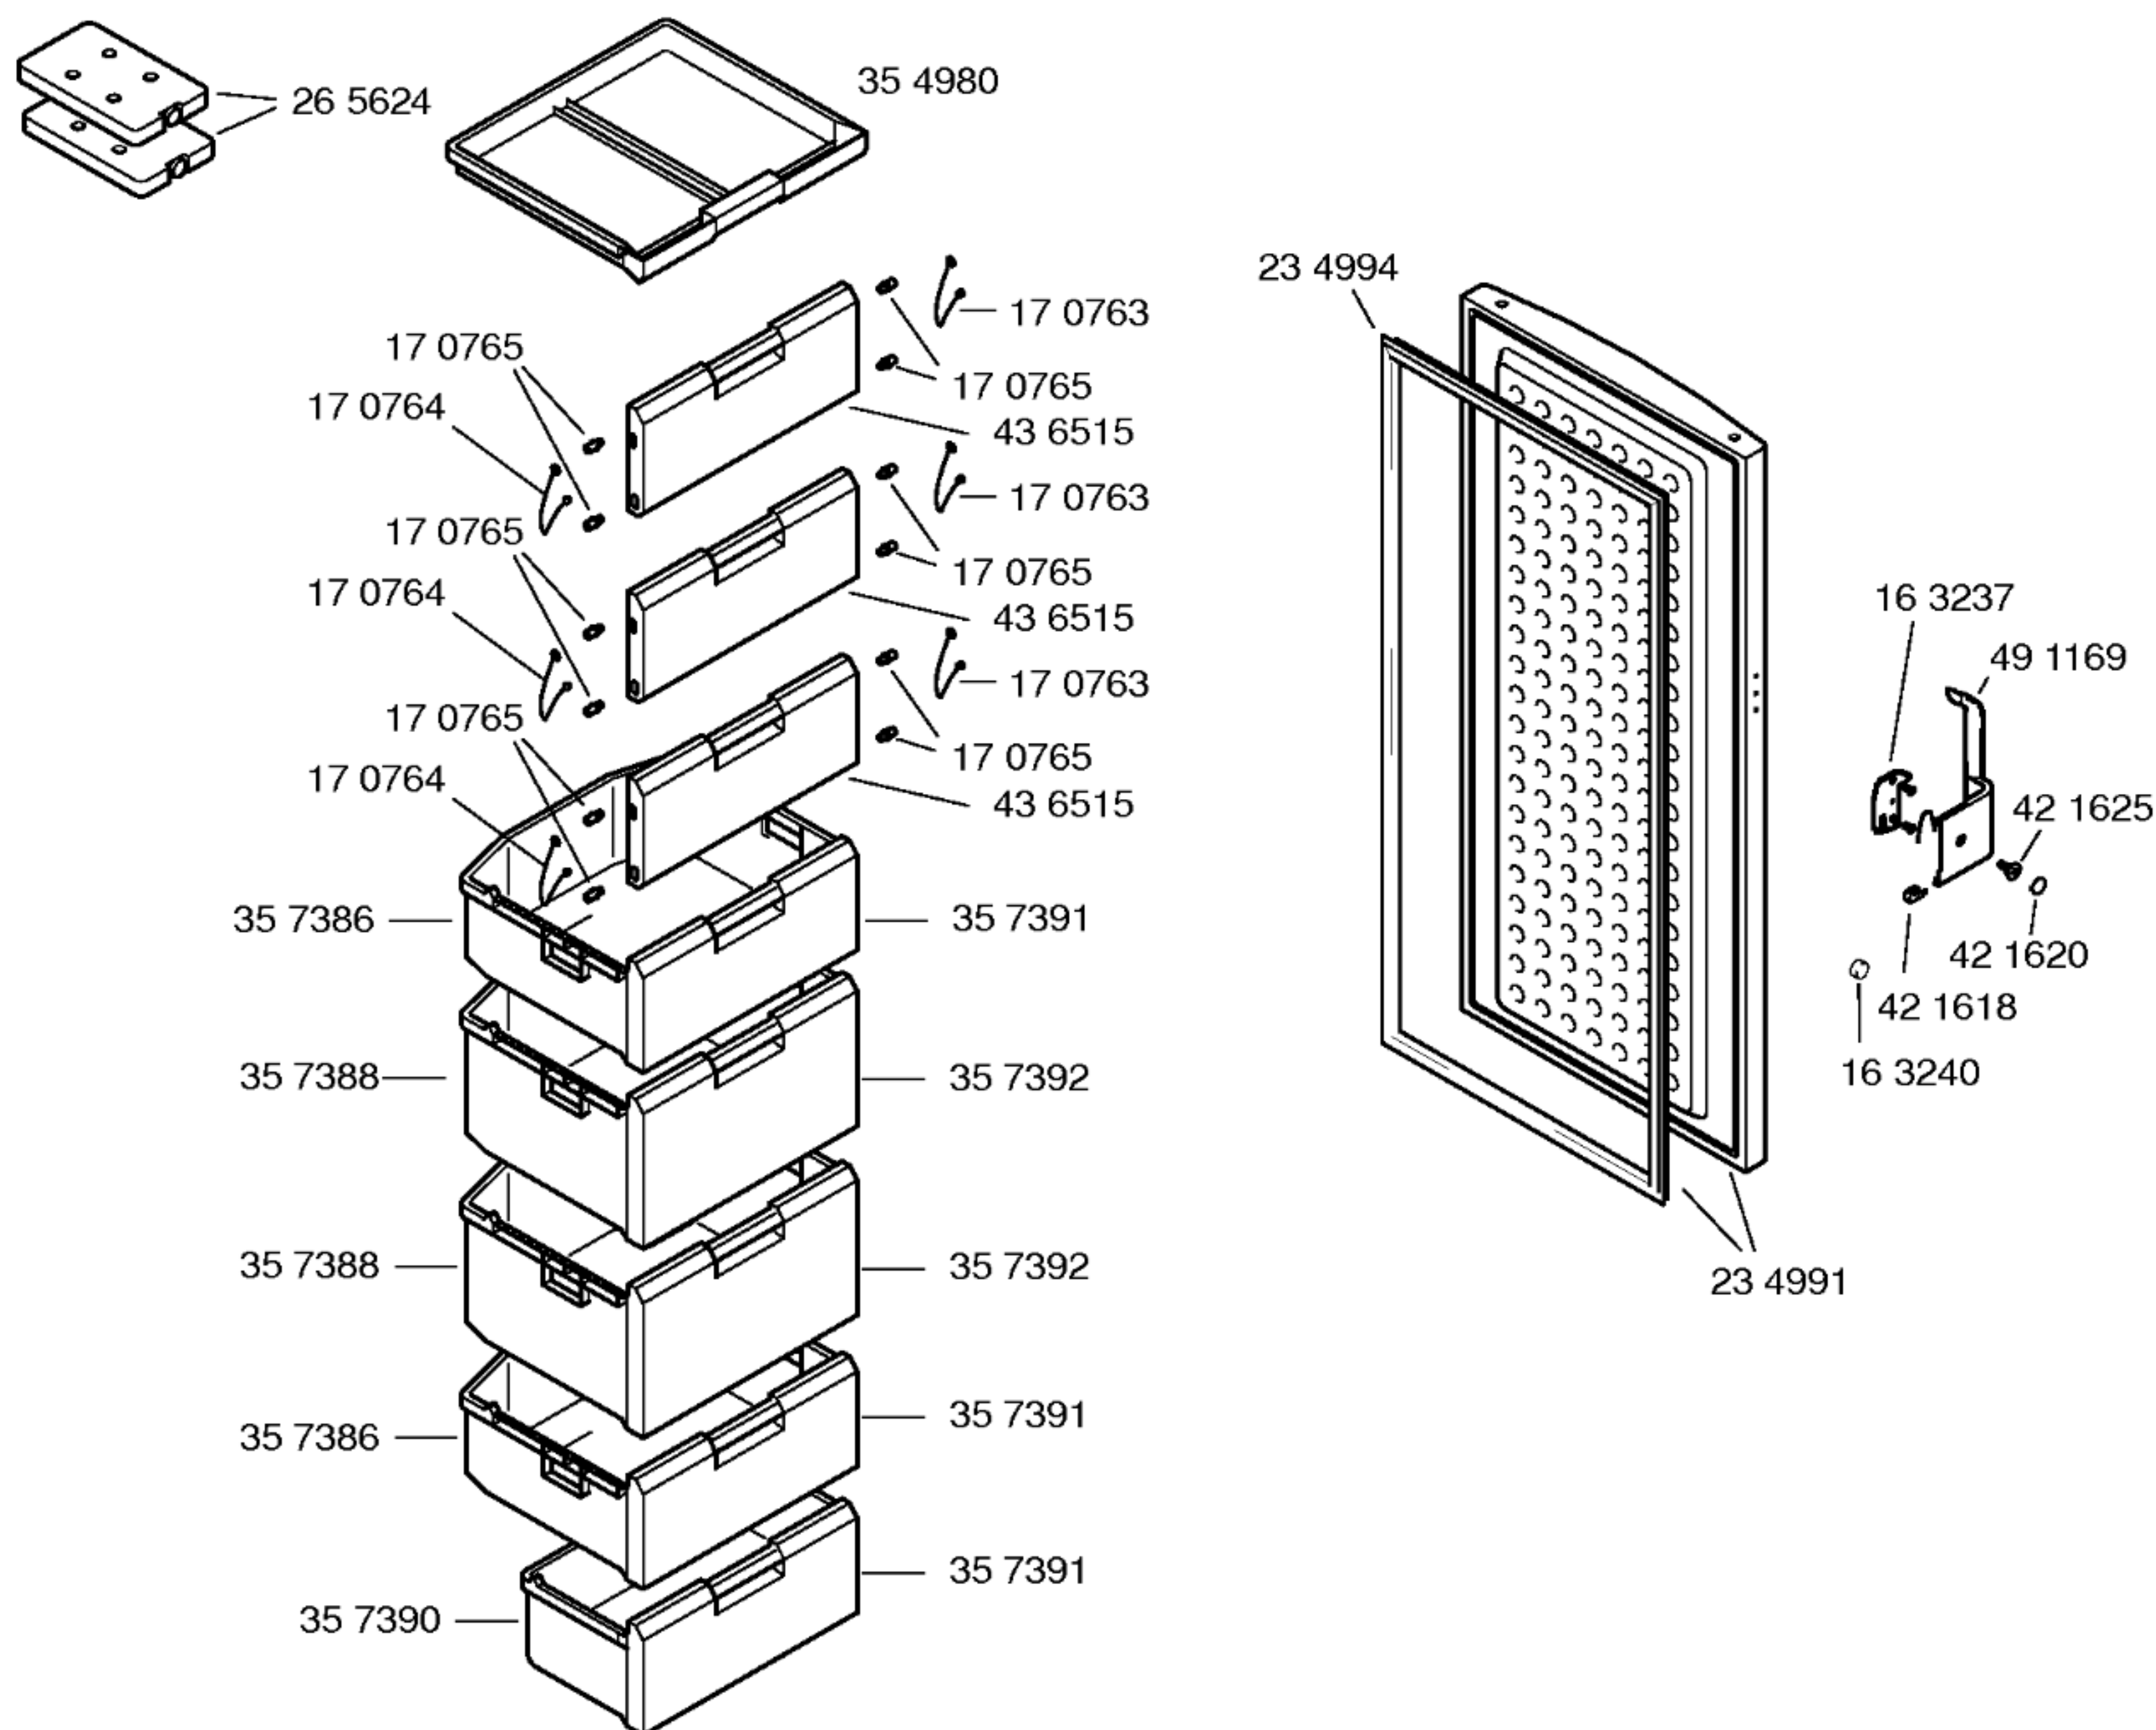

Mat. – Nr. – Konstante
3740

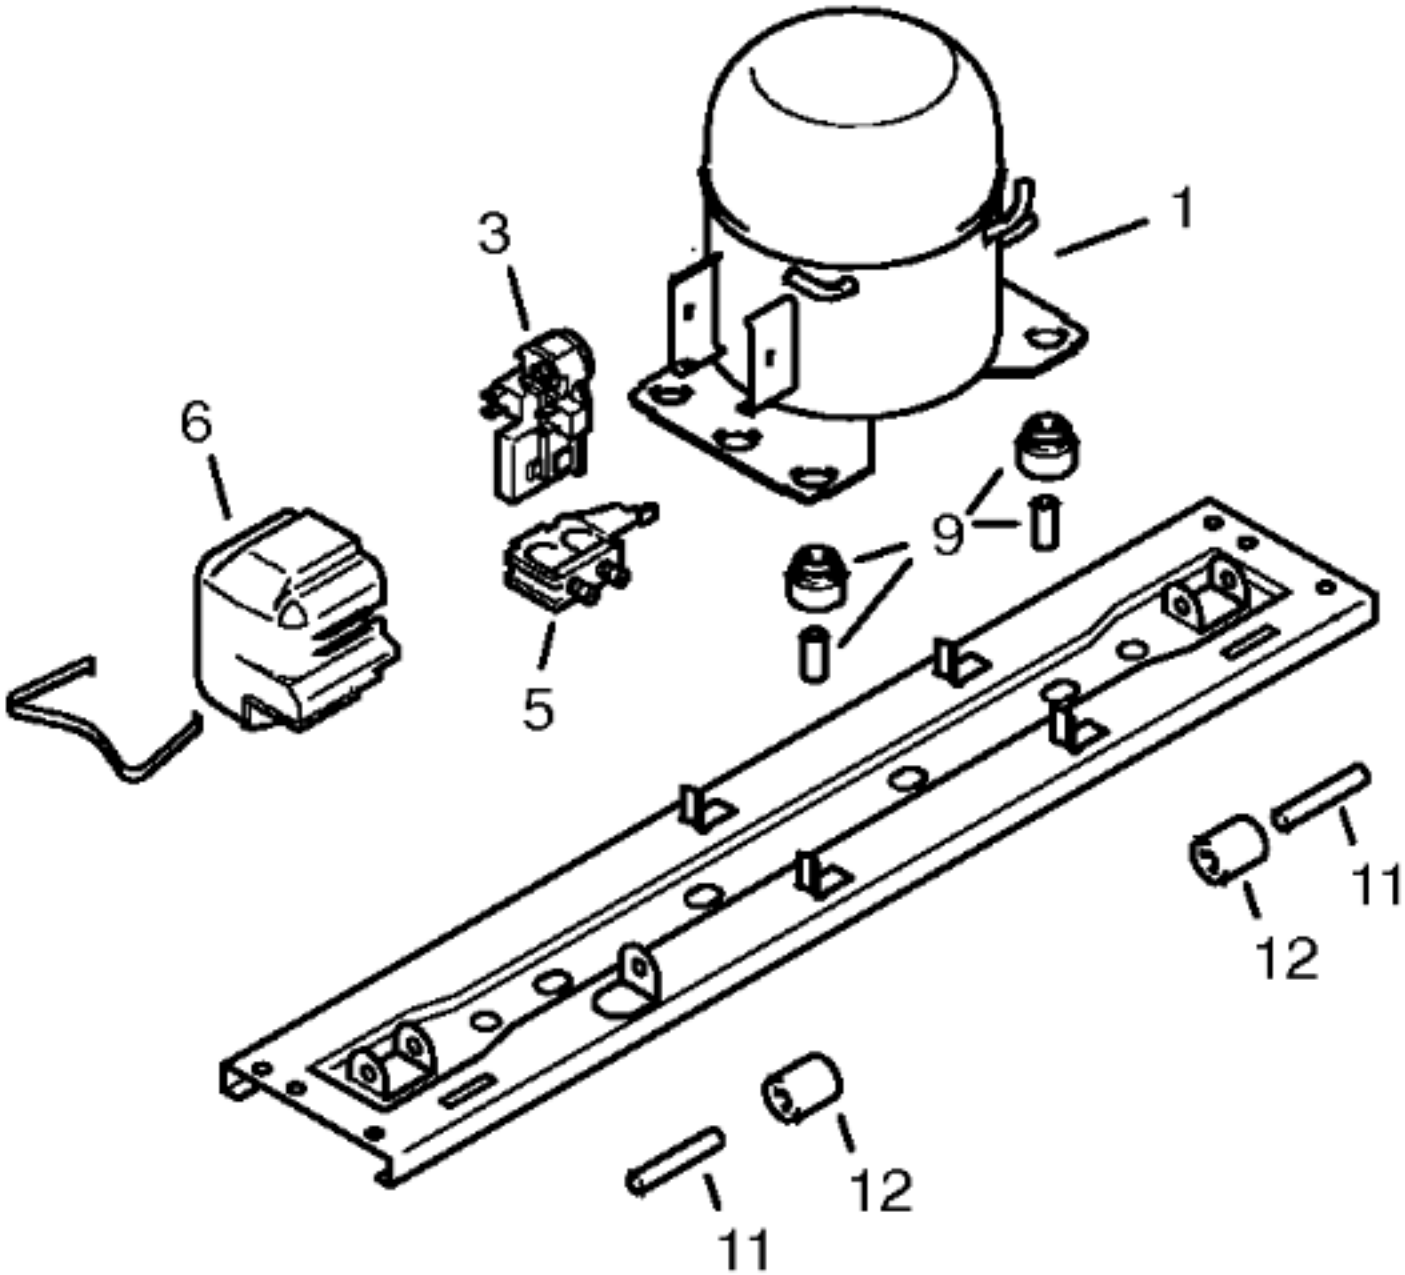

Pos.	V01-V02		
	Matsushita		
	DC 125 E		
	14 2131		
2			
3	17 2967		
4			
5	16 2549		
6	16 6782		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC 125 E		
Förderleistung/Delivery/Débit		l/h	2246	
Anlaufstrom/Starting current/Cour de démarrage		A	9,2	
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	12,1
		Hi/aux	Ω	13,8
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18 43,31 ±1,10
		+5	12,70 ±0,18	-22 54,66 ±1,59
		0	16,33 ±0,16	-26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		