


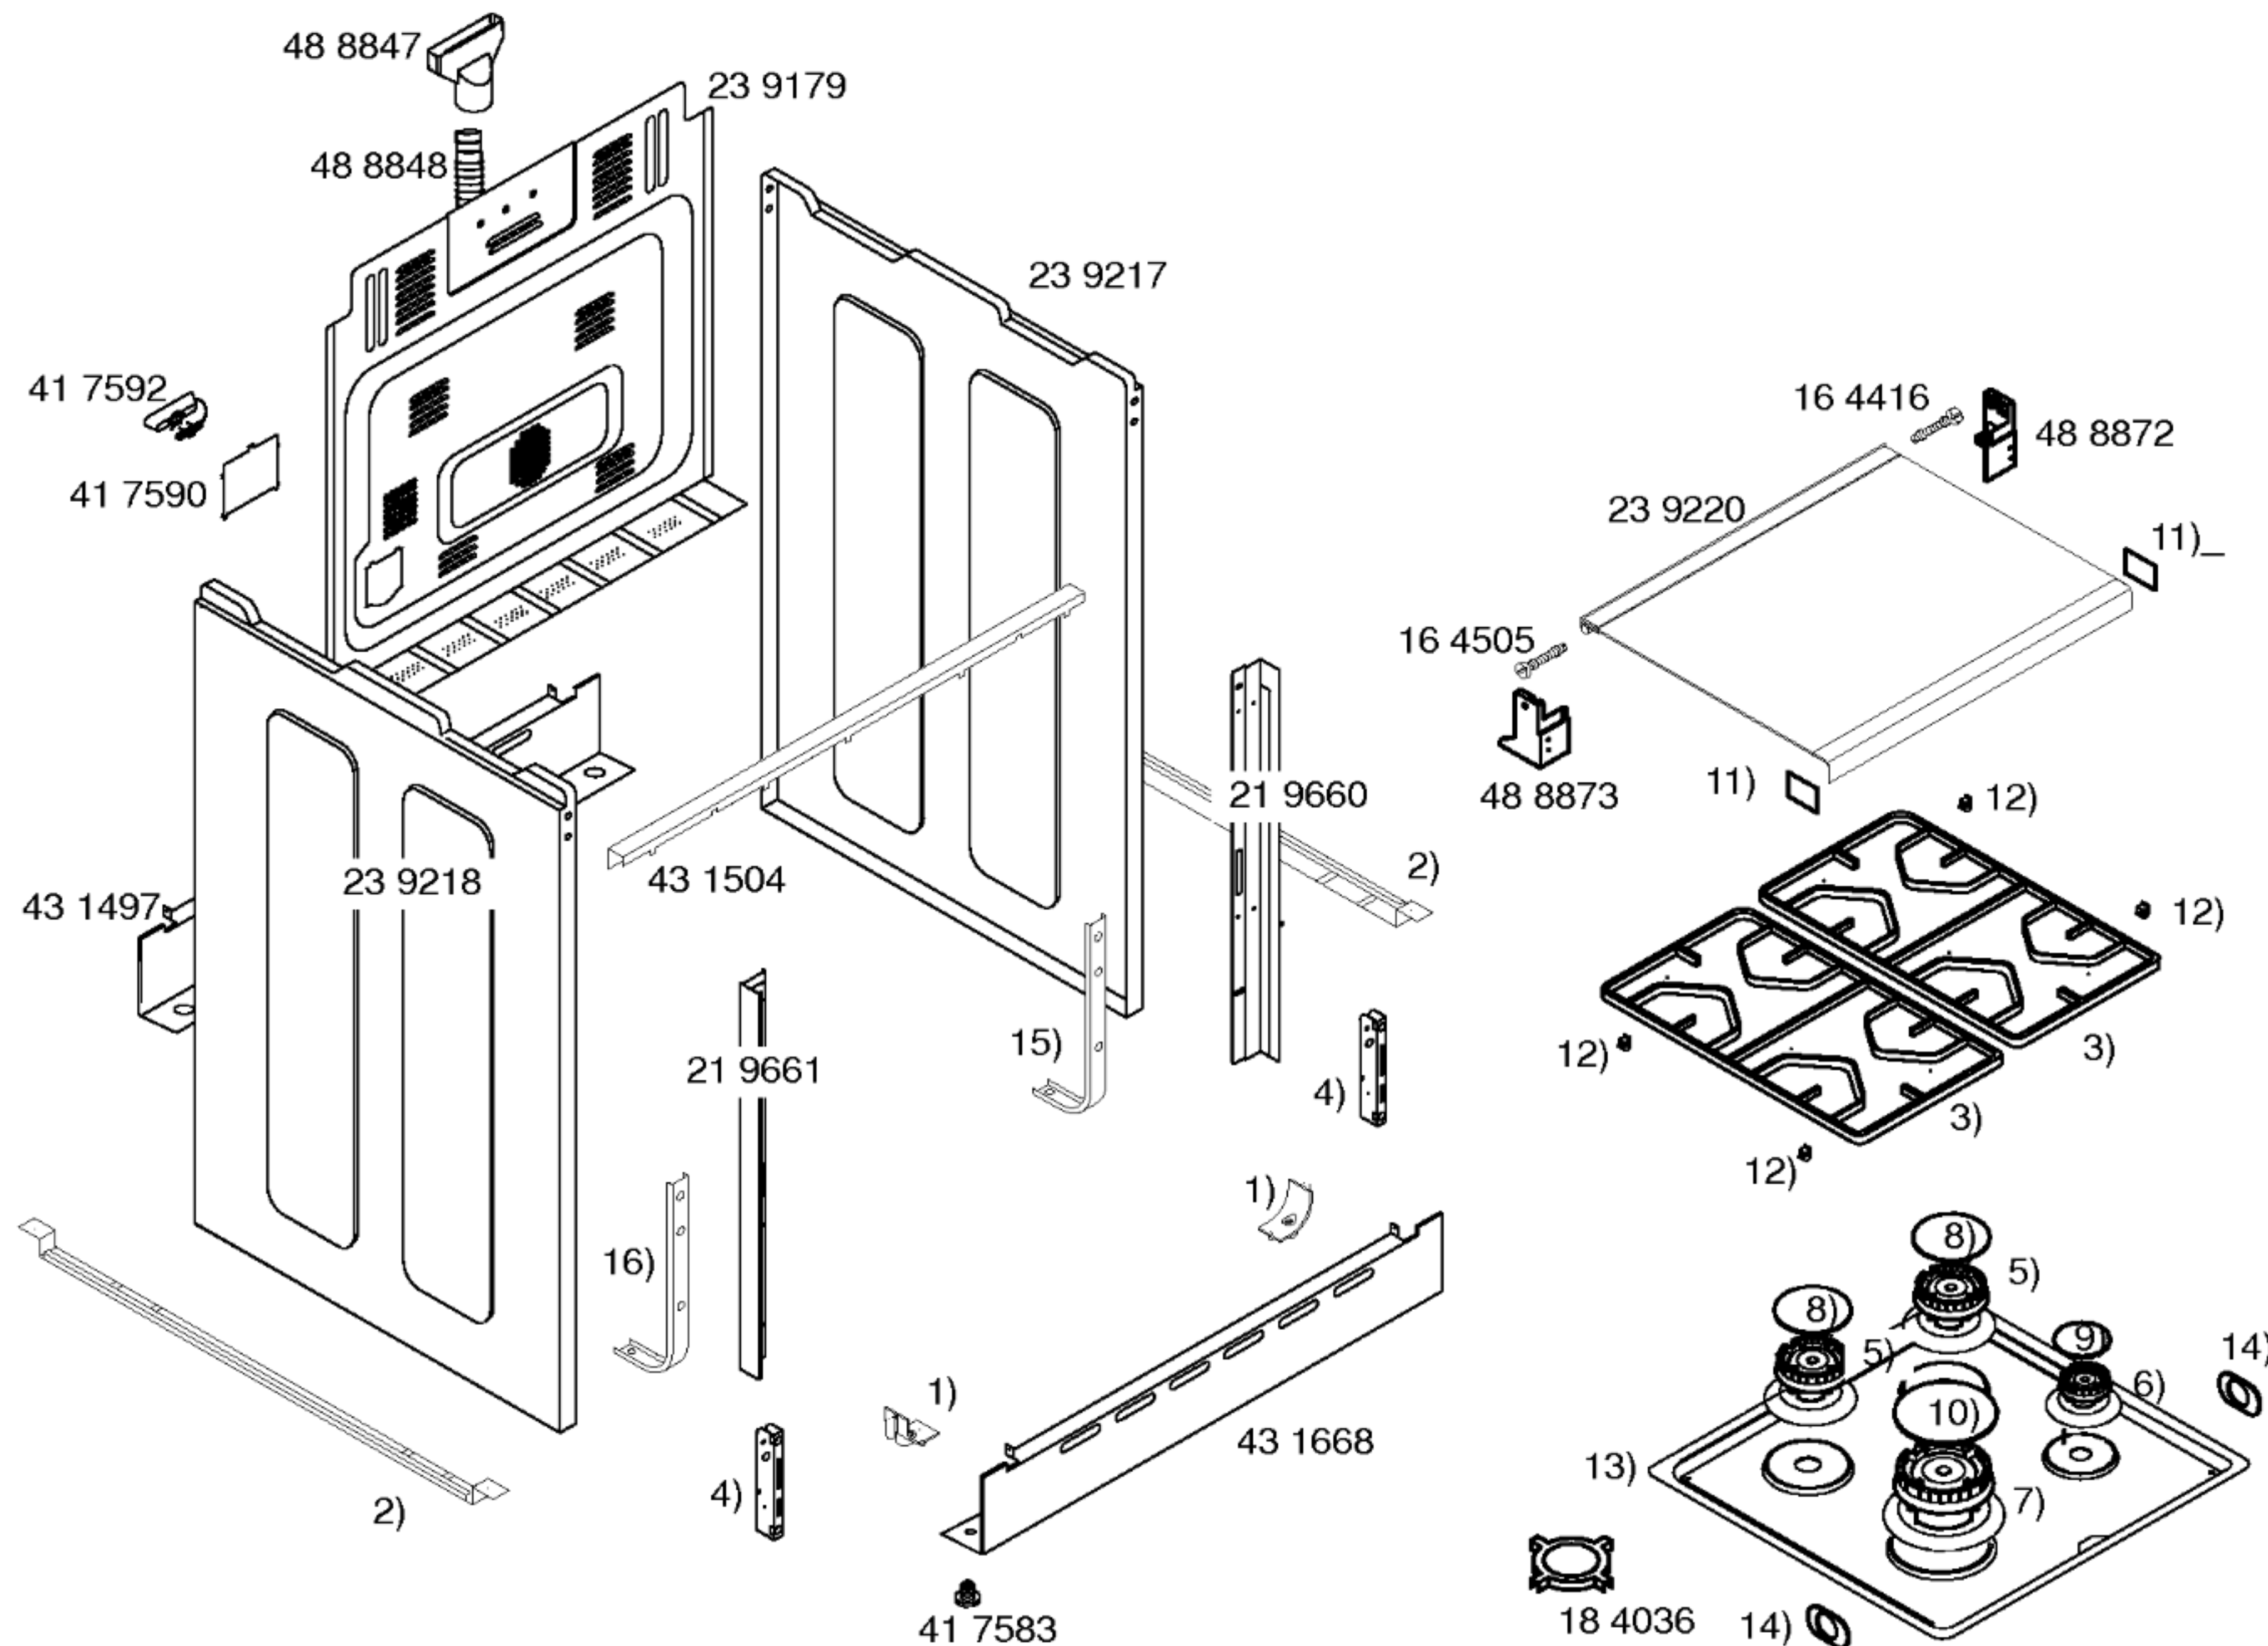

Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 3434

58 3578

- 1) 41 7587
- 2) 43 1499
- 3) 26 8009
- 4) 41 7579
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 18 4302
- 12) 16 8053

13) 23 9188

V01

24 1375

V02

14) 41 6913

15) 43 1502

16) 43 1503

48 8935


V01

48 9251

V02

49 2362

V03

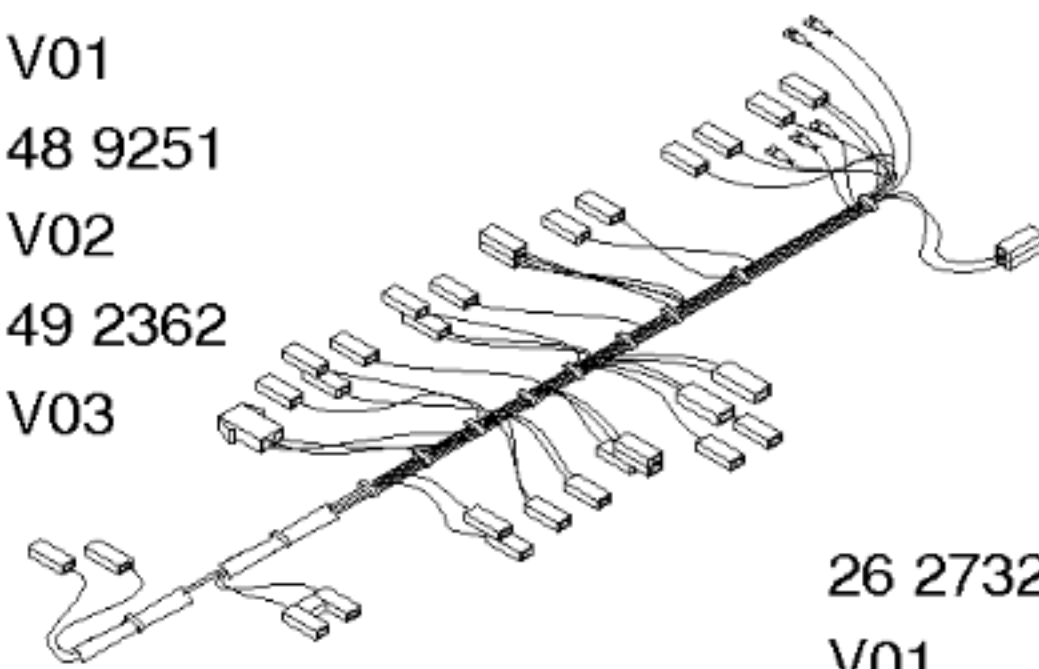


26 2732

V01

41 8395

V02, V03

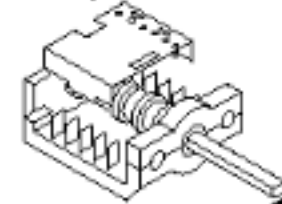

26 2730




18 6964

36 2893

41 6860

18 4233

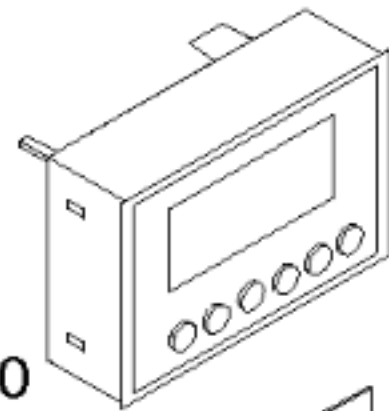


18 7478

18 4045



18 4492

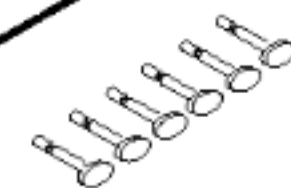

2)



3)



3)


36 3189

Mat. - Nr. - Konstante
3740

1) 18 8177


2) 18 8178

3) 18 8138

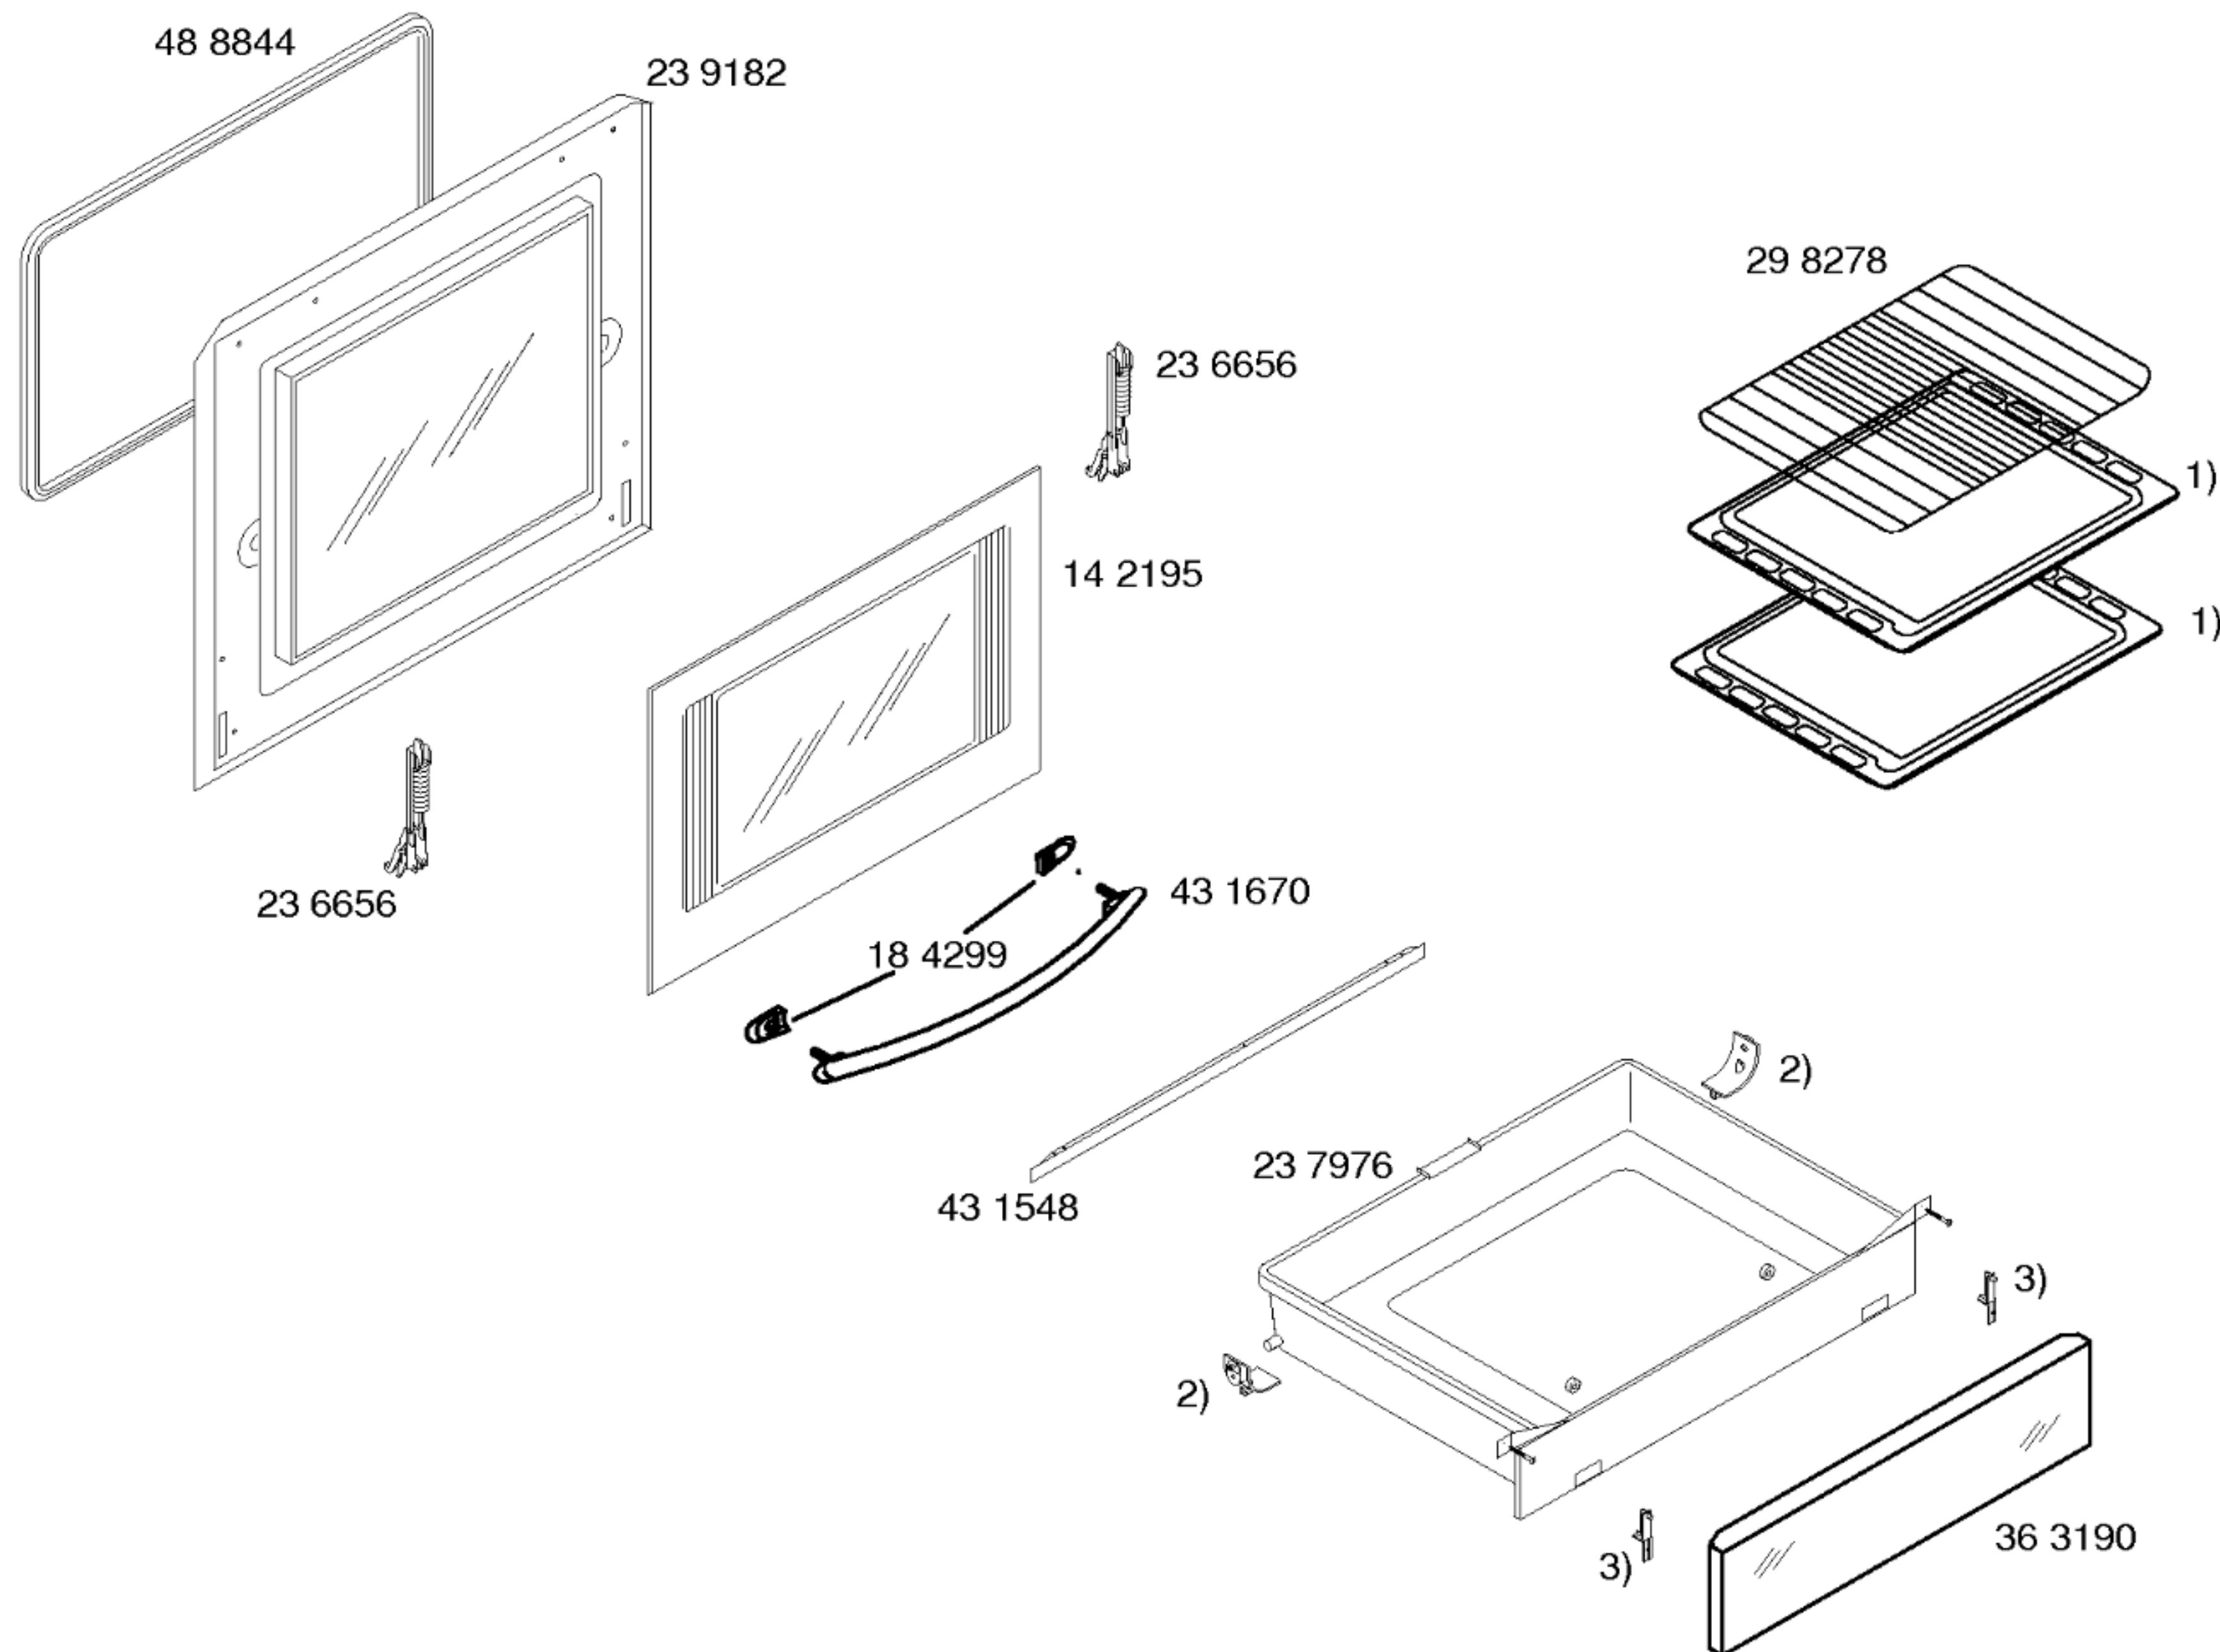


Mat. – Nr. – Konstante
3740

- 1) 35 3489
- 2) 41 7587
- 3) 41 7588

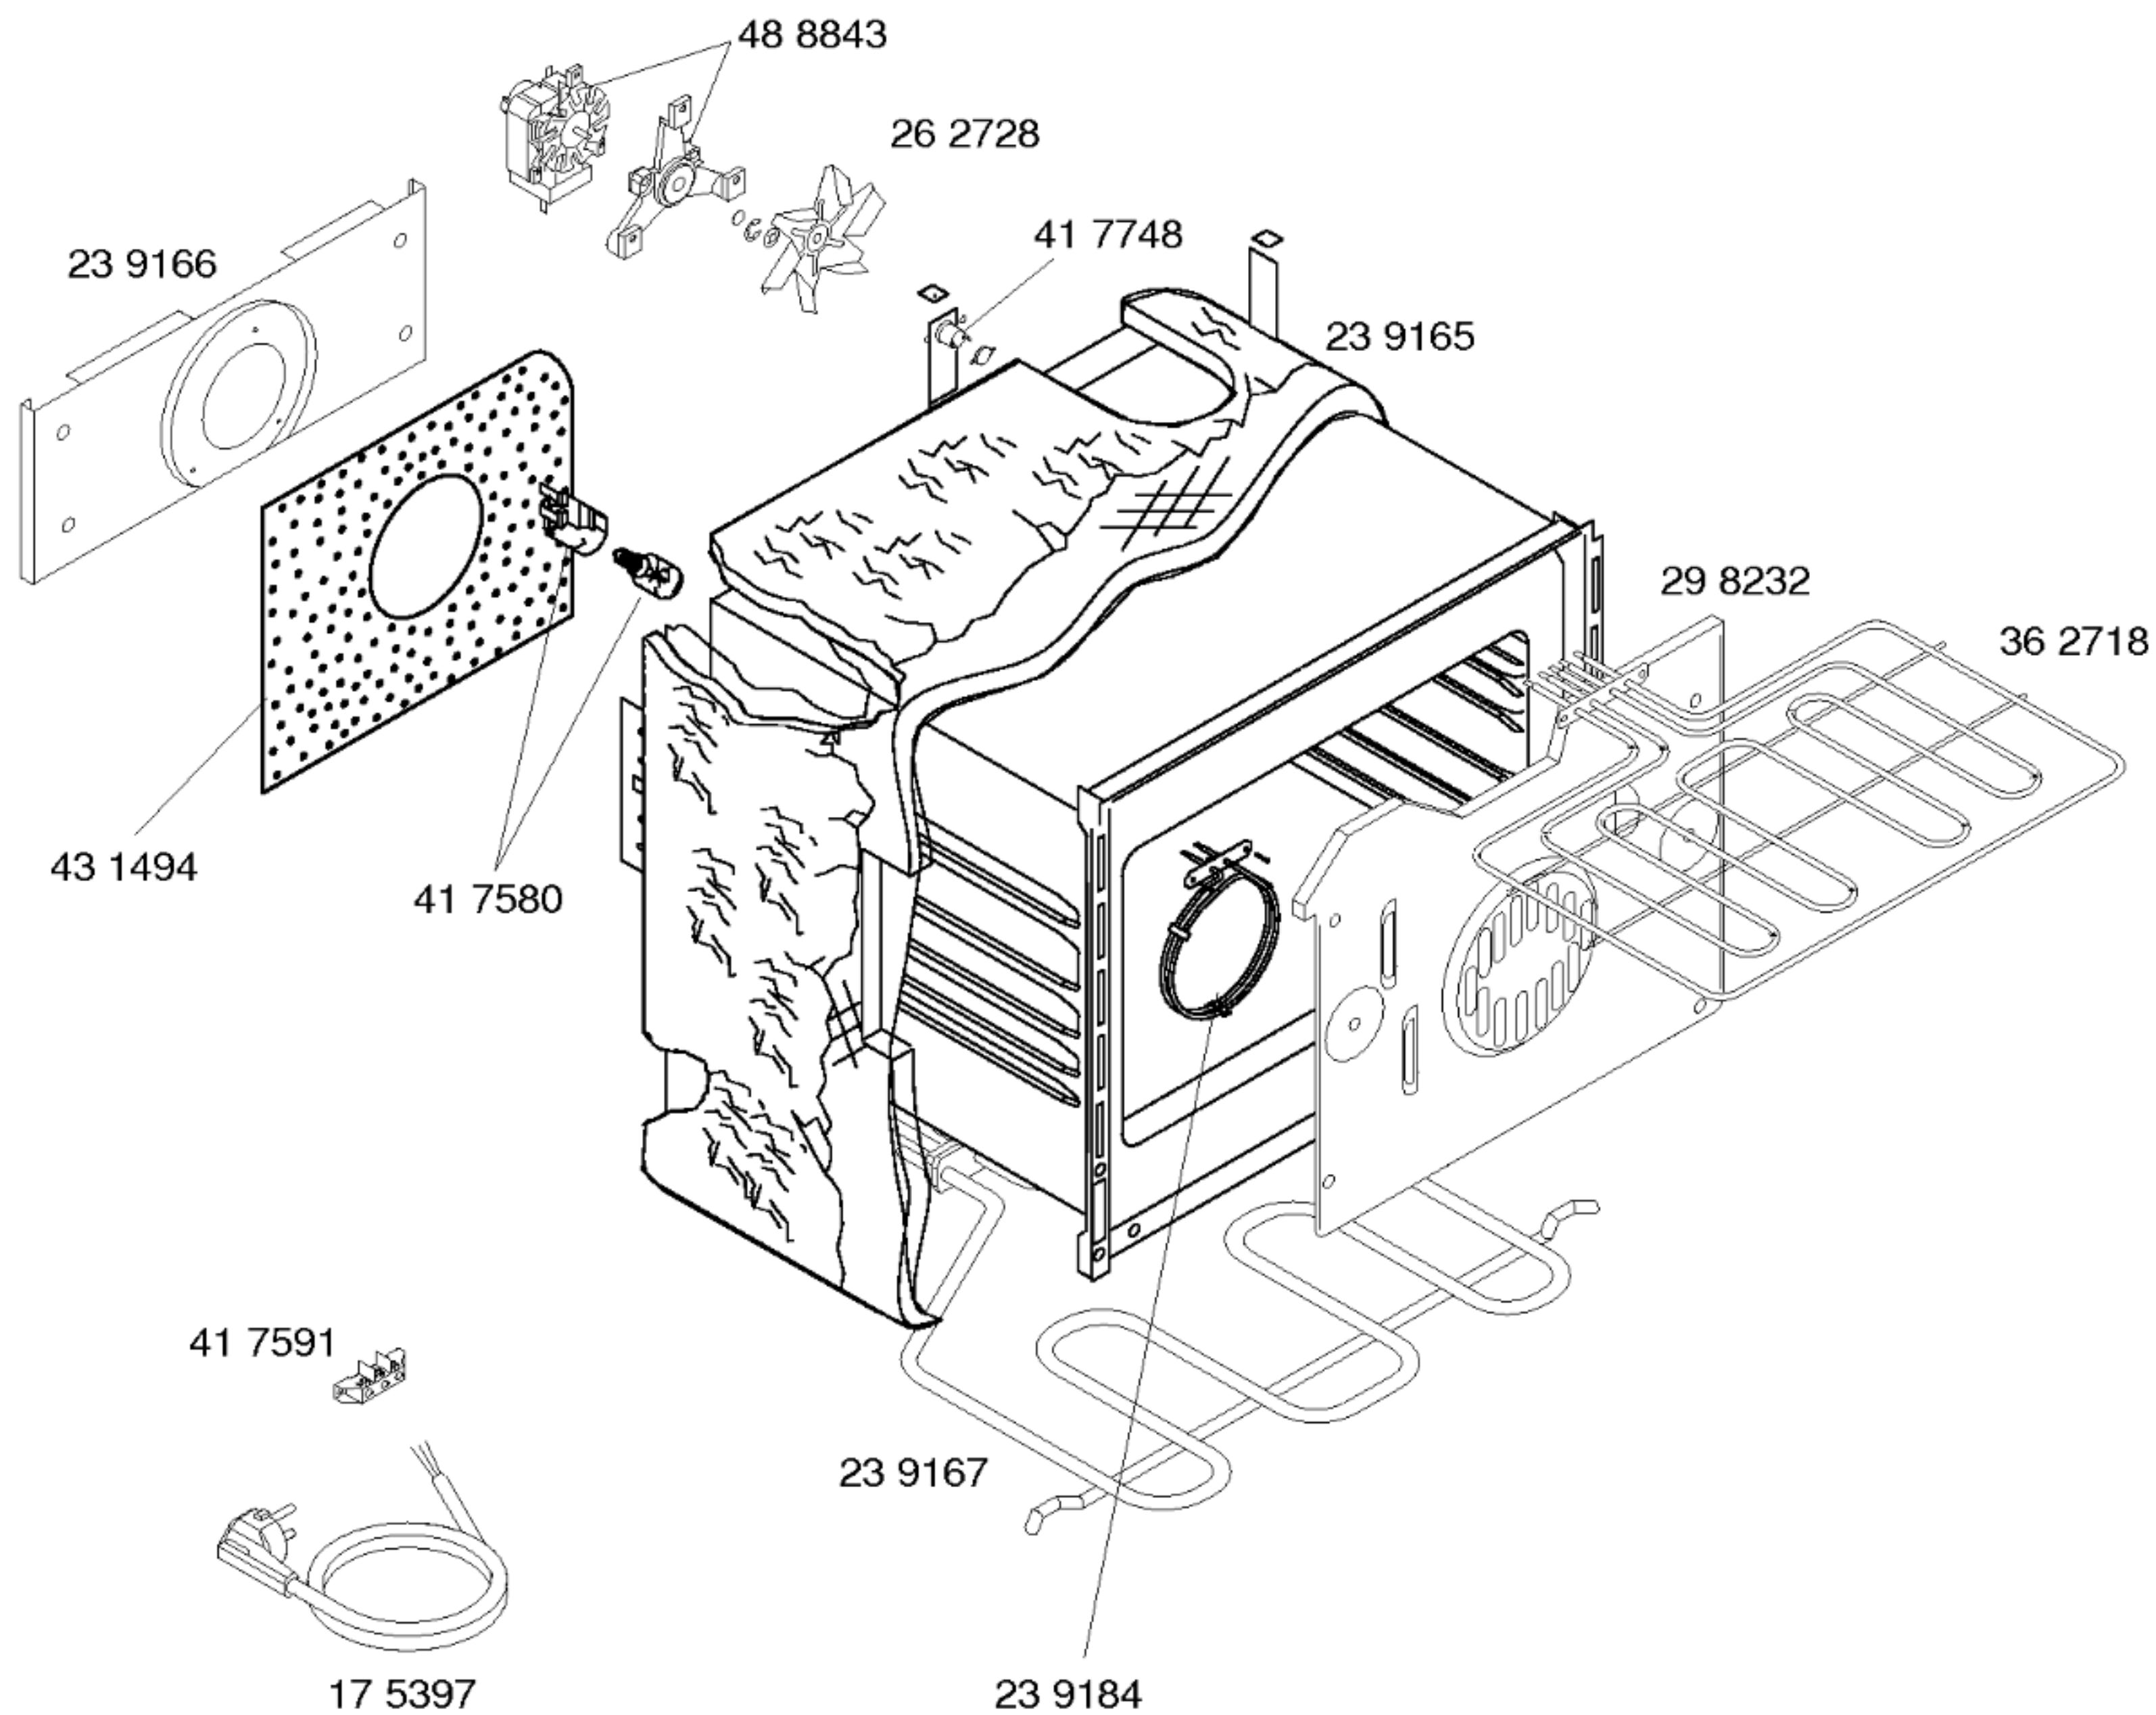

Mat. – Nr. – Konstante
3740

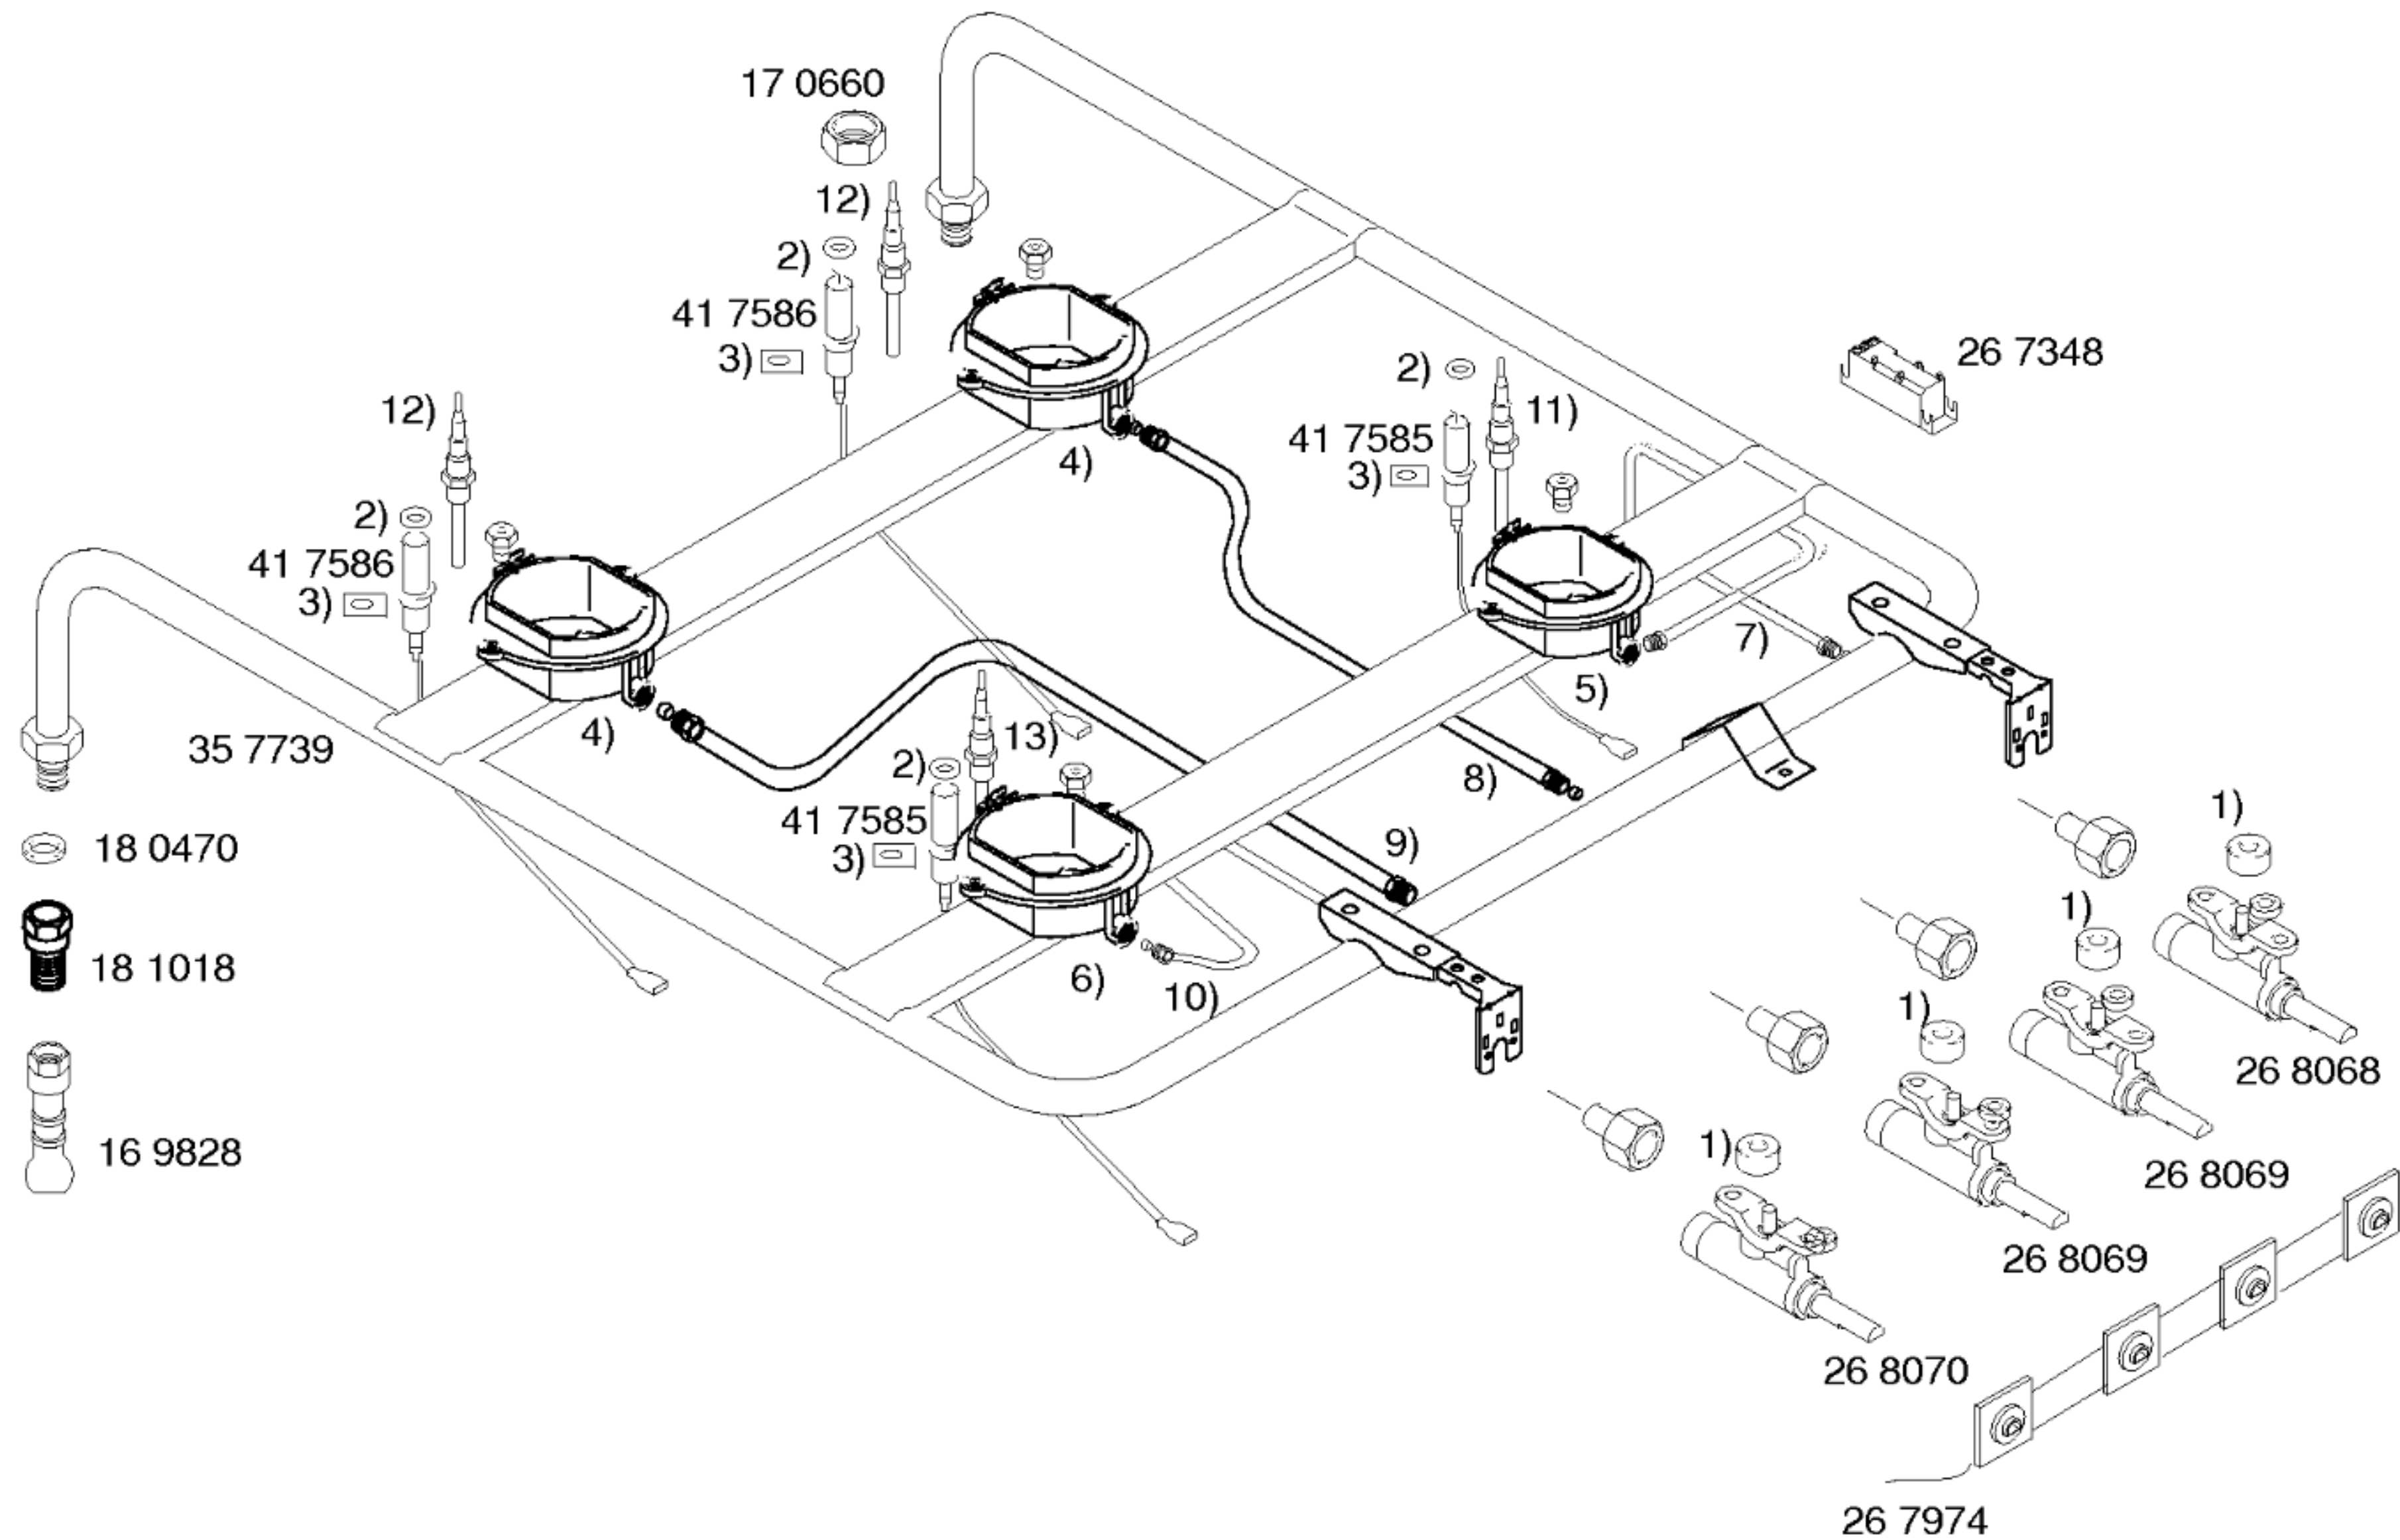

Mat. - Nr. - Konstante
3740

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 26 7950
- 5) 26 7951
- 6) 26 7949
- 7) 35 8149
- 8) 35 8150
- 9) 35 8148
- 10) 35 8147
- 11) 17 5430
- 12) 17 5431
- 13) 17 5432

Duesensatz
Fluessiggas
50mBar (G30)
18 9041

Duesensatz Für:
EG H/E G20 20mbar
17 4049

FG G30/31 30mbar
17 4048

EG H/E G20 20mbar
(inkl.Bypassduesen)
41 7597

FG G30/31 30mbar
(inkl.Bypassduesen)
41 7837