


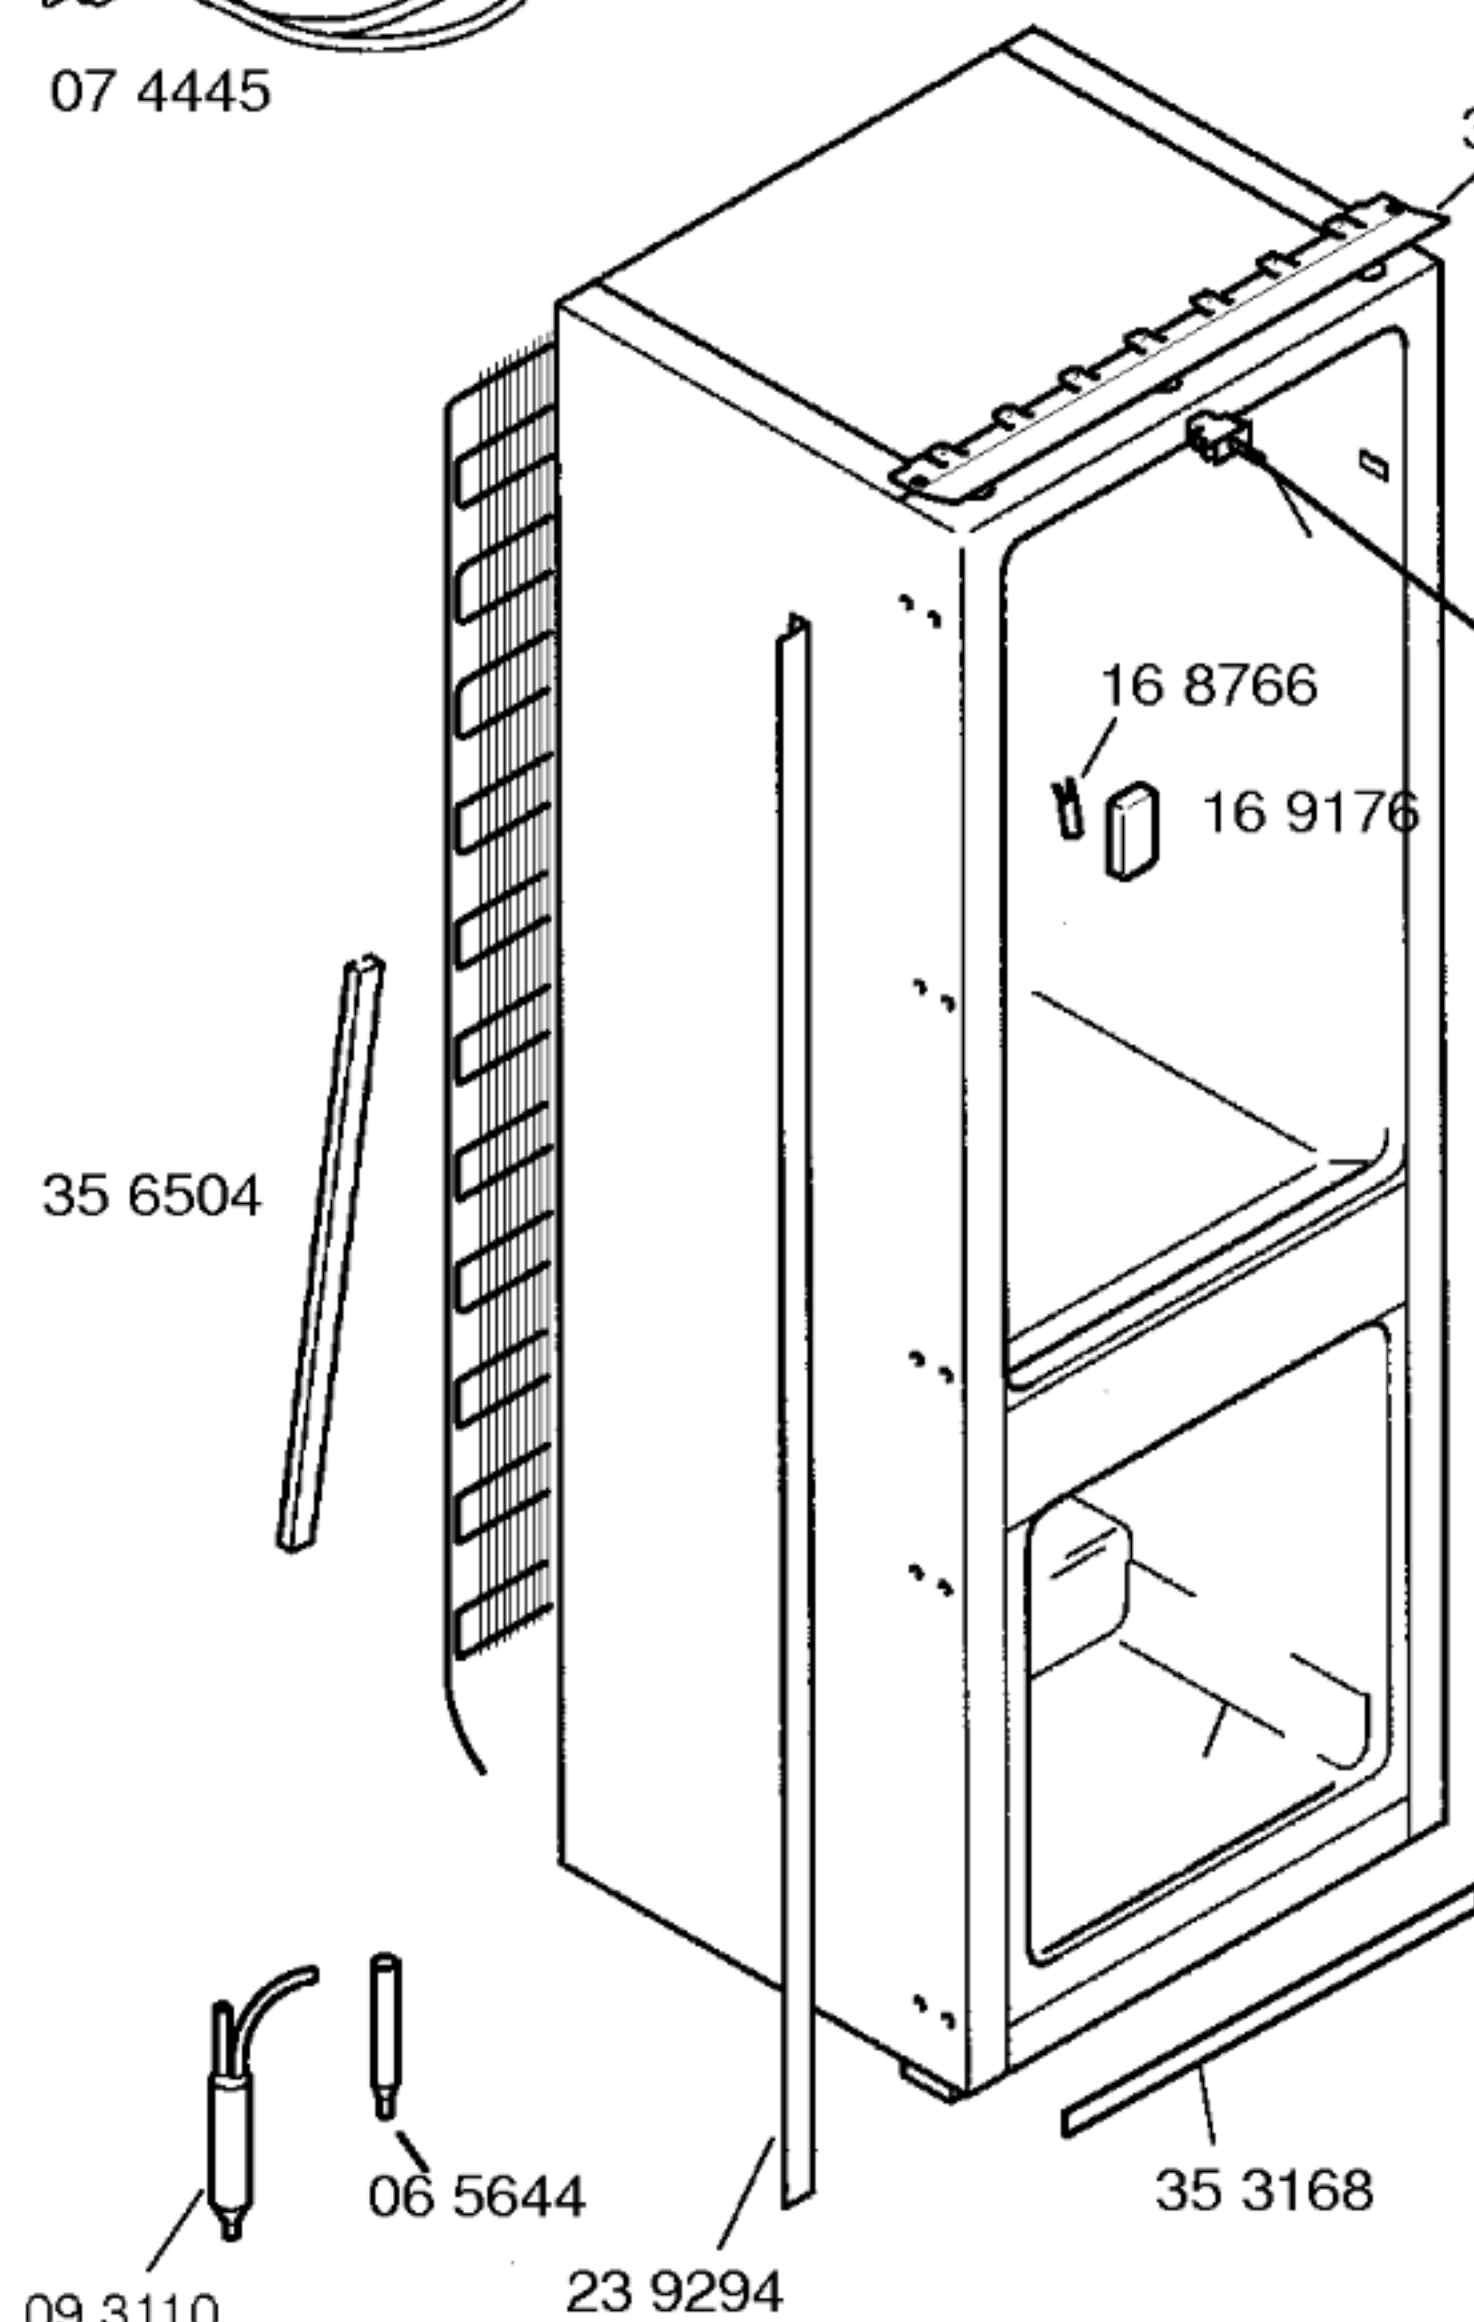

07 4445




09 3110

06 5644

23 9294






35 3168

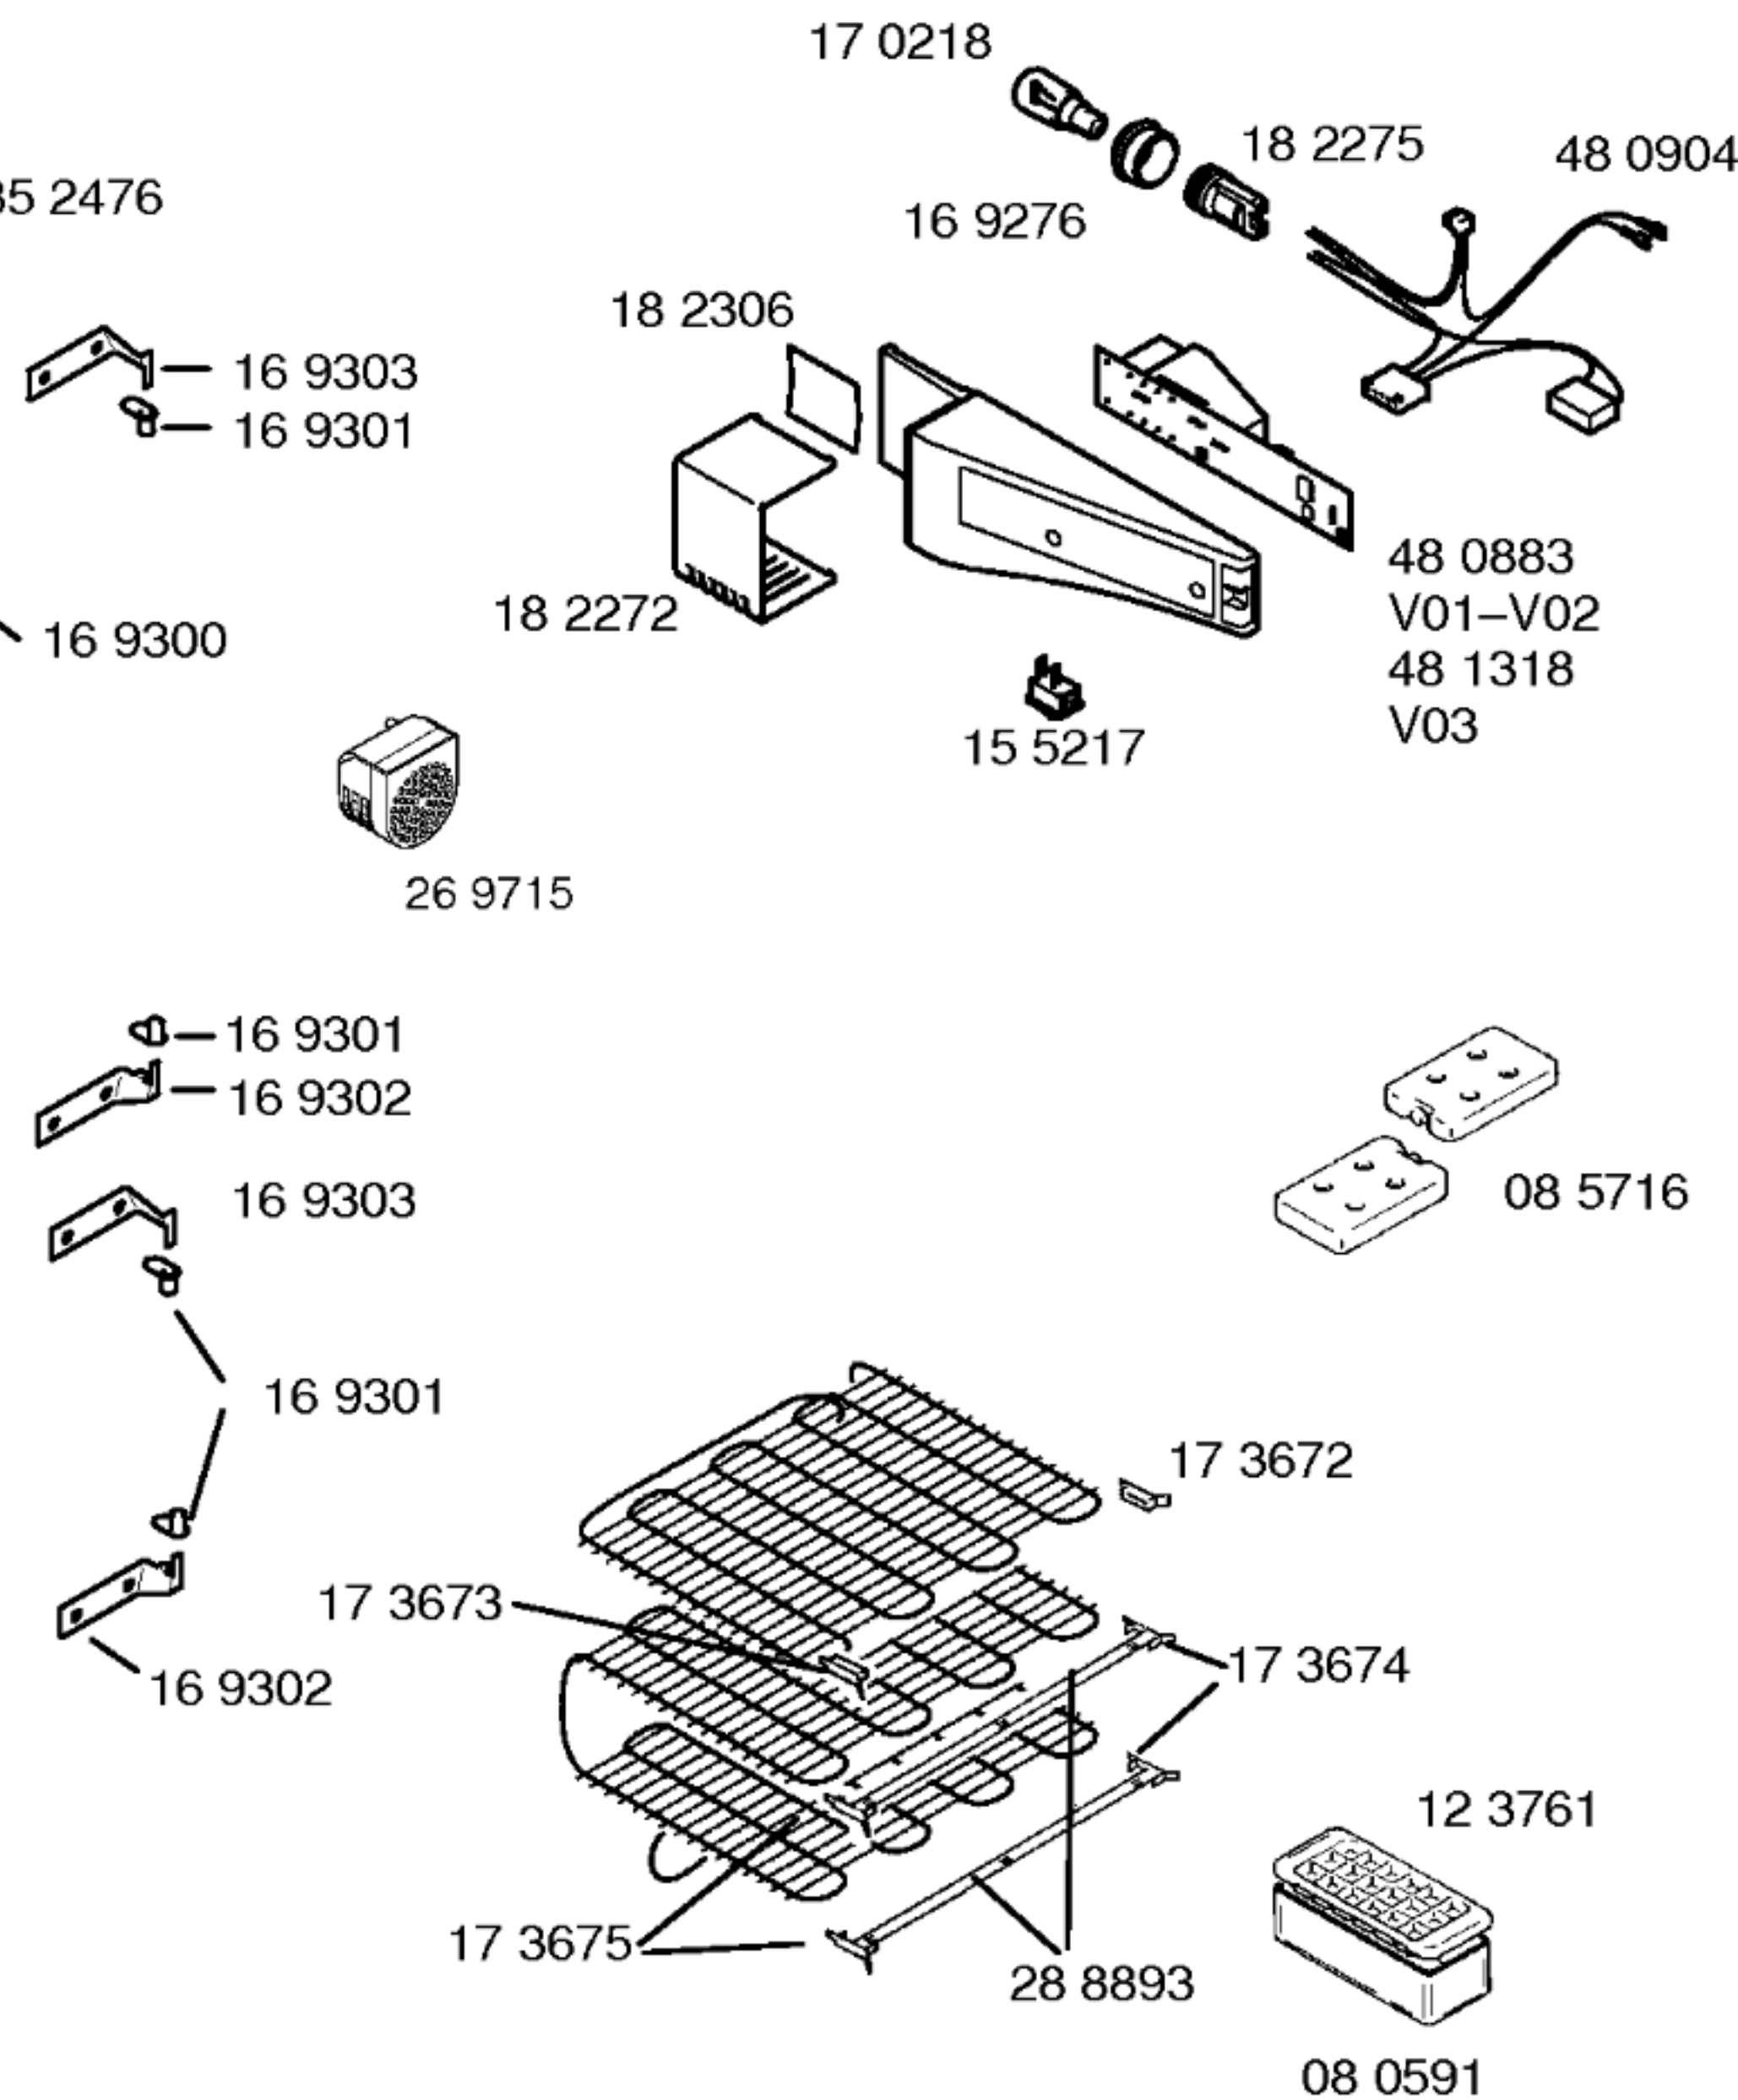


Gebrauchsanweisung
52 81 76
(D, GB, F, I, NL, E, P, GR, TR)

Montagegeanleitung
52 1893
(D,GB,F,I,NL,S,E,DK,N,,SF)

Befestigungssatz
26 7361

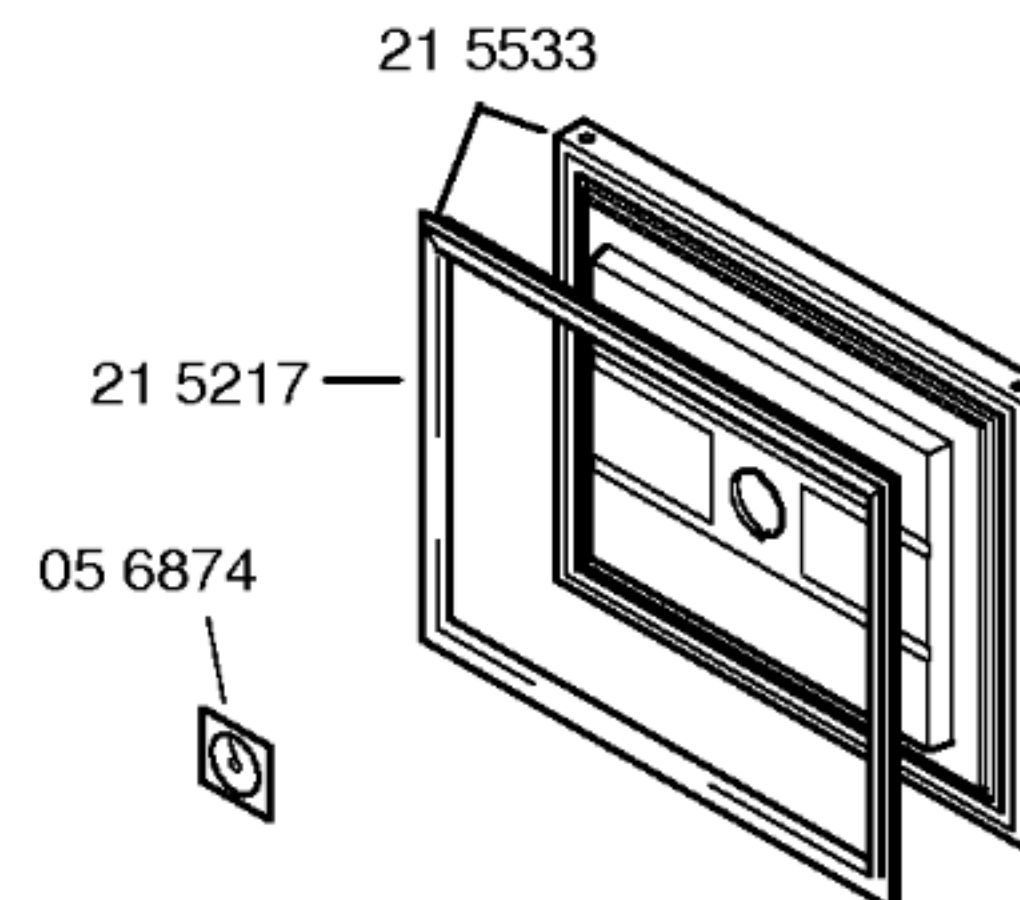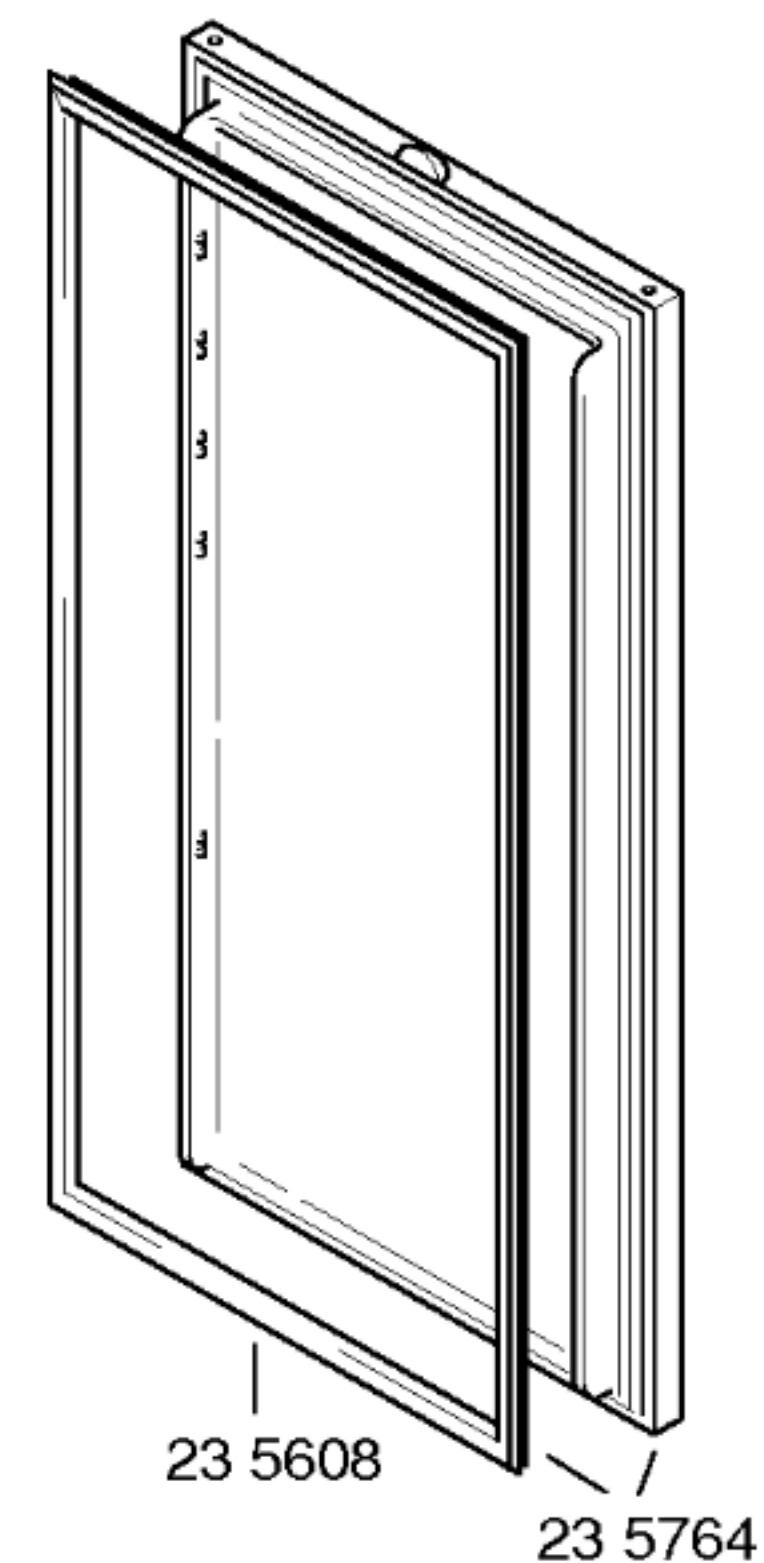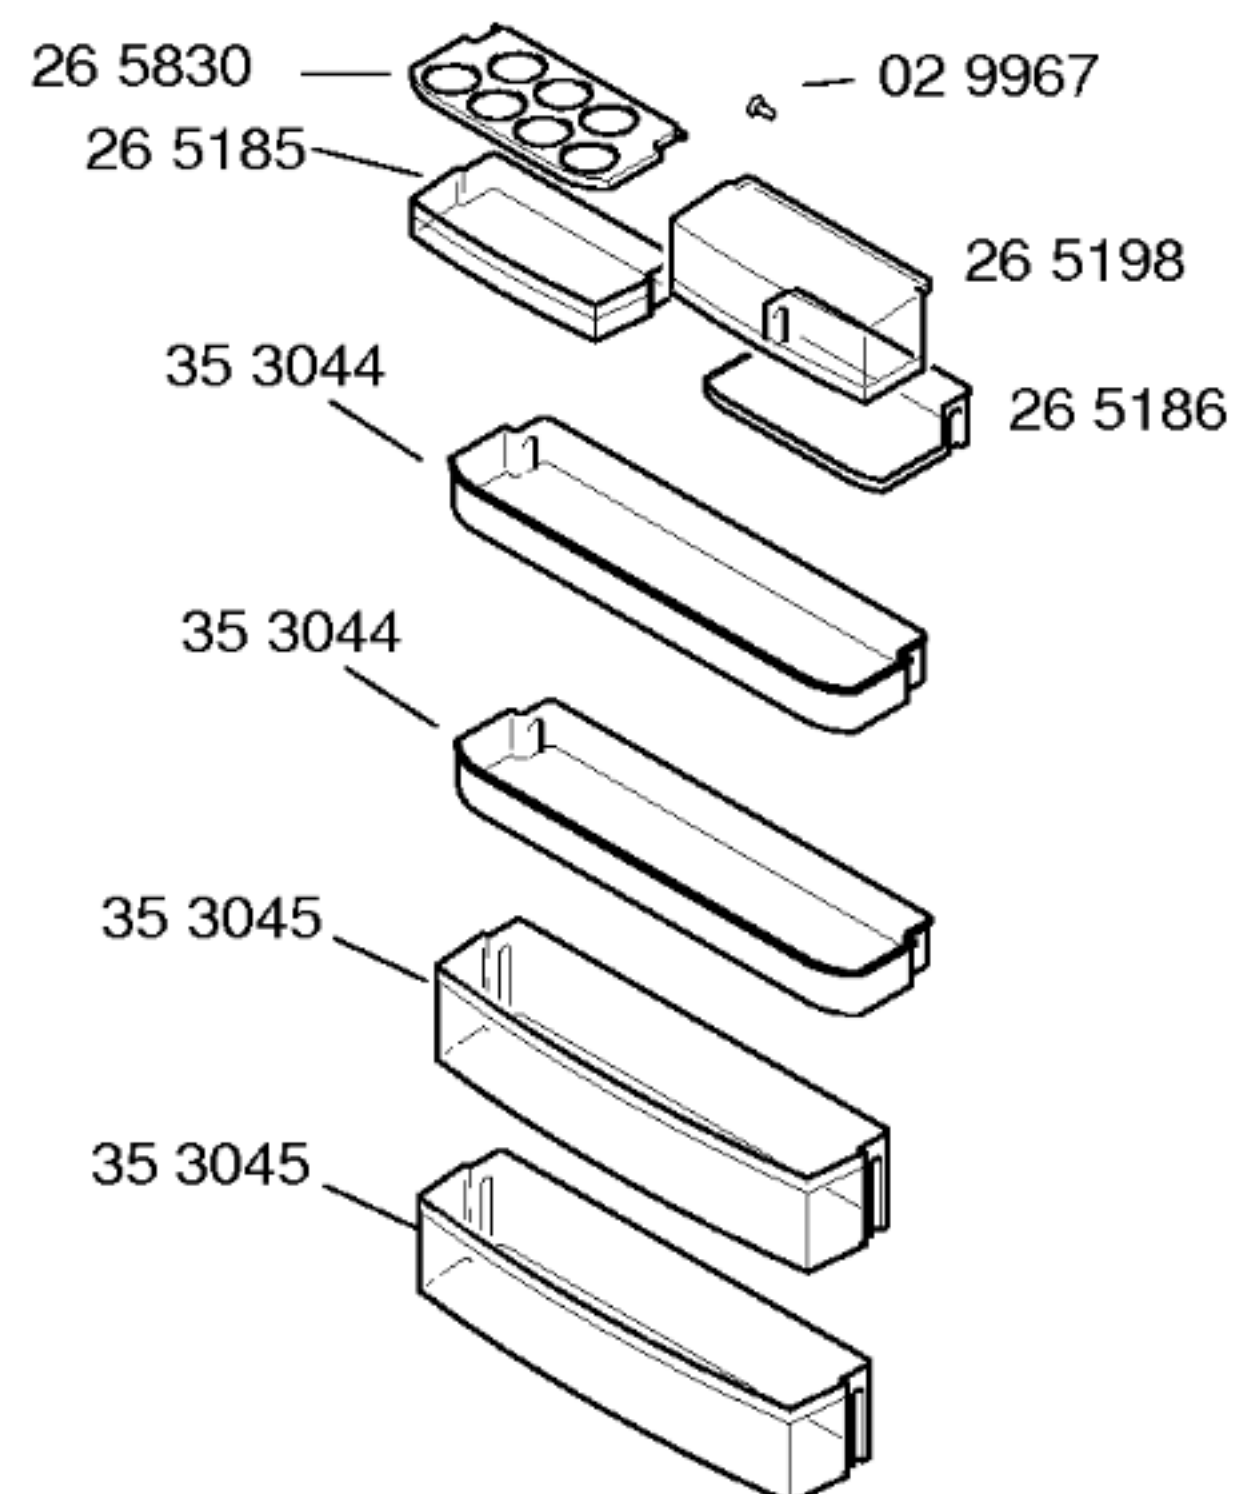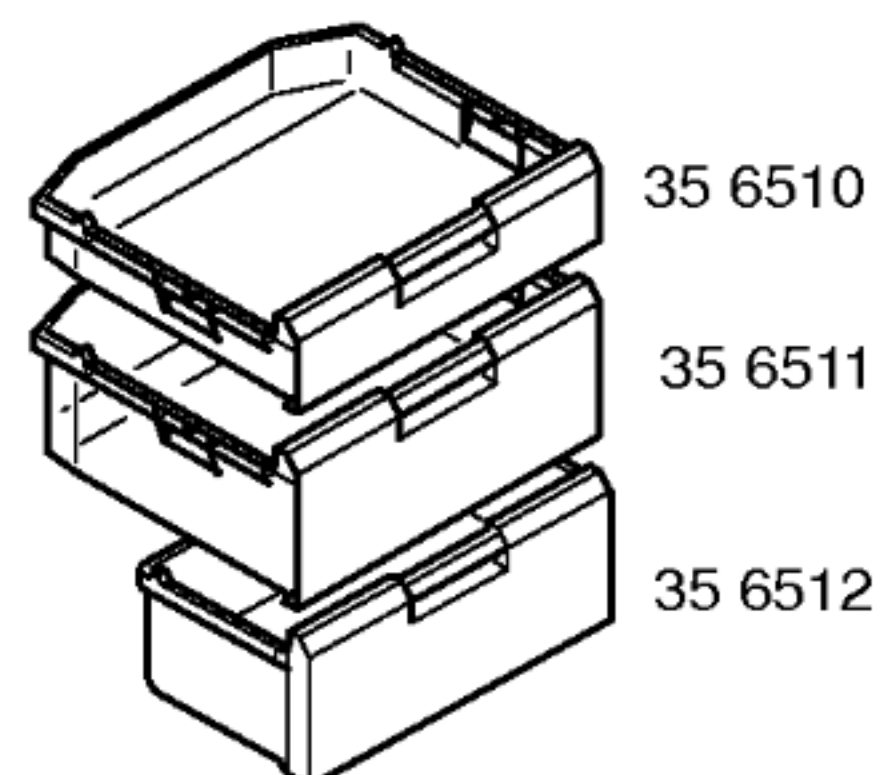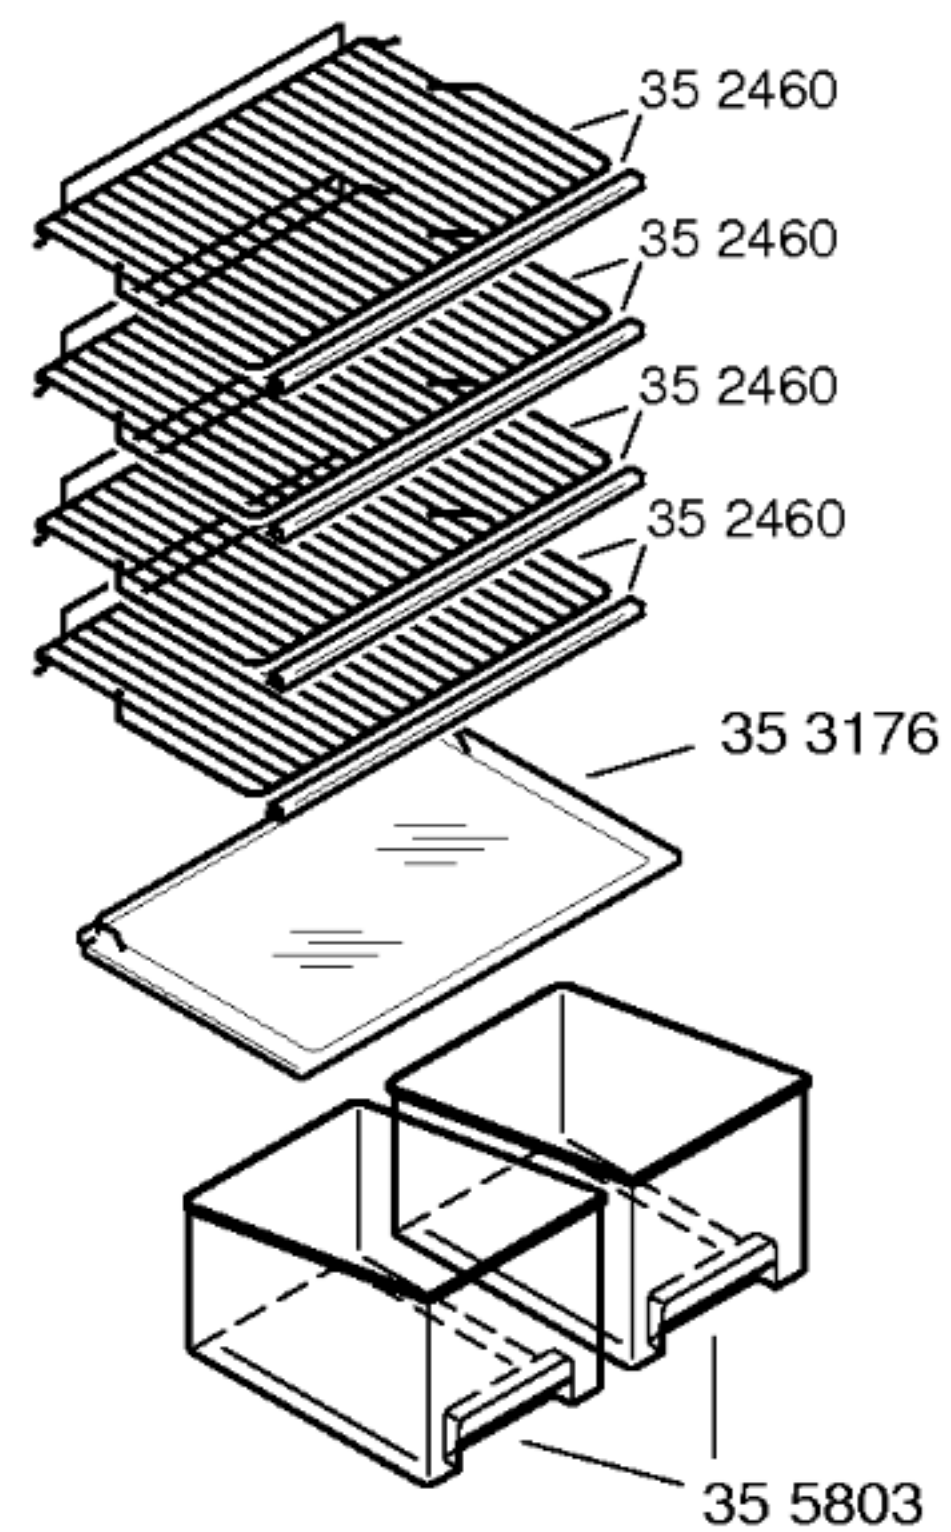

Mat. – Nr. – Konstante
3740

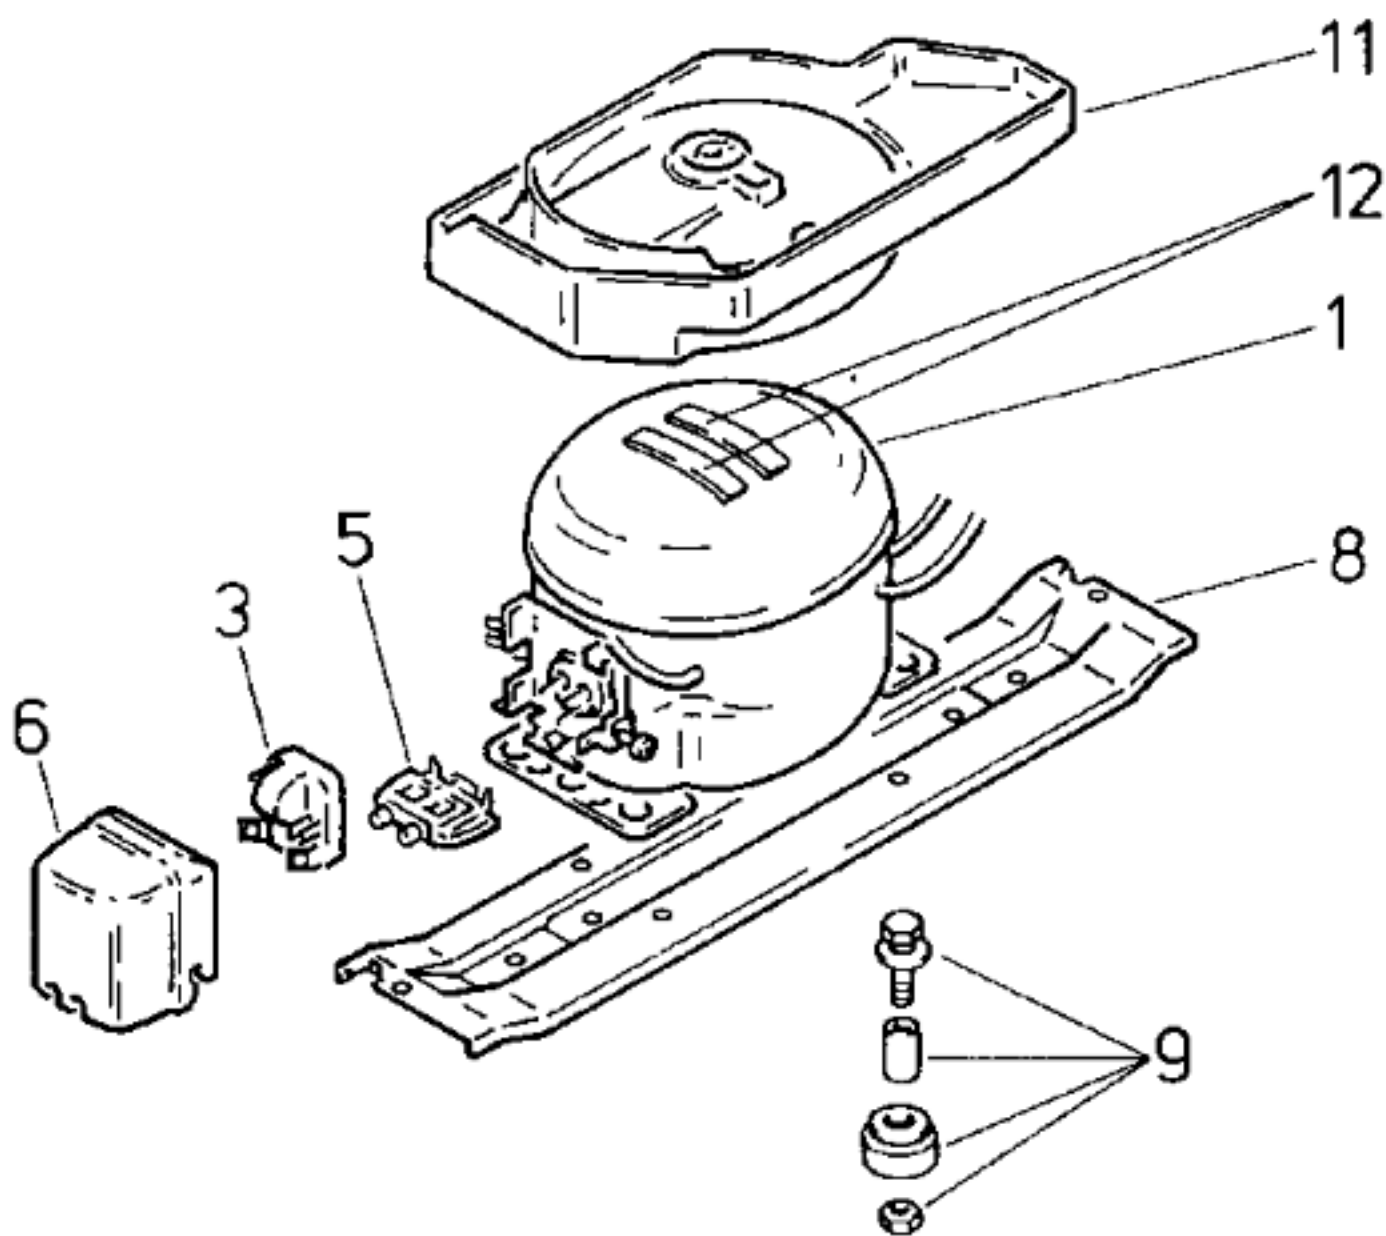

Pos.	V01	V02	
	Danfoss	Matsushita	
	NLY 13K	DC125E	
1	14 1747	14 2131	
2			
3	15 1055	17 2967	
4			
5	15 1053	16 2549	
6	15 1072	16 6782	
7			
8	28 1825	28 1825	
9	05 0166	05 0166	
10	05 9467		
11	26 6624	26 6624	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Matsushita
Typ/Type		NLY 13 K		DC125E
Förderleistung/Delivery/Débit	l/h	2637		2246
Anlaufstrom/Starting current/Cour. de démarrage	A	11,3		9,2
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	11,0		12,1
	Hi/aux Ω	9,0		13,8
Temp.-Regler/Thermostat		RCO K59		
Typ/Type		KER		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+4,5	+4,5	
Valeurs de commutation	„aus“	-32,0	-21	
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge	R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée	W	150	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild