



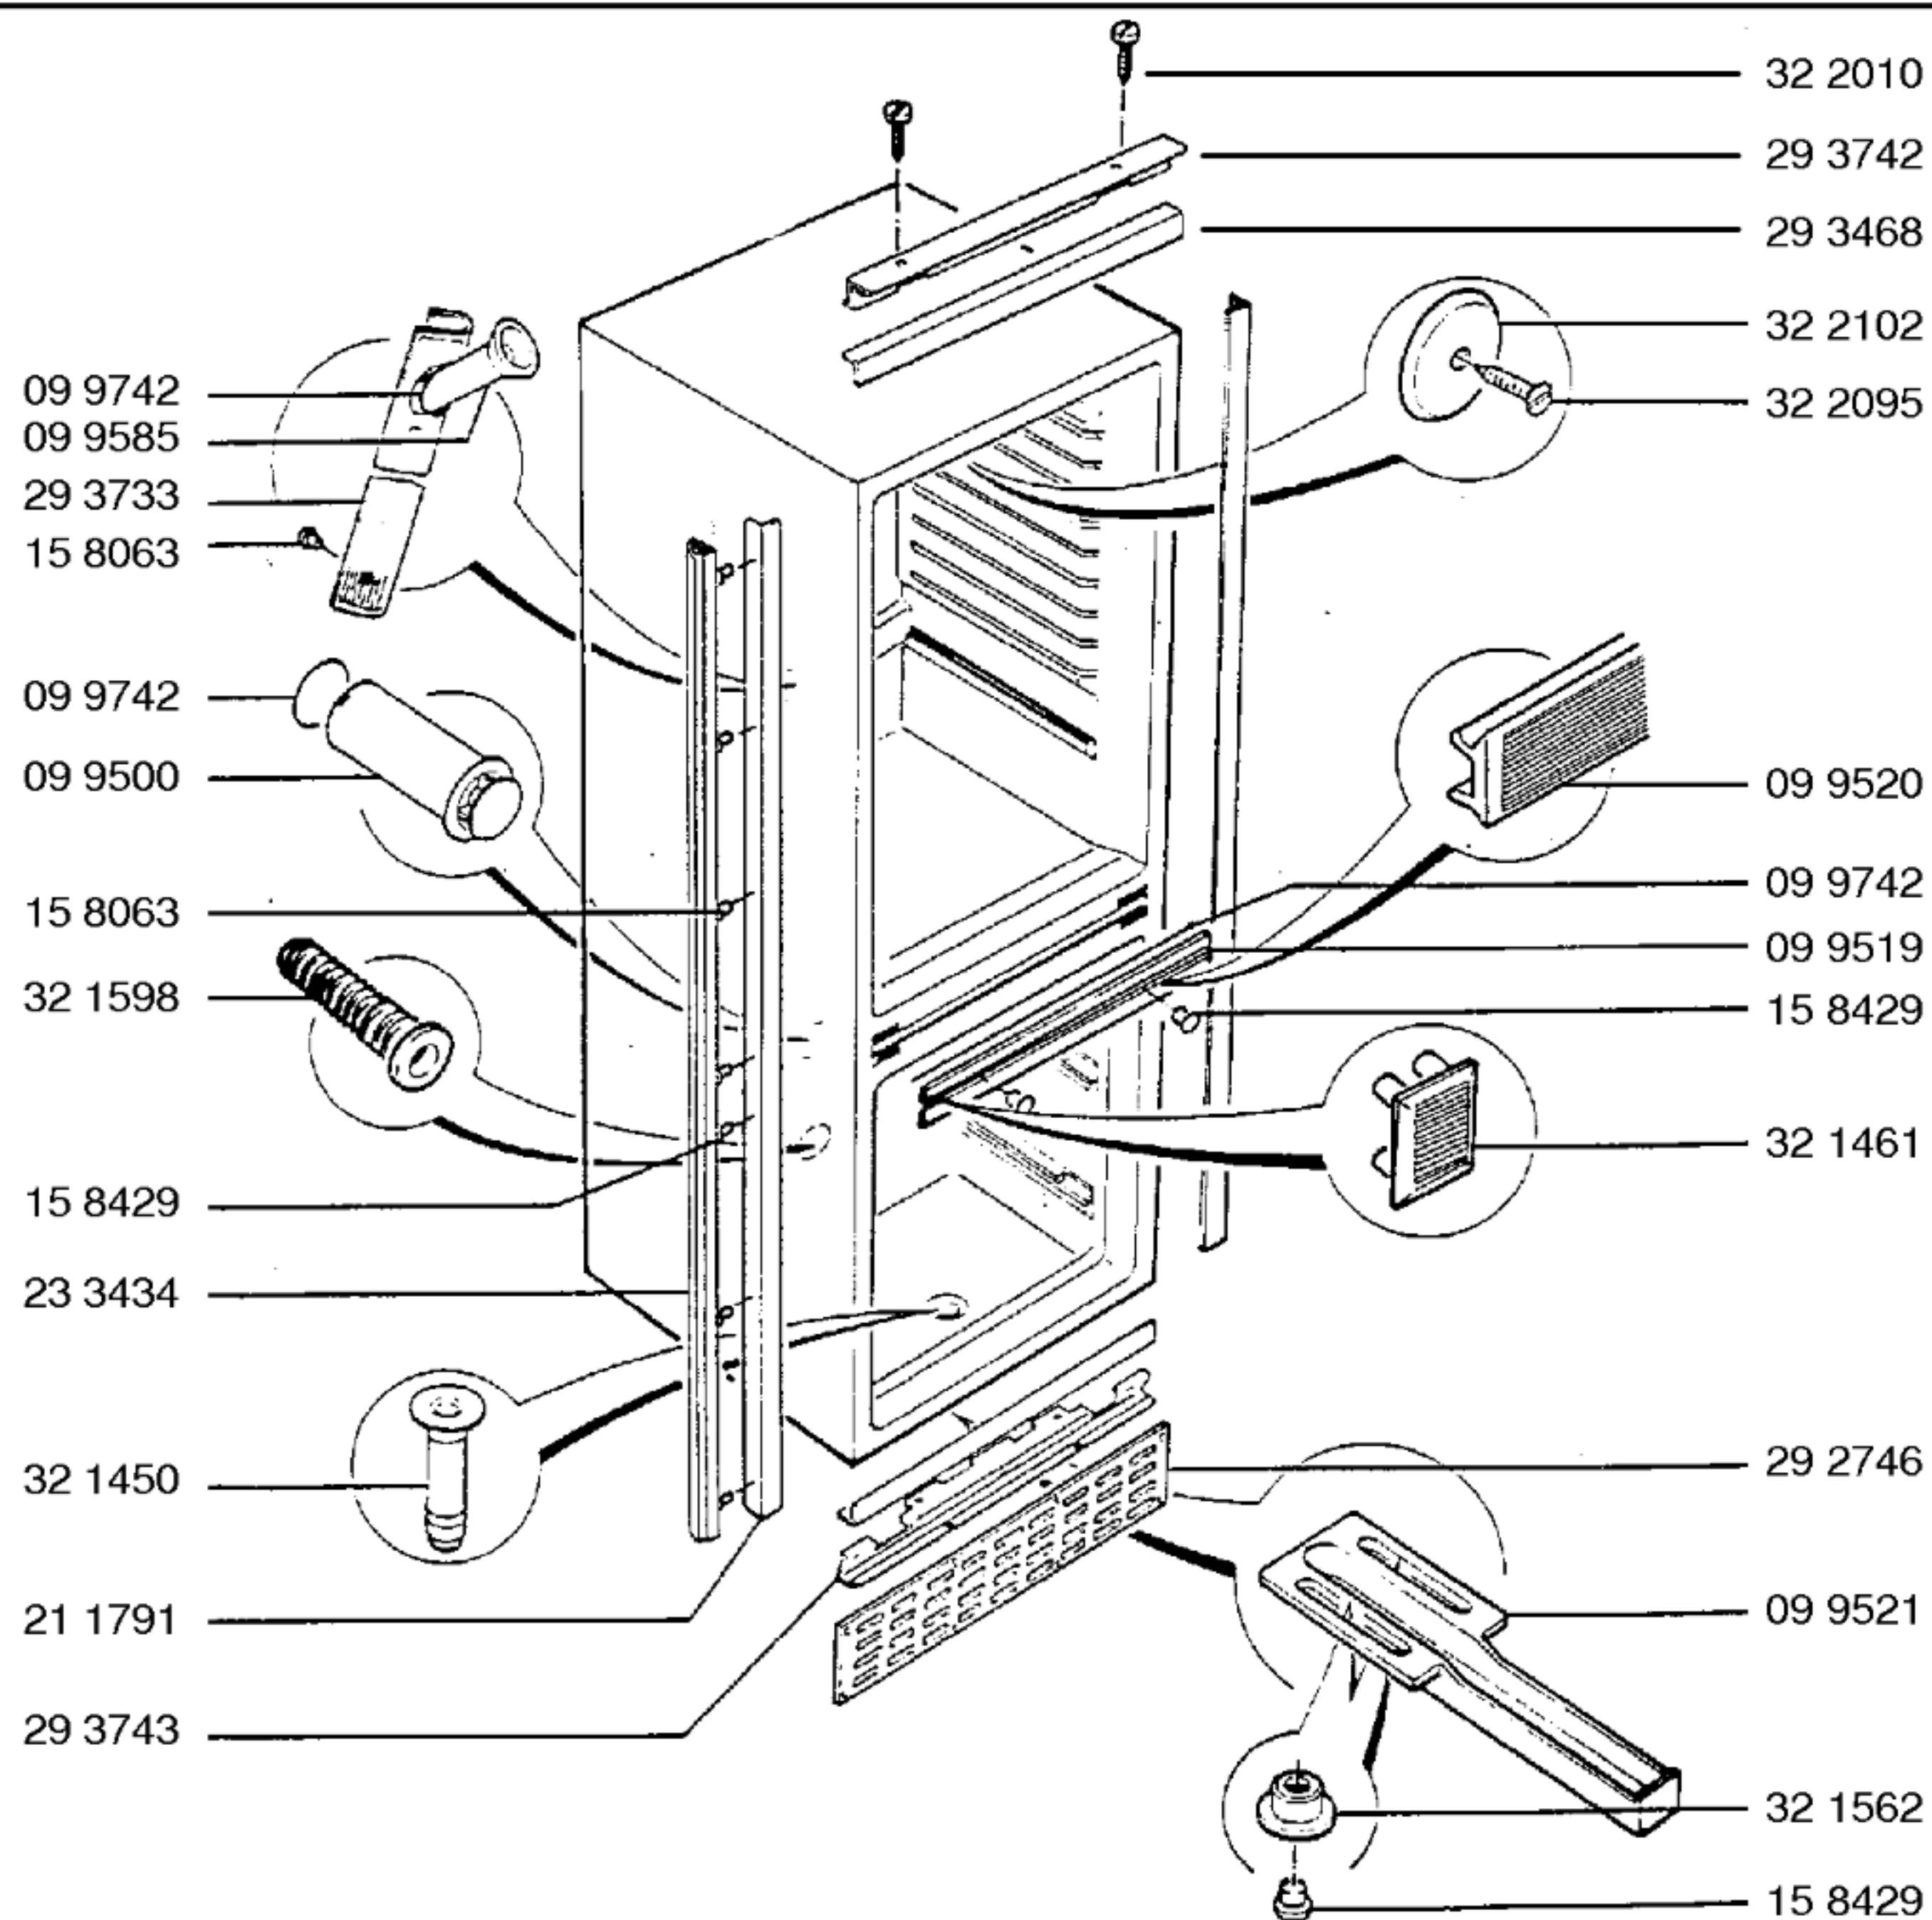

Gebrauchsanweisung
 52 0522
 FDV7601
 Montageanleitung
 Lüftungsgitter
 52 0524
 Montageanleitung
 Türmontage
 52 0525

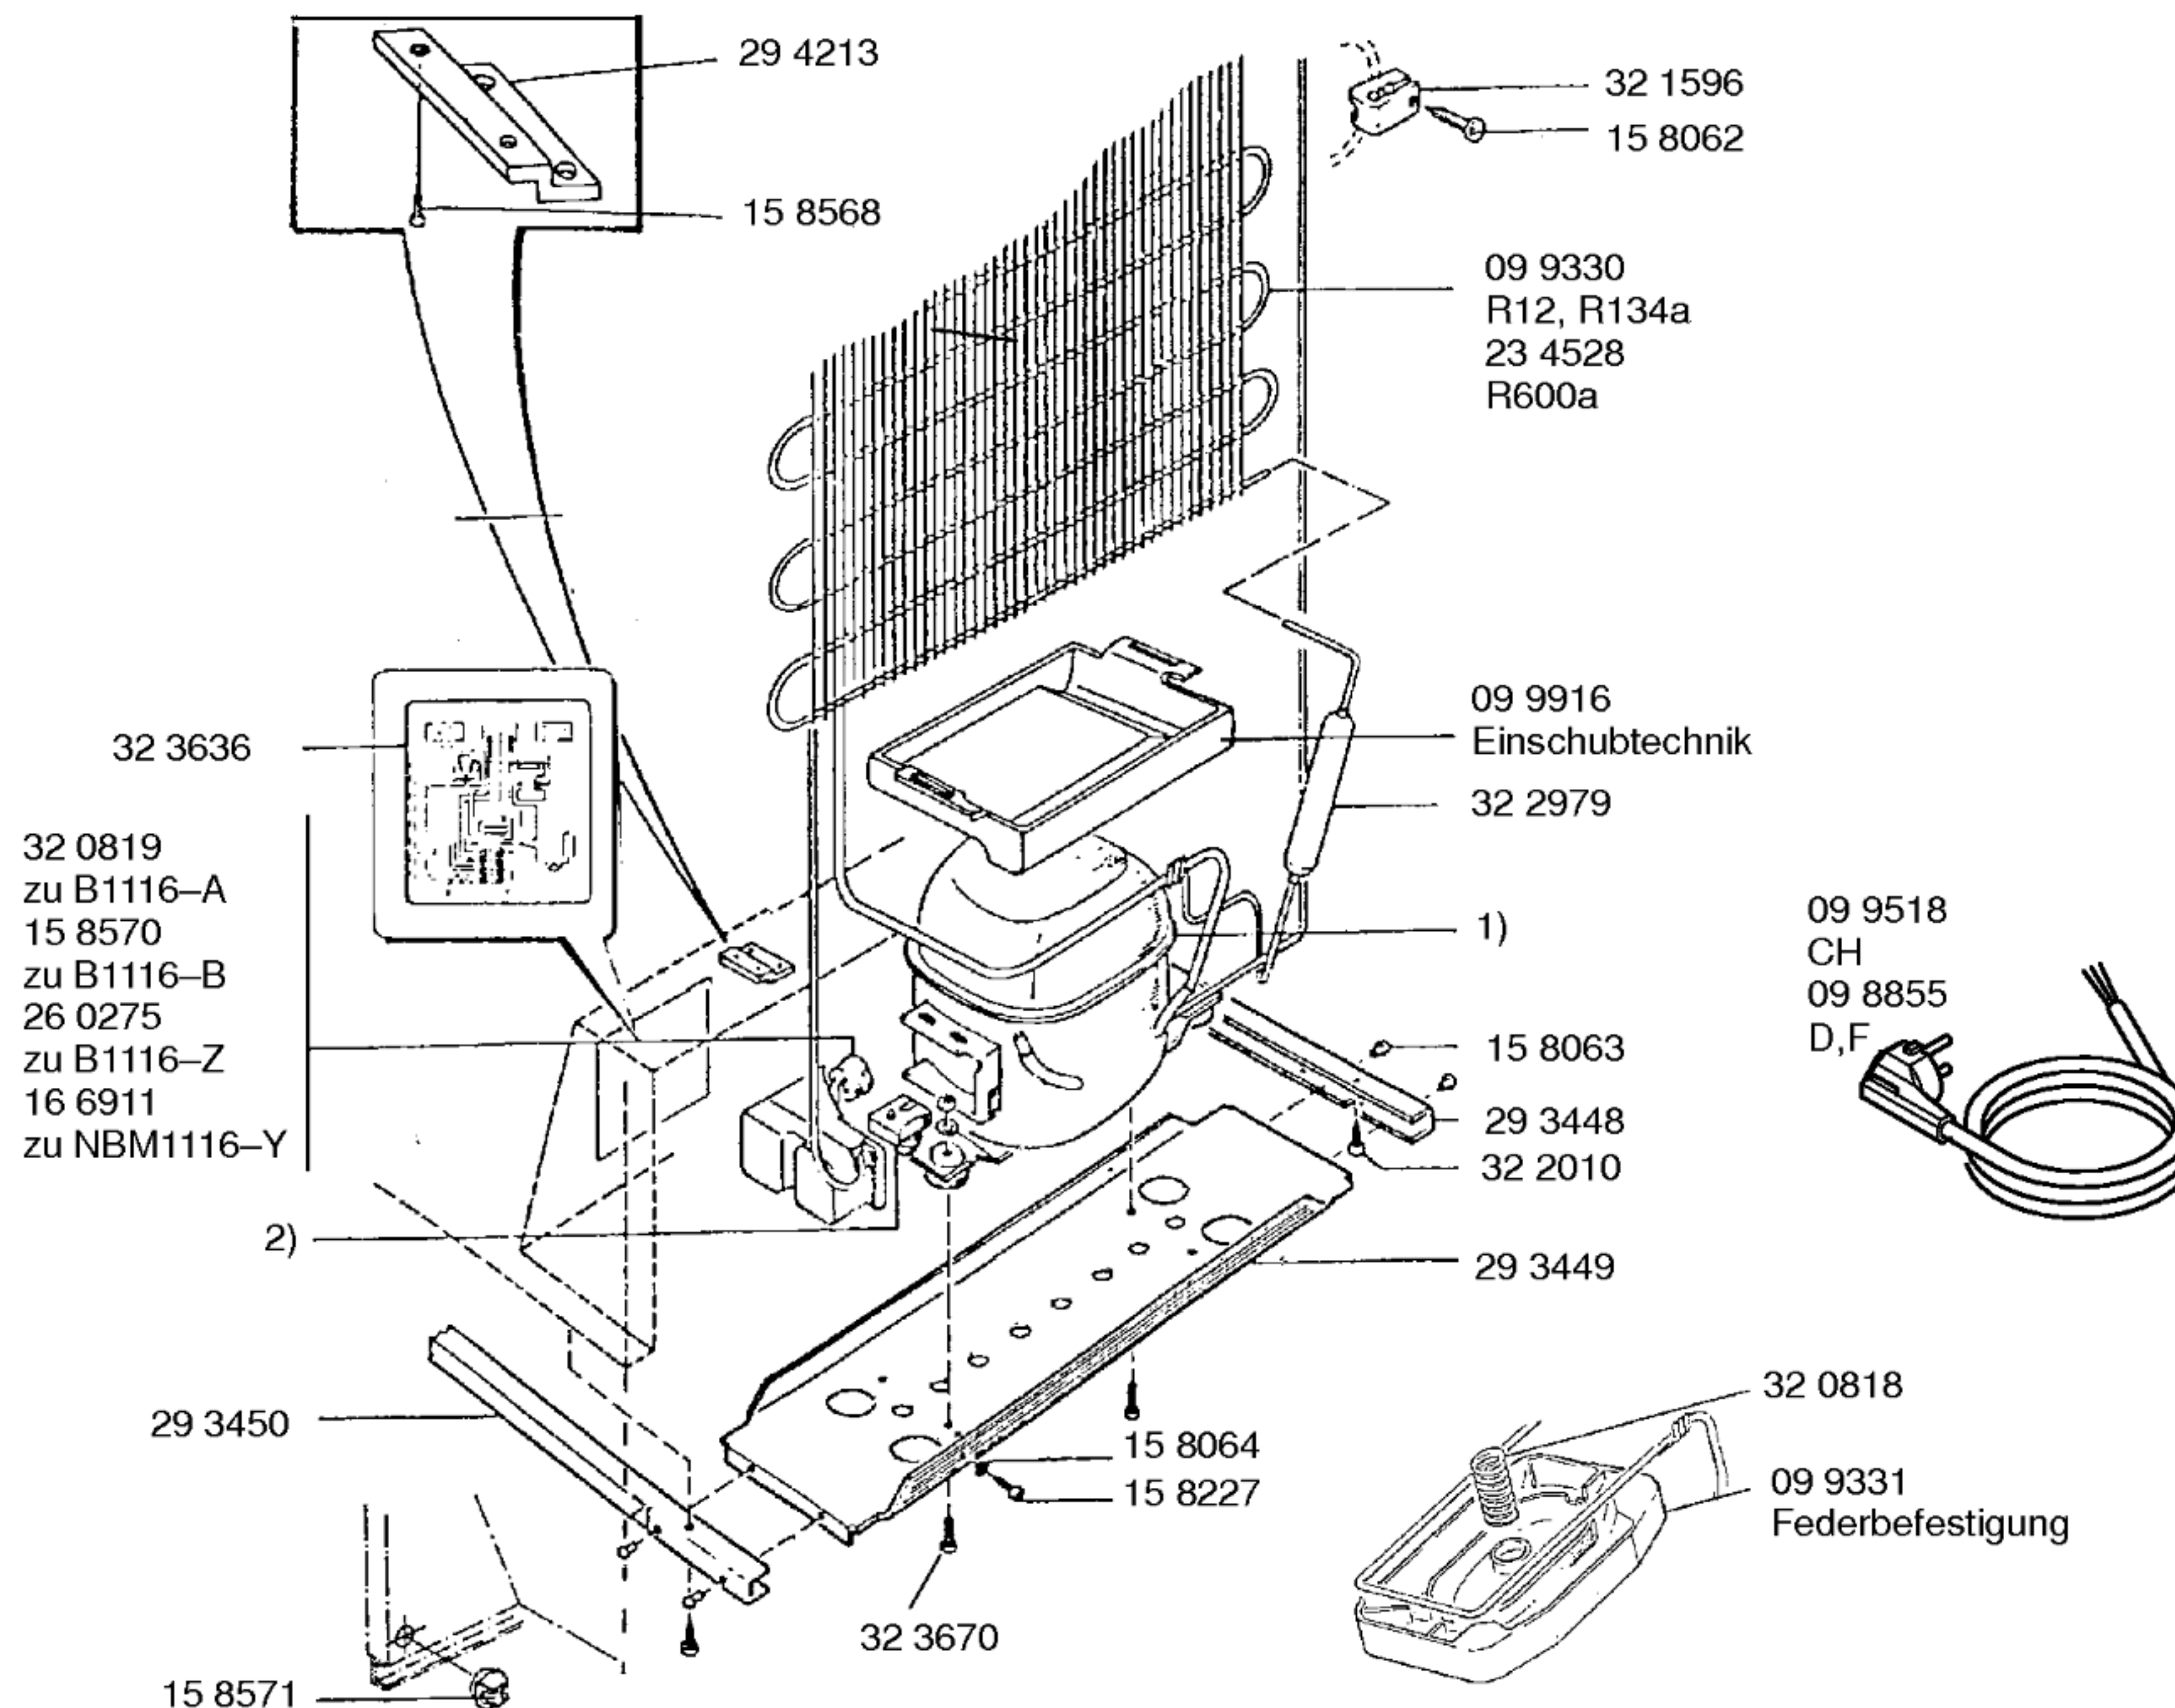

- 1) 14 1440
B1116-A
14 1466
B1116-B
26 0274
B1116-Z
14 1685
B1116-Y
- 2) 32 1462
zu B1116-A
32 3915
zu B1116-B
32 1462
zu B1116-Z
16 6915
zu B1116-Y

