

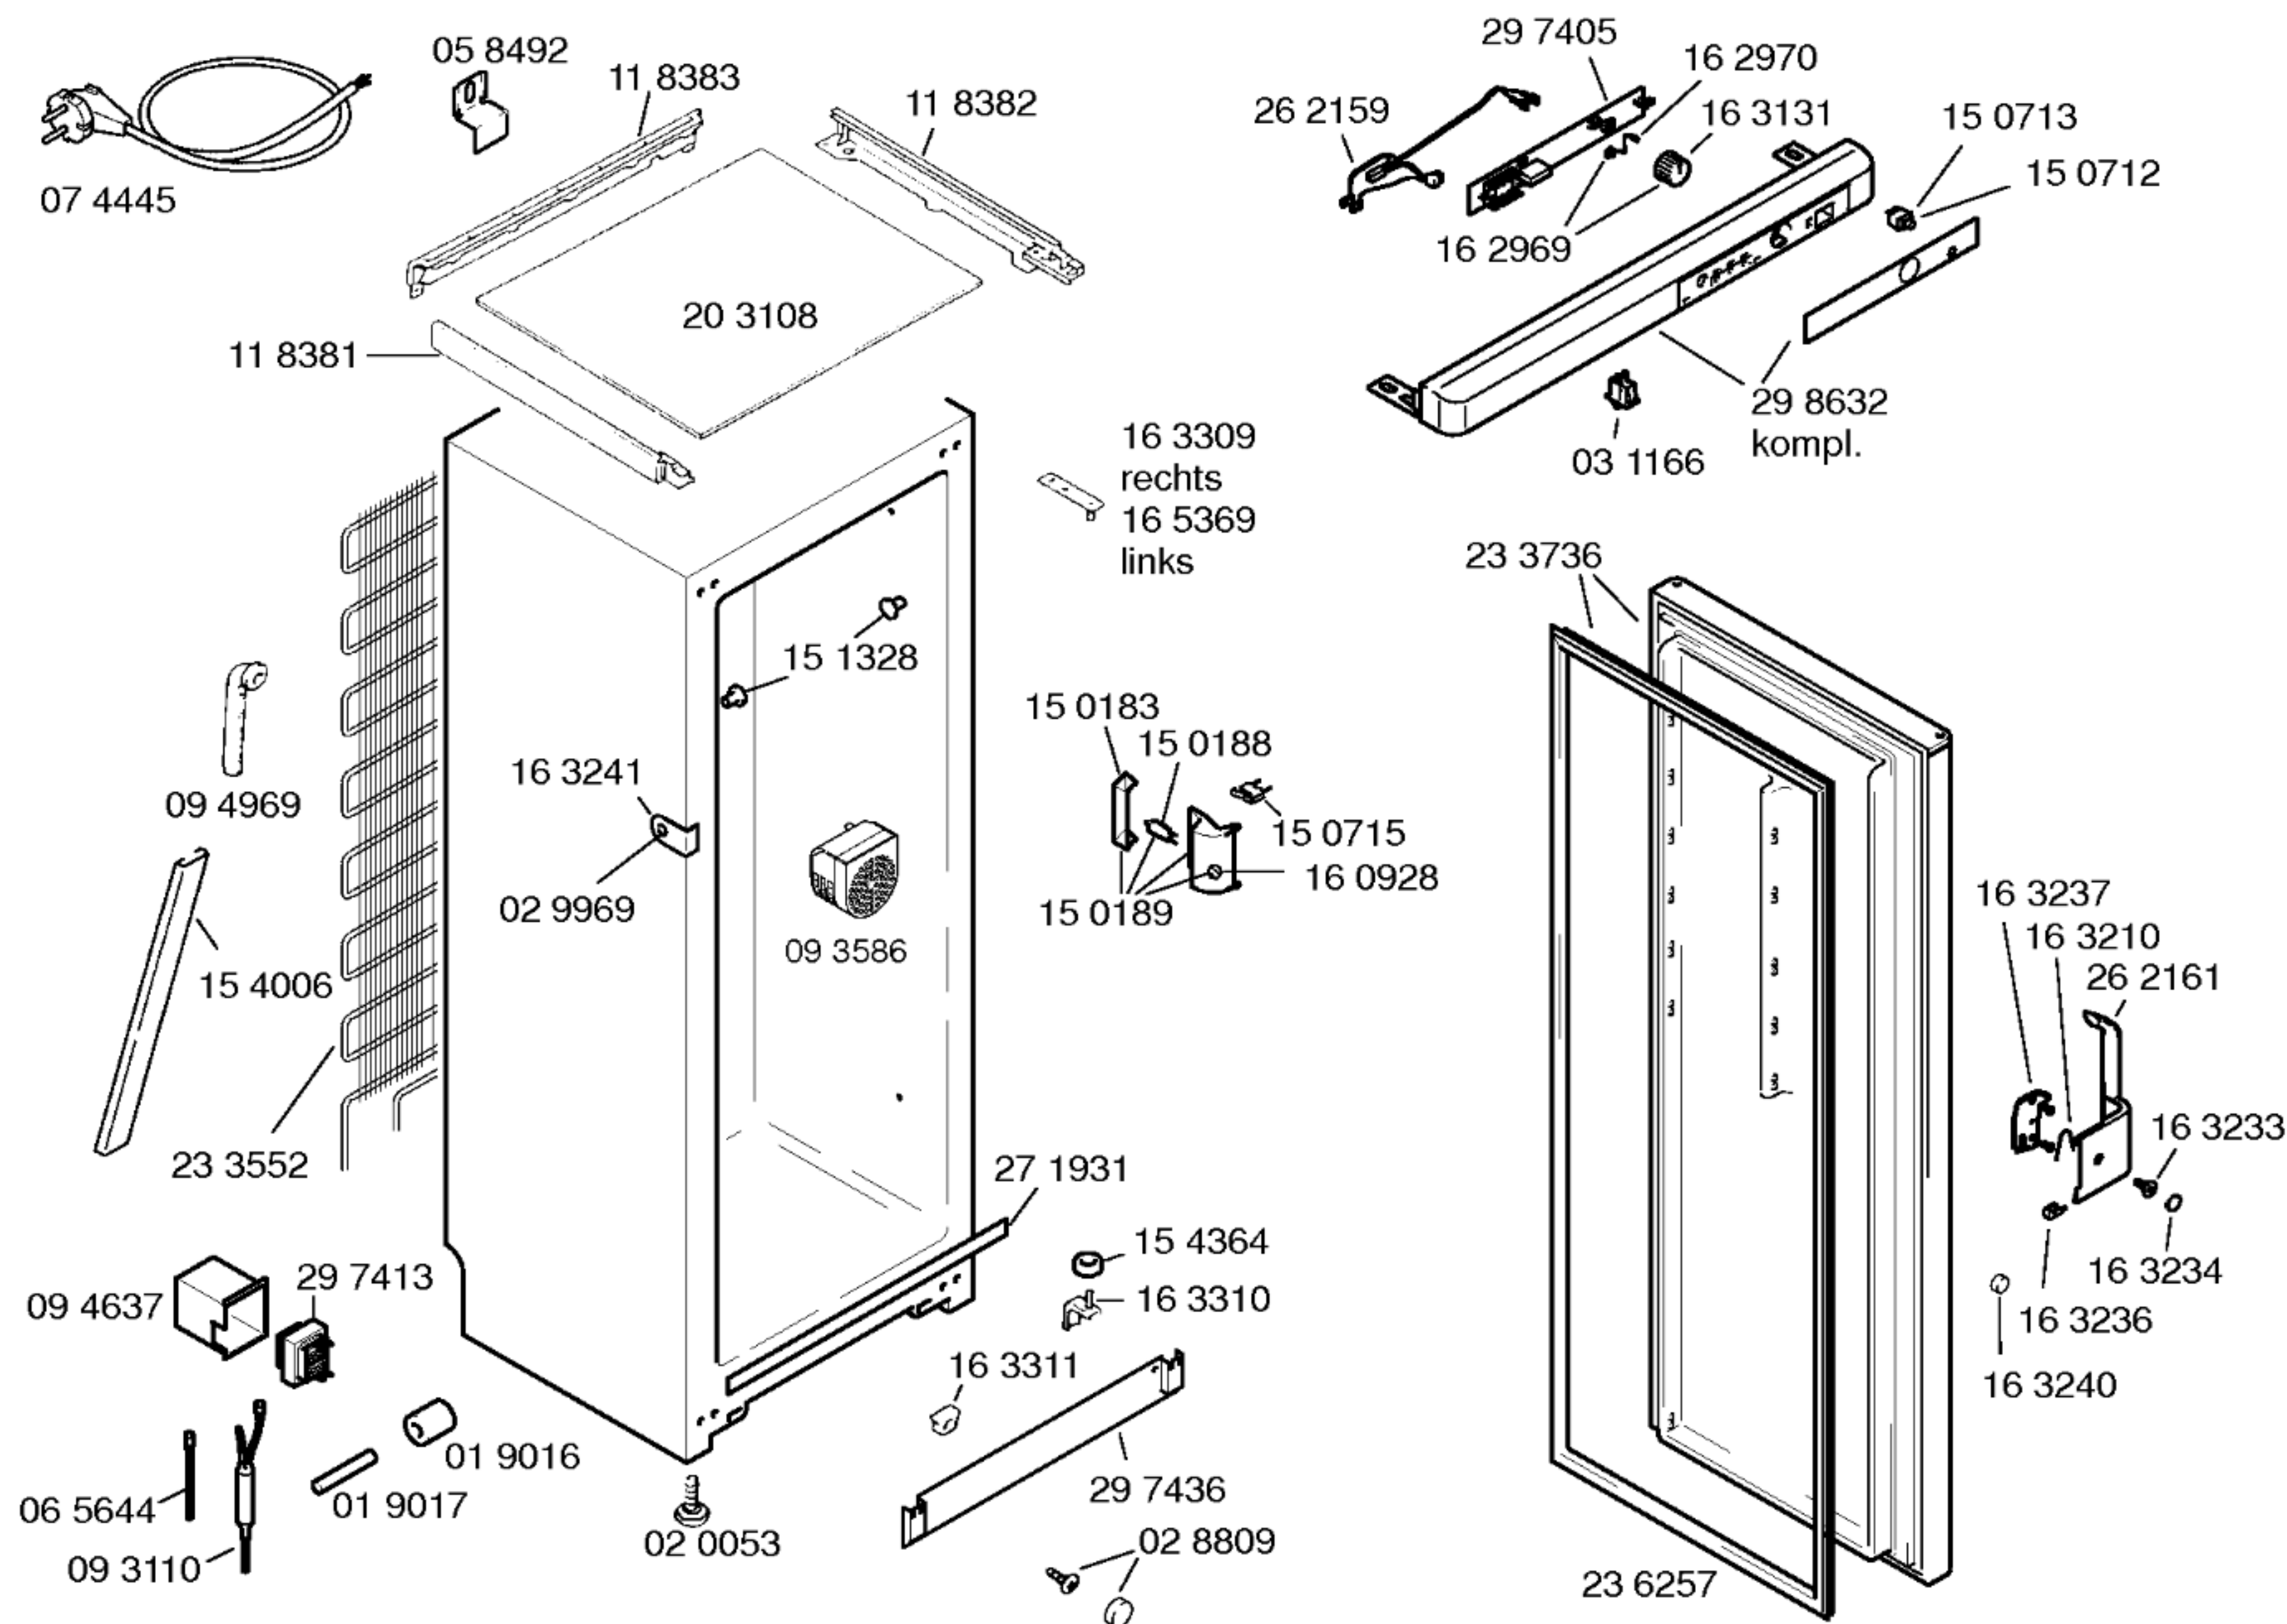


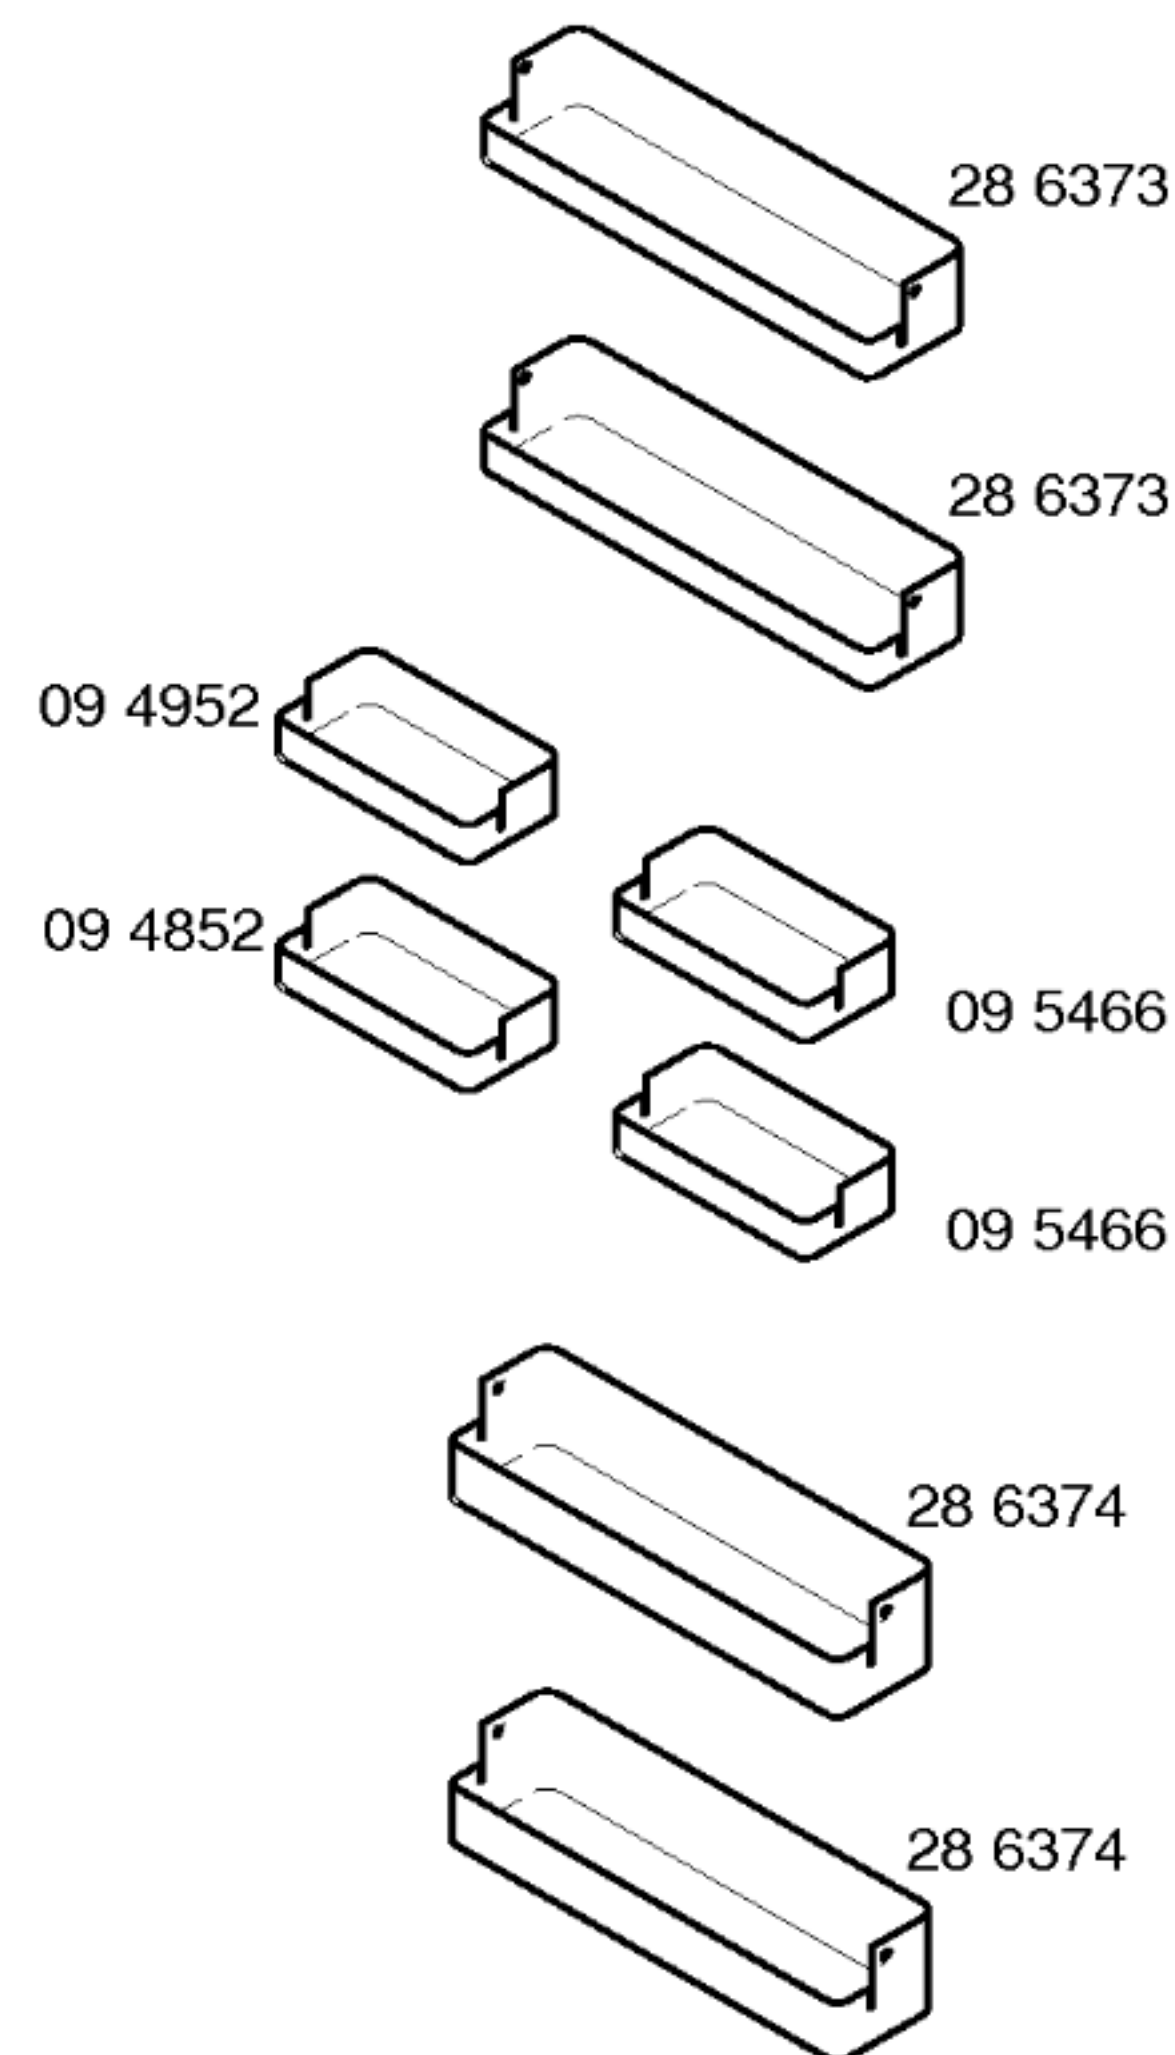


Gebrauchsanweisung
51 9987

Verdunsterschale
21 2148

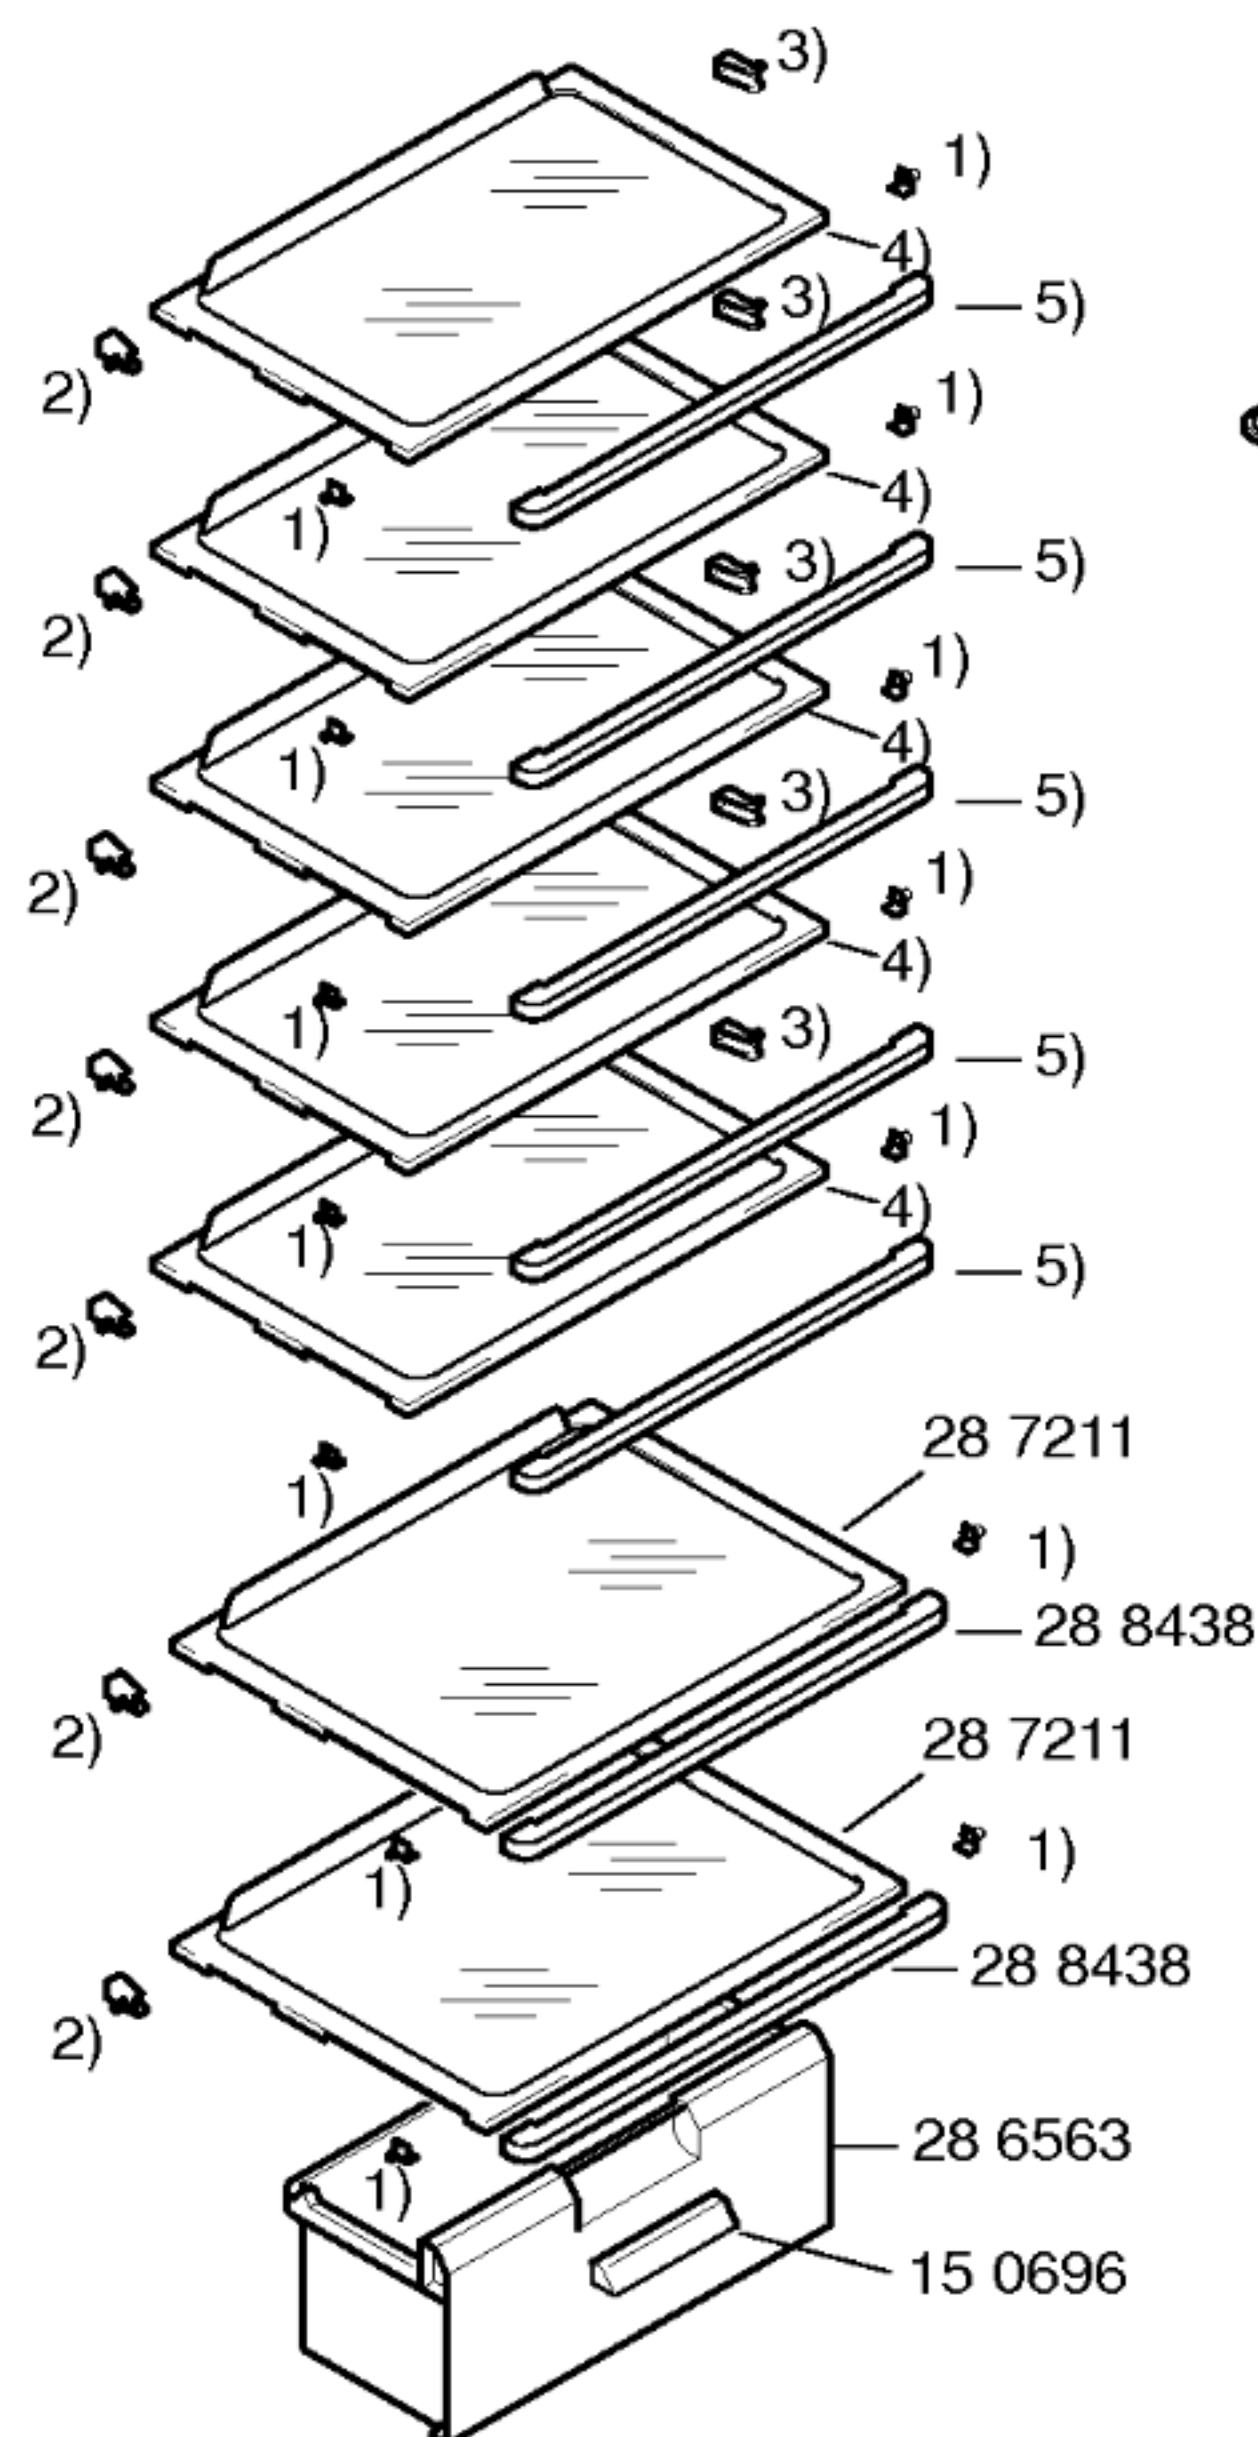

- 1) 15 0692
- 2) 15 0693
- 3) 15 0694
- 4) 28 7656
- 5) 28 7657

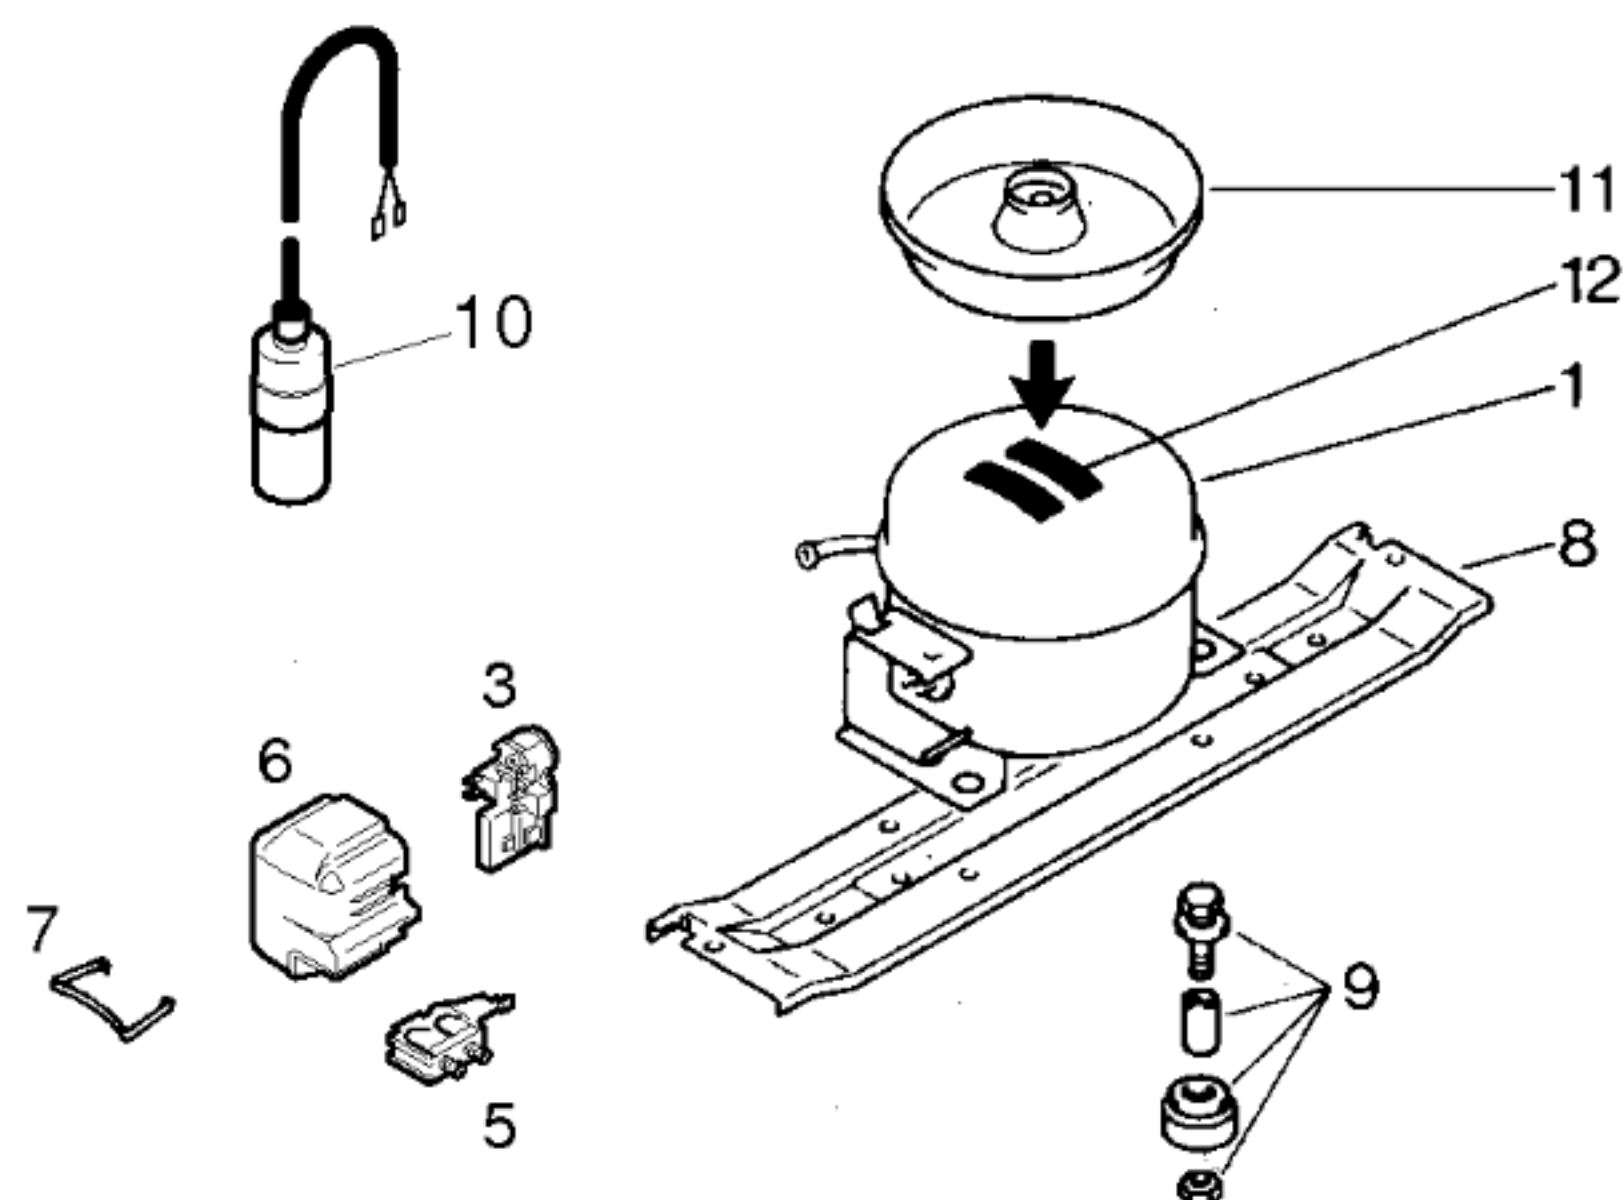

	V01	V02	
Pos.	Danfoss	Danfoss	
	TLES 6 K	TLES 5 K	
1	14 1306	14 1633	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7			
8	29 7410	29 7410	
9	15 3364	15 3364	
10	15 2222	15 2222	
11	20 9471	20 9471	
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Danfoss	
Typ/Type		TLES 6 K	TLES 5 K	
Förderleistung/Delivery/Débit		l/h	1026	914
Anlaufstrom/Starting current/Cour de démarrage		A	4,0	2,9
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	18,9	25,7
		Hi/aux Ω	15,3	15,7
Temp.-Regler/Thermostat				
Typ/Type				
Reglerstellung/Position				
Schaltwerte/Switching values/Valeurs de commutation		„ein“ °C		
		„aus“		
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R600a	g	* * *
Anschlußwert/Conn.load/Puiss. connectée		W	50	59
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild