 


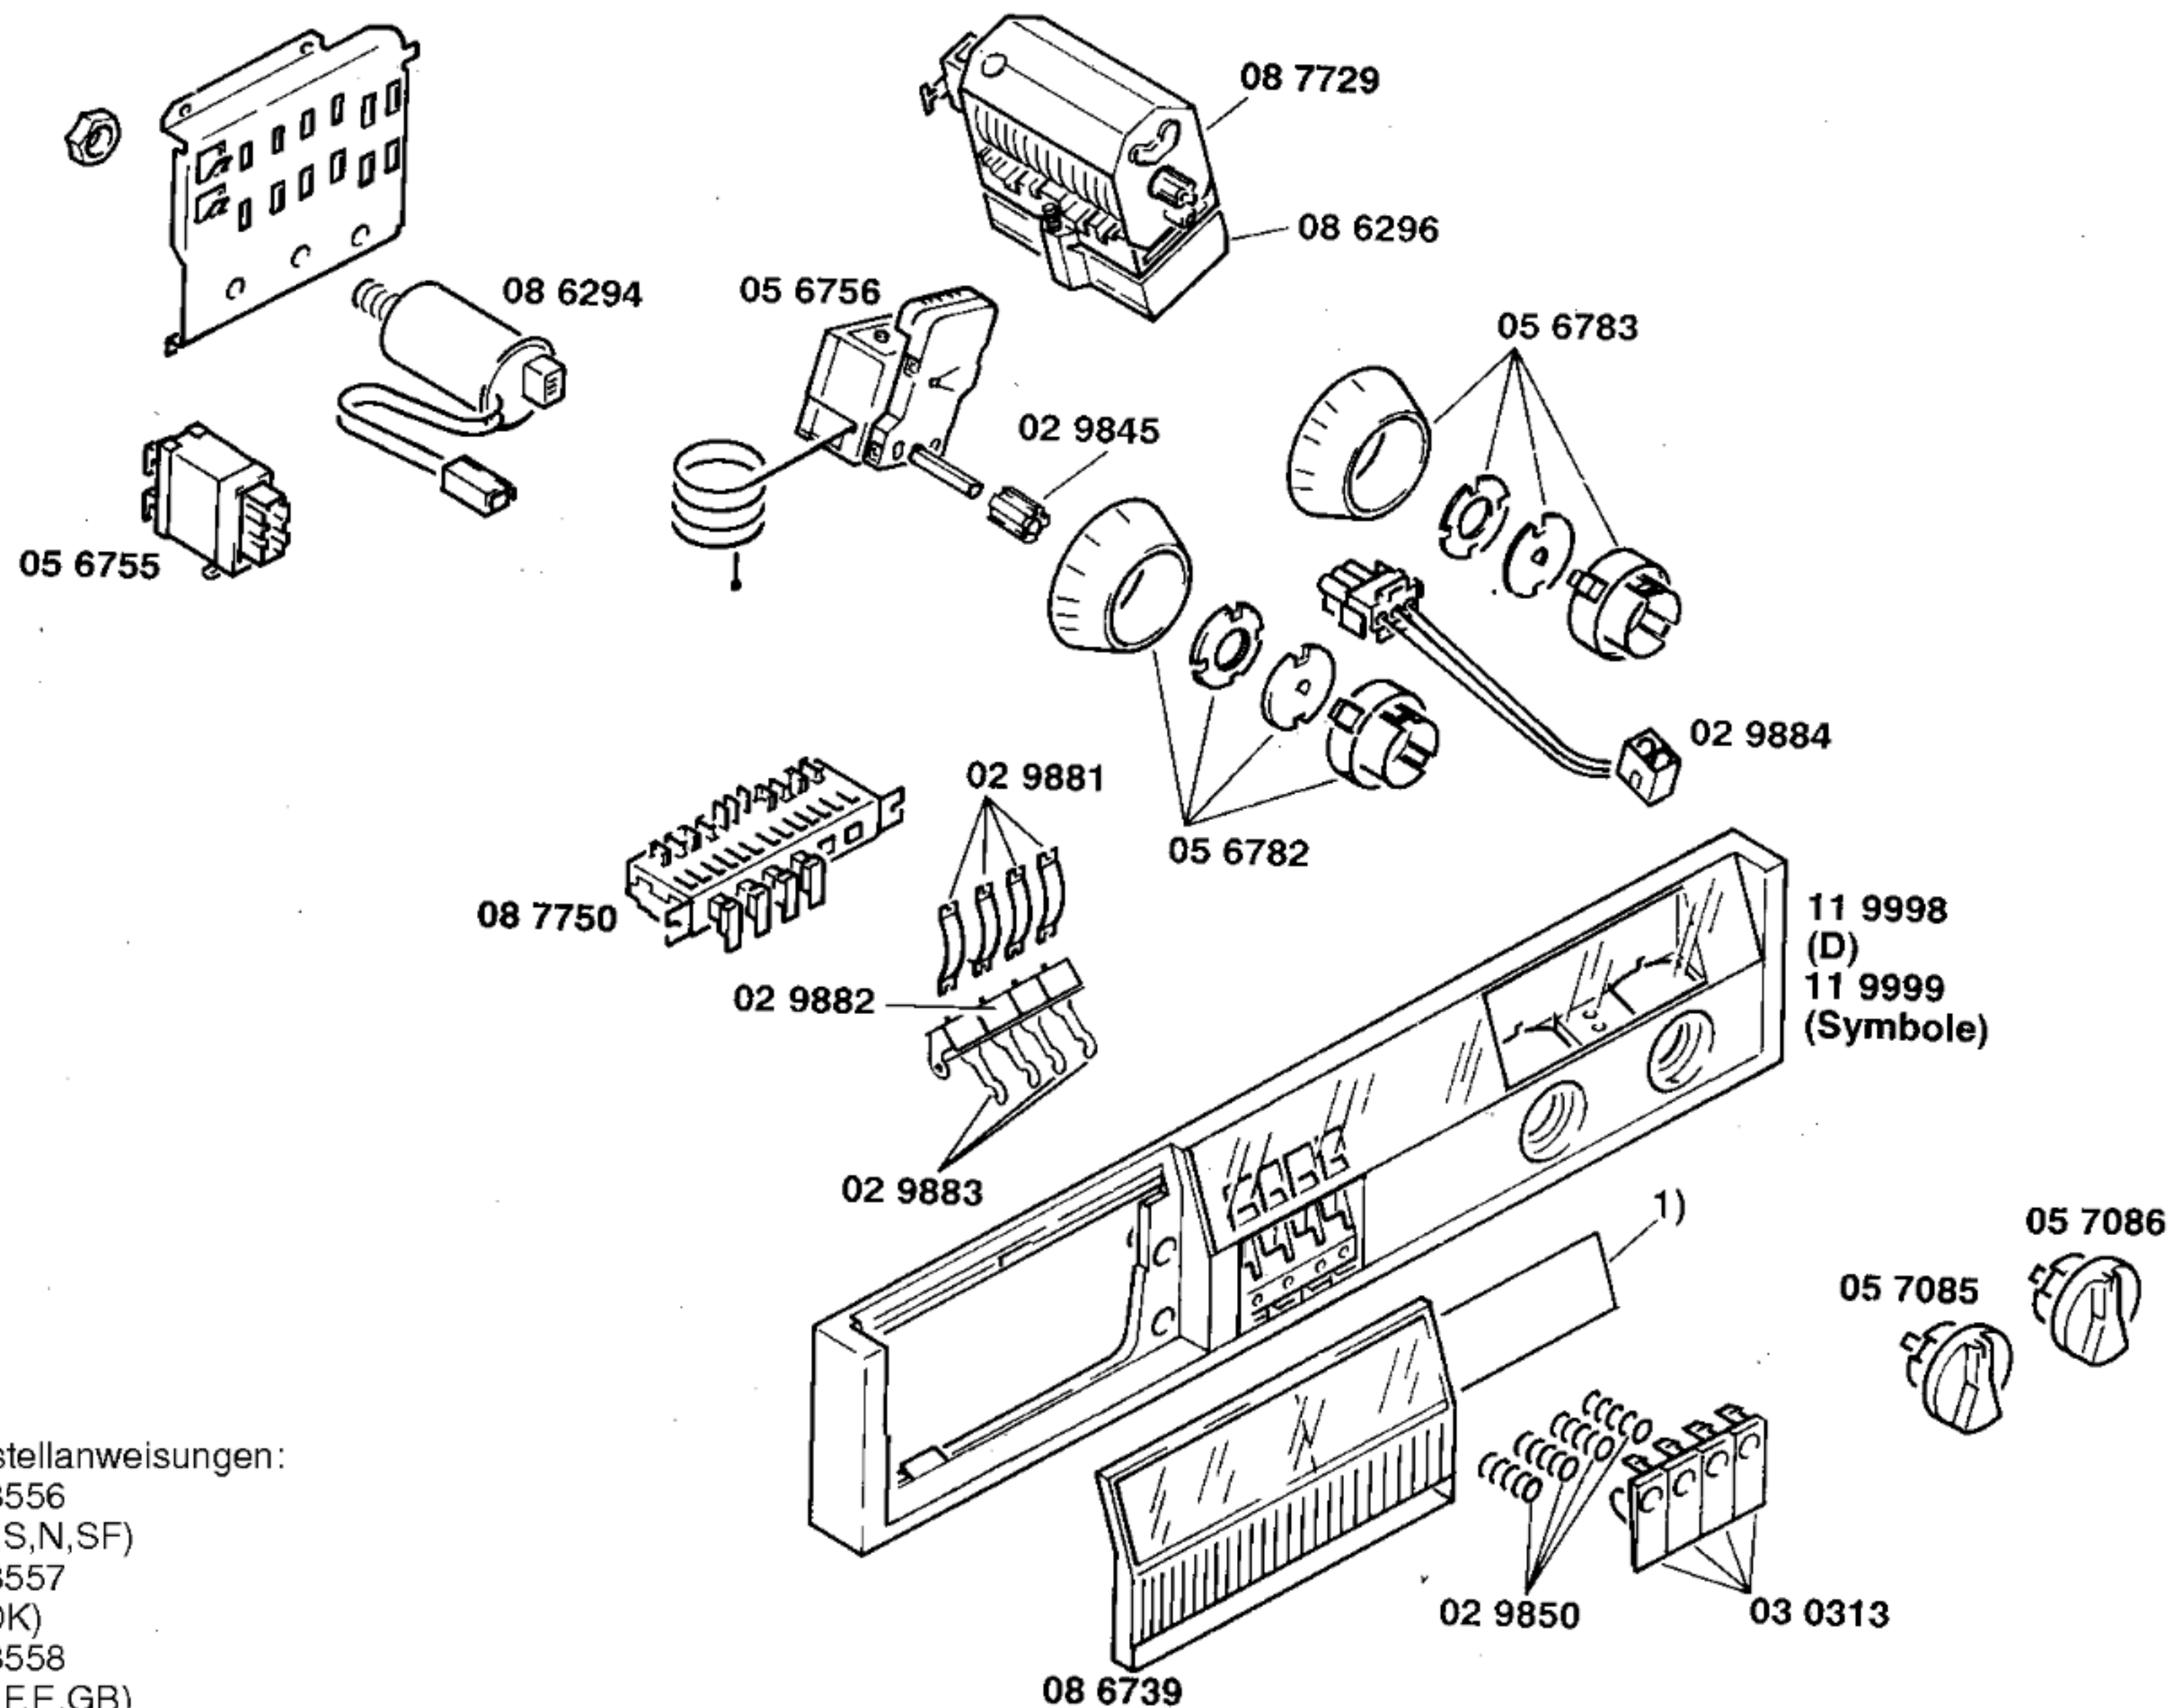

Aufstellanweisungen:

51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

Ident – Nummern – Konstante
3740

1) 08 6336
(D)
08 6337
(NL)
08 6338
(N)
08 6339
(SF)
08 6340
(S)
08 6341
(E)
08 6342
(F)
08 6343
(DK)
08 6344
(I)
08 6686
(TR,YU,E,GB)
08 6690
(GB)

Gebrauchsanweisungen:

51 3566
(D,I,S,N,SF)
51 3567
(S,DK)
51 3568
(NL,F,E,GB)

Programmtabellen:

51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)


**BOSCH**

WFK4010-WFK4010/04-D1
WFK4010-WFK4010DS/04-DS1
WFK4010-WFK4010FG/04-FG1
WFK4010-WFK4010SI/04-SI1

WFK4010-WFK4010DK/03-DK1

WASCHGERÄTE
Waschvollautomaten

 Ident - Nummern - Konstante
3740

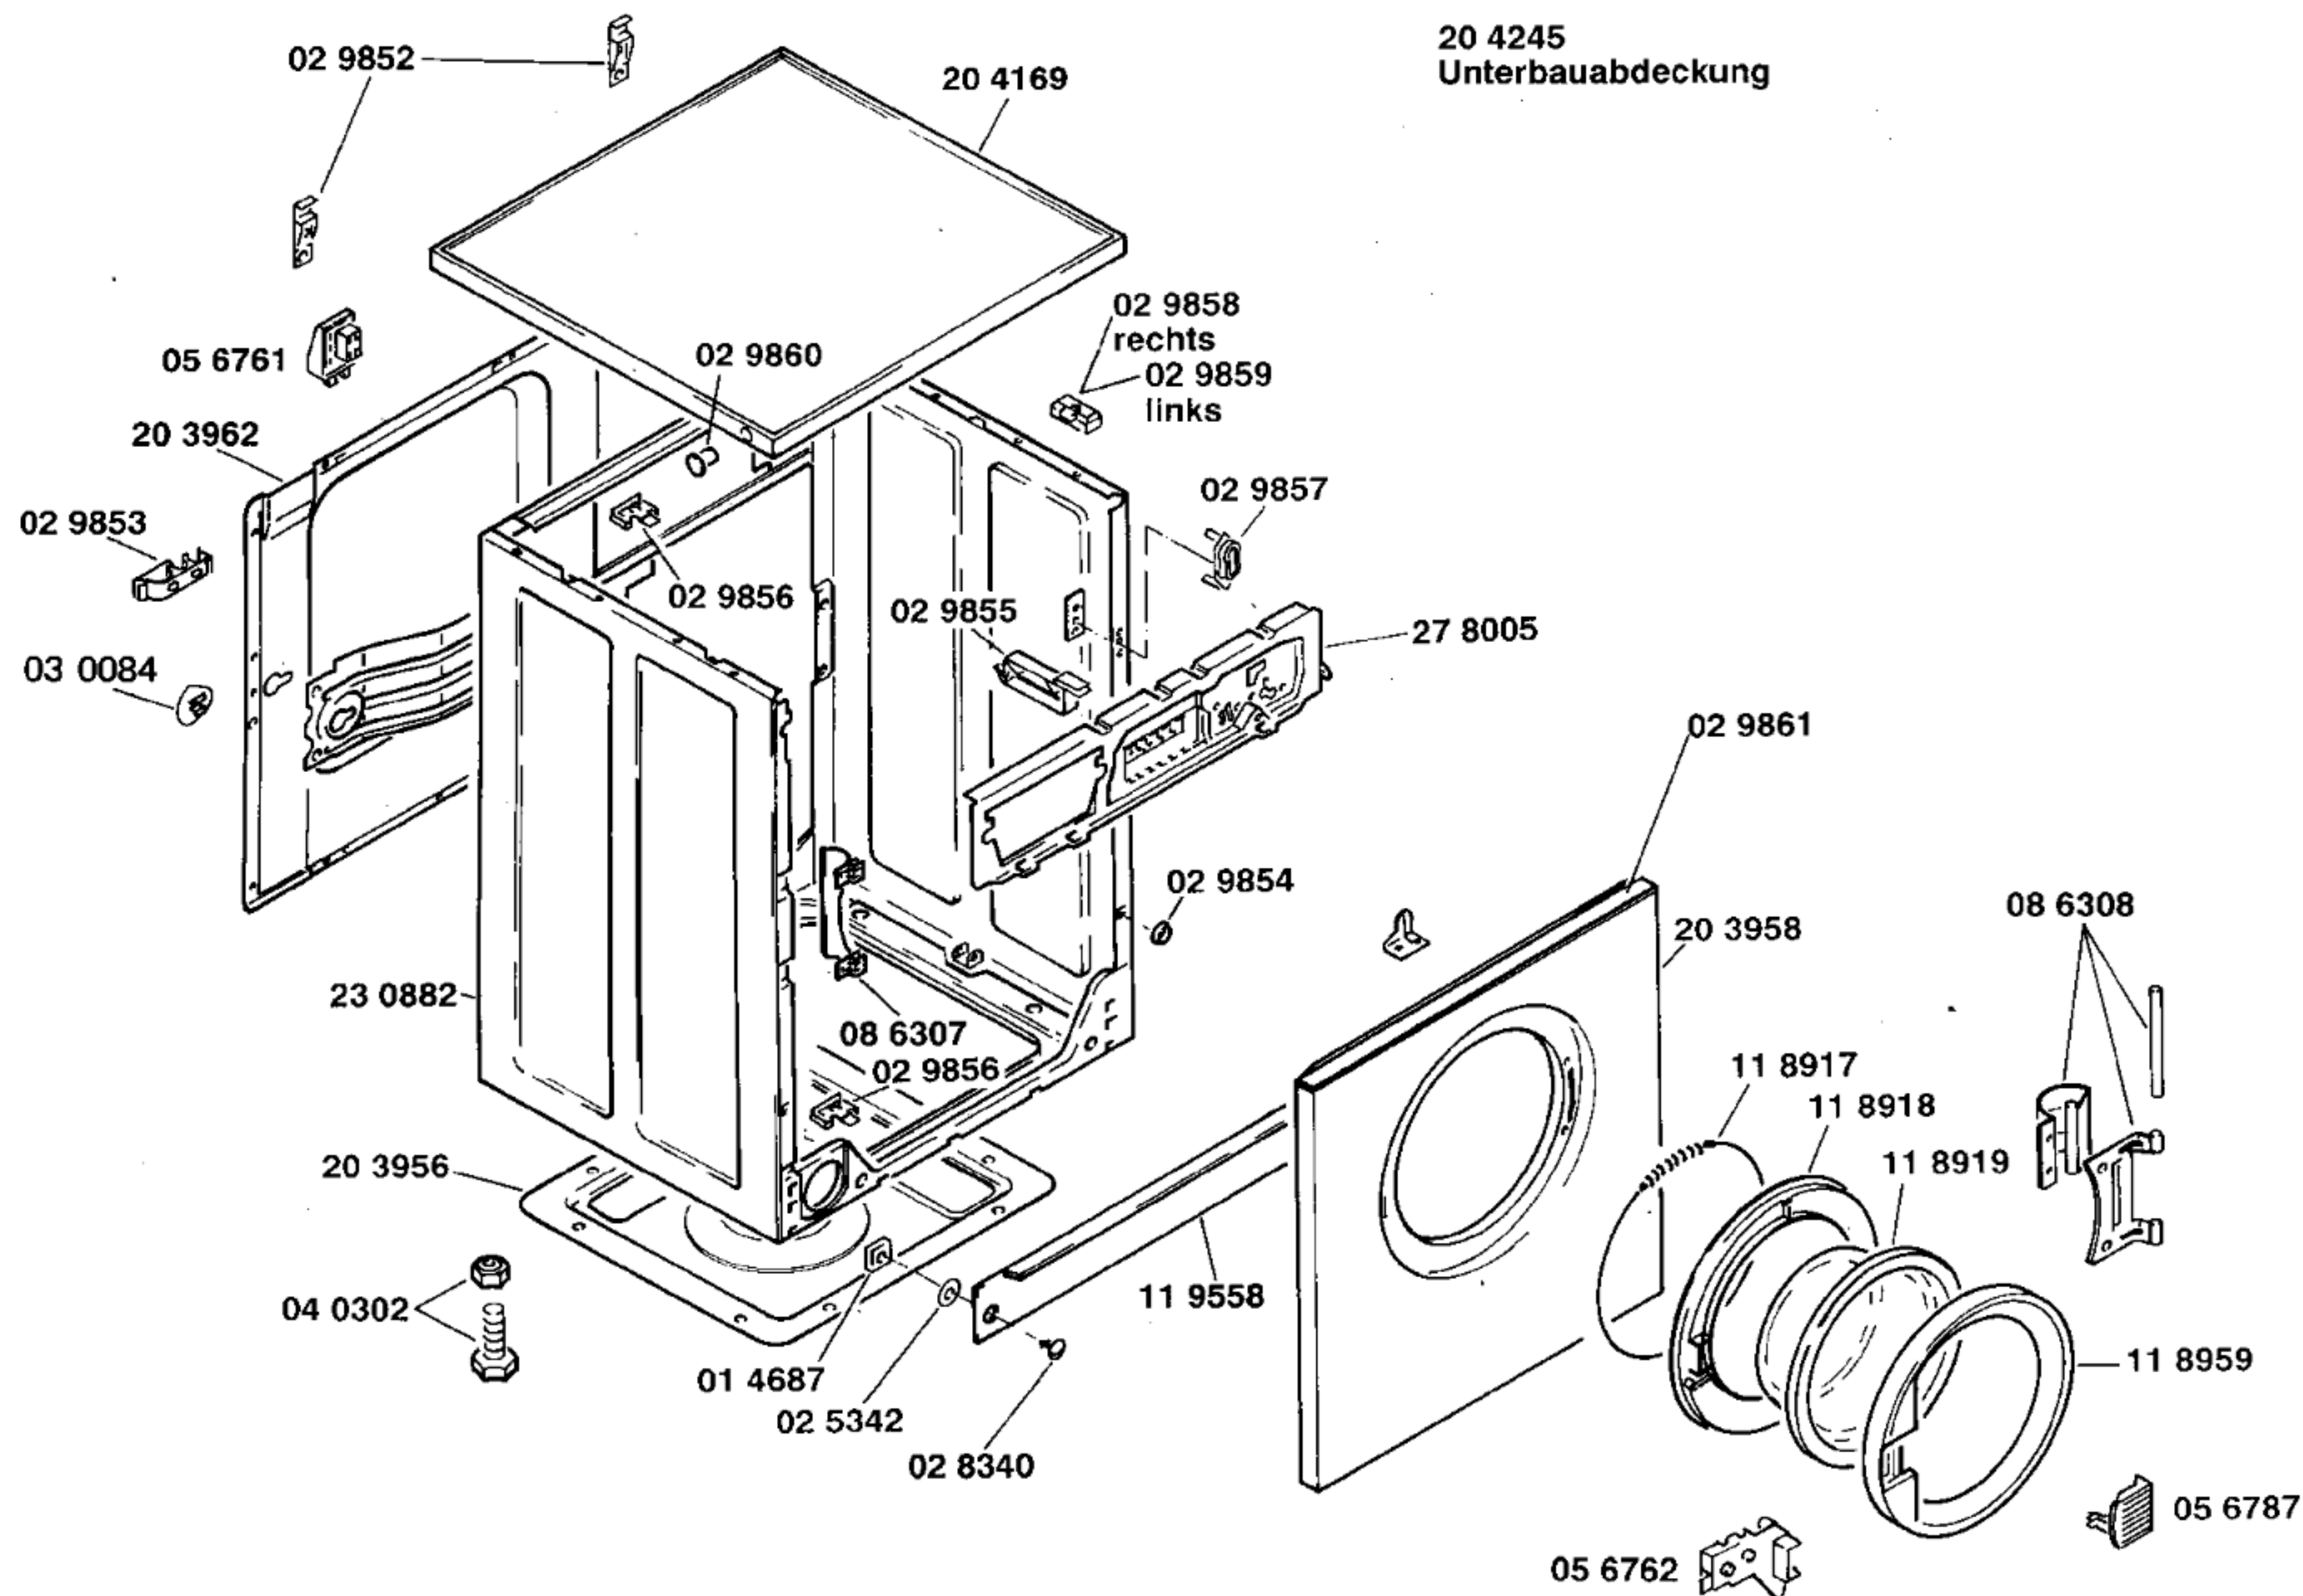

**BOSCH**

WFK4010-WFK4010/04-D1
 WFK4010-WFK4010DS/04-DS1
 WFK4010-WFK4010FG/04-FG1
 WFK4010-WFK4010SI/04-SI1

WFK4010-WFK4010DK/03-DK1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

1) 27 1717
 15 5272
 Triac-Motorleistung

