

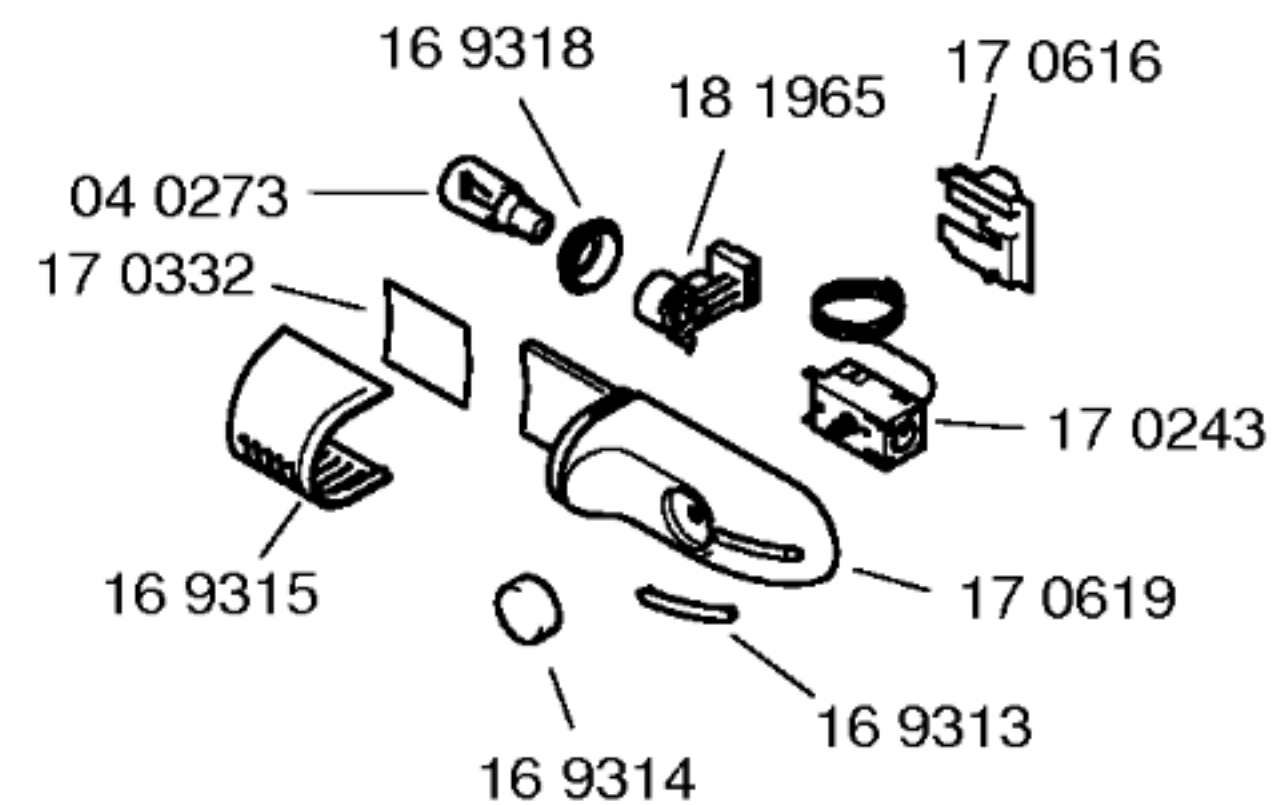
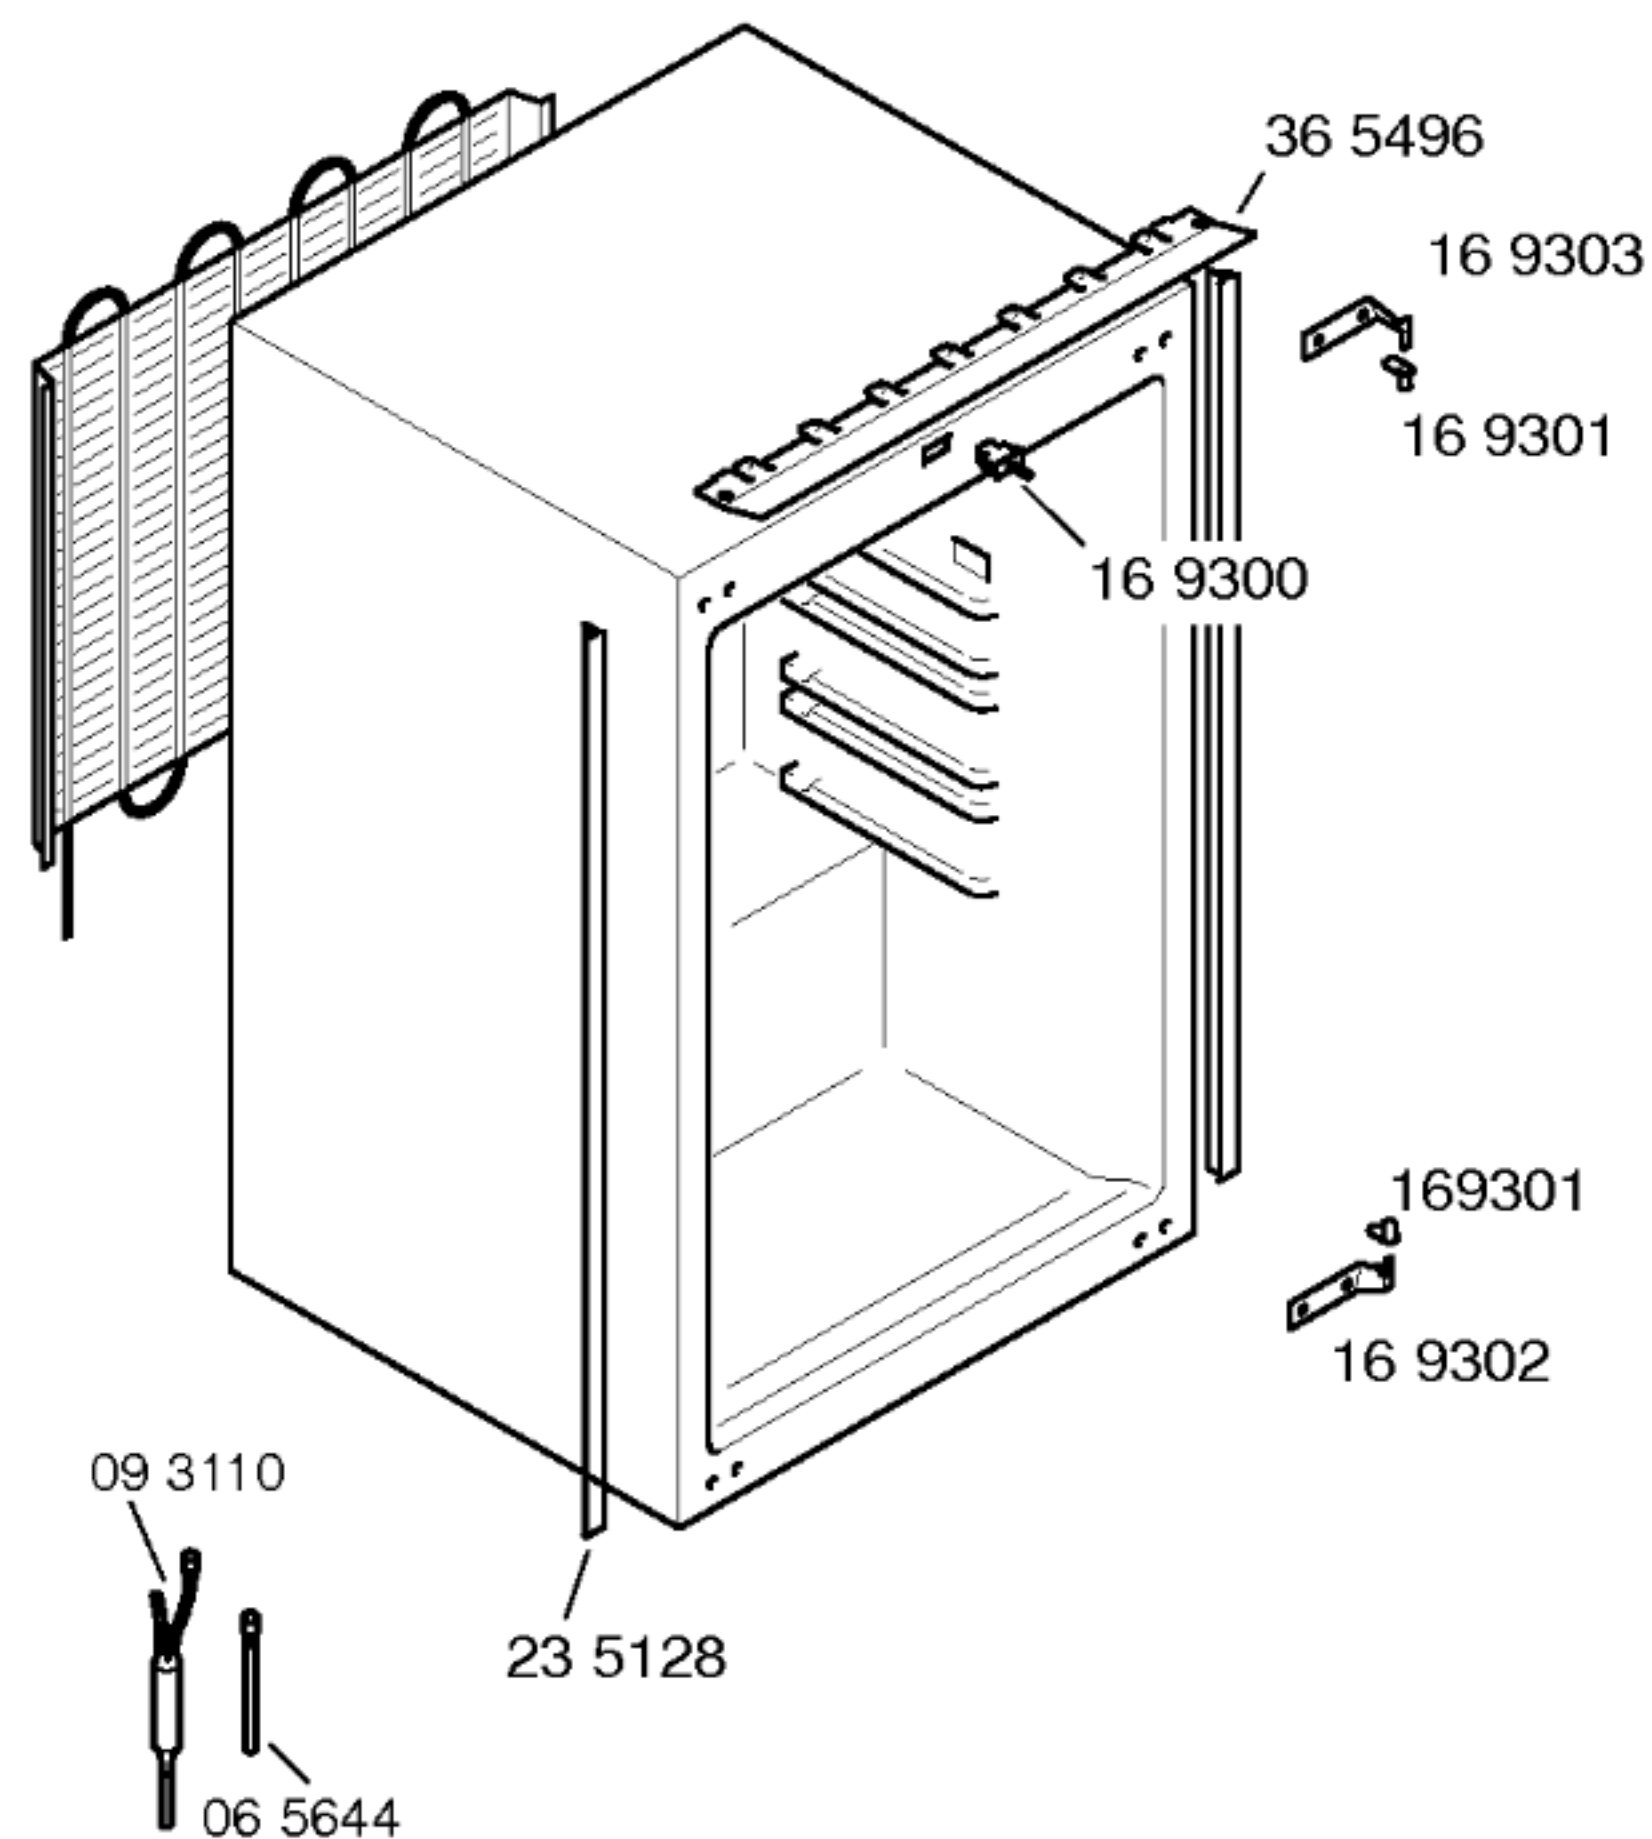
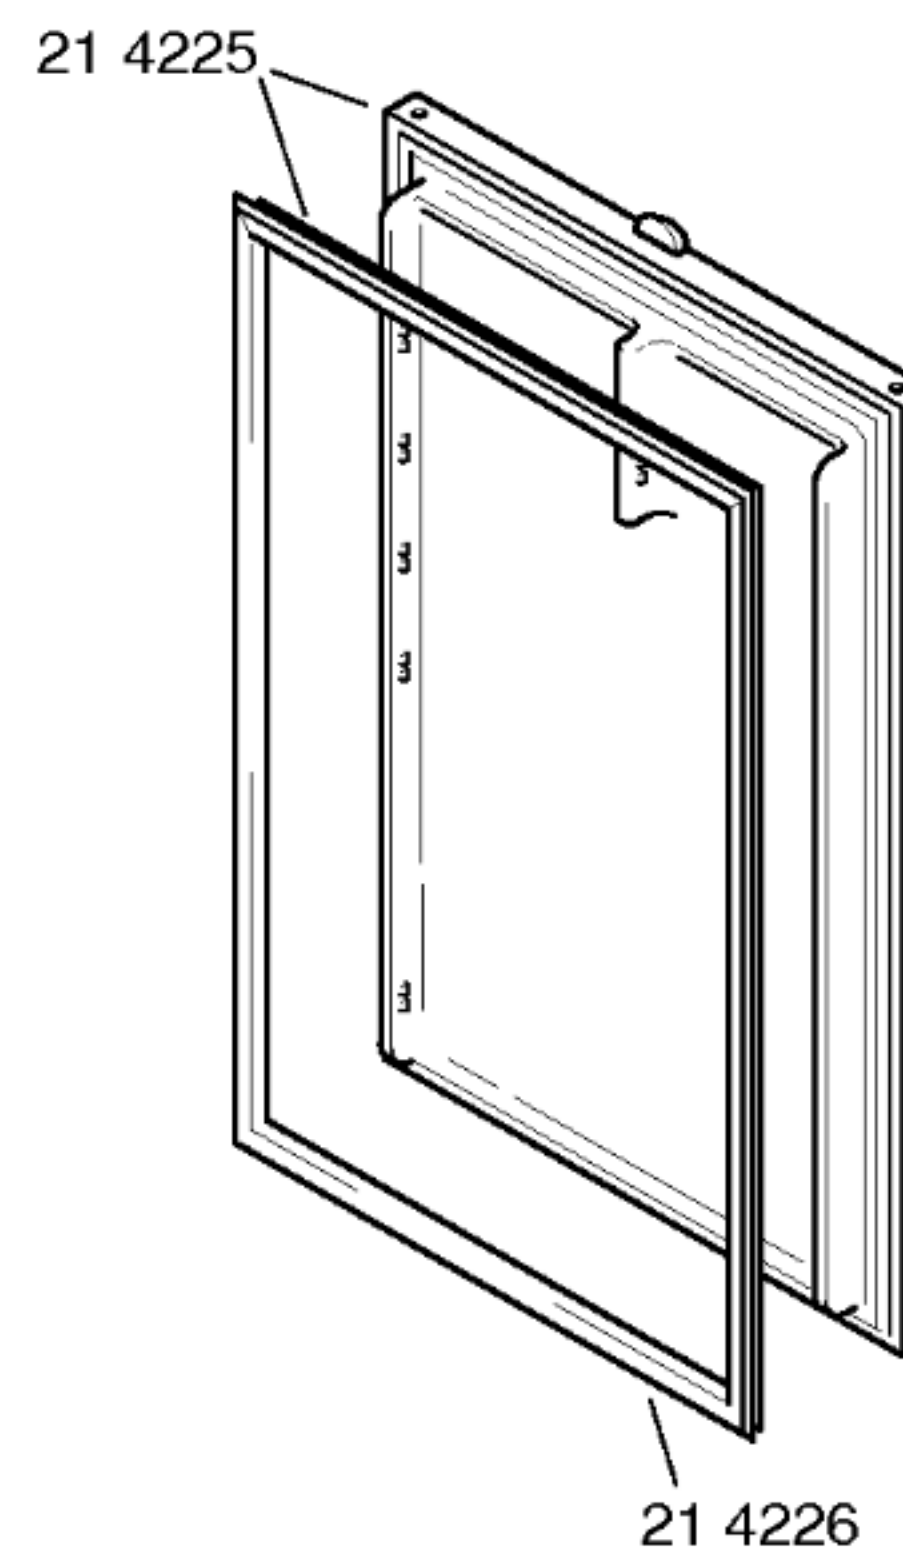
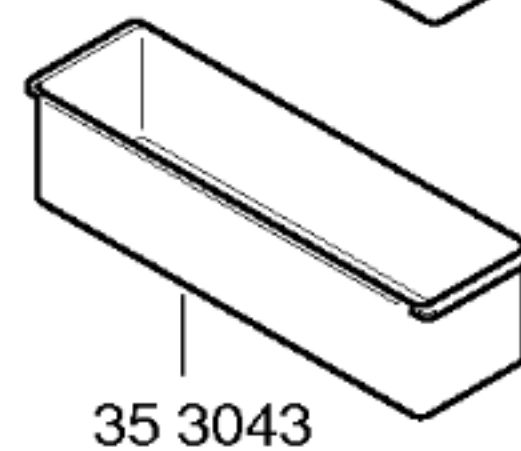
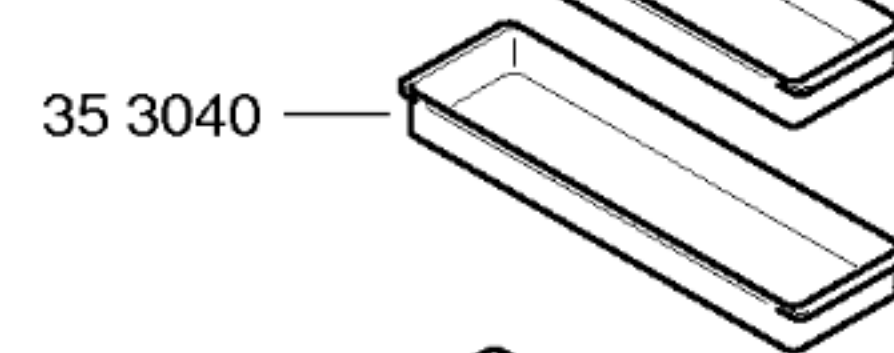
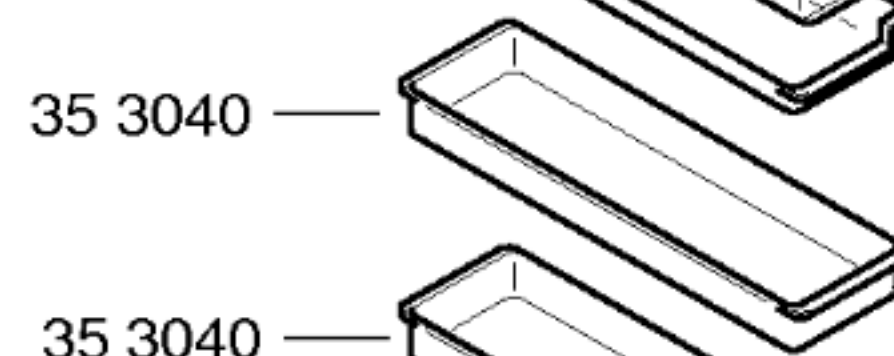
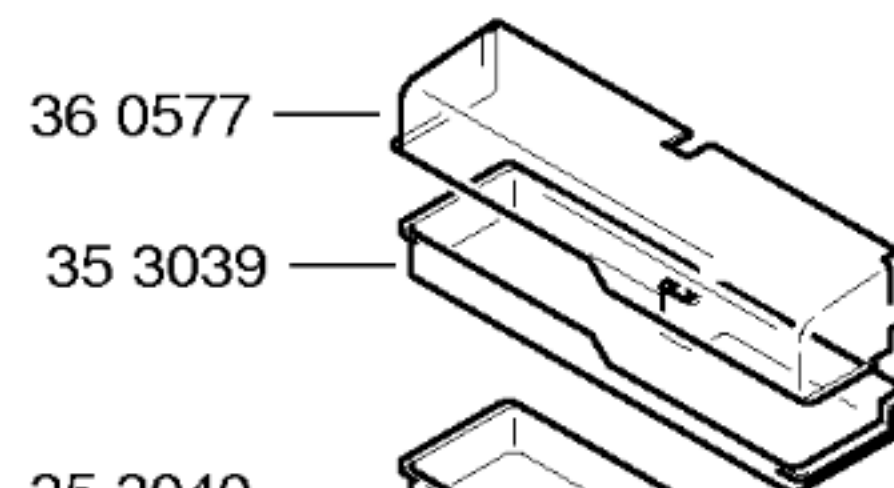
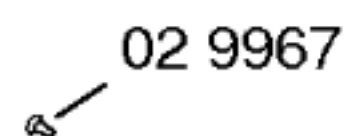
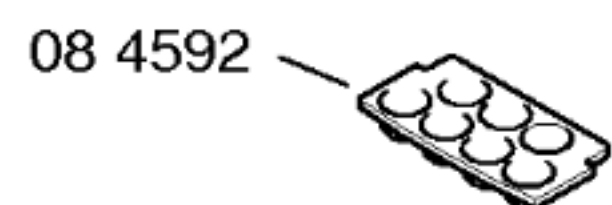


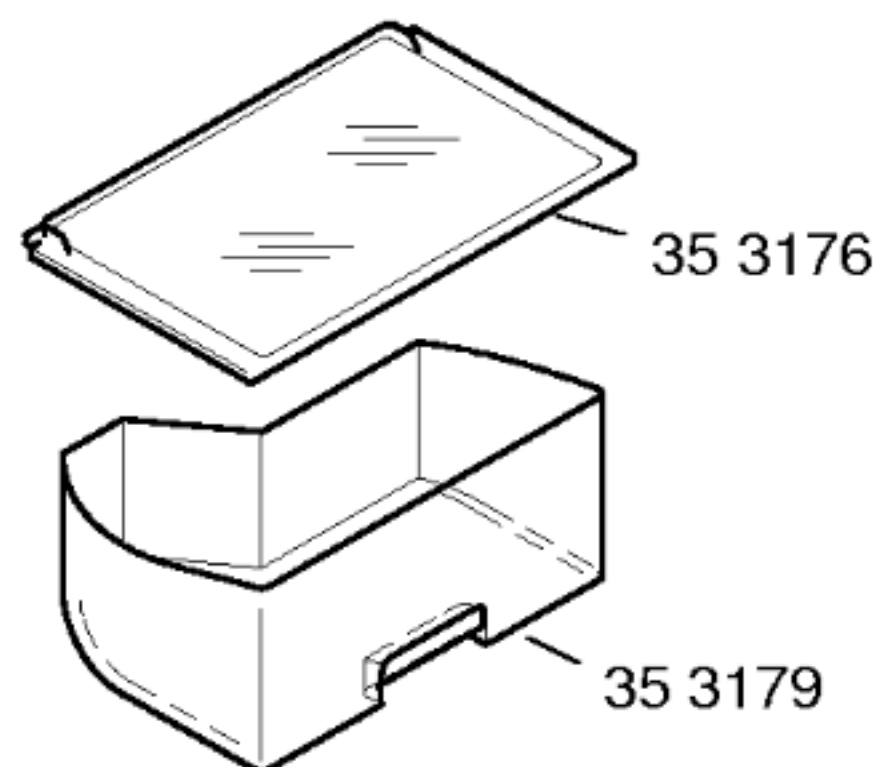


Gebrauchsanweisung
52 2495
(D,GB,F,I,NL)

Montageanleitung
52 3227
(D,GB,F,I,NL,DK,N,
SF,S,P)

Beistellsatz
26 4862

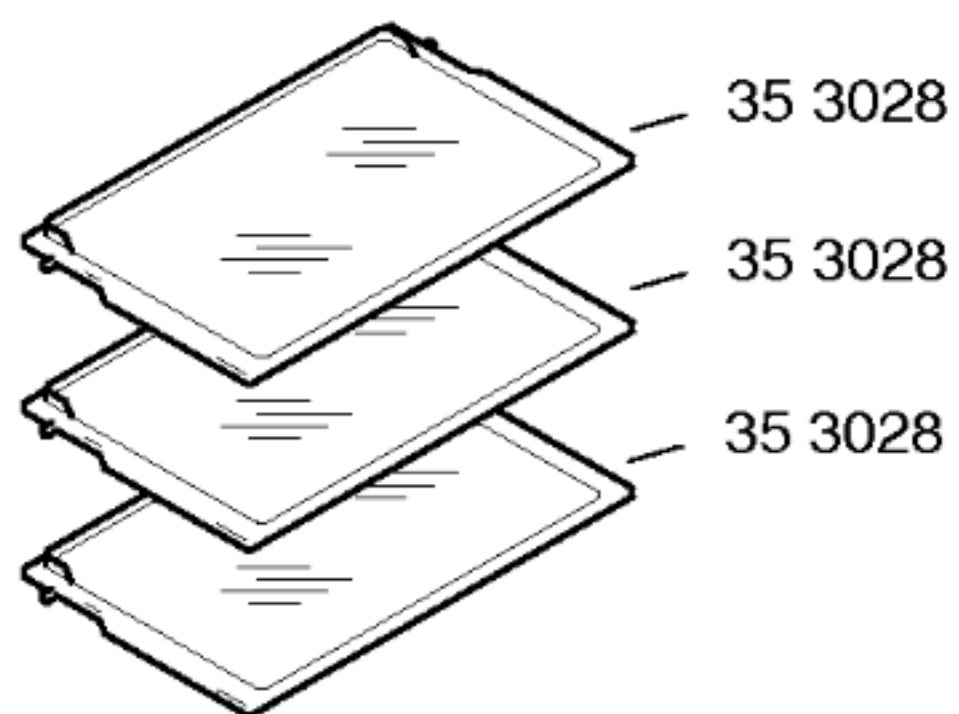

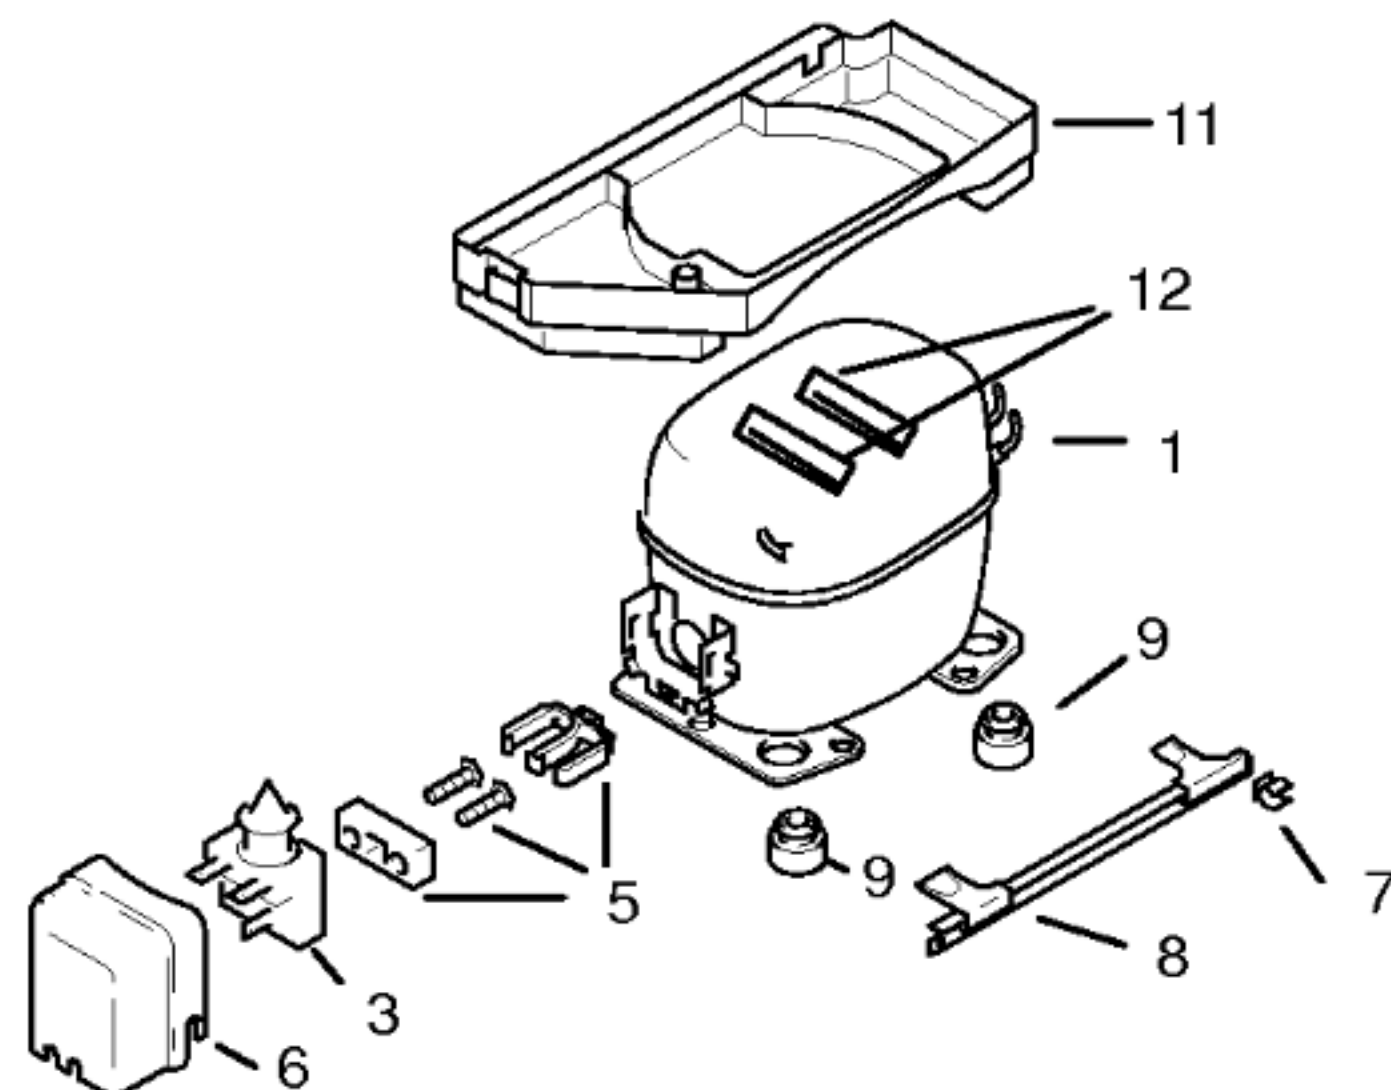

	V01	V02	V03
Pos.	Goldstar NDA62NAEM	Aspera BPK1046Y	Goldstar NDA52NAEG
1	14 2037	14 2099	14 2206
2			
3	17 0743	18 0752	18 4685
4			
5	17 0745	17 0882	17 0745
6	17 0744	17 0881	17 0744
7	16 9319	16 9319	16 9319
8	26 4879	26 4879	26 4879
9	050166	050166	050166
10			
11	36 5099	36 5099	36 5099
12	05 6008	05 6008	05 6008

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Goldstar NDA88NAEG	Aspera BPK1046Y	Goldstar ND52NAEM
Typ/Type		1580	612	1121
Förderleistung/Delivery/Débit	l/h			
Anlaufstrom/Starting current/Cour de démarrage	A		3,2	
Widerstand/Resistance/Résistance Ha/main/prin	Ω		60,9	31,5
Hi/aux	Ω		44,9	6,0
Temp.-Regler/Thermostat		Ranco K59		
Typ/Type				
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values	"warm"	+5,0	+5,0	
Valeurs de commutation	"kalt"	-25,0	-10,0	
	"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	*		
Anschlußwert/Conn.load/Puiss. connectée	W	43	44	61
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild