



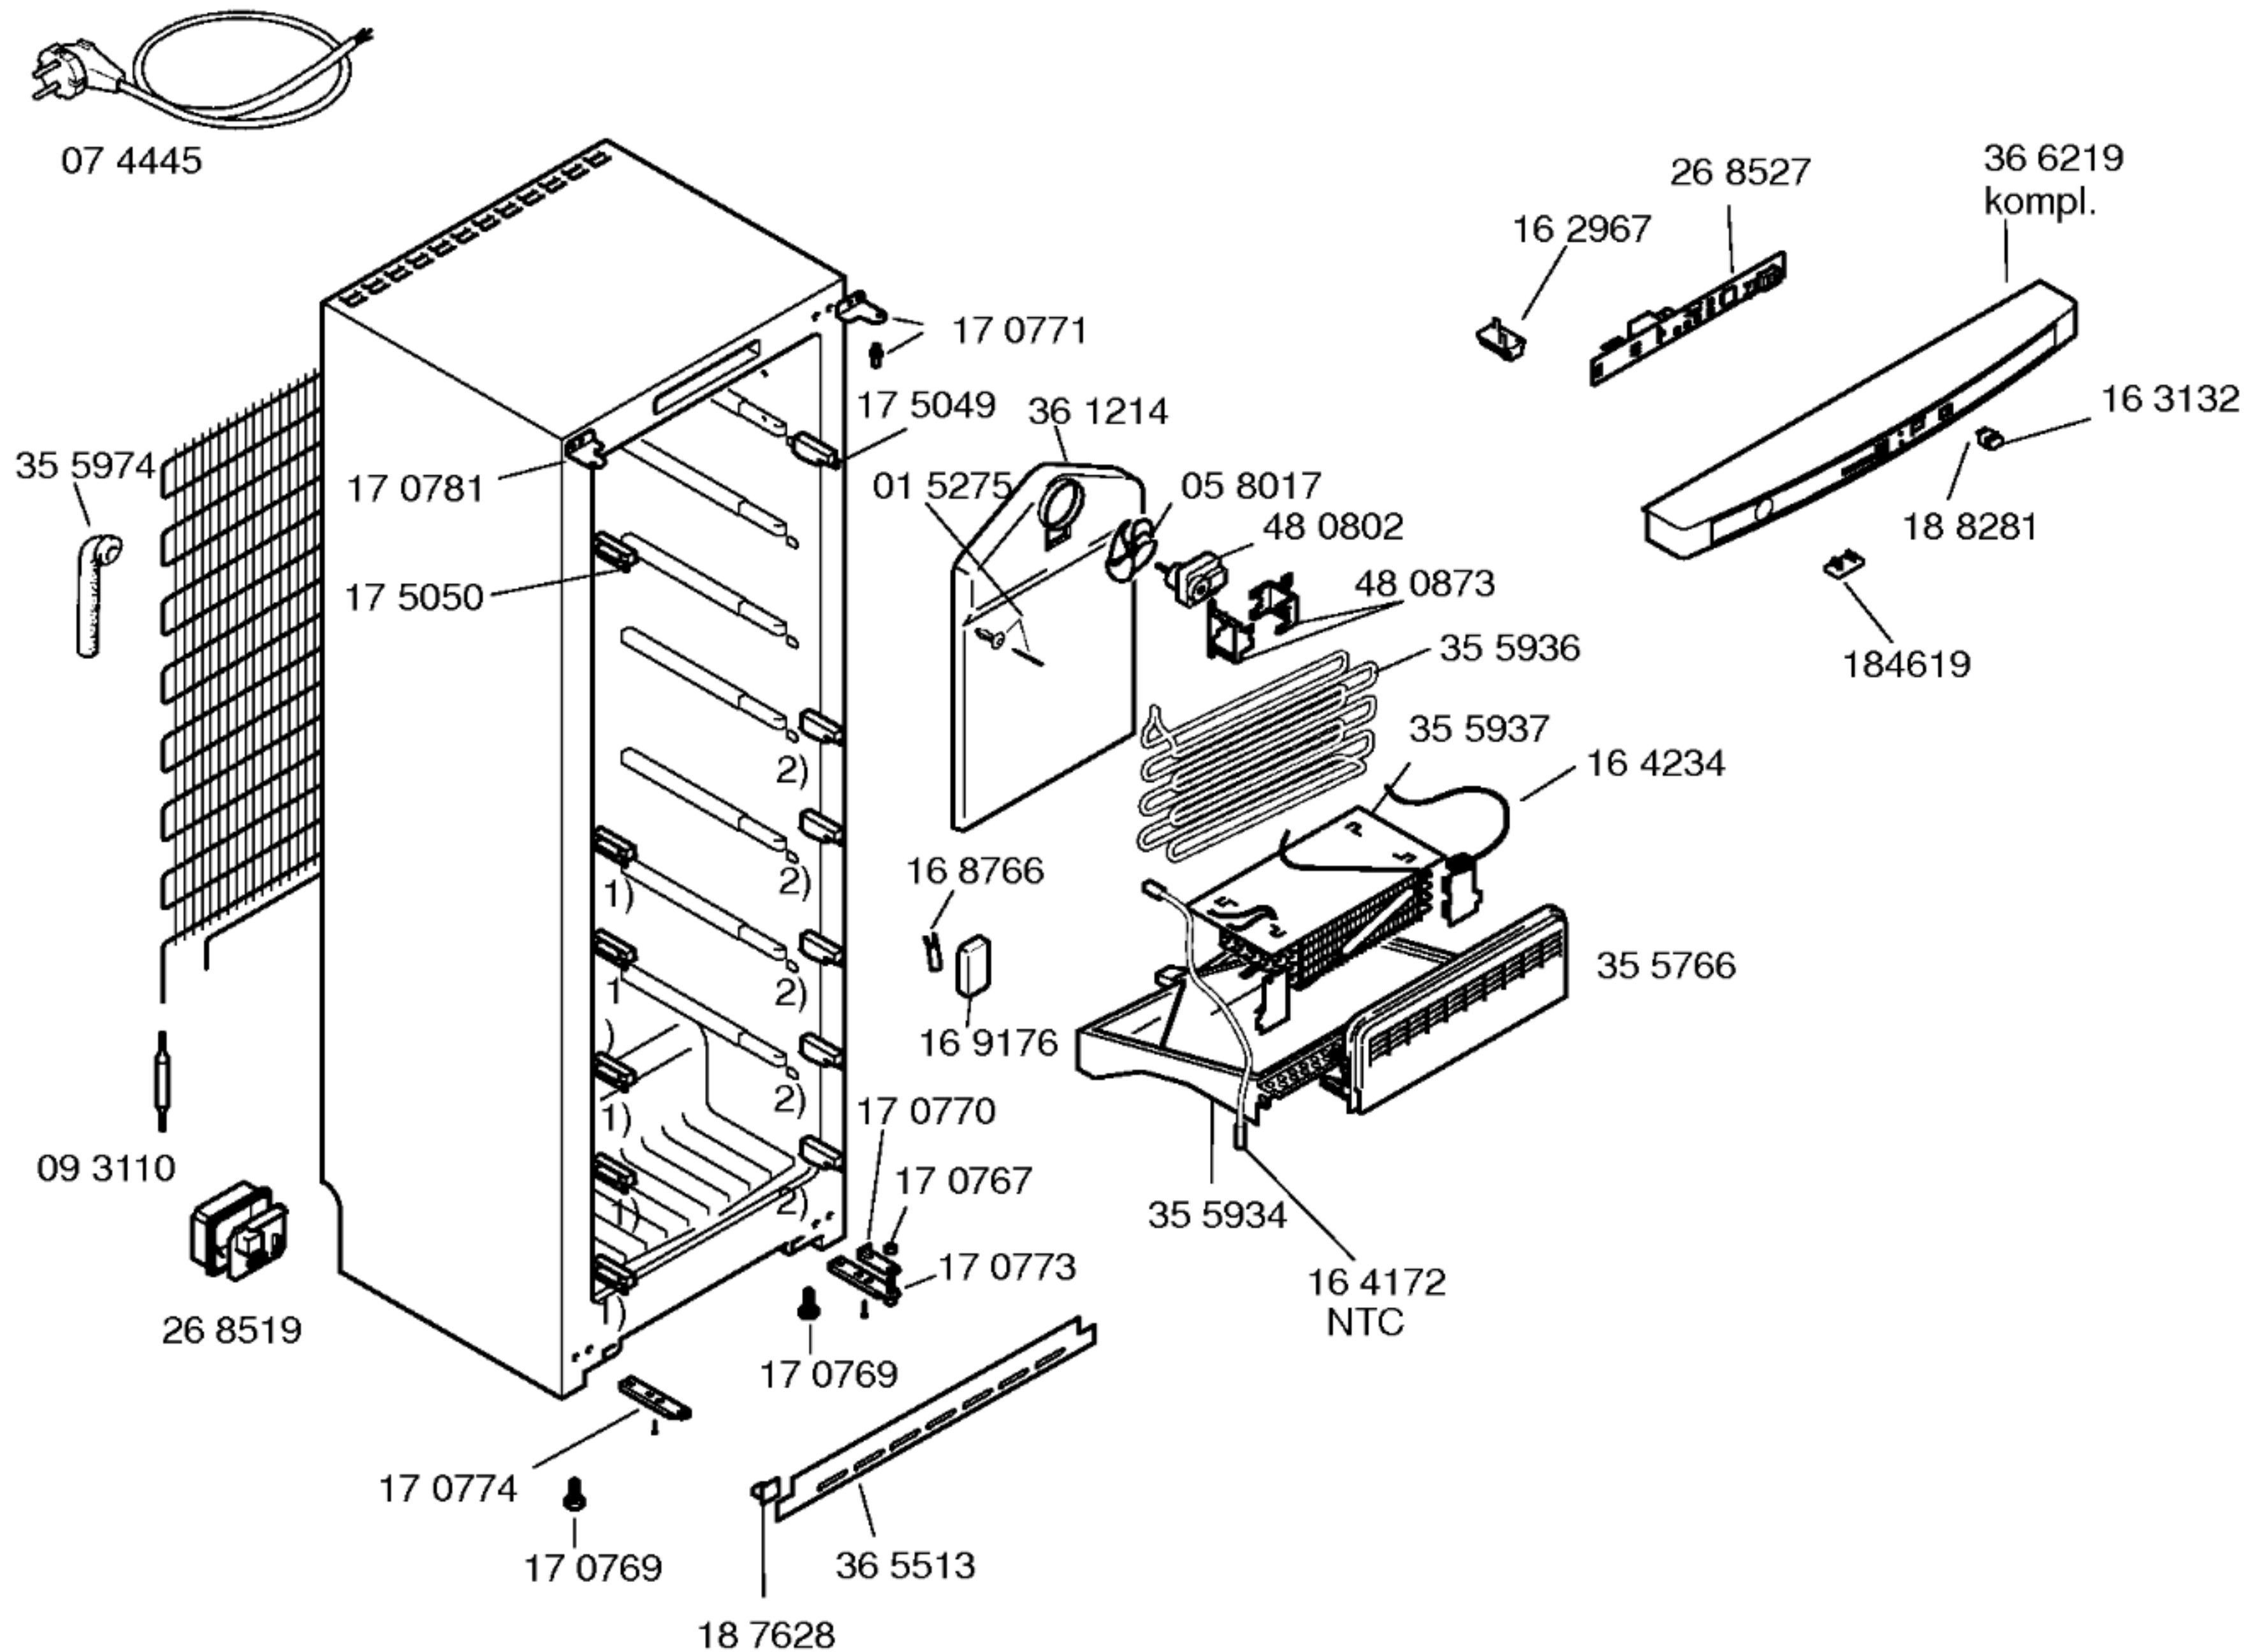


Gebrauchsanweisung
58 0914
(D,GB,F,I,NL,E,P)
Montageanleitung
58 0241
(D,GB,F,I,NL,DK,N
SF,S,E,P,TR,GR)

Beistellsatz
26 5629

1) 17 1455
2) 17 1454

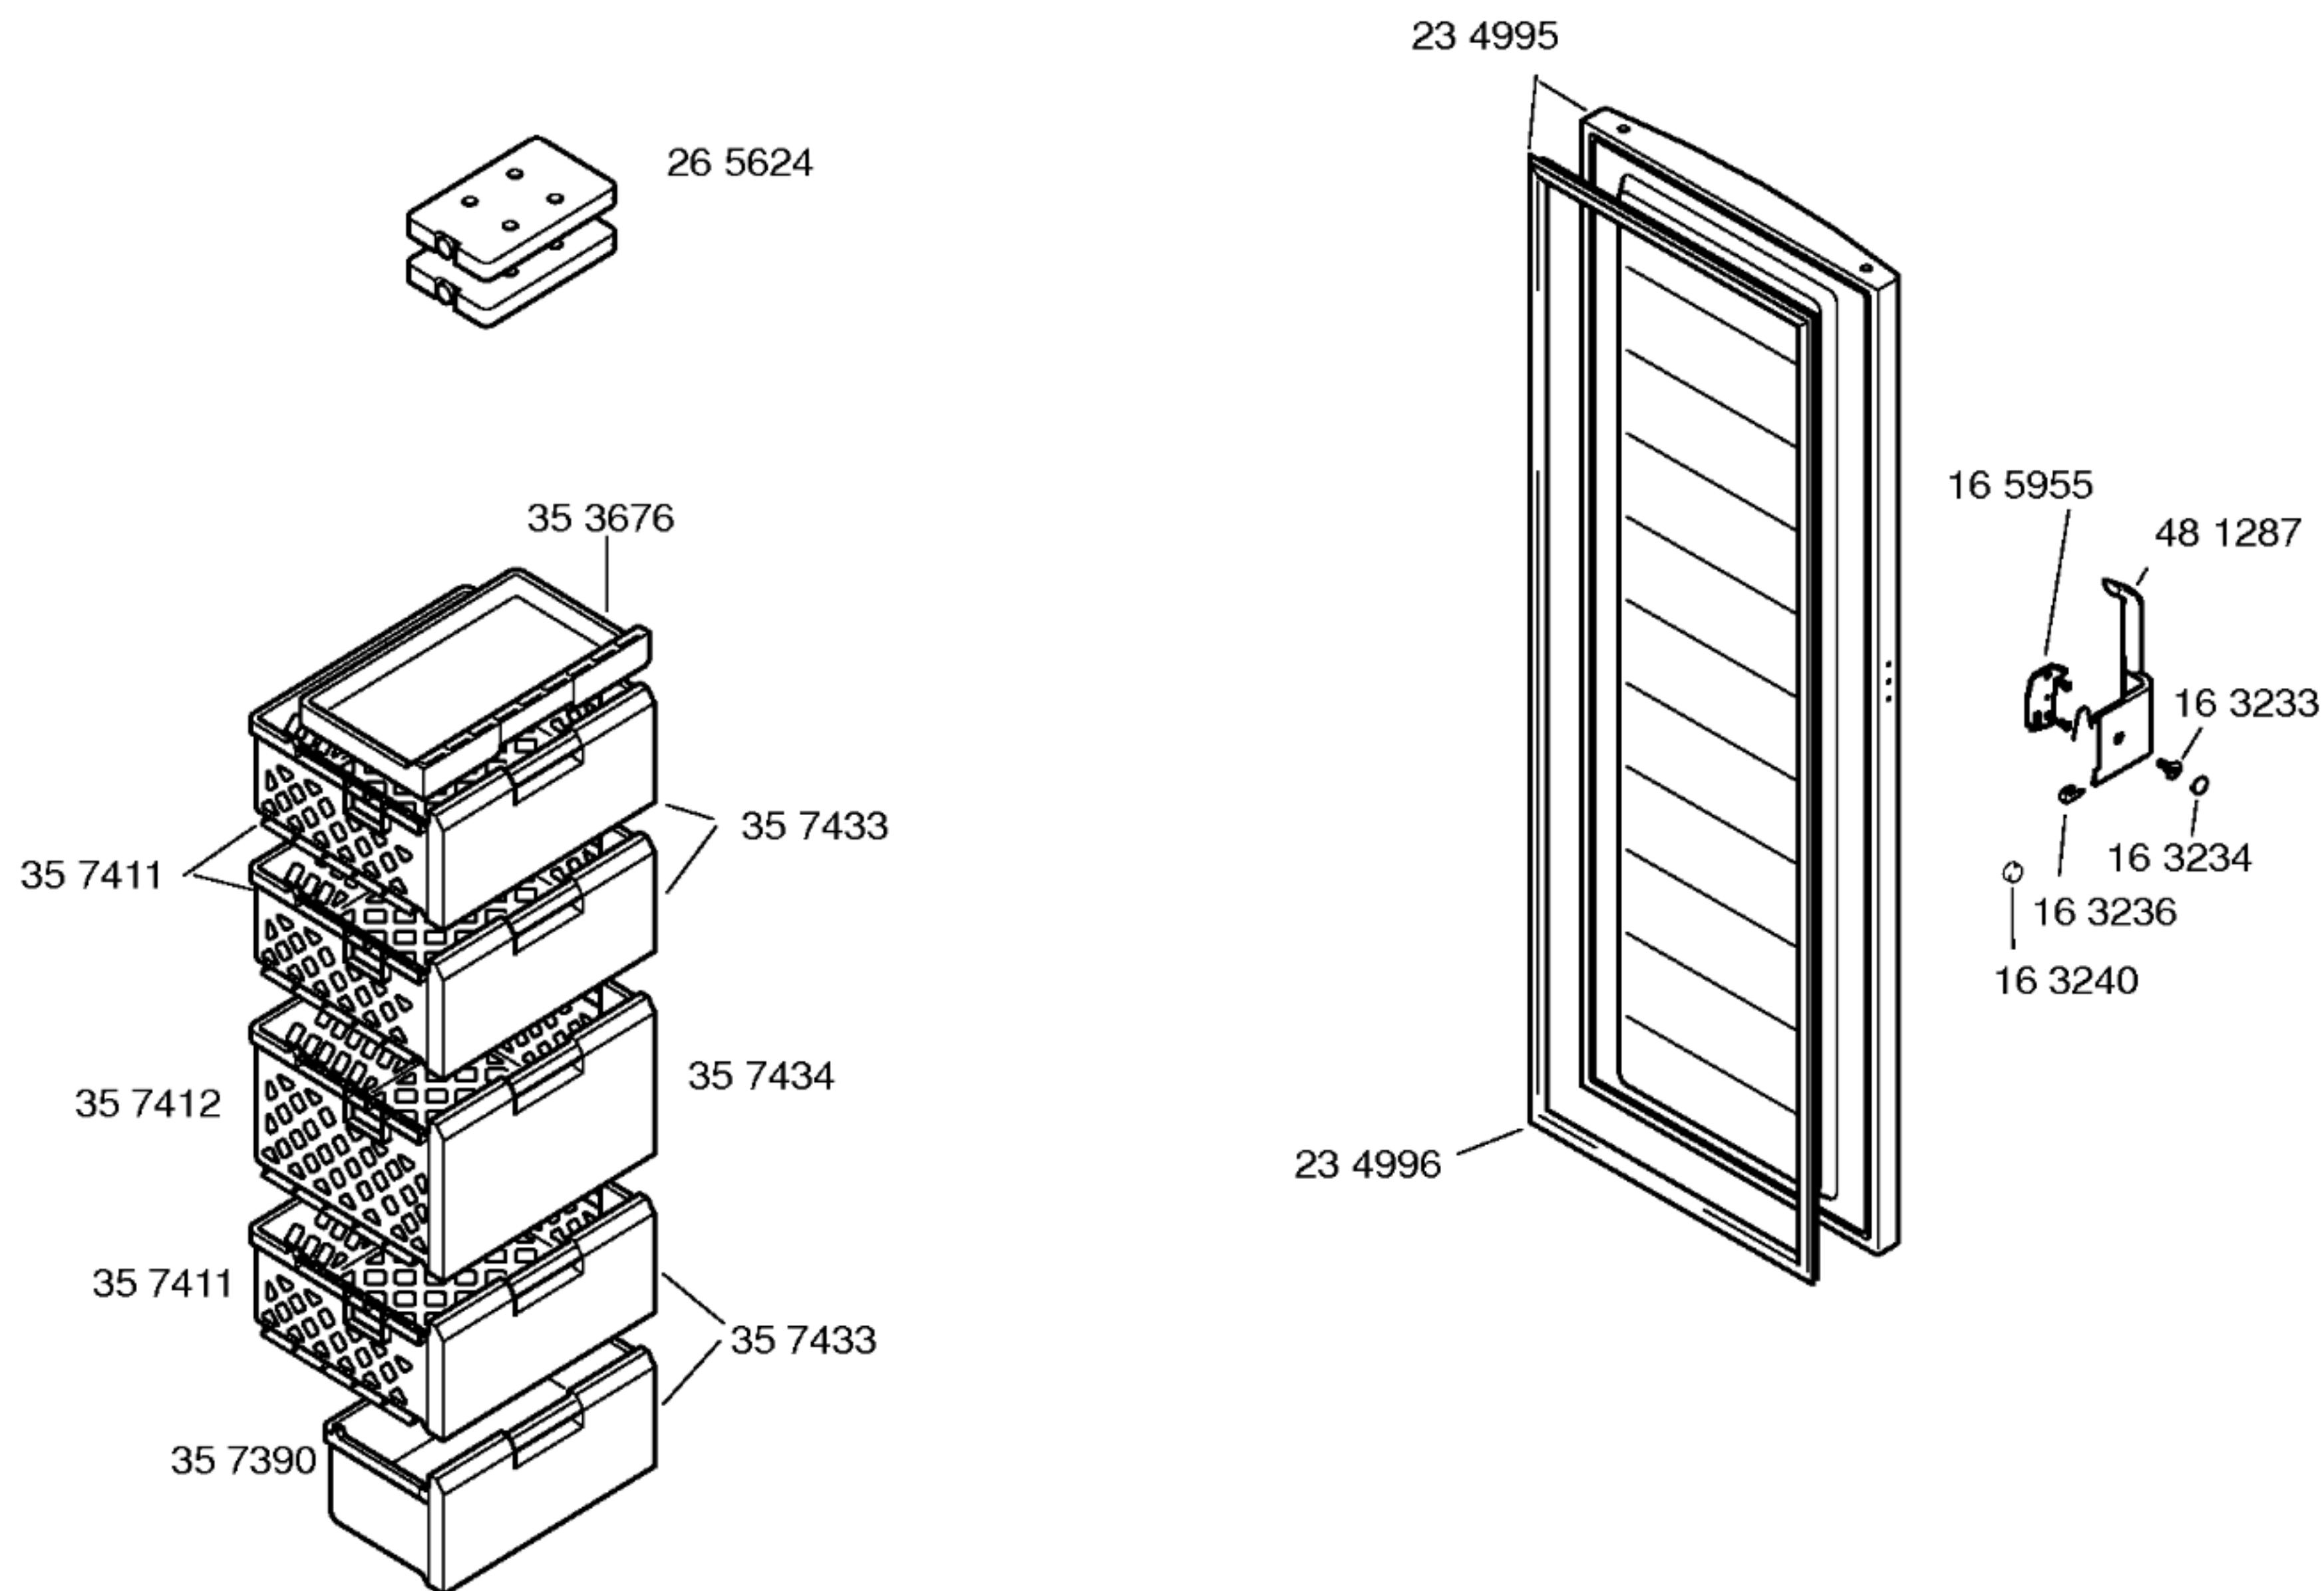

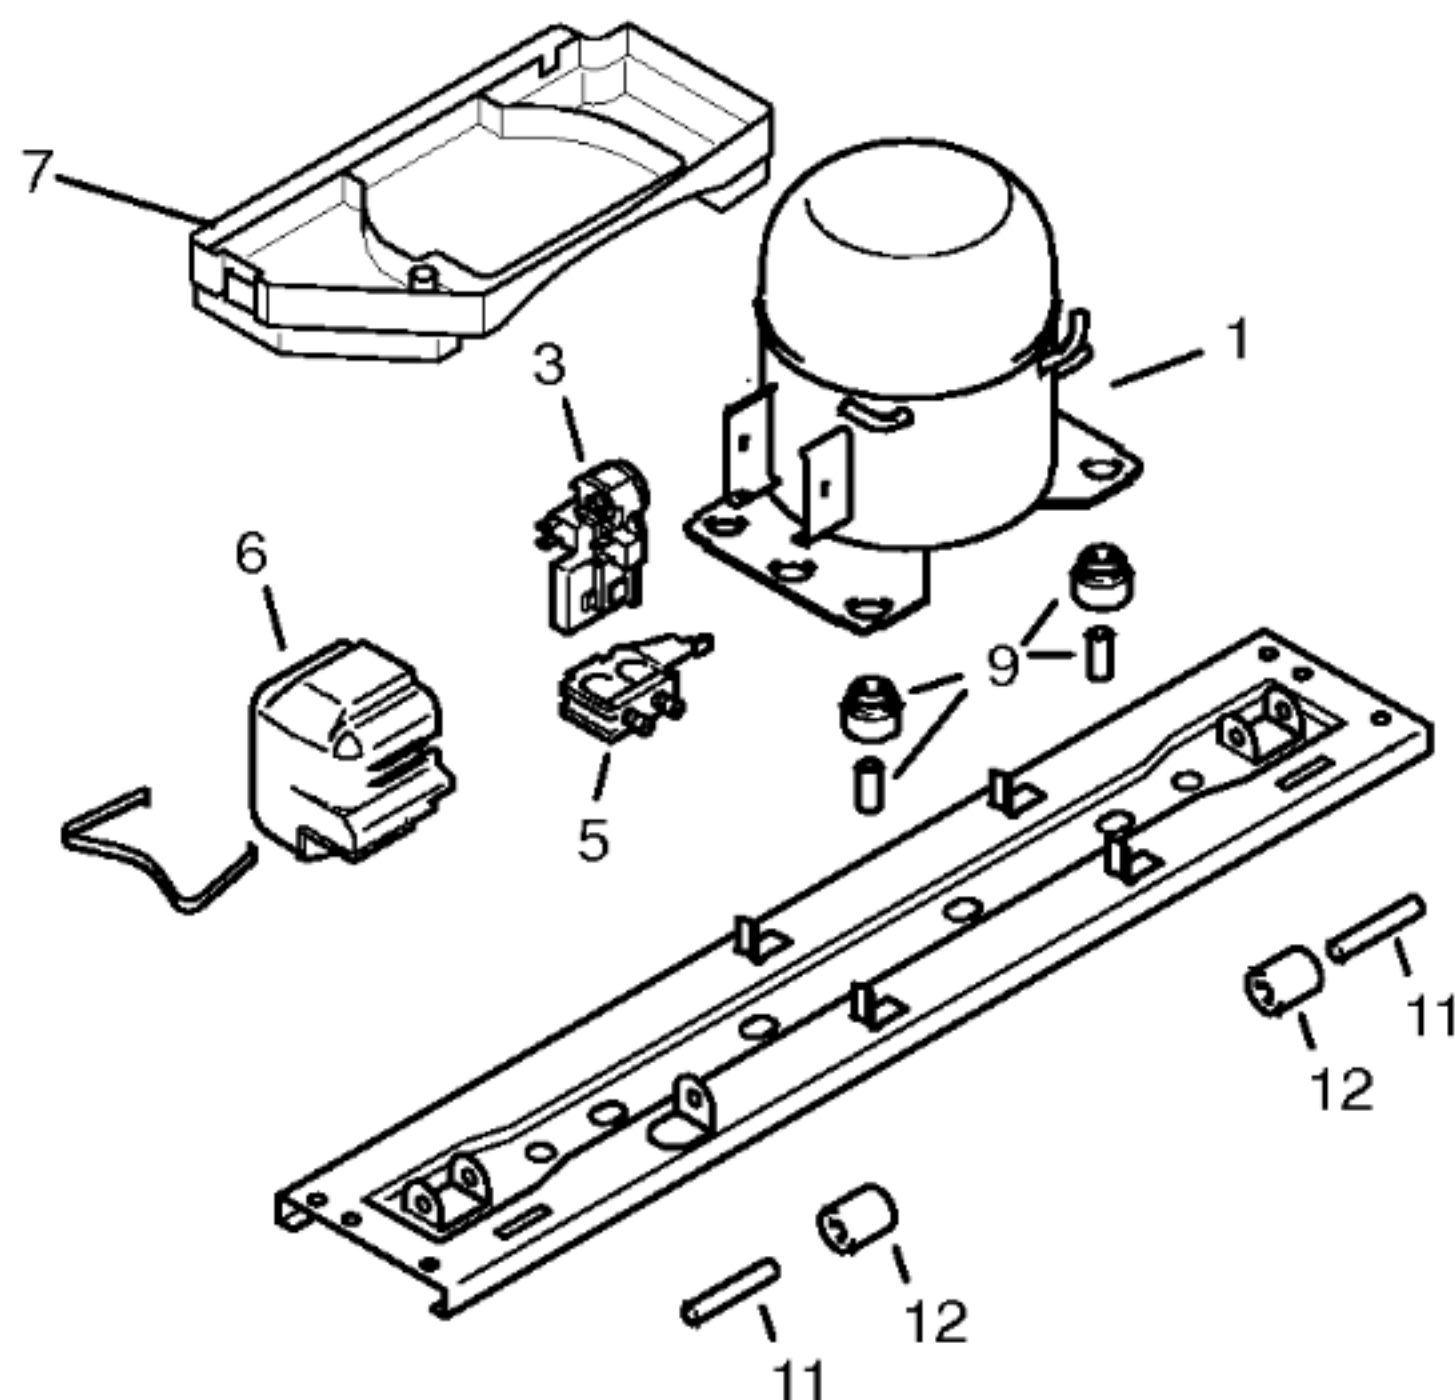Mat. – Nr. – Konstante
3740

	V01		
	Danfoss		
Pos.	NLE15 KTK		
1	14 2162		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	096212		
8			
9	05 0166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit l/h Anlaufstrom/Starting current/Cour de démarrageA Widerstand/Resistance/Résistance Ha/main/prinΩ Hi/aux Ω		Danfoss NLE15 KTK 2637				
Temp.–Regler/Thermostat Typ/Type Regelstellung/Position Schaltwerte/Switching values "warm" Valeurs de commutation "kalt" "alarm"		Elektronisch EIN AUS –15 –16 –19 –20 –23 –24 –9 –14				
Füllmenge/Fill.quantity/Charge R600a		*		*		
Anschlußwert/Conn.load/Puiss. connectée W						
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Ω Leistung/Power/Puissance W		Abtauheizung 288 200		Rinnenheizung 240 24		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance Ω		560				
Raumtemperaturfühler 2%		C	K	C	k	
		+10	9,9	–18	43,3	
		+ 5	12,7	–22	54,6	
		+ 0	16,3	–26	69,4	
Widerstand NTC–Fühler 1%		°C	kΩ	°C	kΩ	°C kΩ
		–1	17,3	–15	36,5	–20 48,6
		–9	26,2	–16	38,8	–23 58,1
		–14	34,5	–19	45,9	–24 61,6
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Ω Spannung/Voltage/Tension V						

* siehe Typenschild