





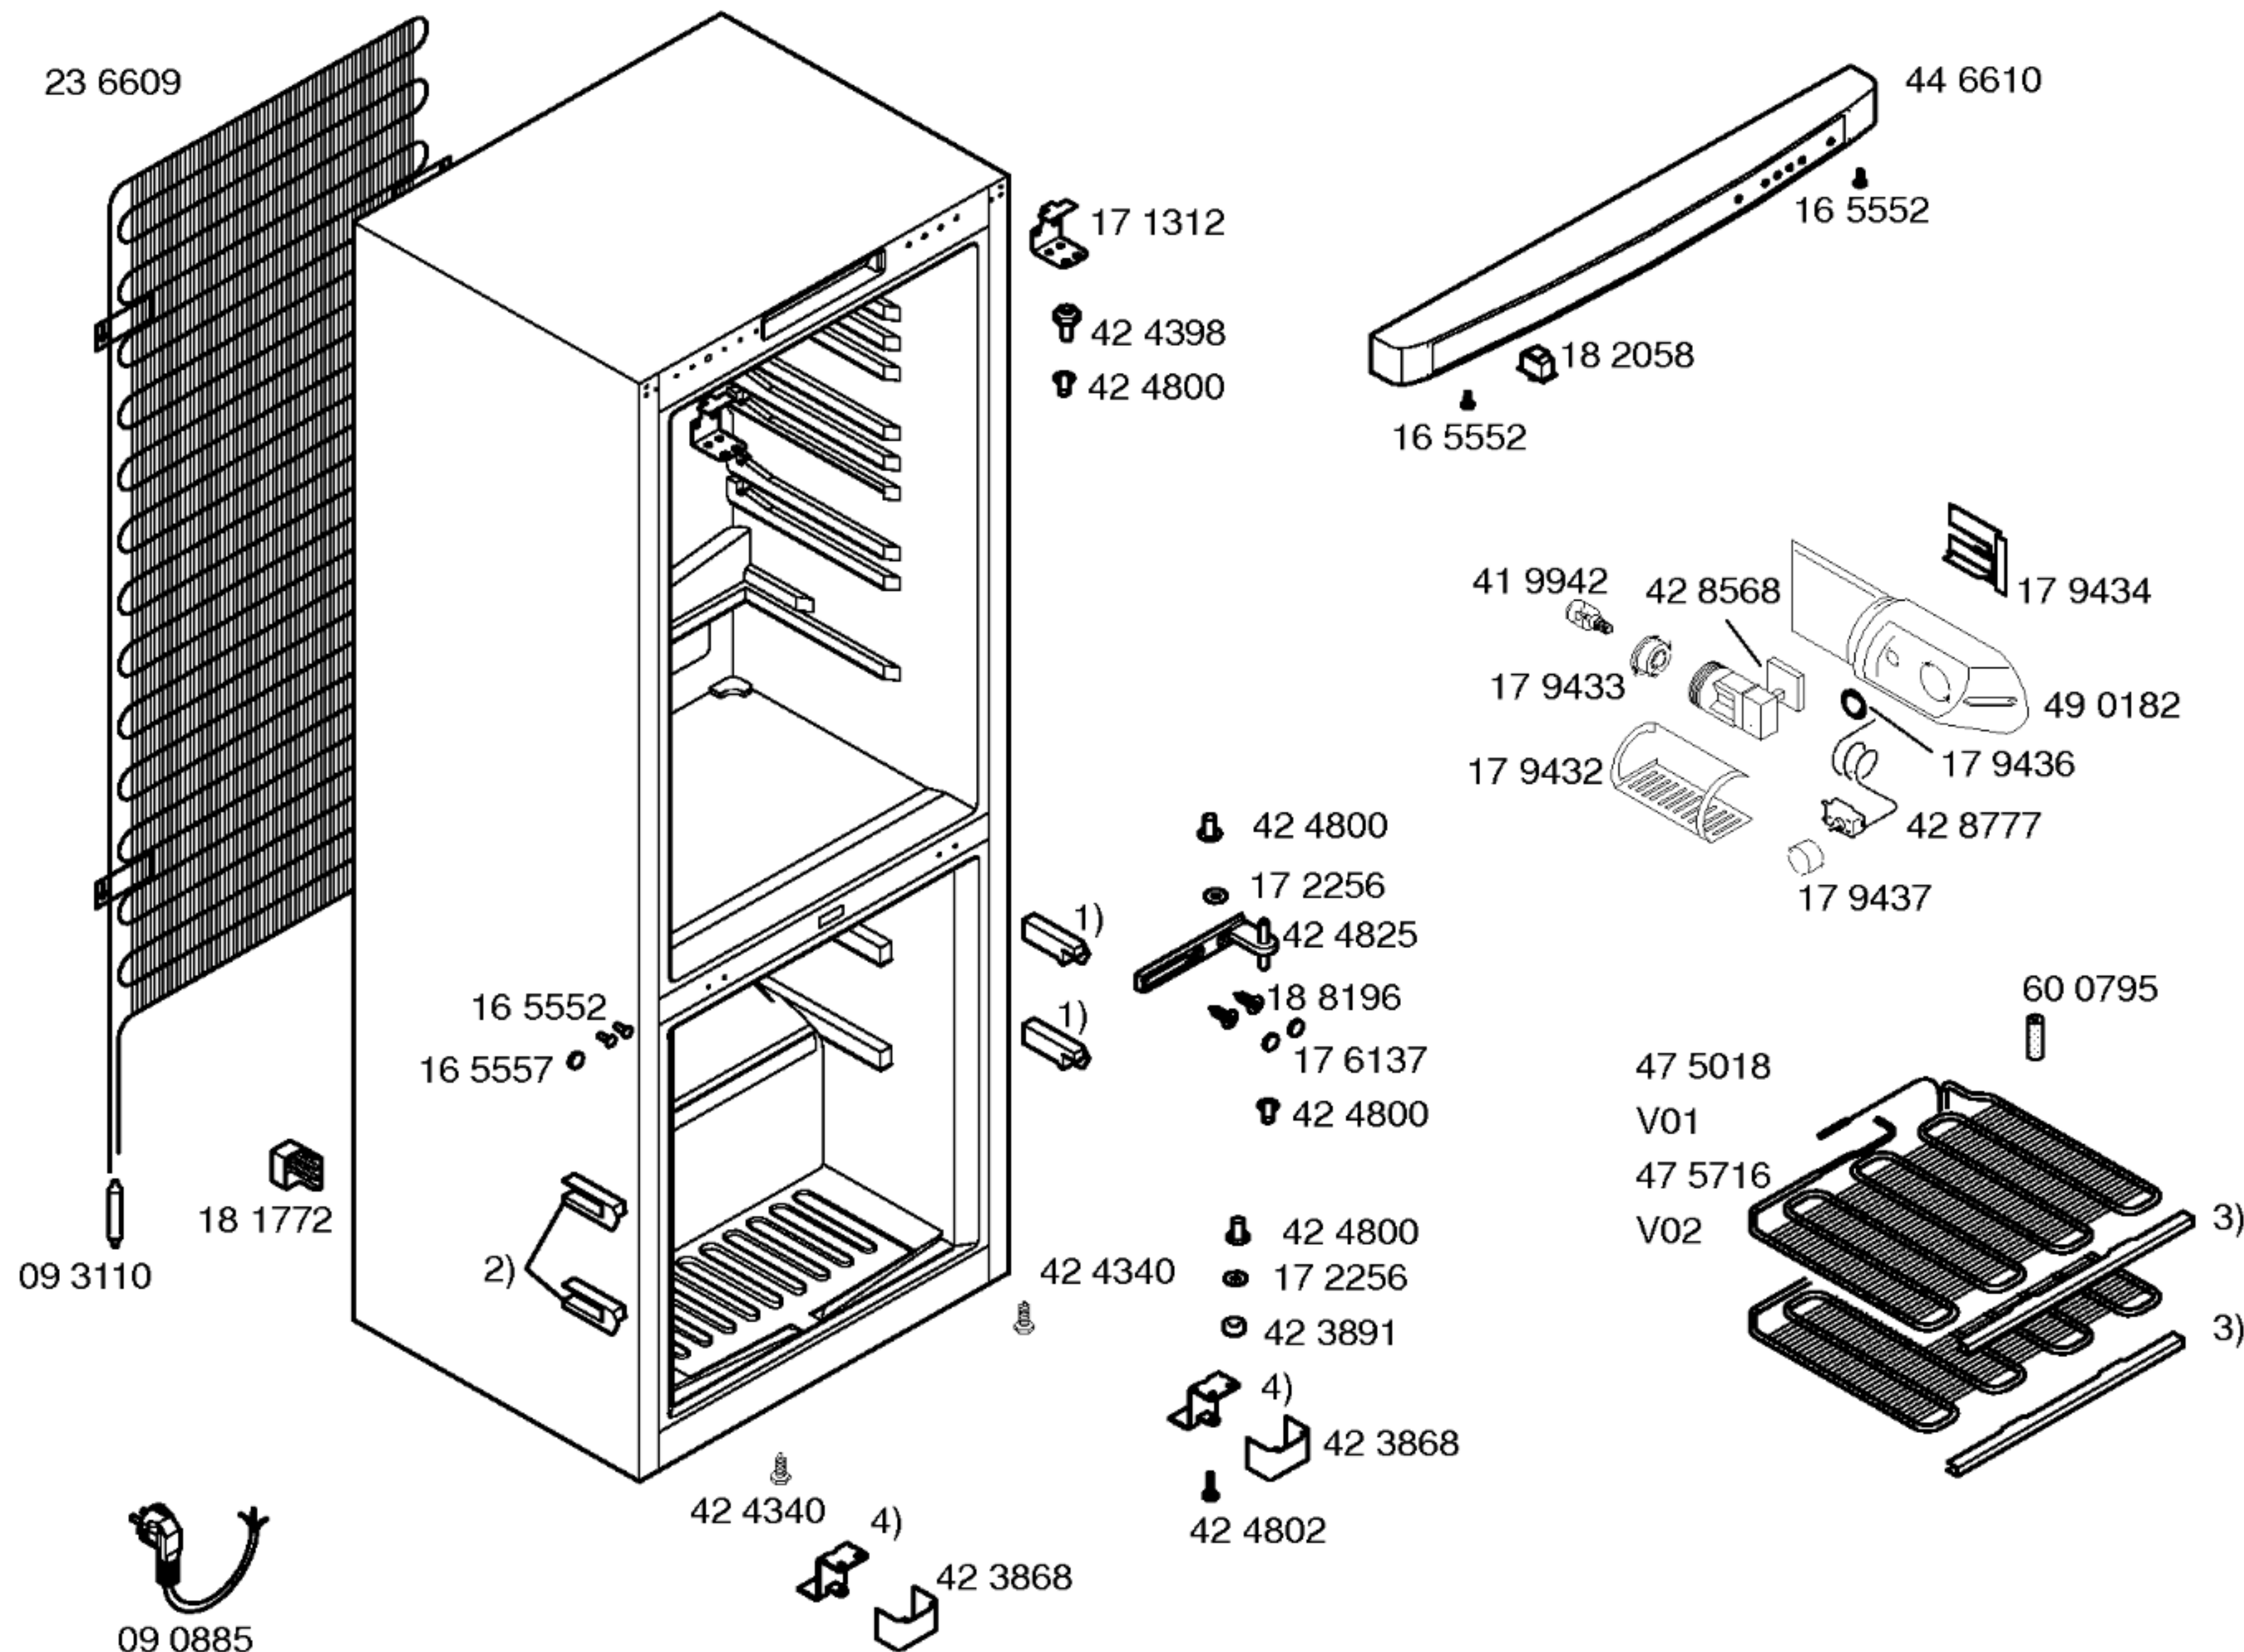



Mat. - Nr. - Konstante
3740

Gebrauchsanweisung
59 7269
V01
(DE)
69 2502
V02
(DE,NL)

- 1) 18 3821
- 2) 18 3822
- 3) 44 4476
- 4) 42 8184

Mat. – Nr. – Konstante
3740

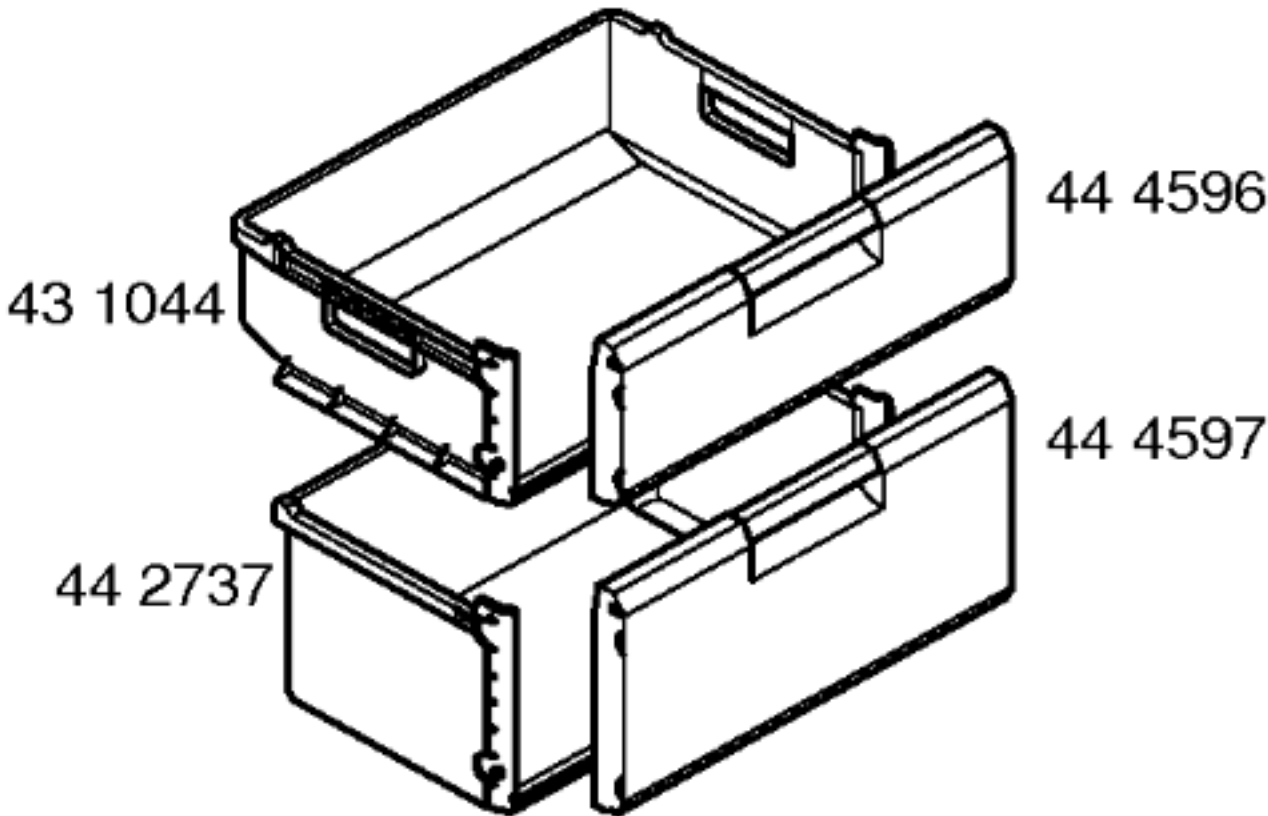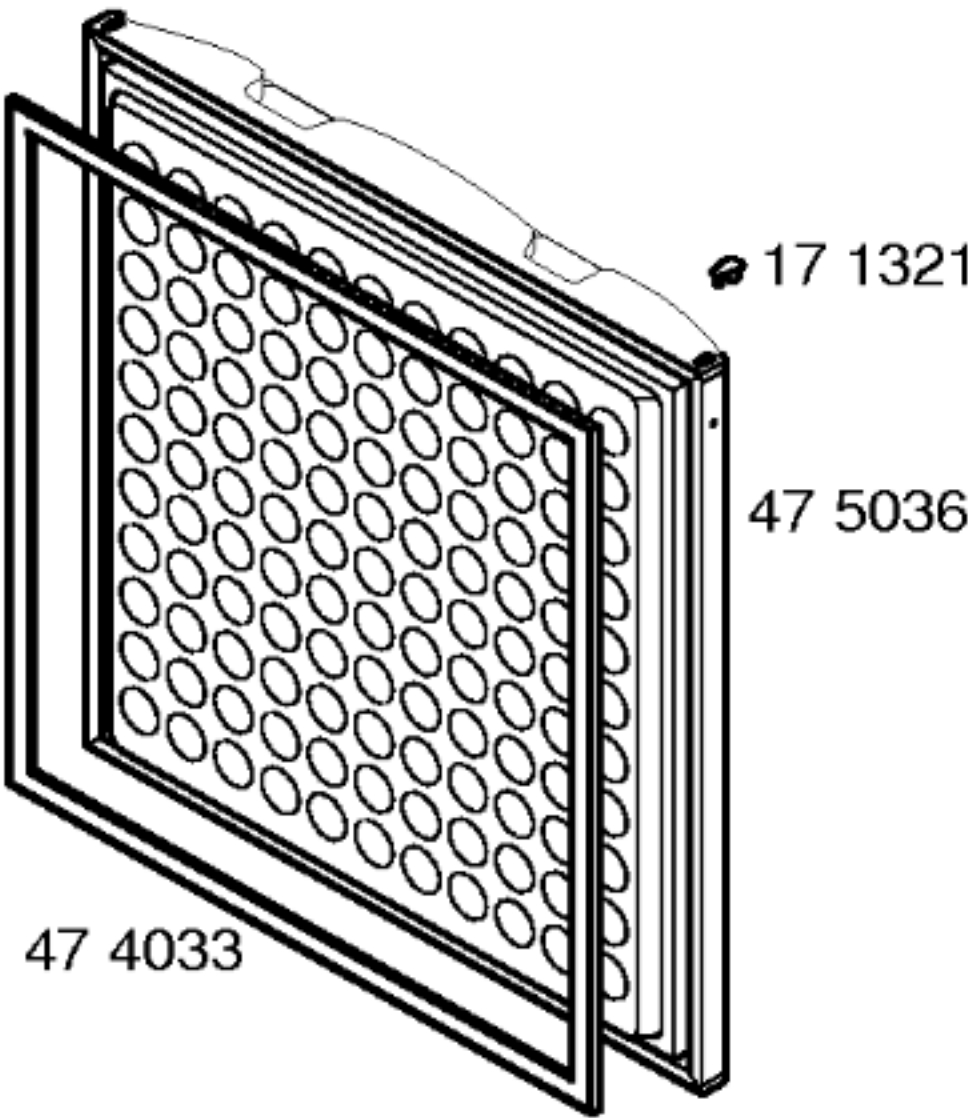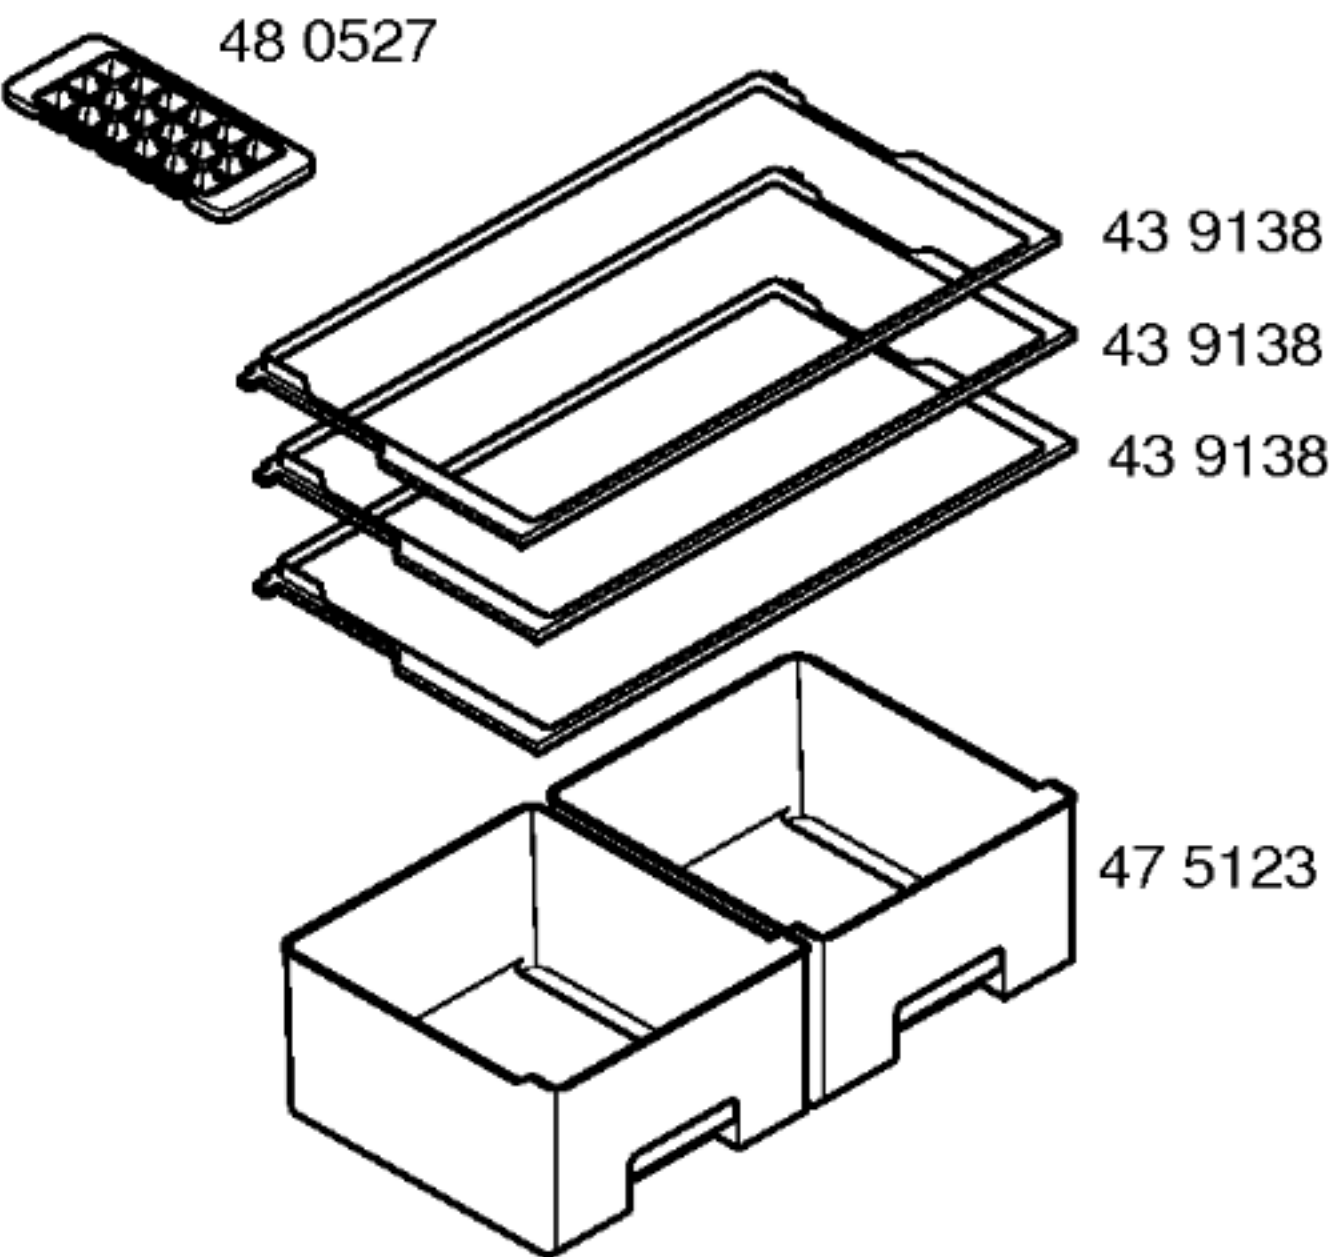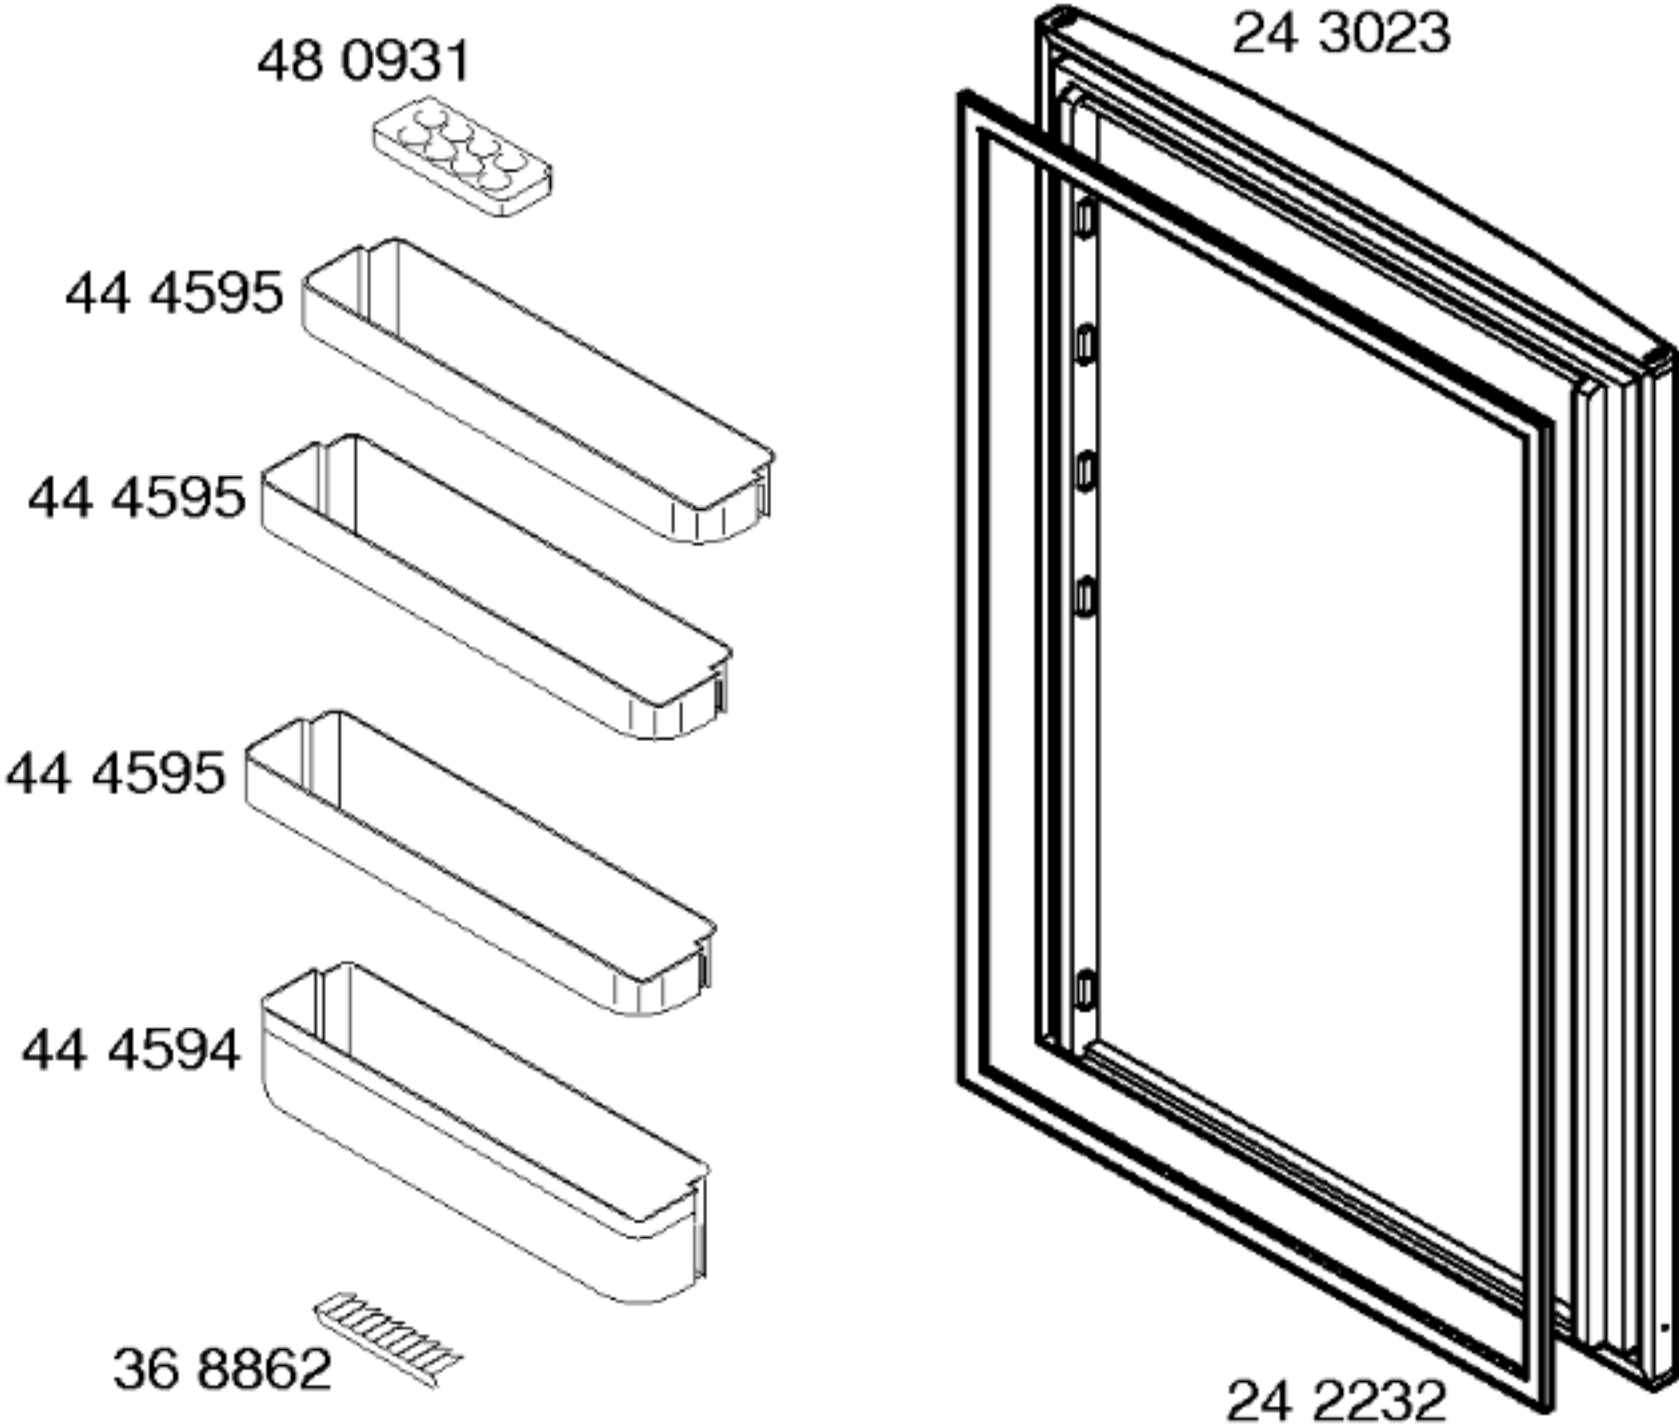

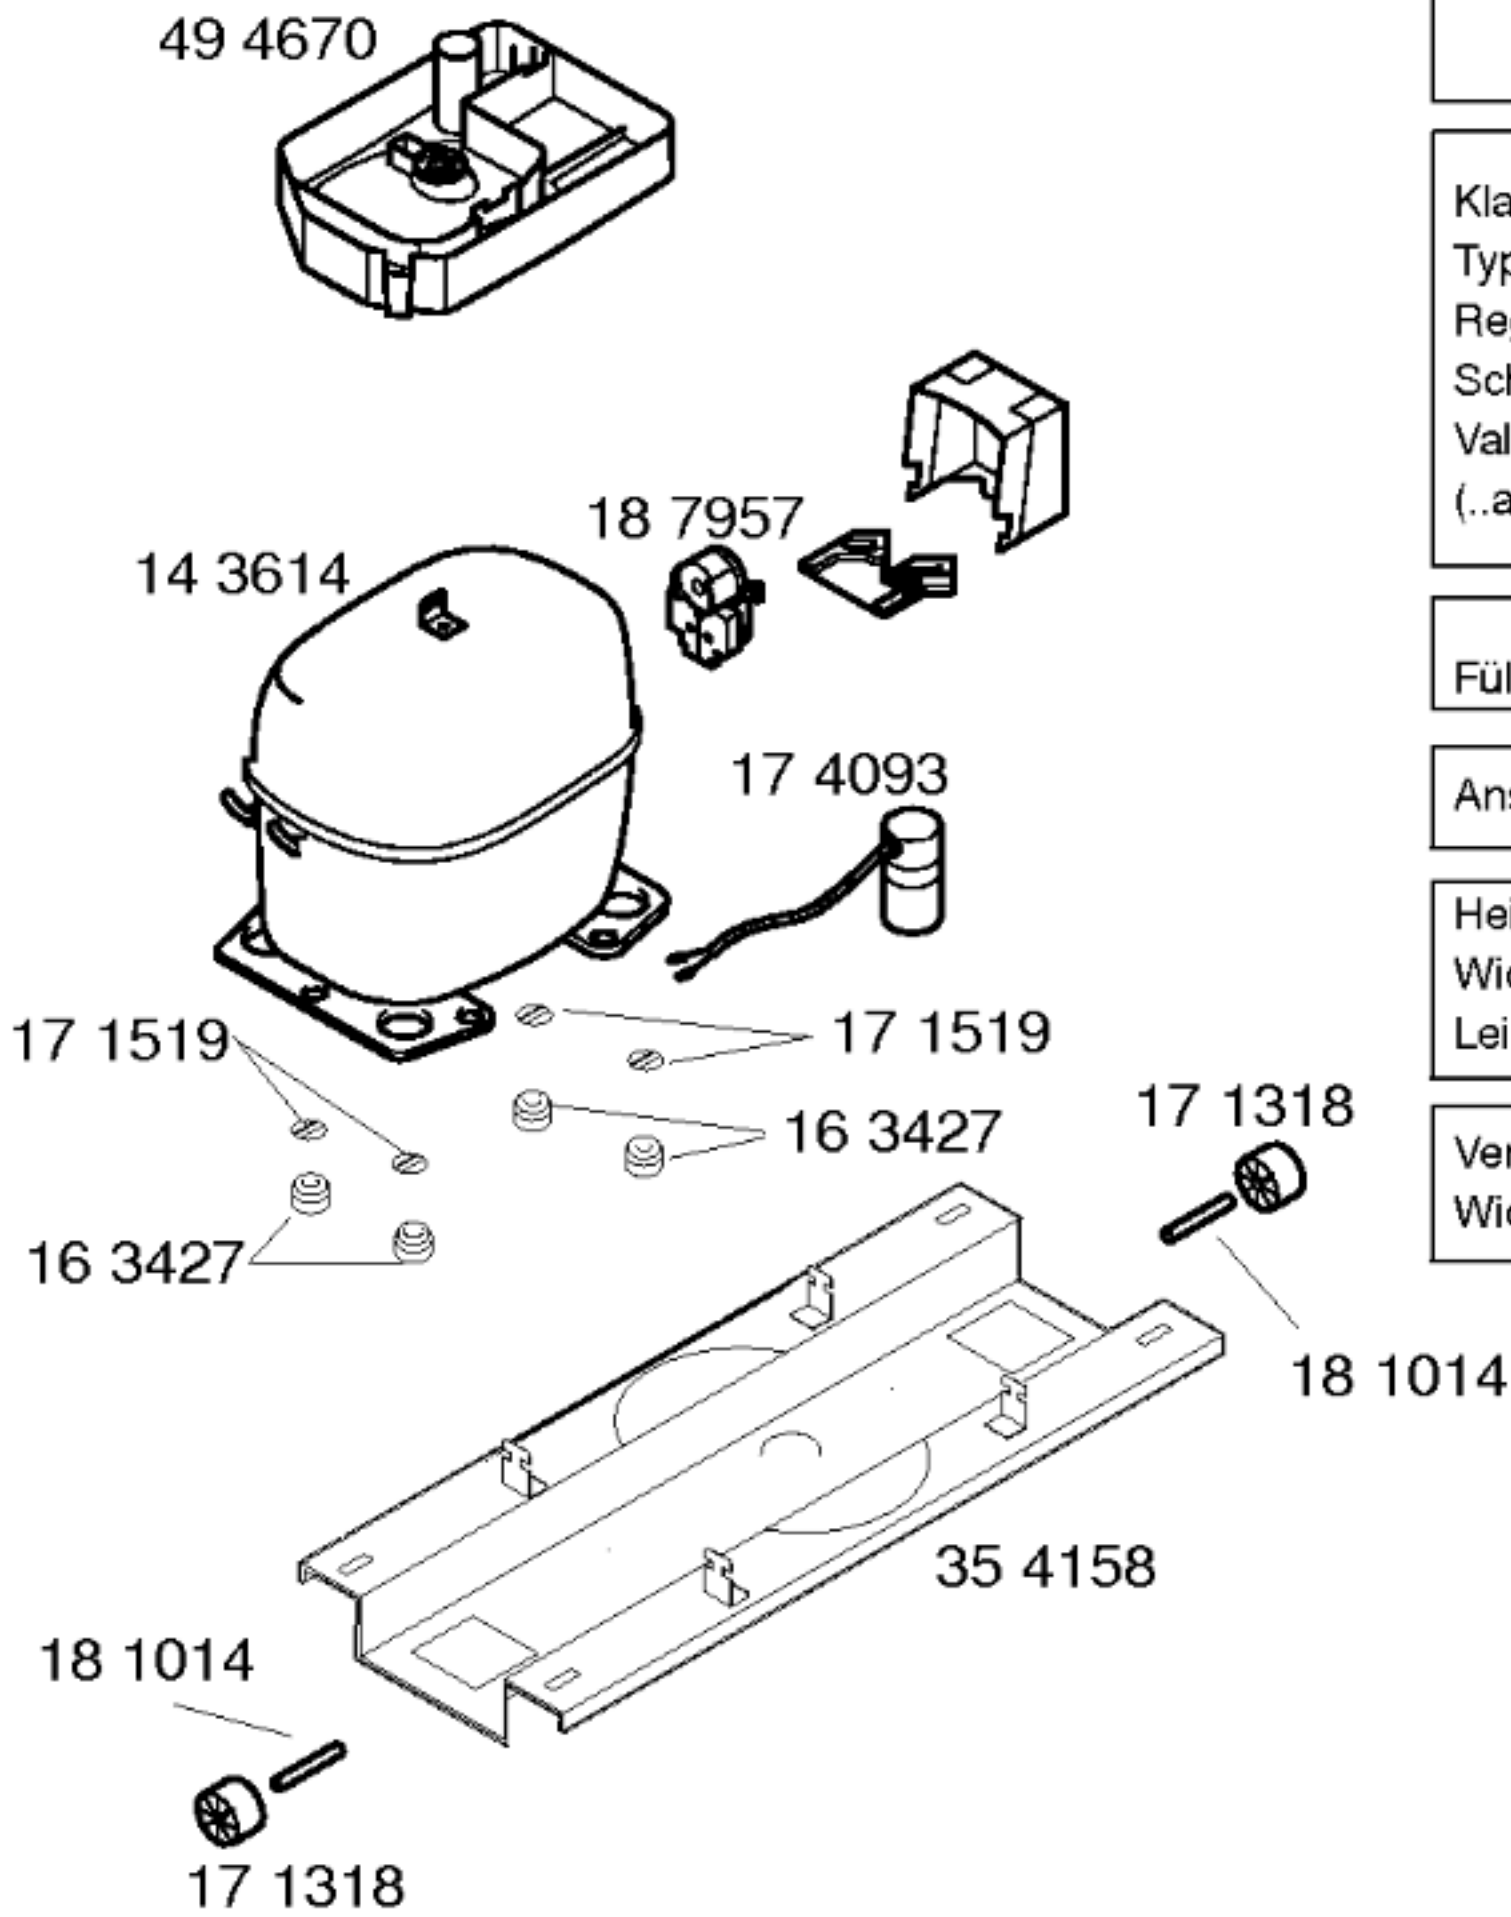

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita DG125E		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantily/Charge/Carga R600 g	64		
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KW Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KW			

Mat. – Nr. – Konstante
3740