




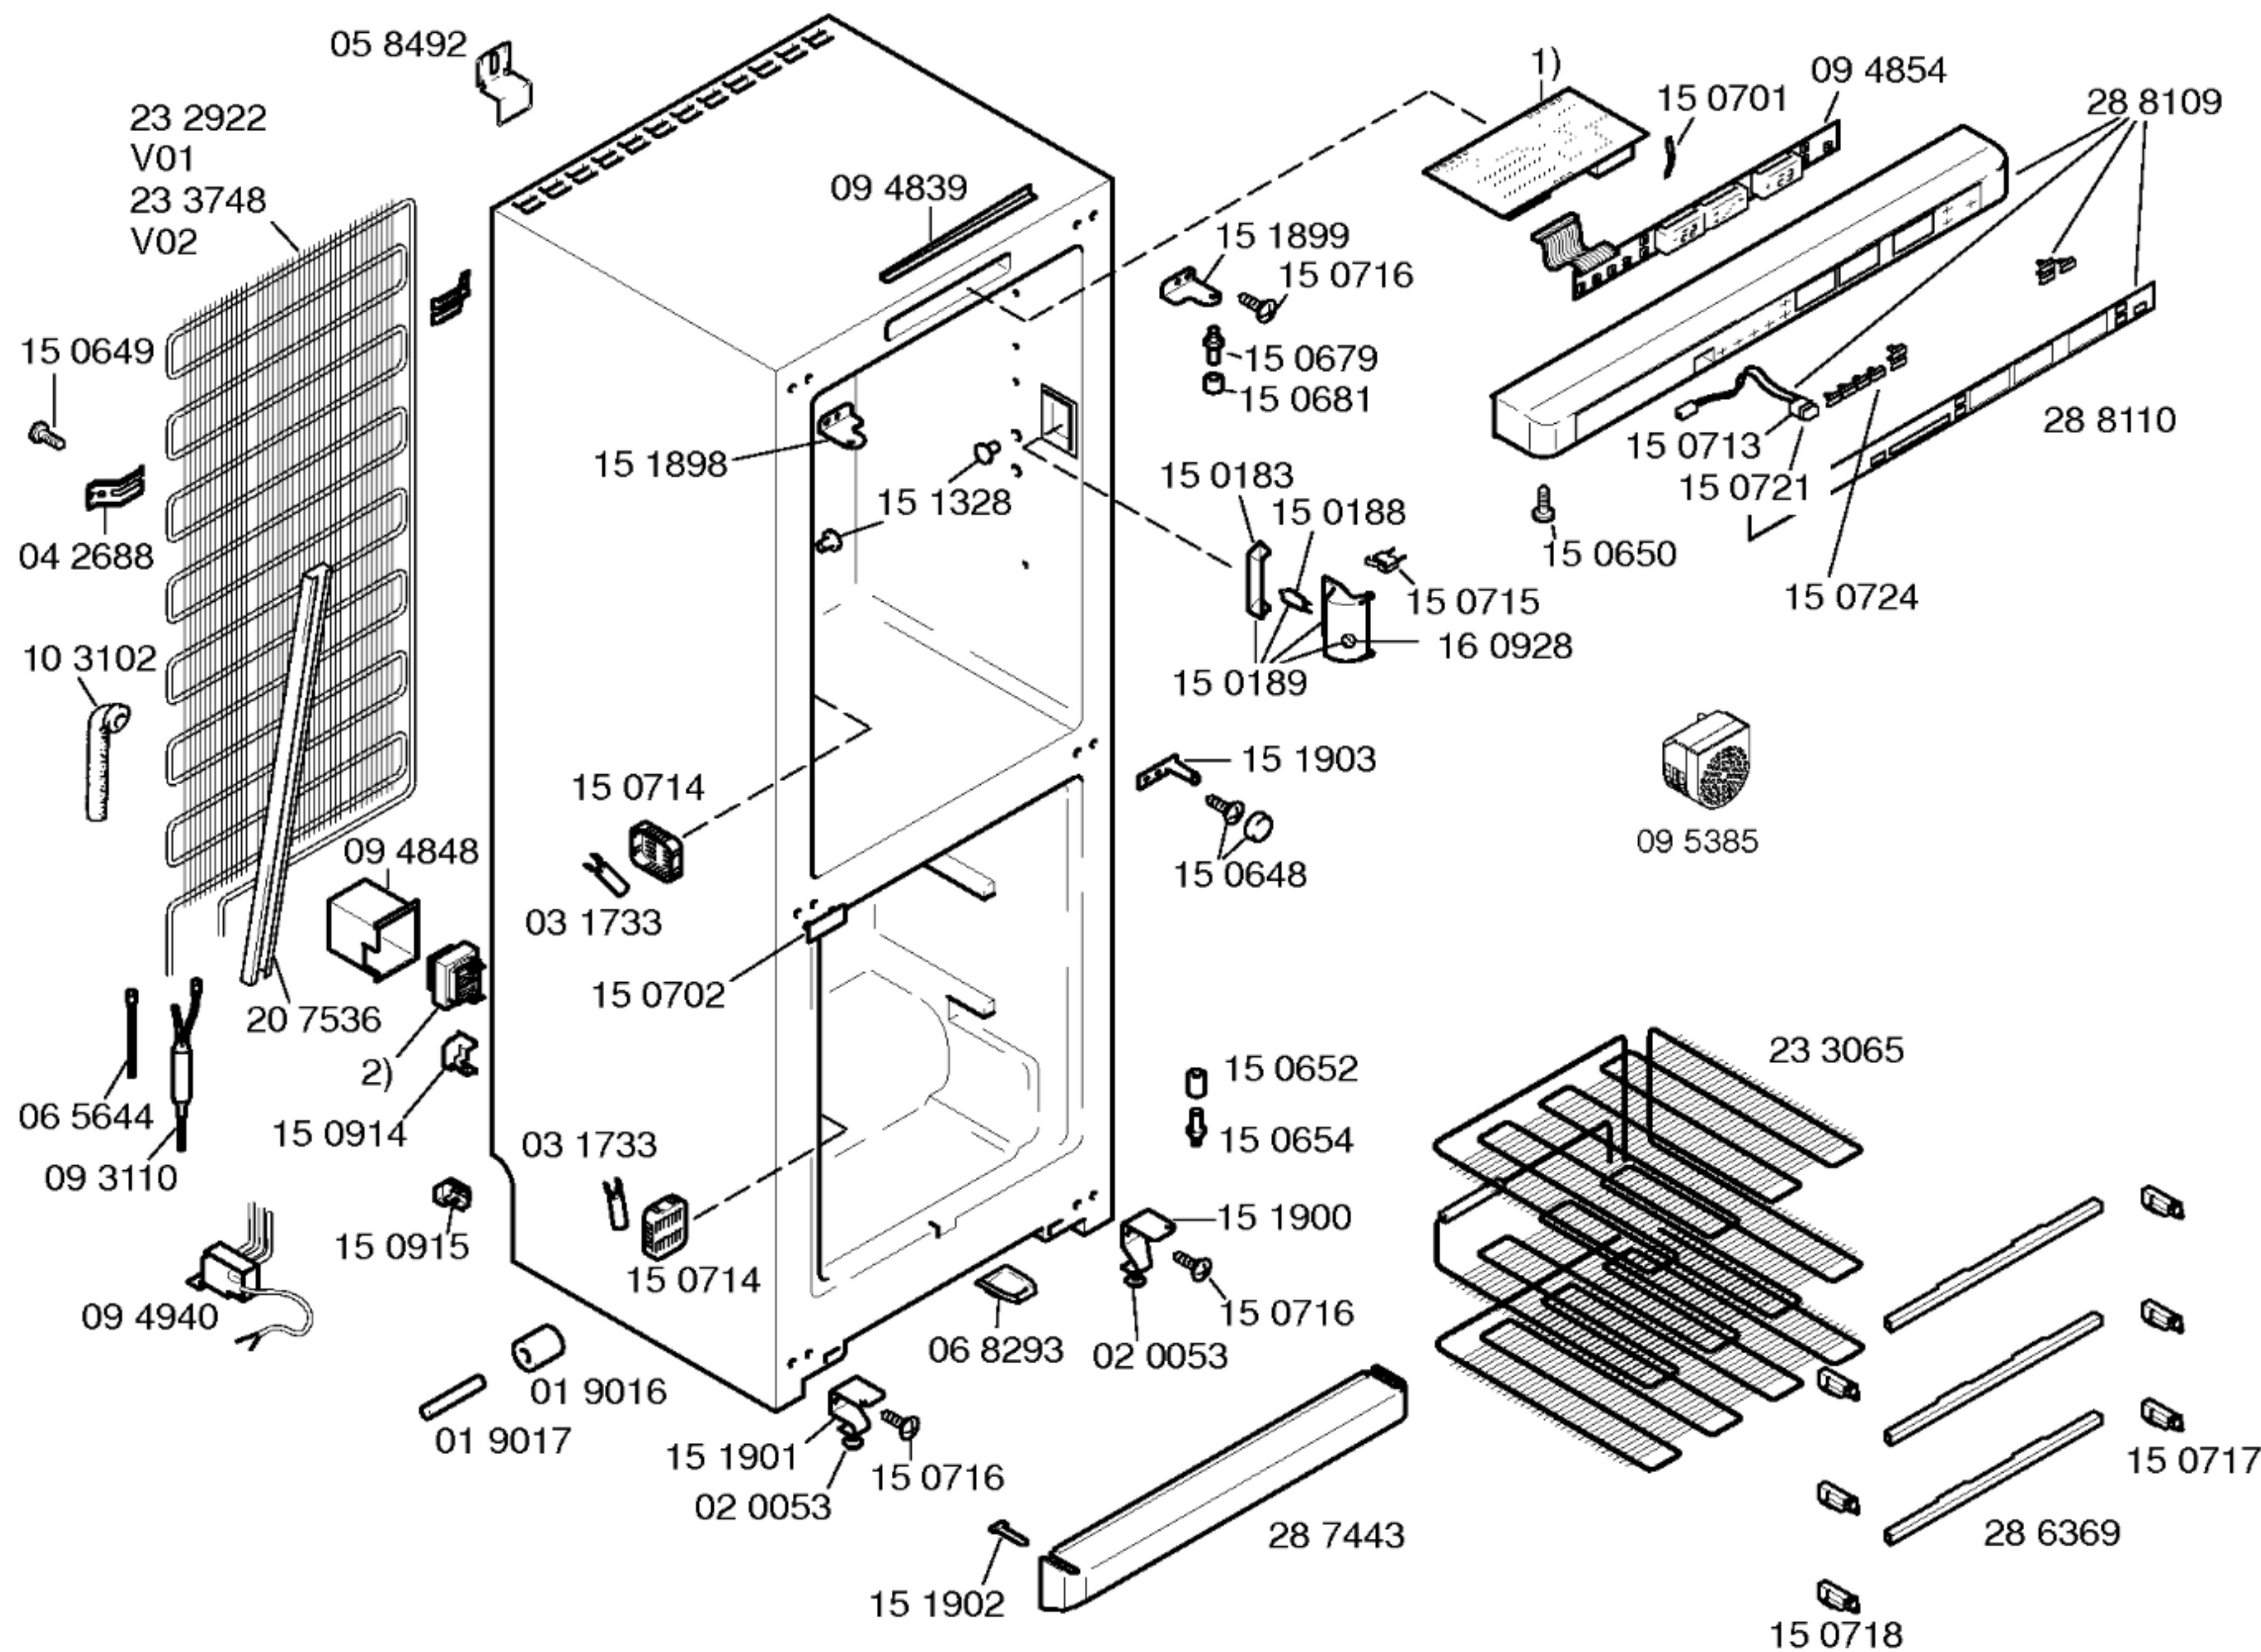

Gebrauchsanweisung
51 7612
(E,P,GR,TR)
Montageanleitung
51 6997
(D,G,I,F,NL,DK,N,SF,P)

- 1) 09 6216
2) 26 1566
V01
26 2156
V02

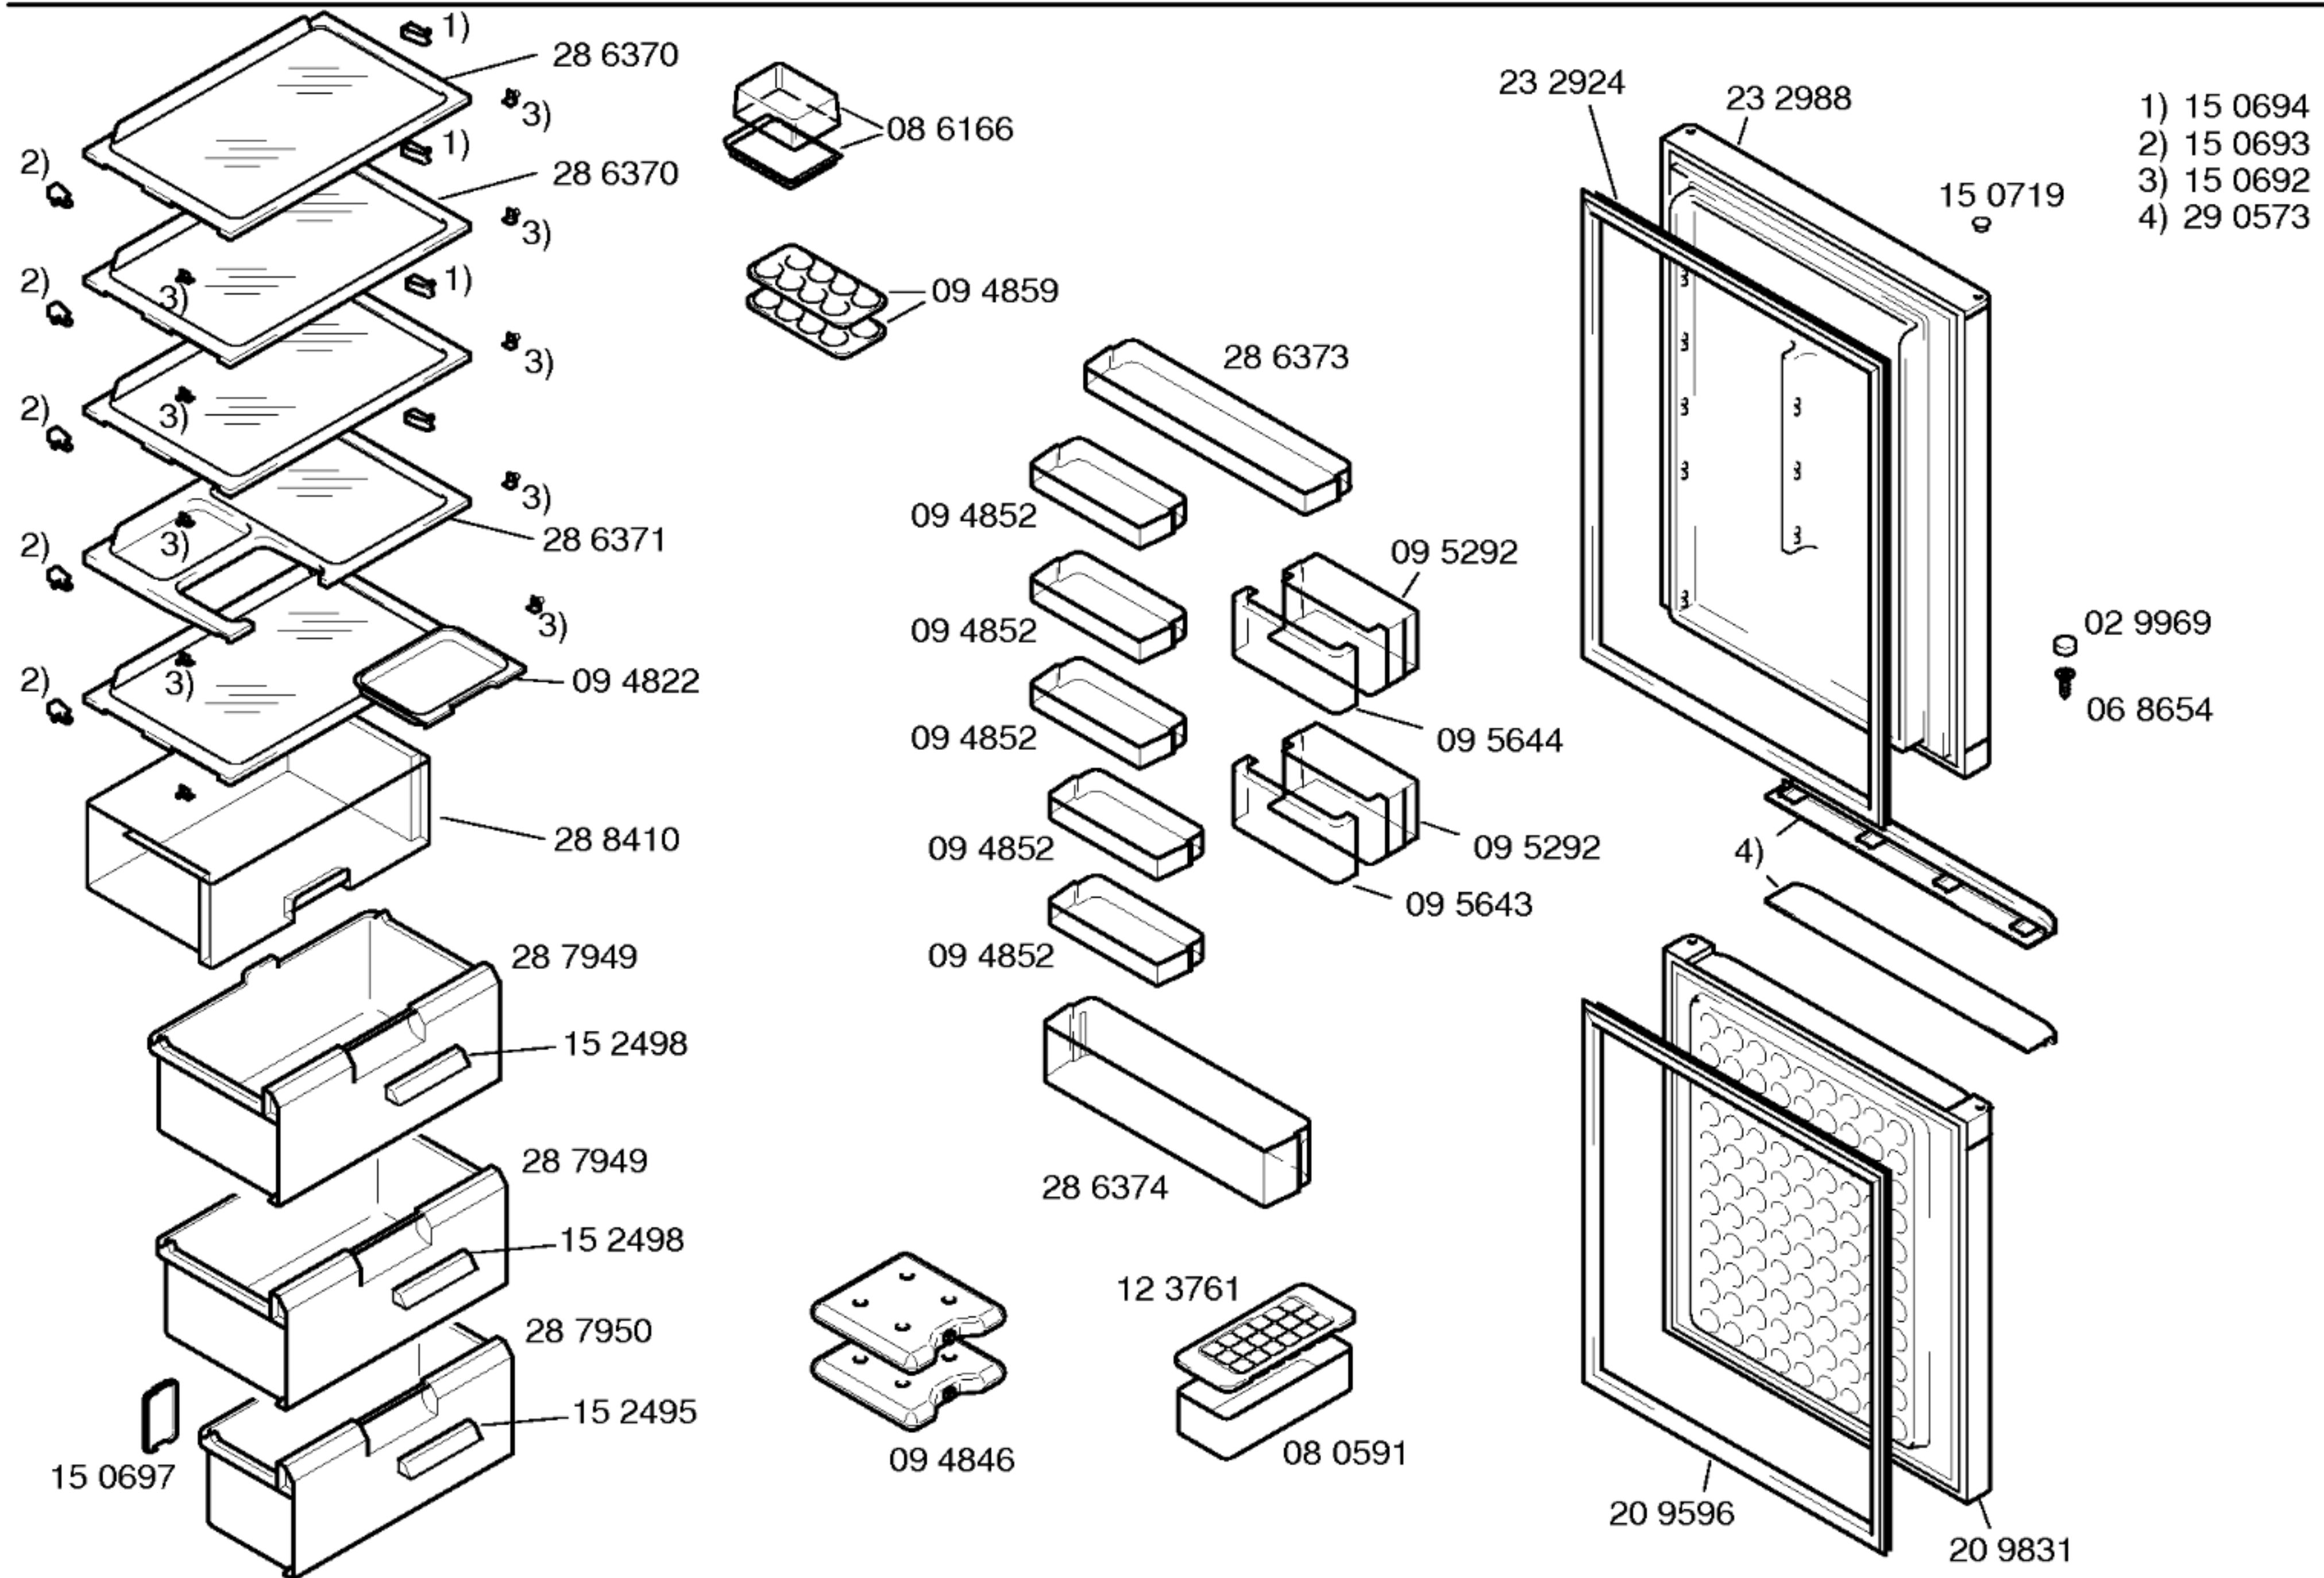

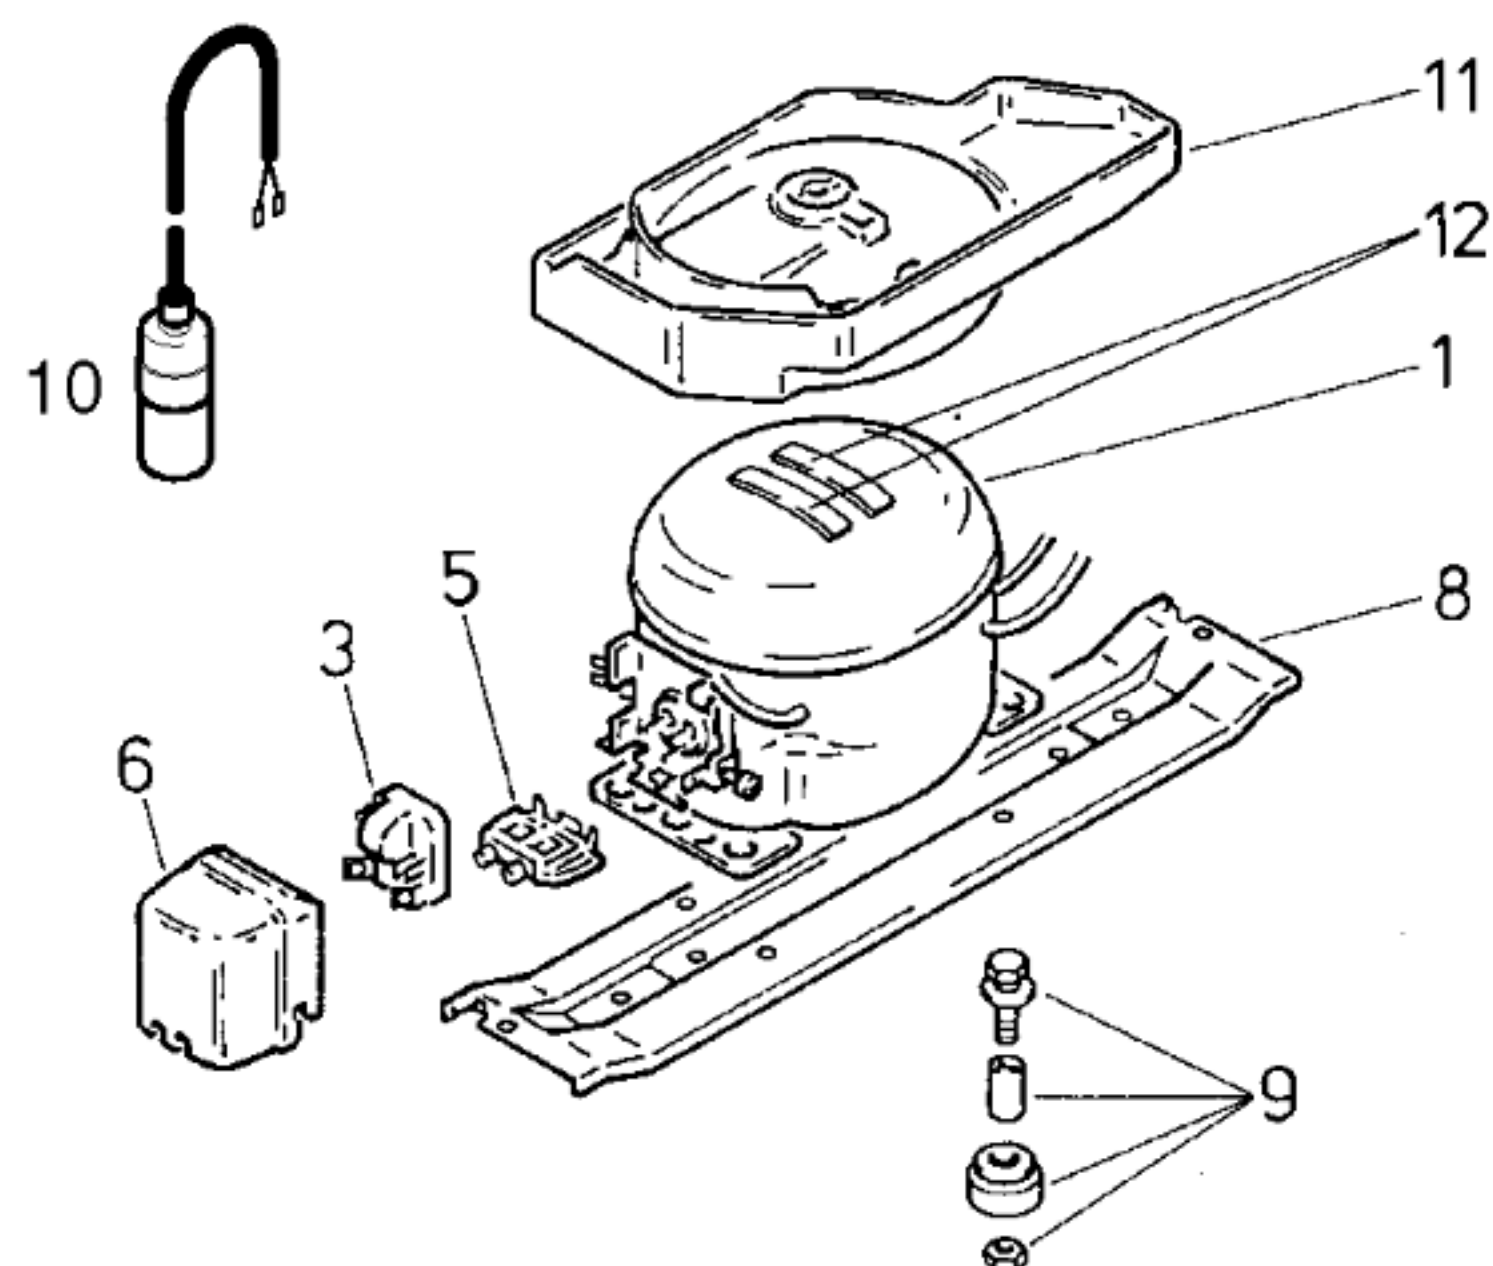

Pos.	V01, V03	V02	
	Danfoss	Matsushita	
	NLE 15 K	DA 125 E	
1	14 1311	14 1556	
2			
3	15 1055	05 8506	
4			
5	15 0760	16 2549	
6	15 1072	05 8458	
7			
8	28 7447	28 7447	
9	05 0166	05 0166	
10	15 2222	15 2222	
11	09 6212	08 8535	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita	Danfoss	
Typ/Type		DA 125 E	NLE 15 K	
Förderleistung/Delivery/Débit		l/h	2250	2637
Anlaufstrom/Starting current/Cour. de démarrage		A	8,7	11,4
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	12,0	10,7
		Hi/aux Ω	28,7	13,0
Temp.-Regler/Thermostat		Elektronisch		
Typ/Type		siehe Rep.-		
Reglerstellung/Position		Anleitung		
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$		
Valeurs de commutation		„aus“		
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée		W	120	146
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω	1650	
Spannung/Voltage/Tension		V	220	

* siehe Typenschild