 



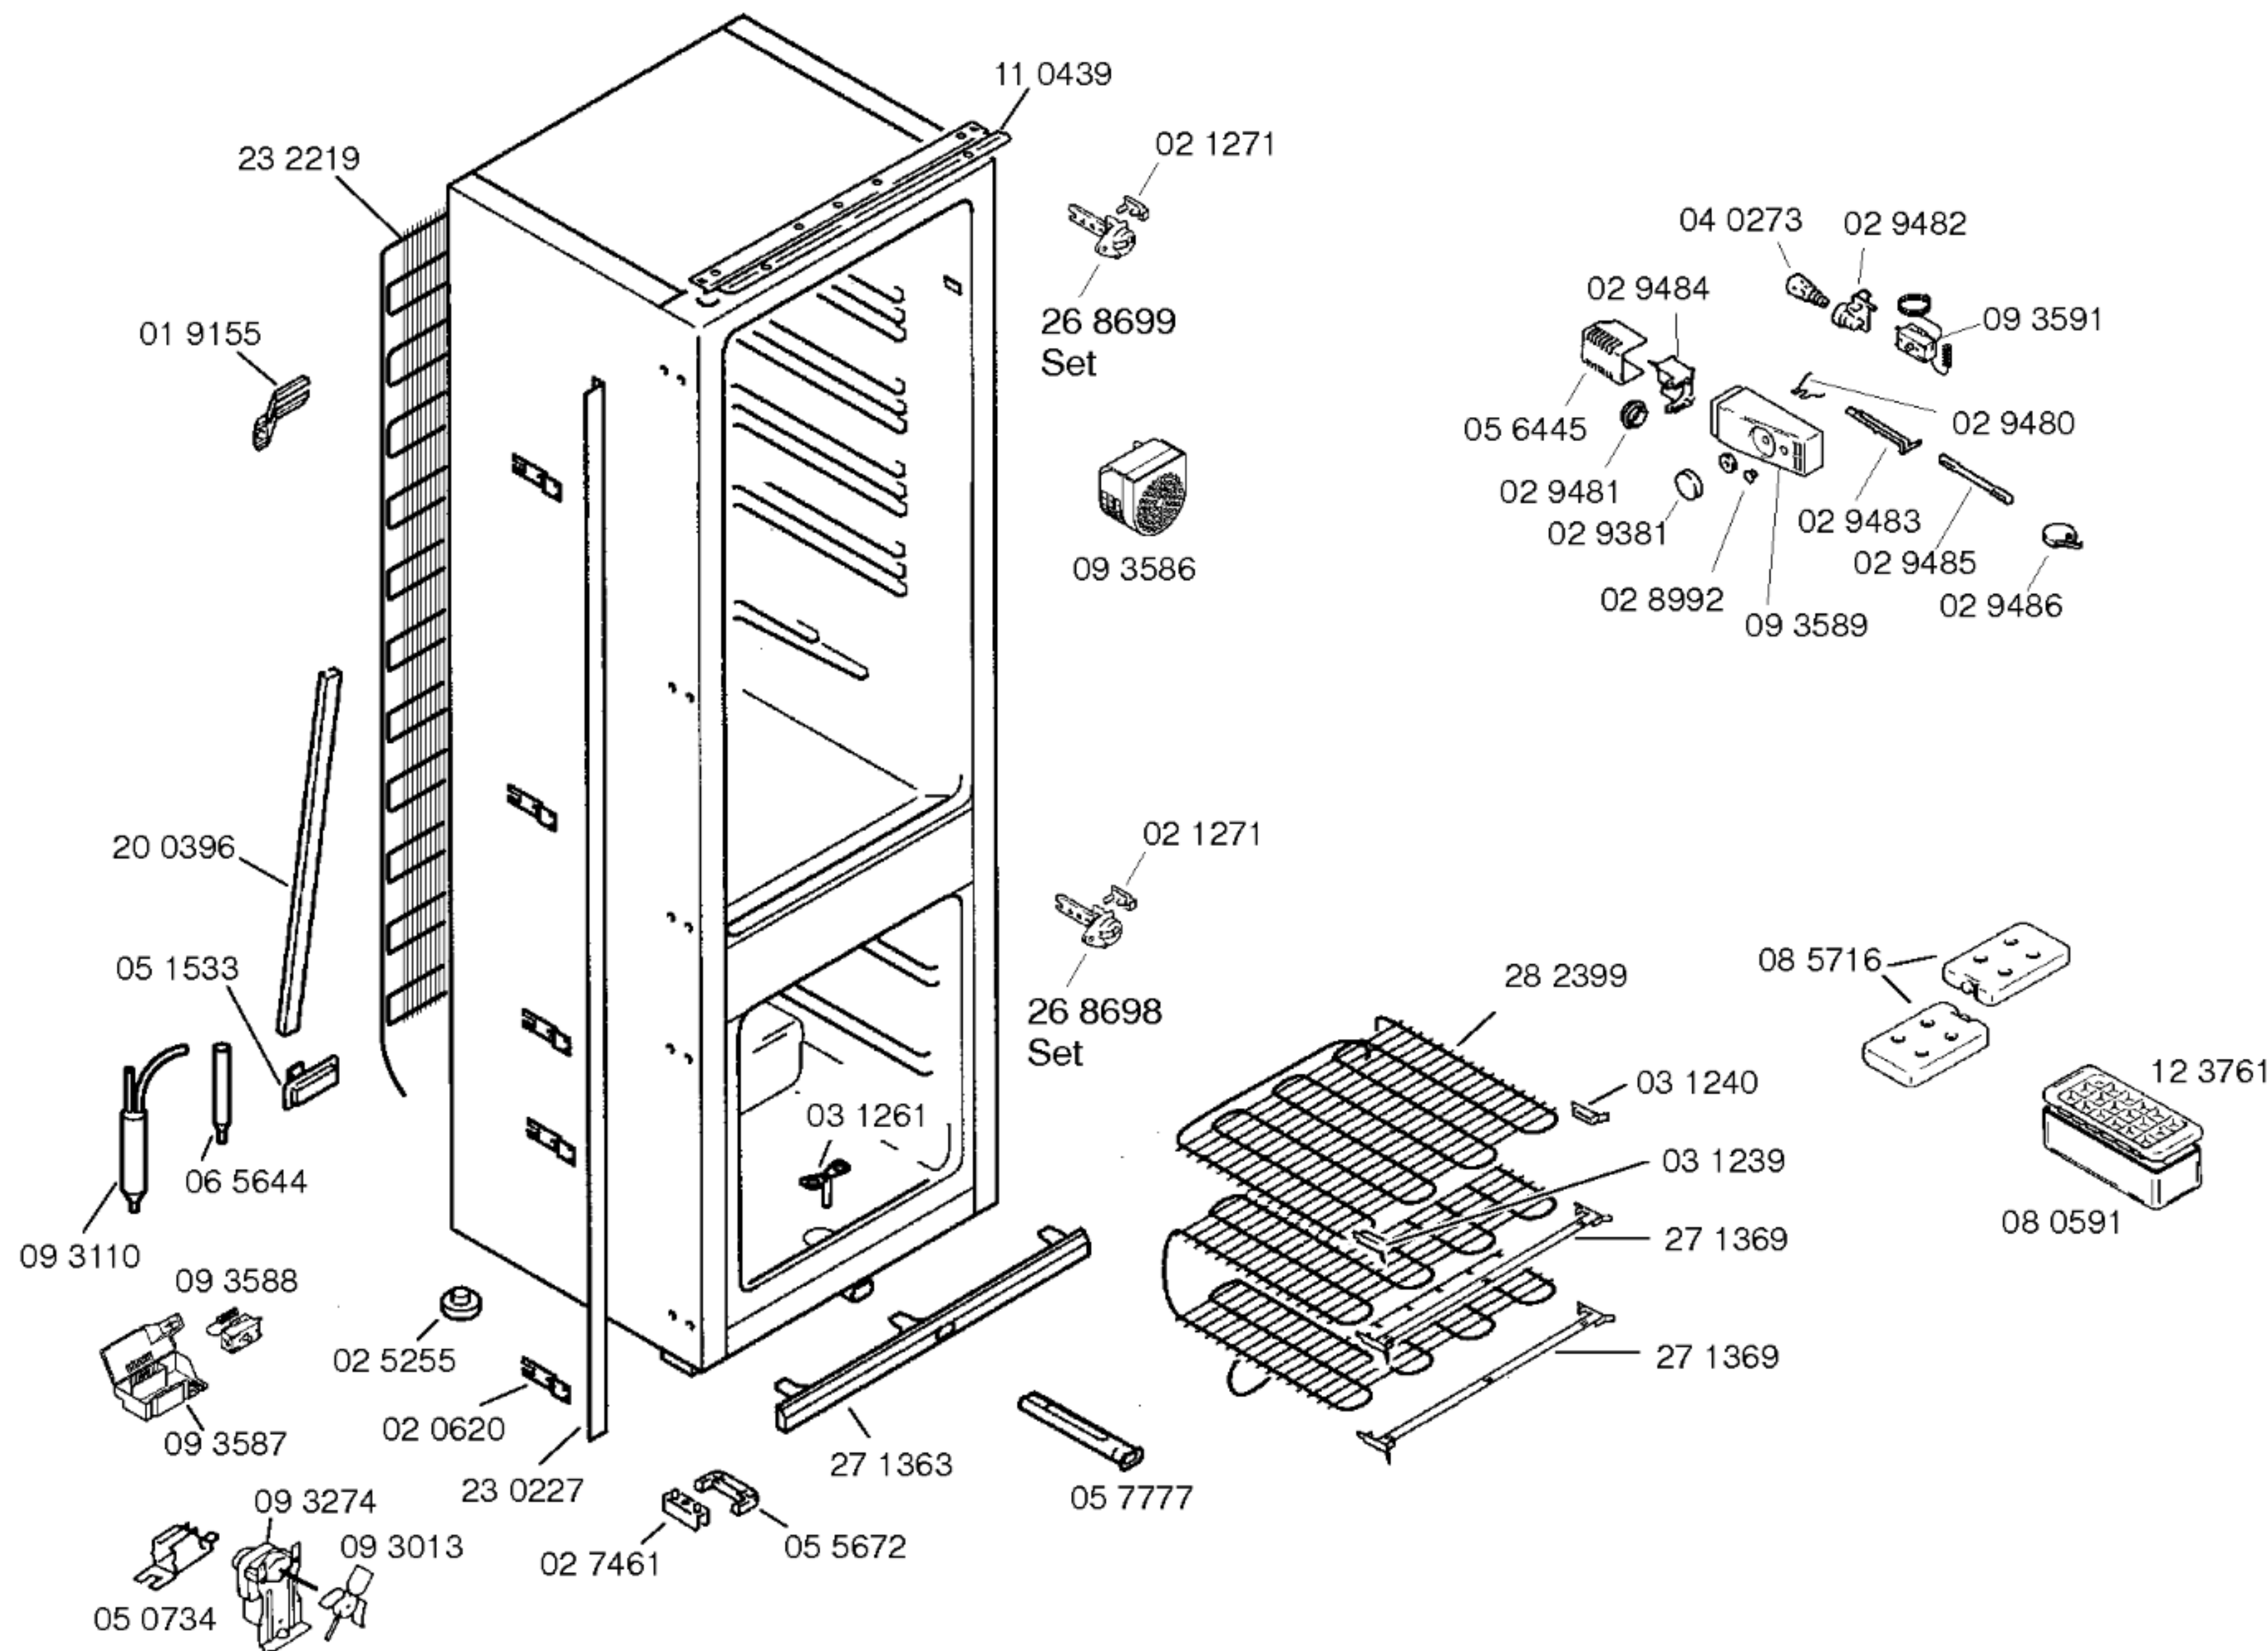



Gebrauchsanweisung
51 5547
(D,GB,F,I,NL,S,E,DK,N,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,SF)

Befestigungssatz
08 4137

   Schraubensatz
08 4136

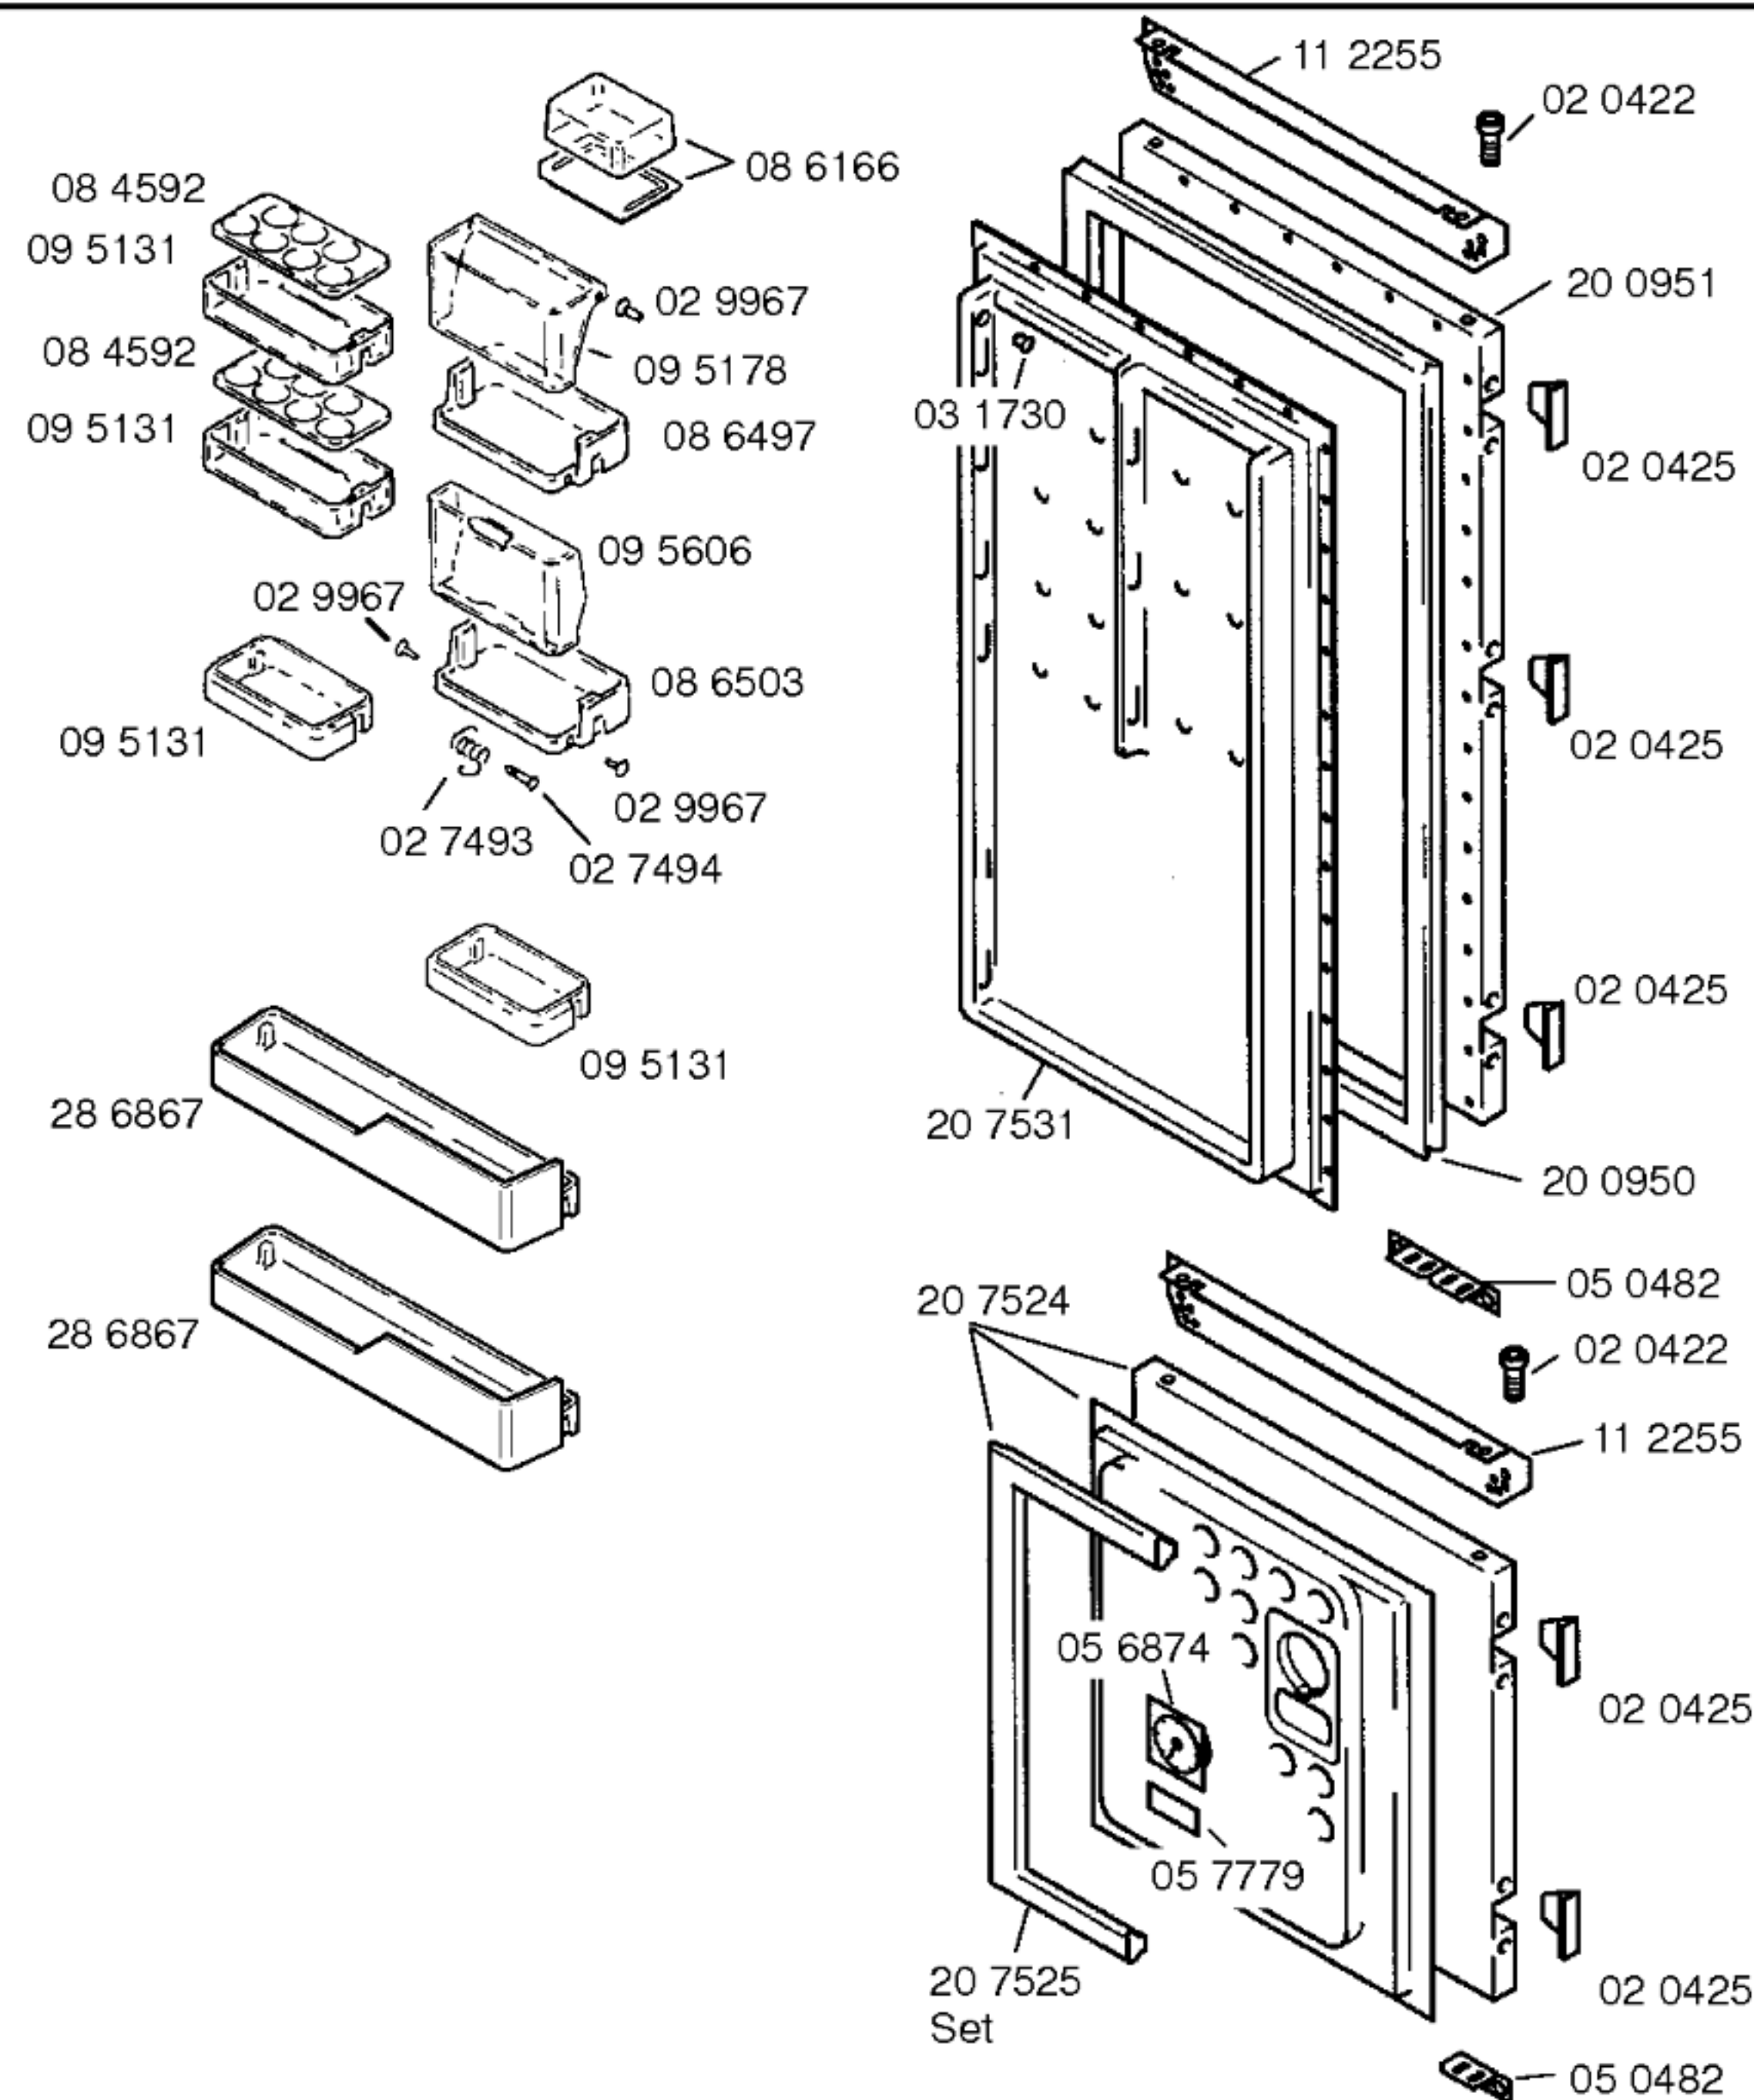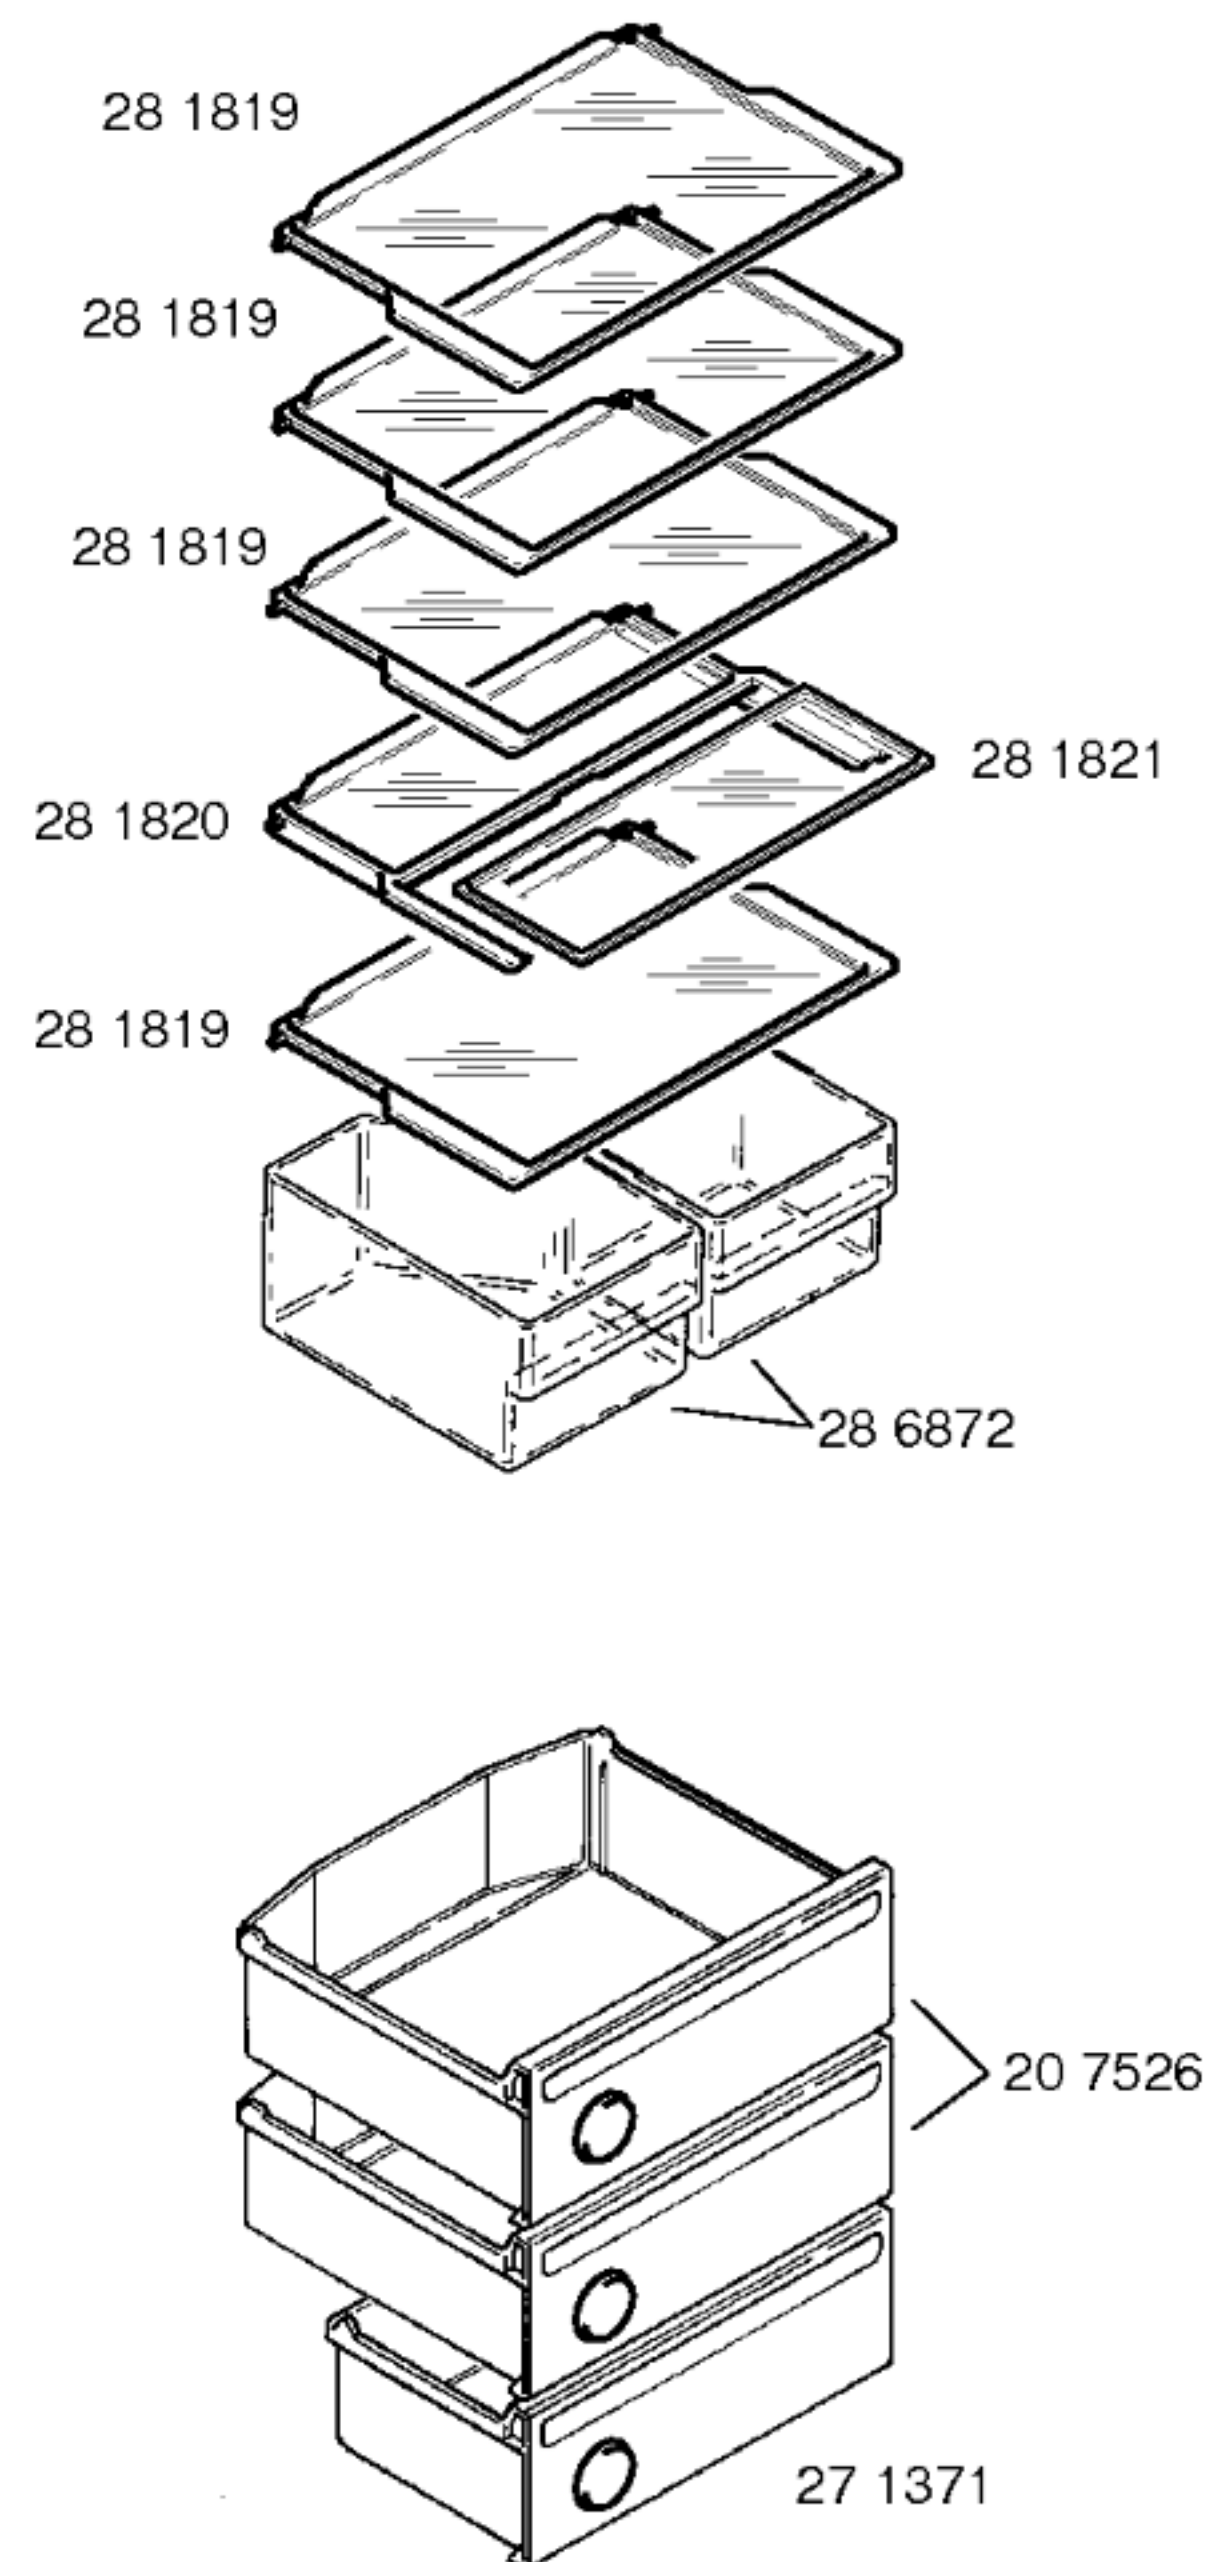

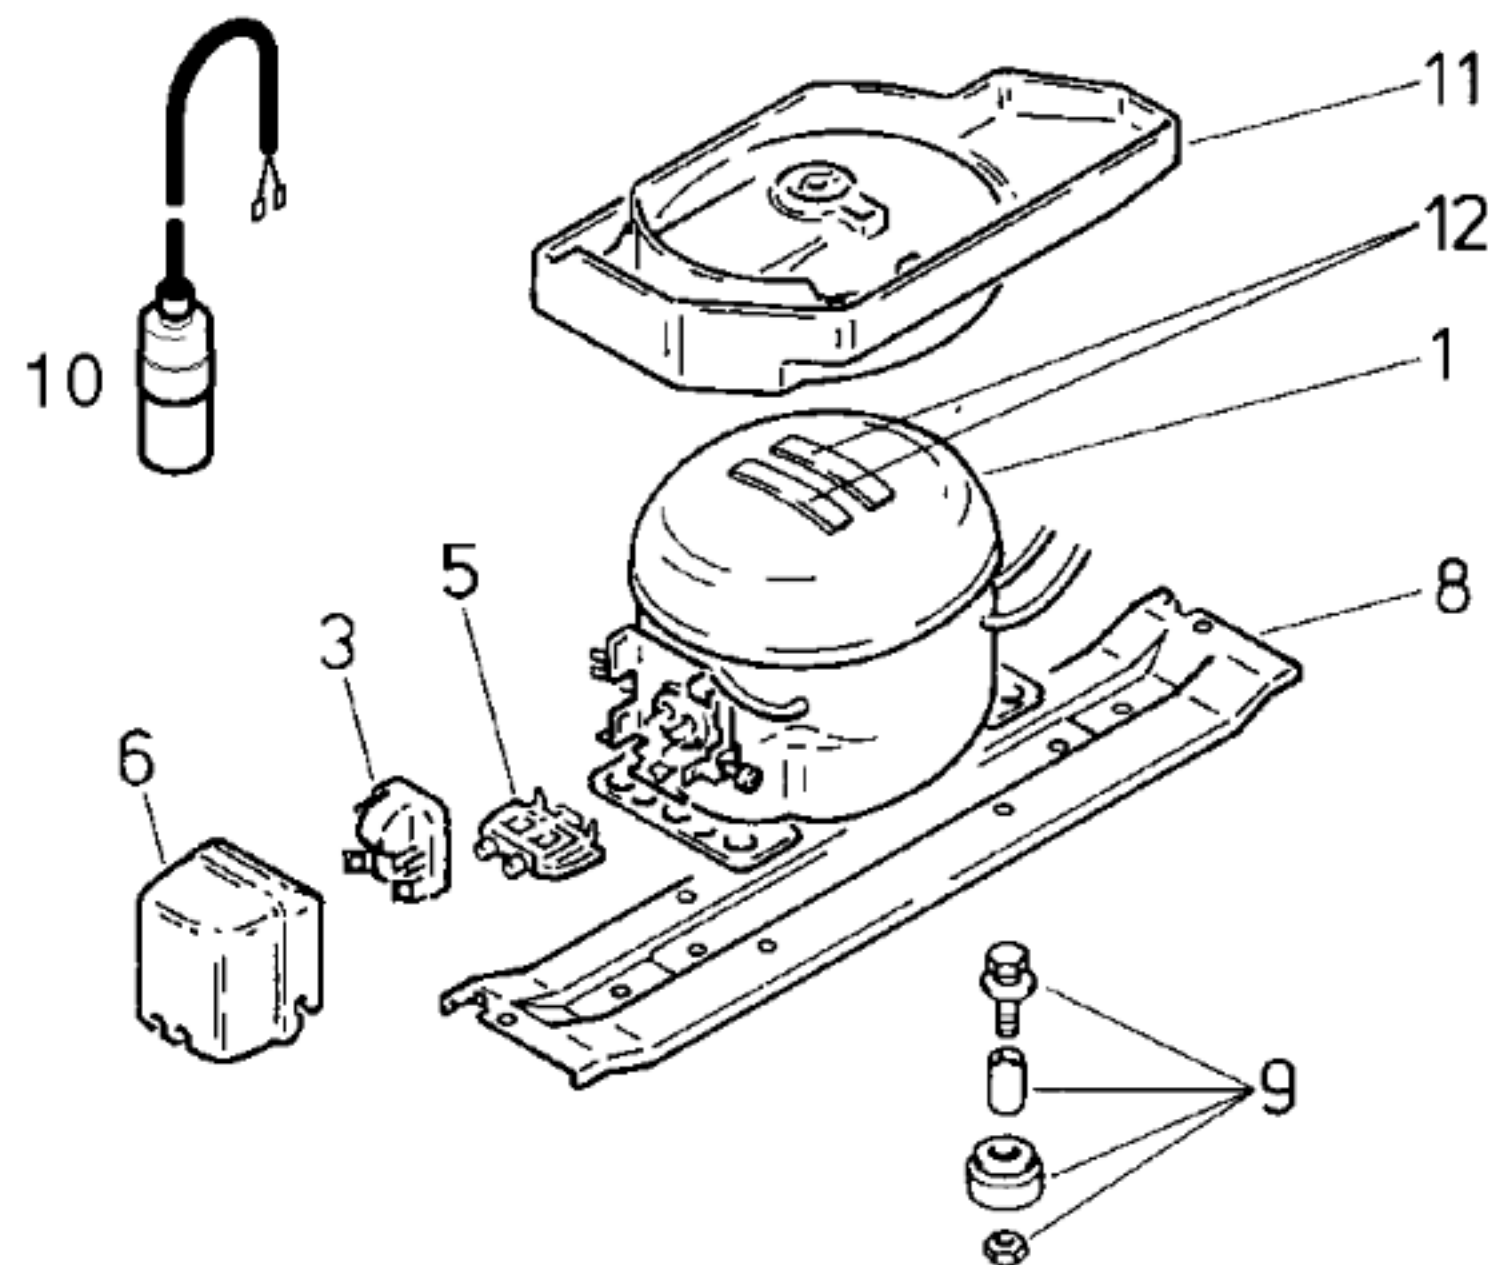

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLE9F			
Förderleistung/Delivery/Débit		l/h	1503		
Anlaufstrom/Starting current/Cour de démarrage		A	10,5		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	13,0	
		Hi/aux	Ω	17,6	
Temp.-Regler/Thermostat		Innentemp.		Außentemp.	
Typ/Type		Ranco	K52-1	K50-L5772	
Reglerstellung/Position		°C	kalt	warm	
Schaltwerte/Switching values/			Kontaktf.	+4	+7,5
Valeurs de commutation			Lufft.	0	+10
(„abtauen“ od.)					
				+31,5	
				+28,5	
Füllmenge/Fill.quantity/Charge		R134a	g	155	
Anschlußwert/Conn.load/Puiss. connectée		W	150		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Schaltuhr/Timer/Minuterie de contact					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.			
	Danfoss		
	NLE9F		
1	14 1257		
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 6924		
12	05 6008		