


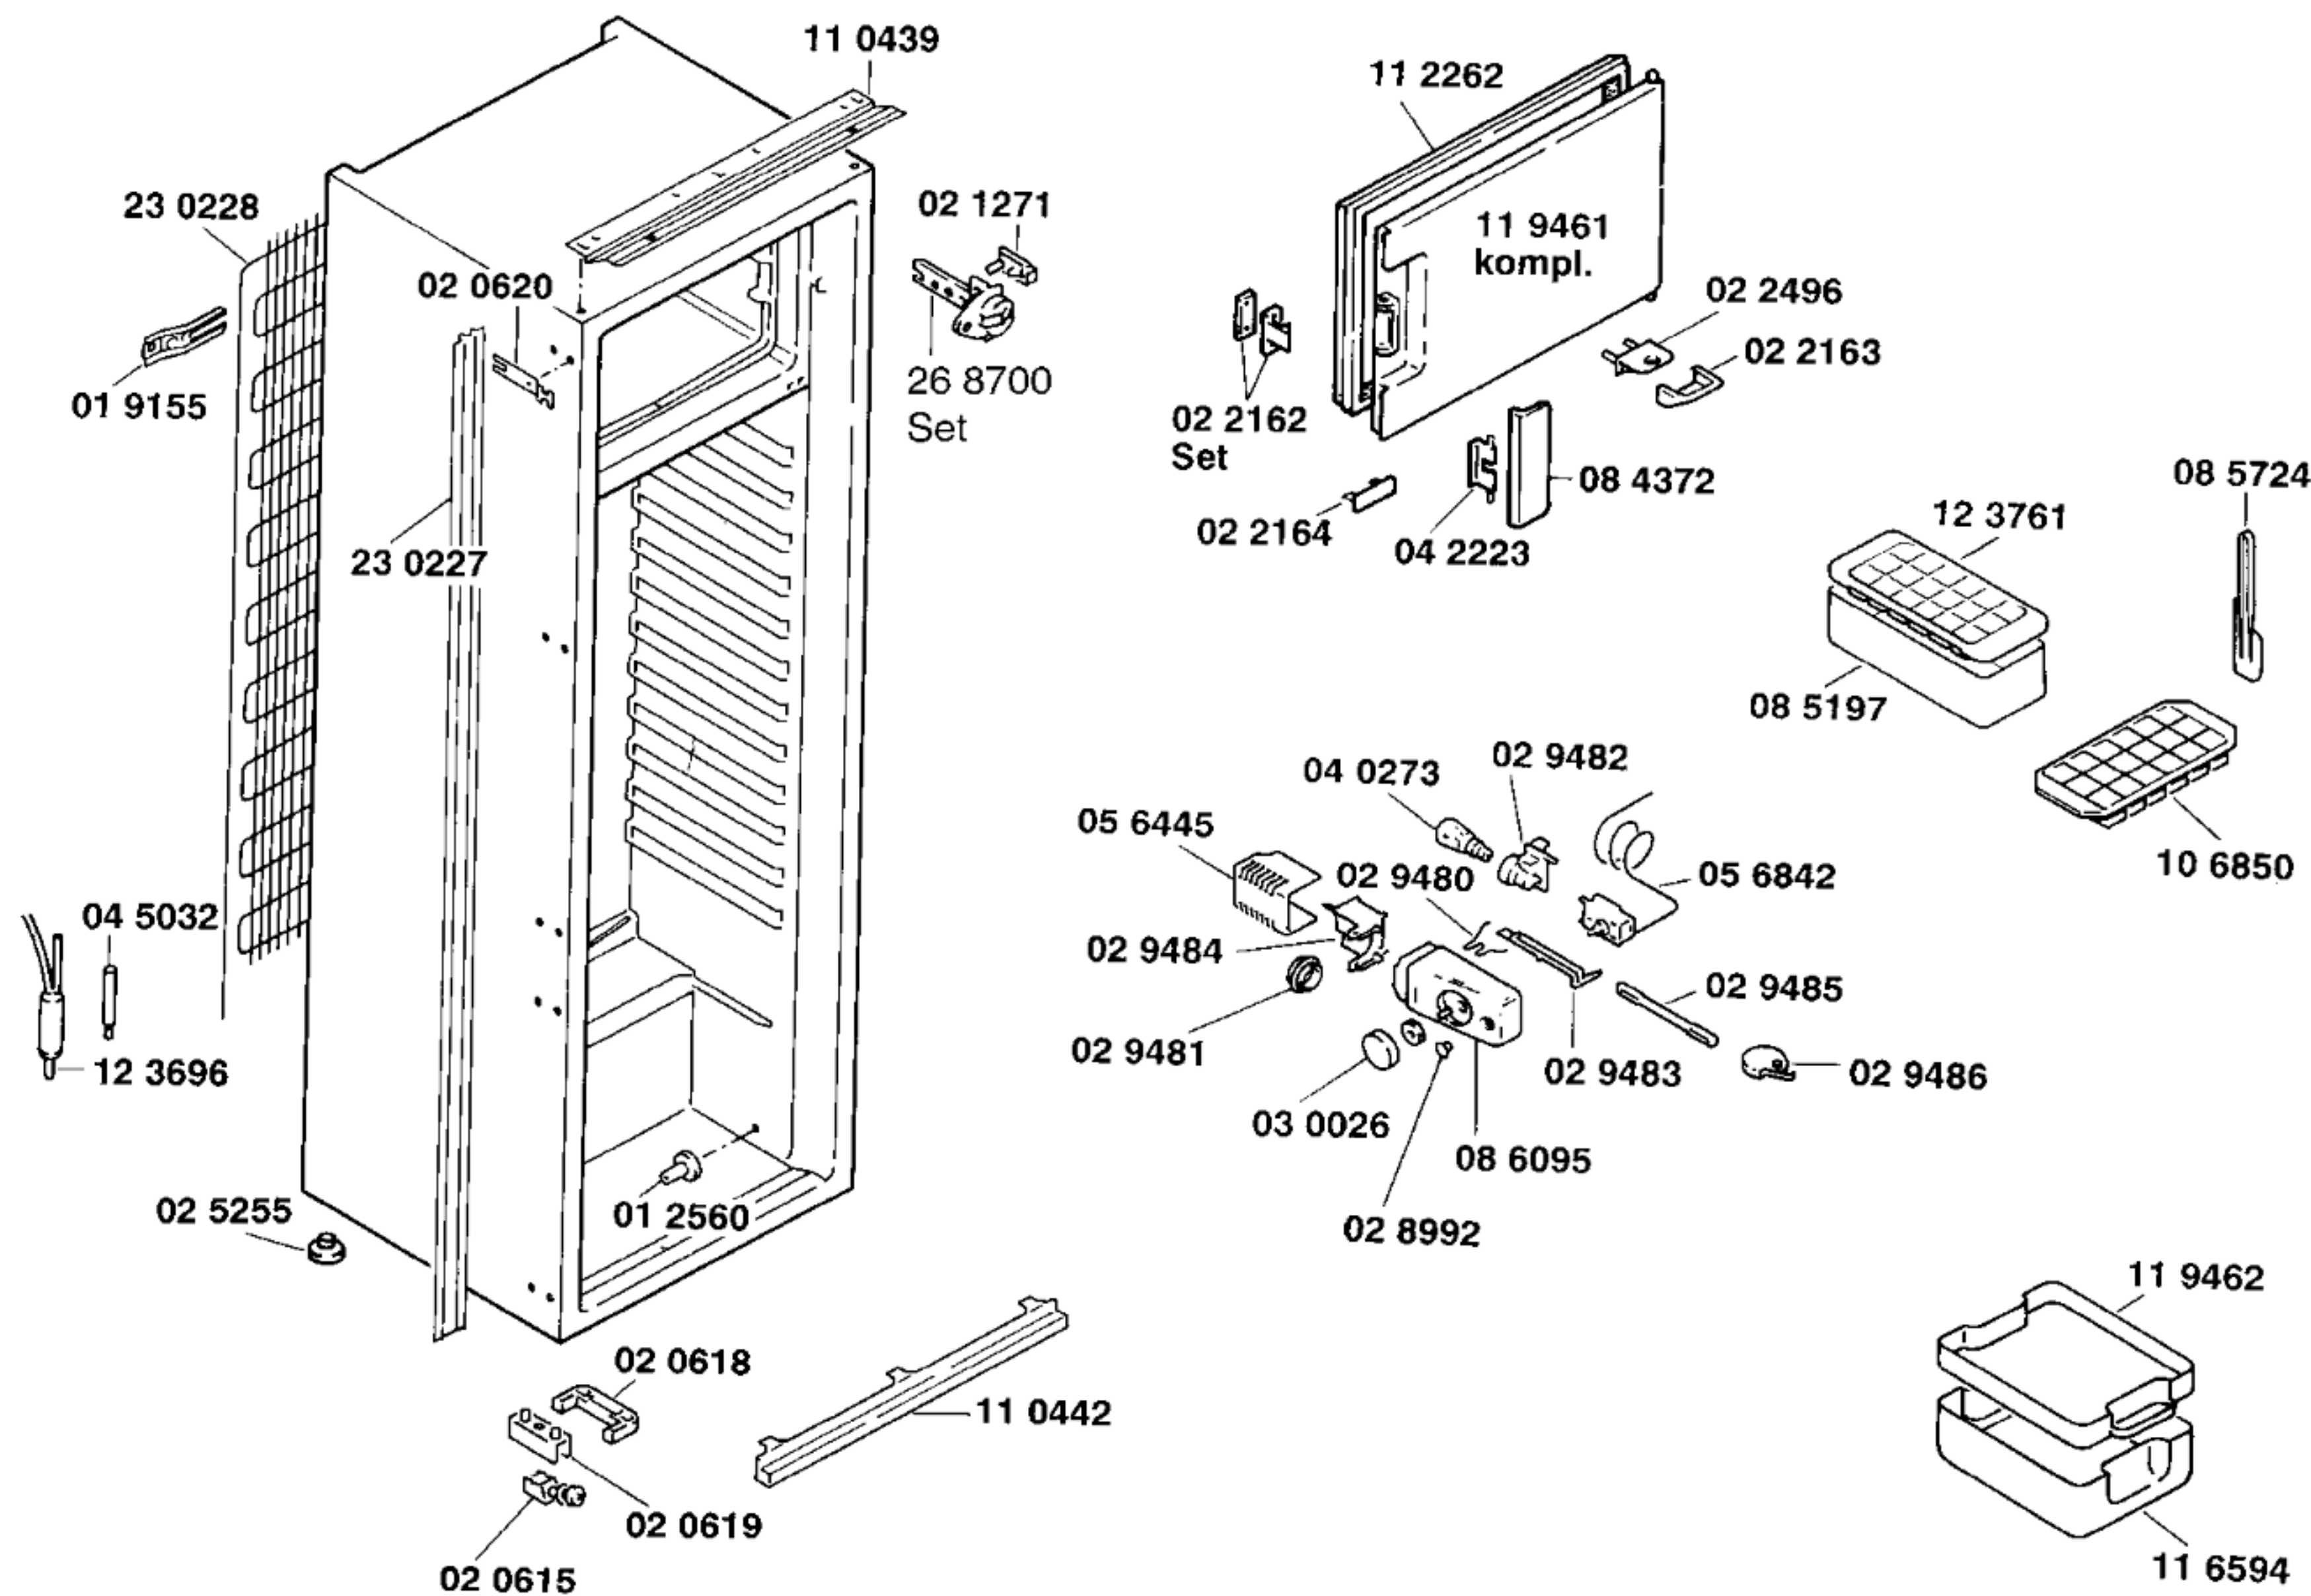



51 2748
Gebrauchsanweisung
(D,GB,F,I,NL,E)

51 2329
Montageanleitung
(D,GB,F,I,NL,N,S,E)

08 4136
Schraubensatz

08 5059
Befestigungssatz

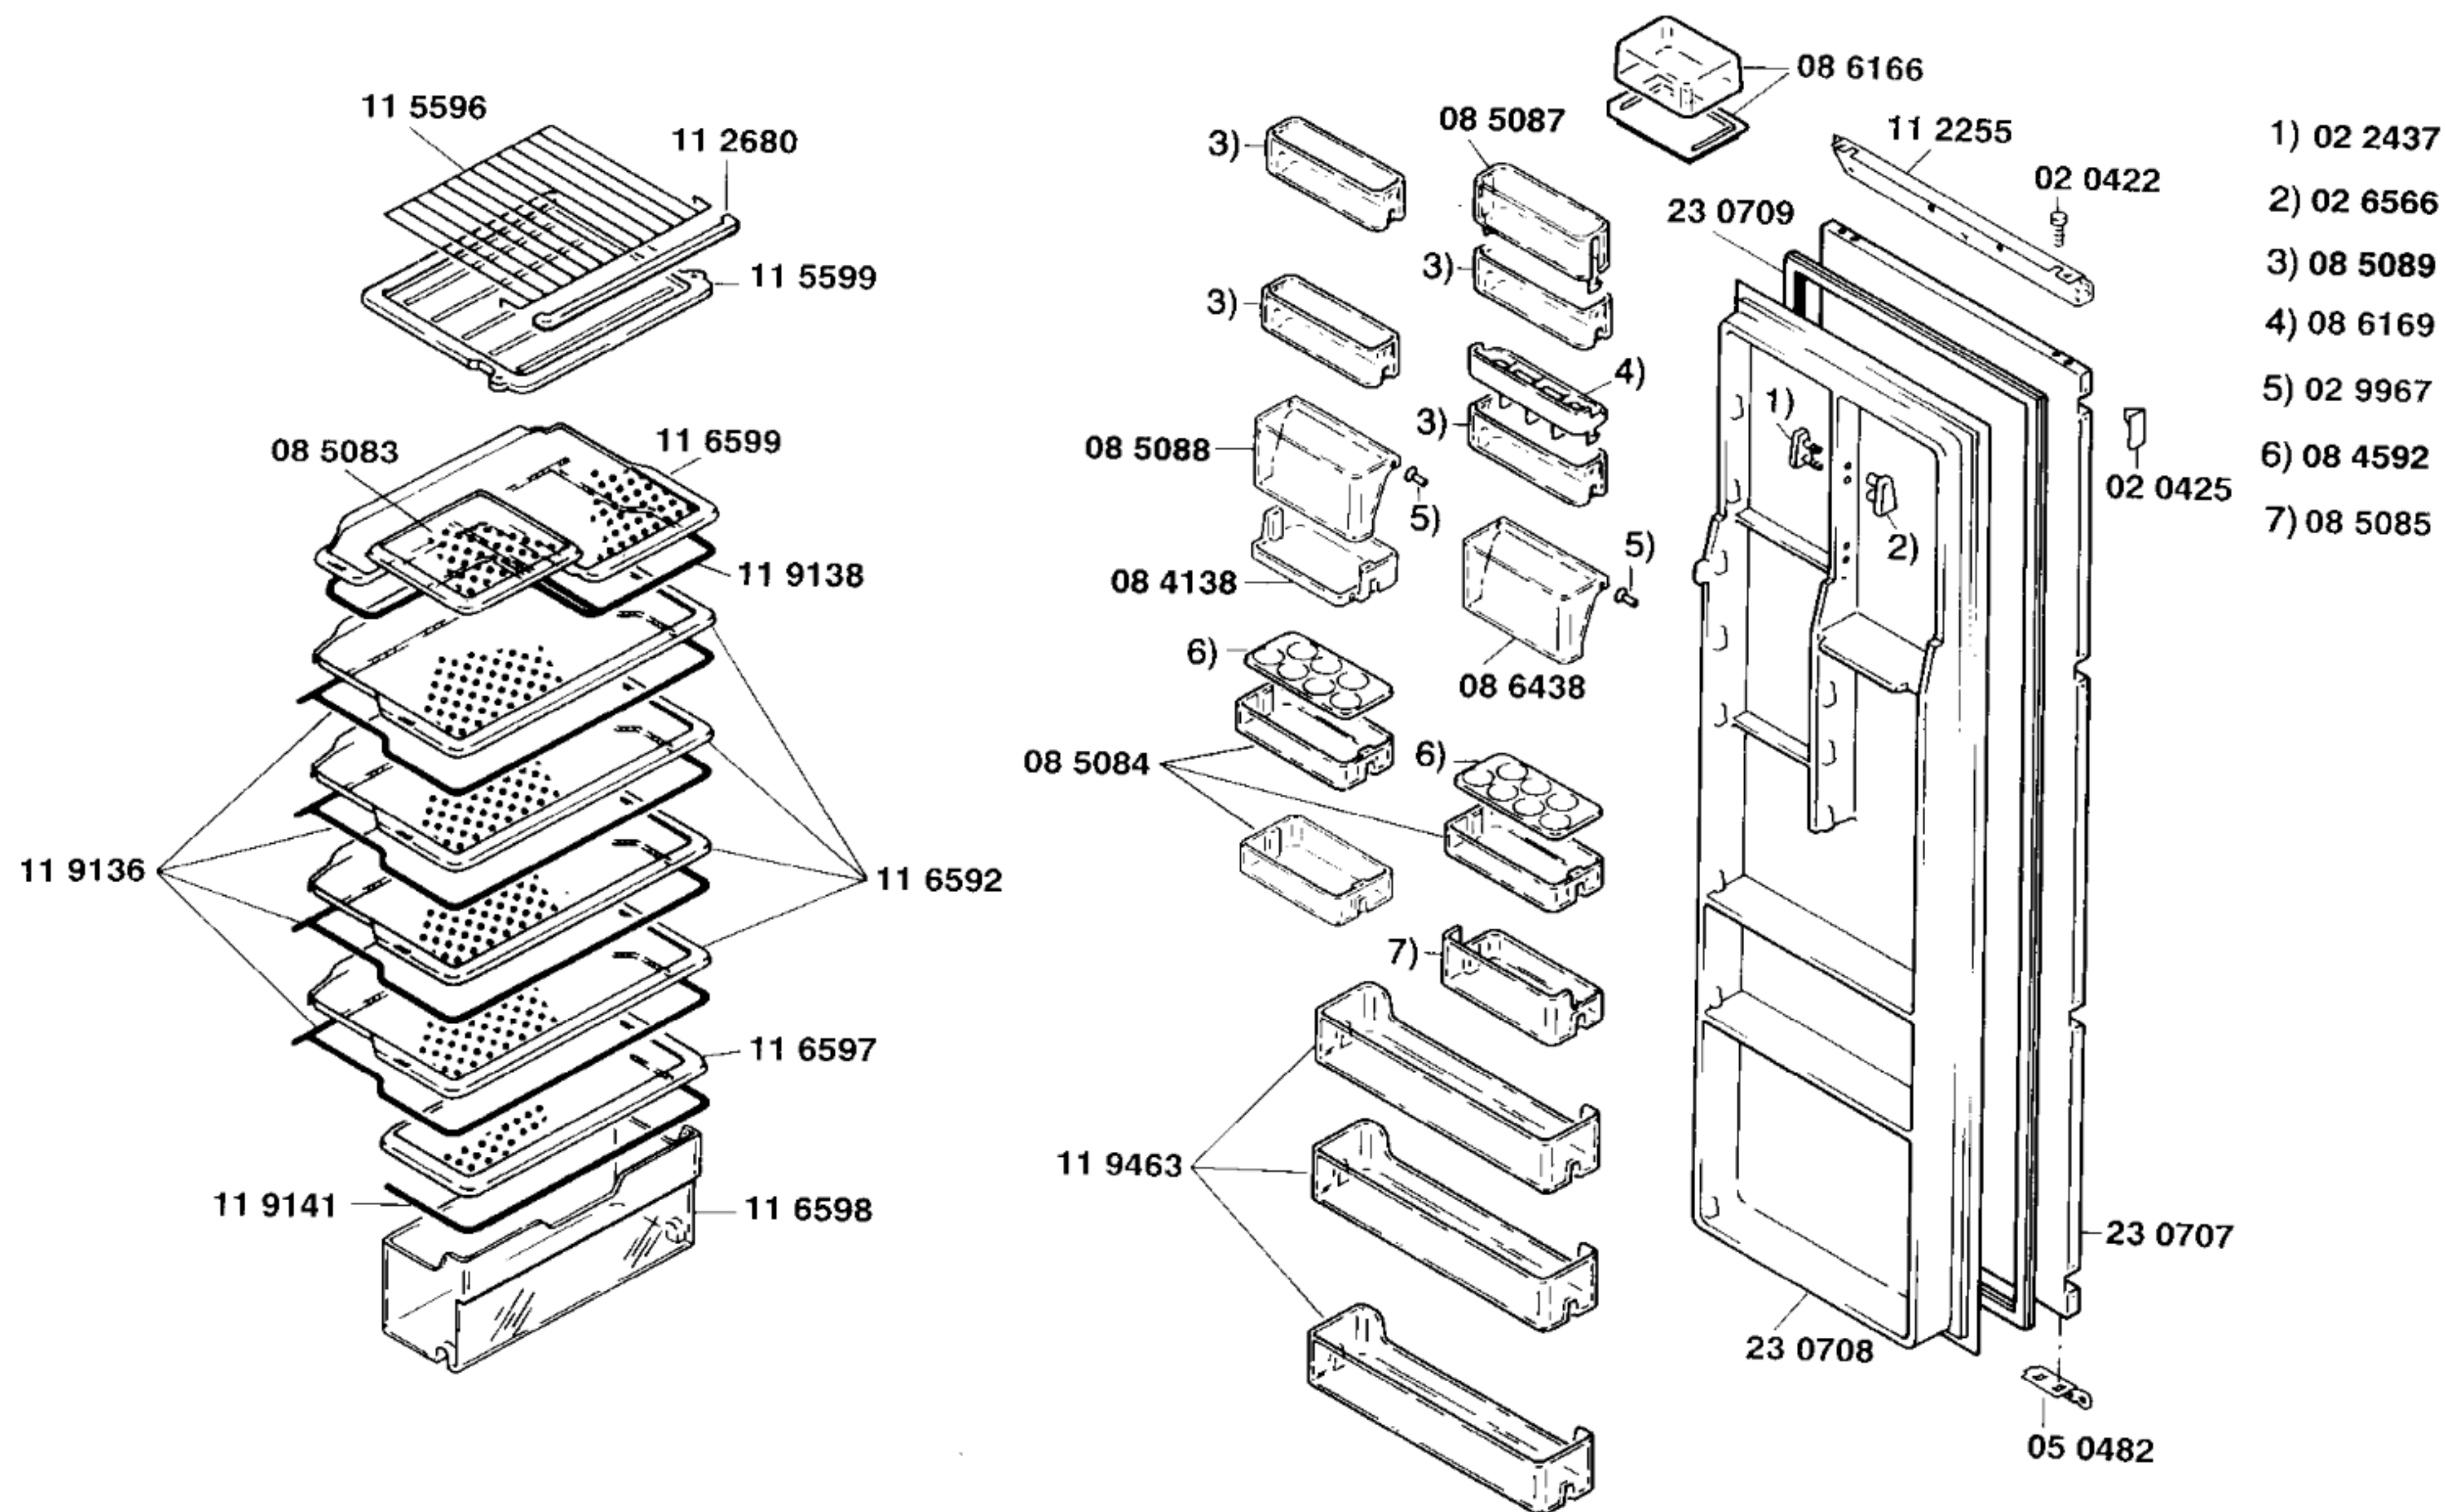

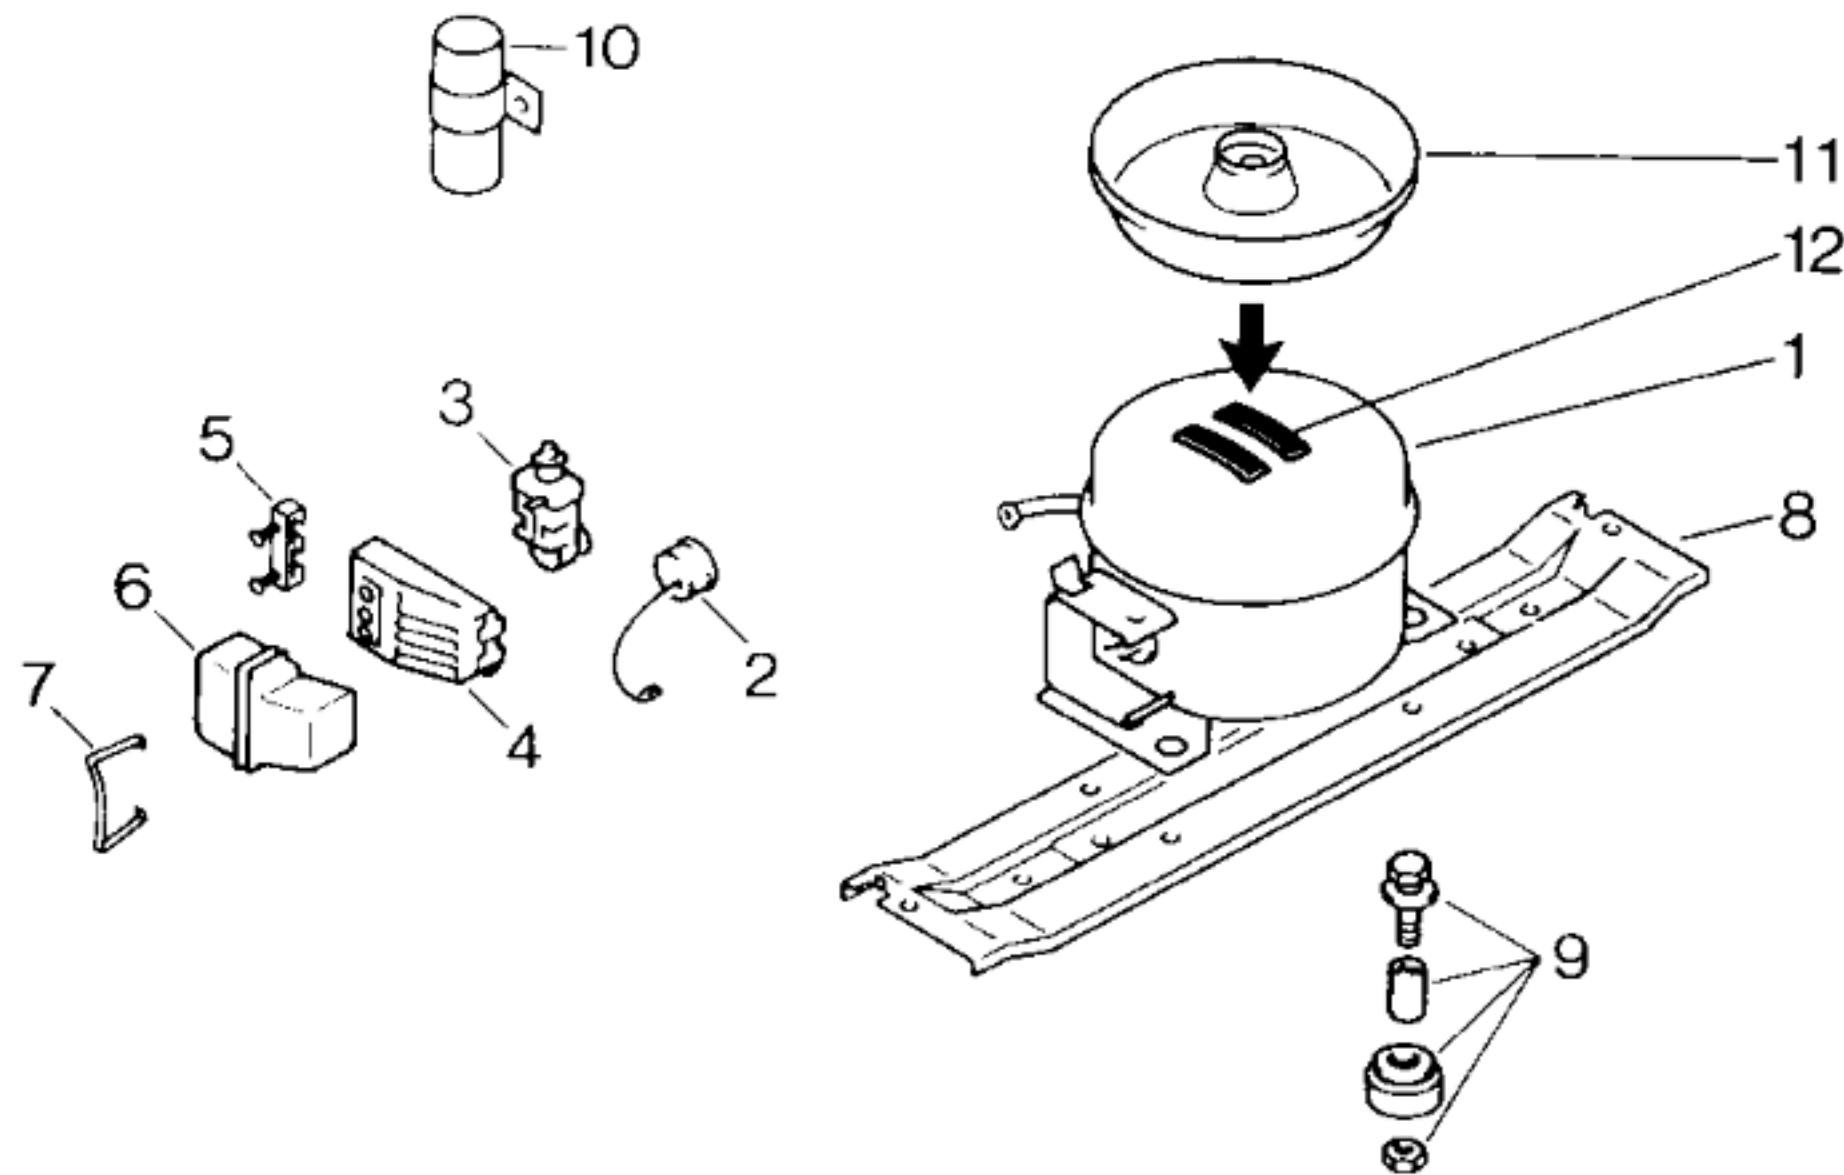

Pos.	F1		
	Aspera		
	BY 1116 A		
1	14 0405		
2	02 6559		
3	02 2342		
4	05 1748		
5			
6	05 1746		
7	02 2339		
8	11 1838		
9	05 0166		
10			
11	08 5091		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Aspera		
Typ/Type	BY 1116 A		
Förderleistung/Delivery/Débit	l/h	1450	
Anlaufstrom/Starting current/Cour. de démarrage	A	9,9	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	11,7
	Hi/aux	Ω	37,7
Temp.-Regler/Thermostat	Ranco		
Typ/Type	K 59		
Reglerstellung/Position	kalt	warm	
Schaltwerte/Switching values/	+ 4,5	+ 4,5	
Valeurs de commutation	- 31,0	- 13,5	
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R12	g	180
Anschlußwert/Conn.load/Puiss. connectée	W	150	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω	430 ± 10%	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		