

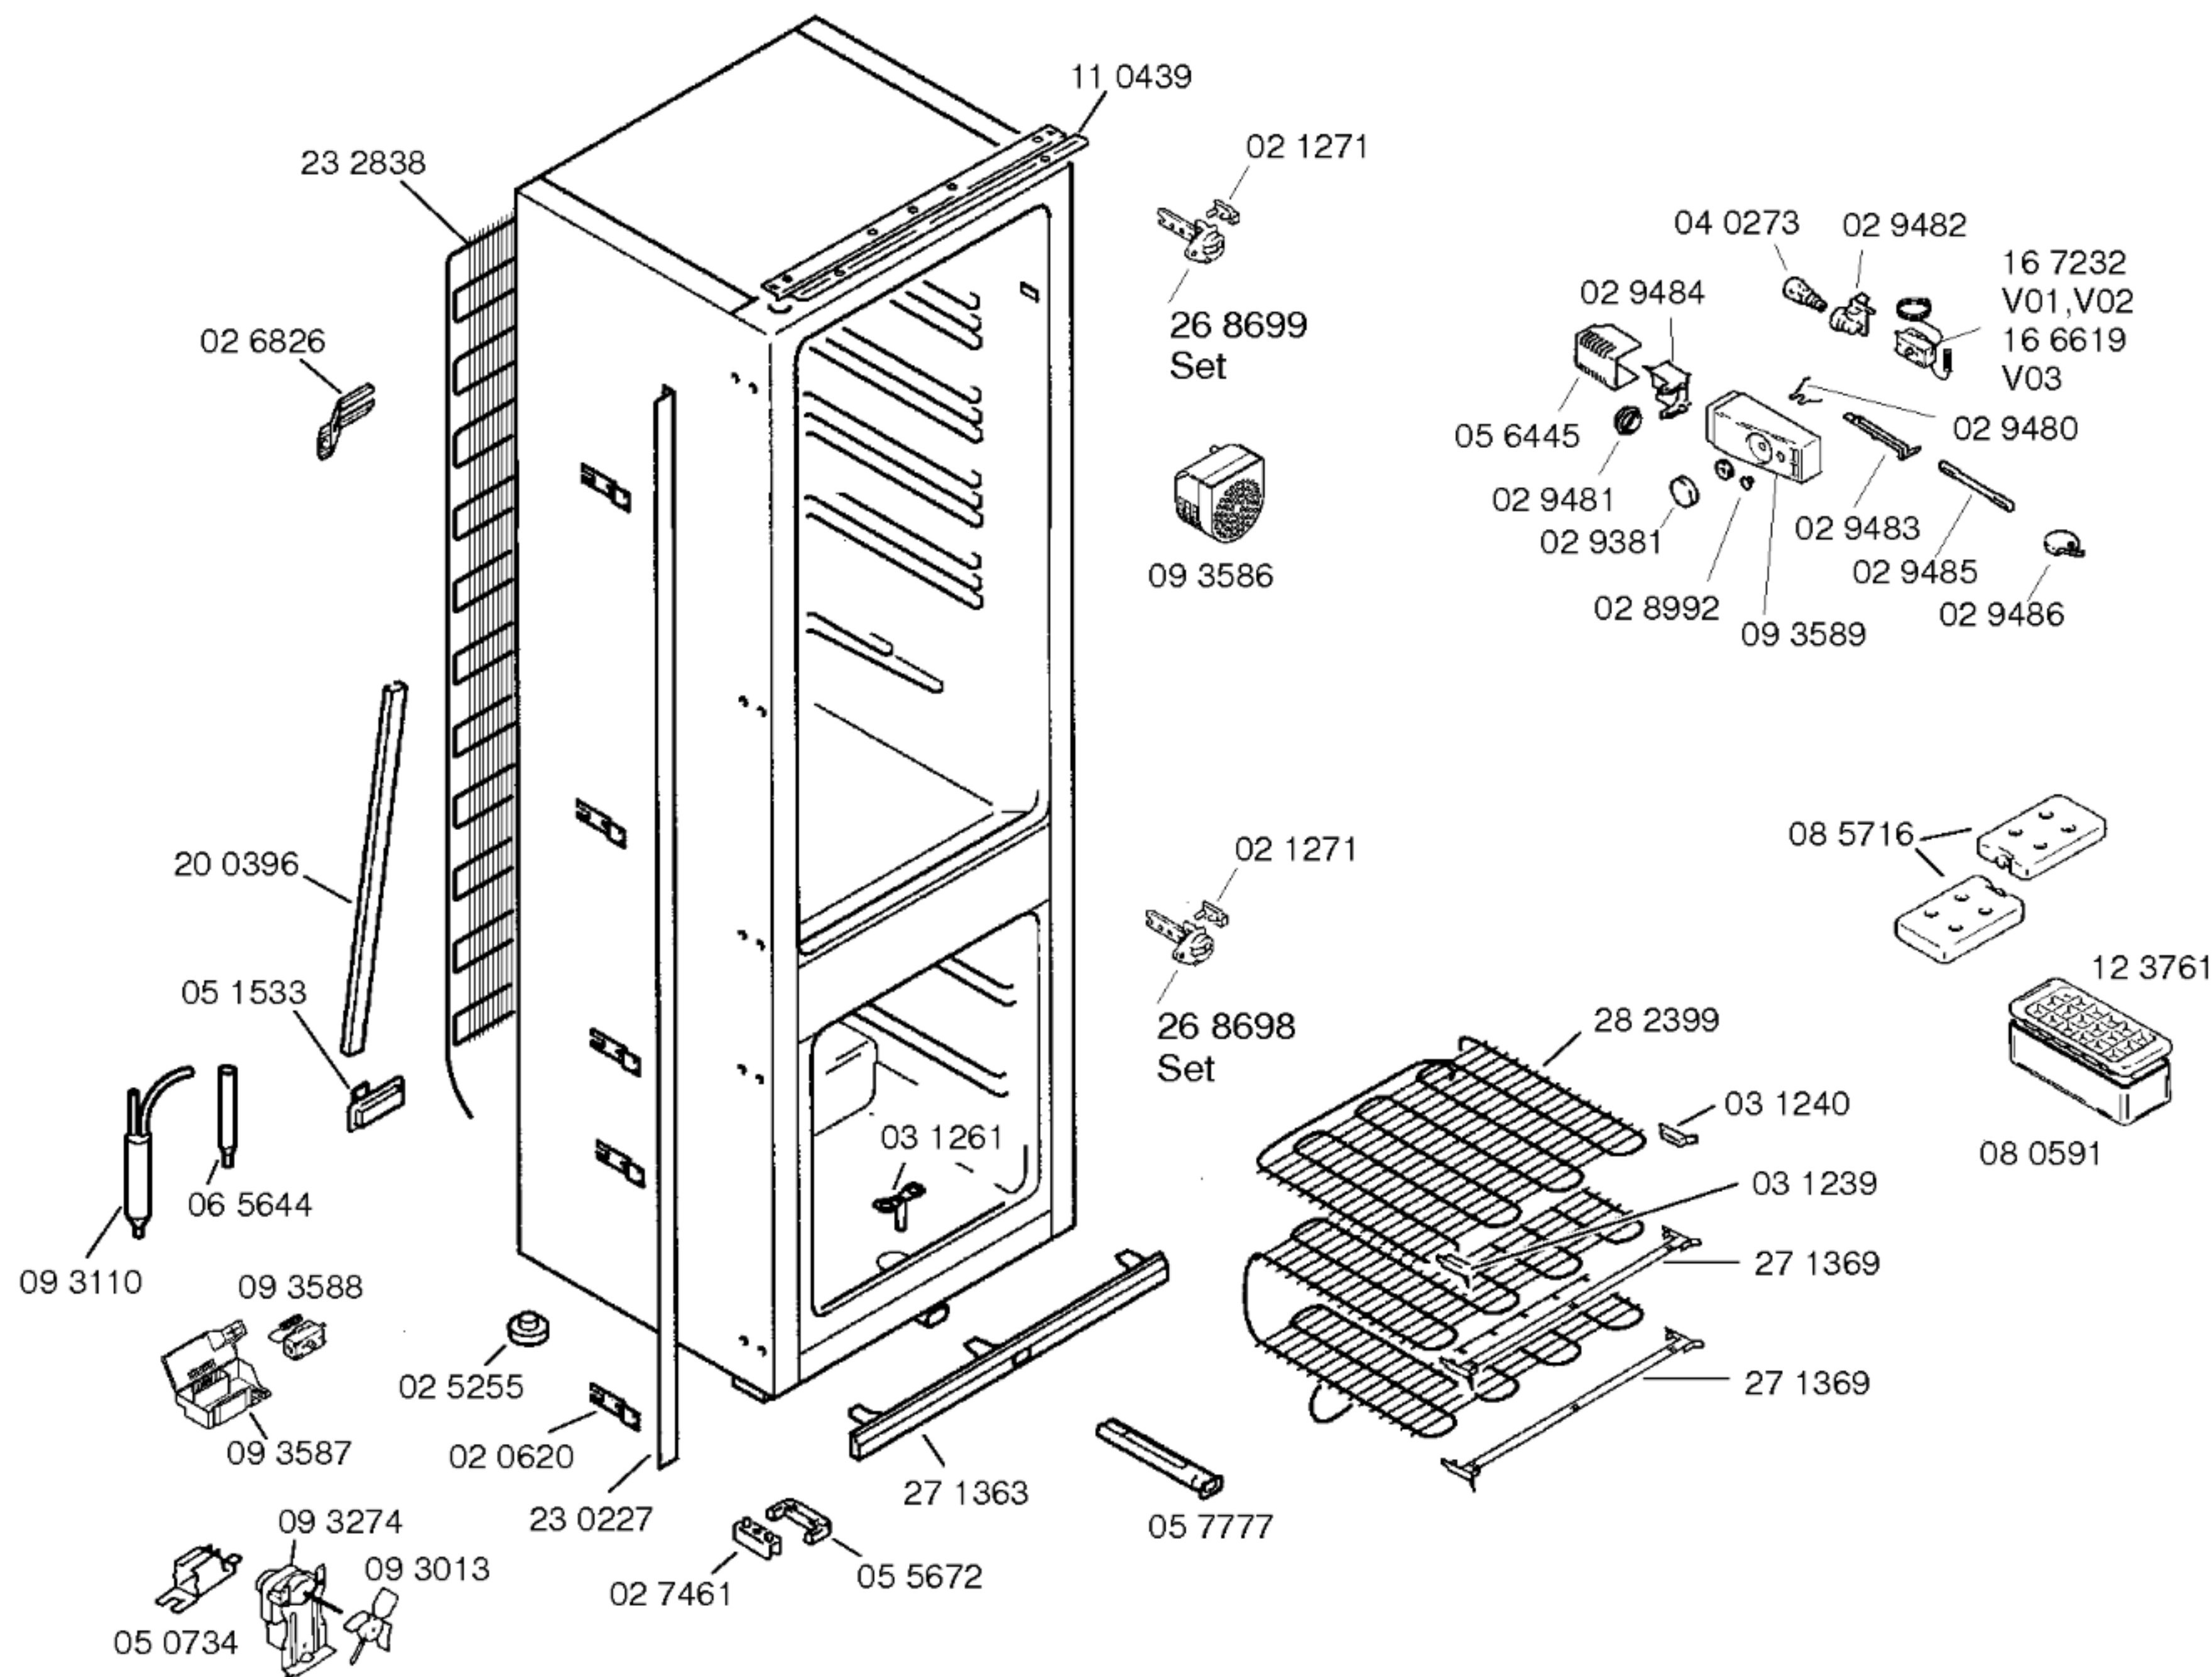


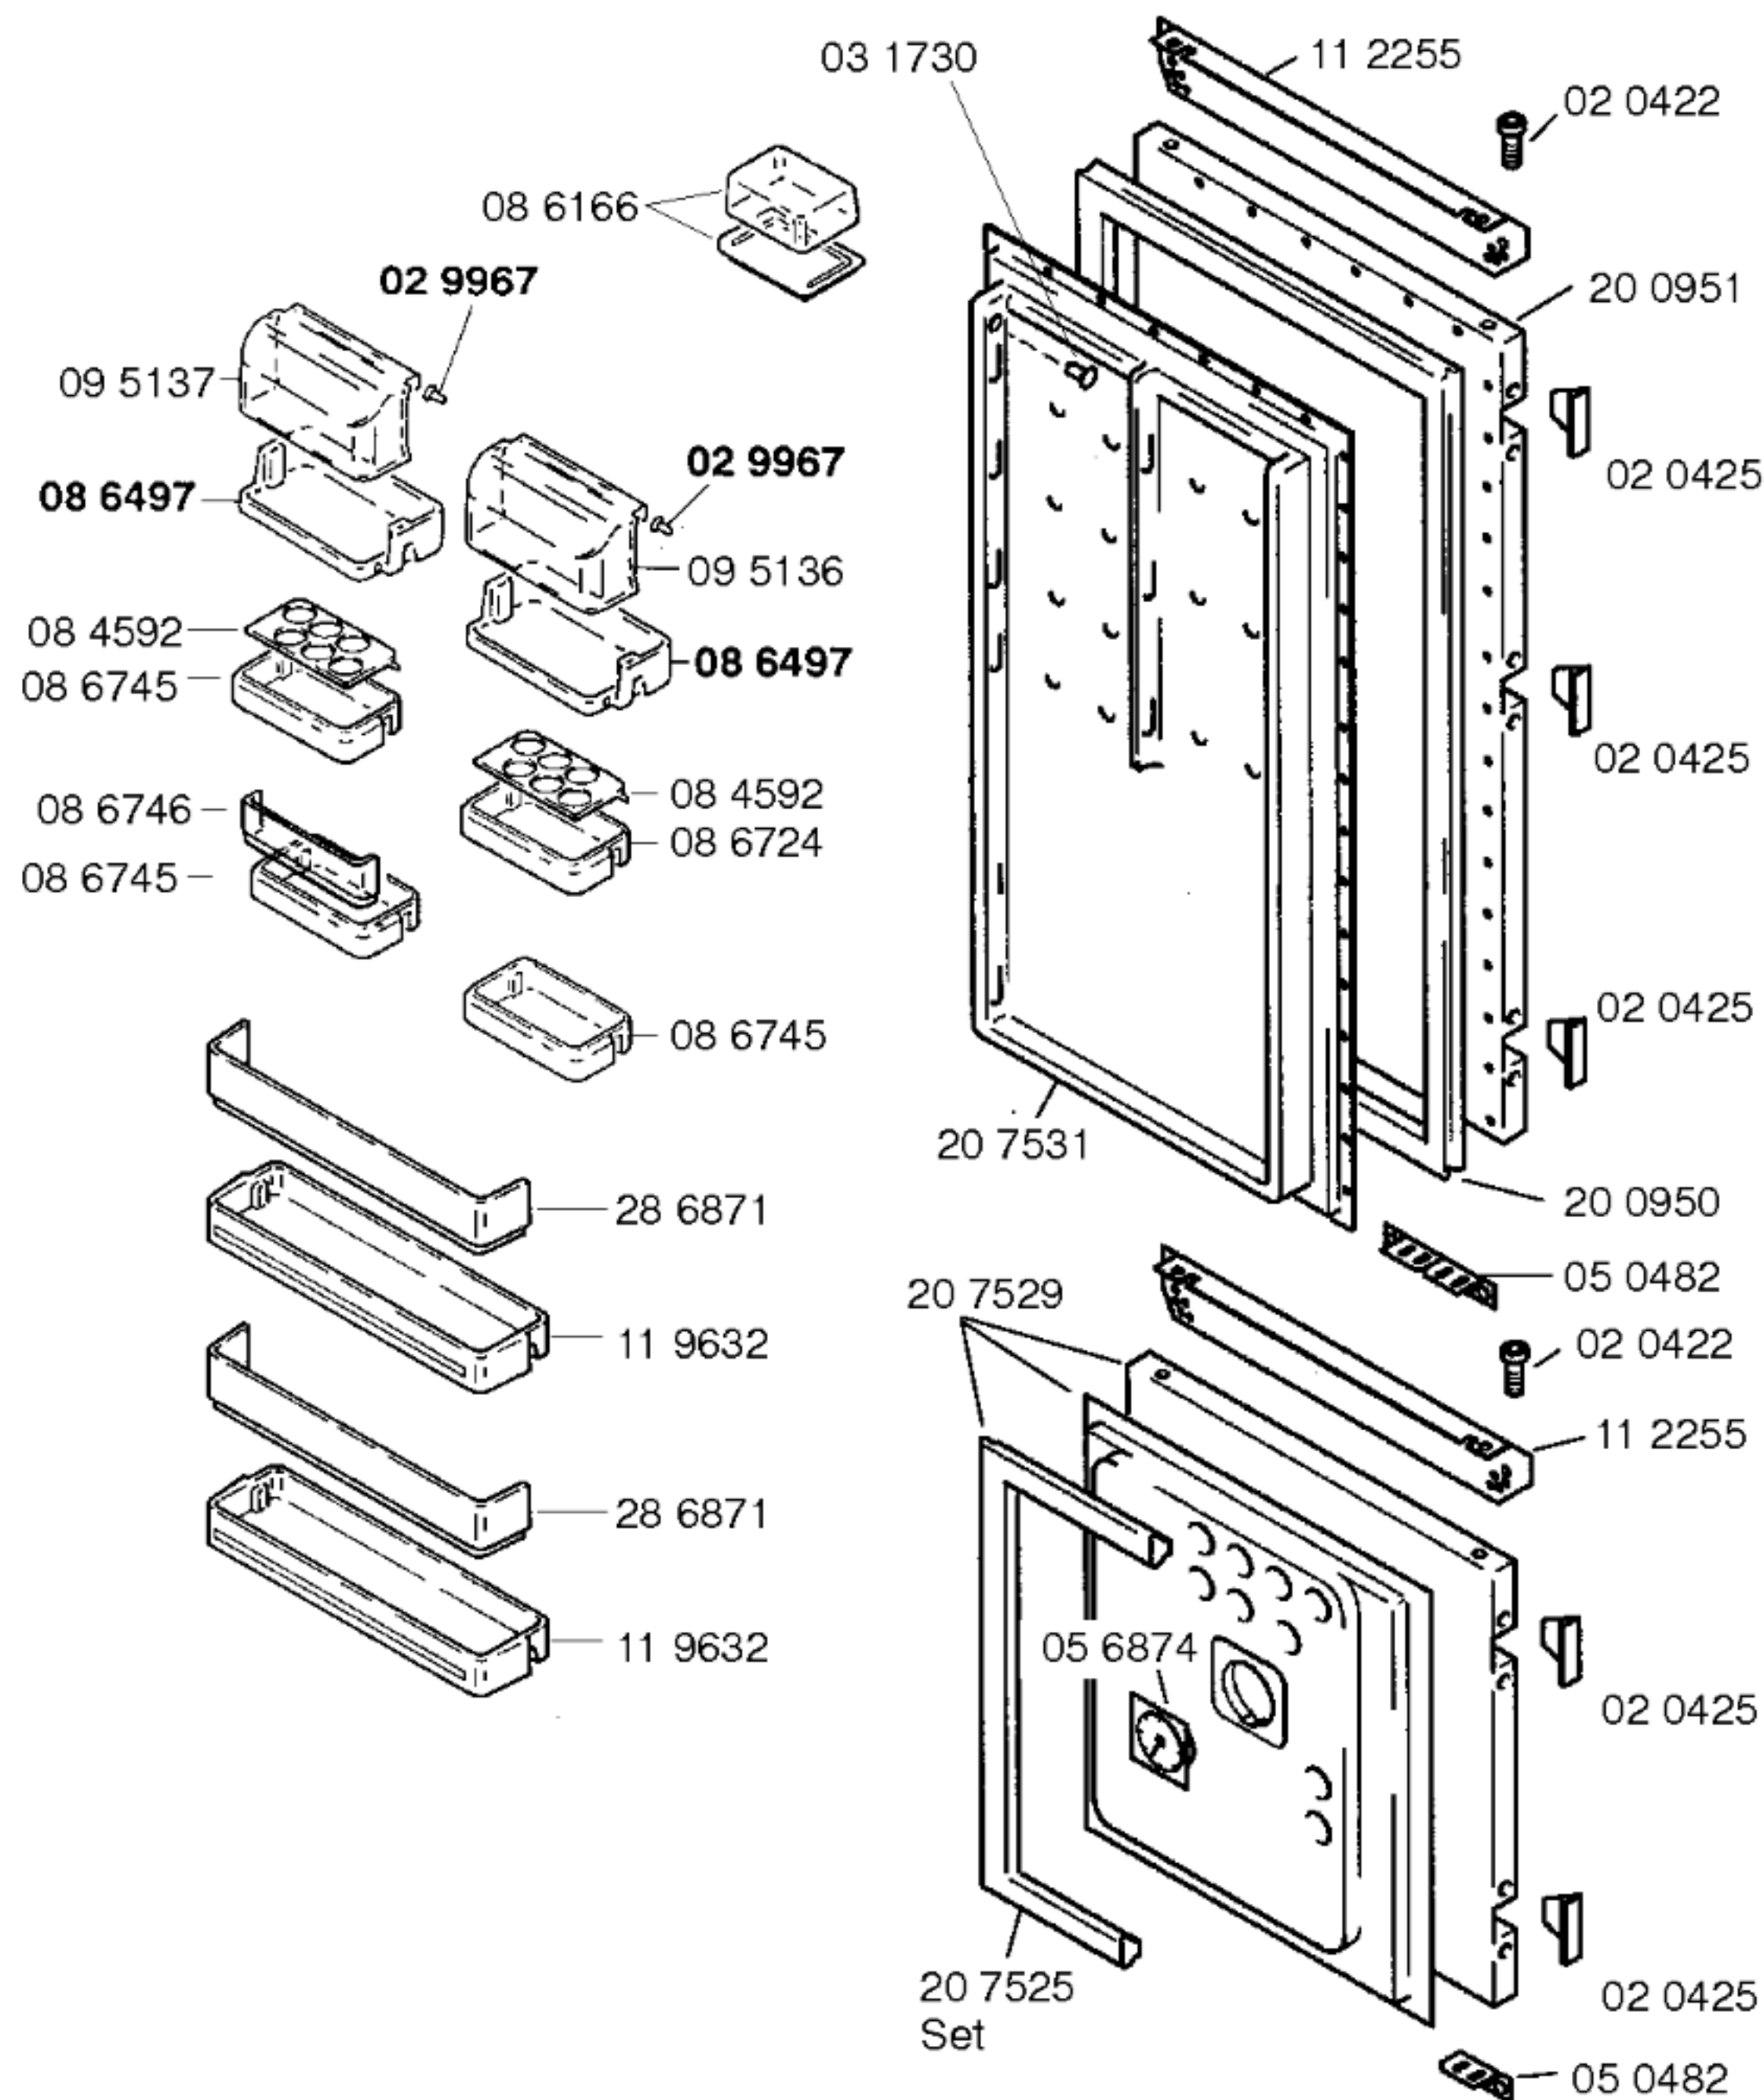


Gebrauchsanweisung
 51 5681
 (D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
 51 5546
 (D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
 Befestigungssatz
 08 4136
 Schraubensatz

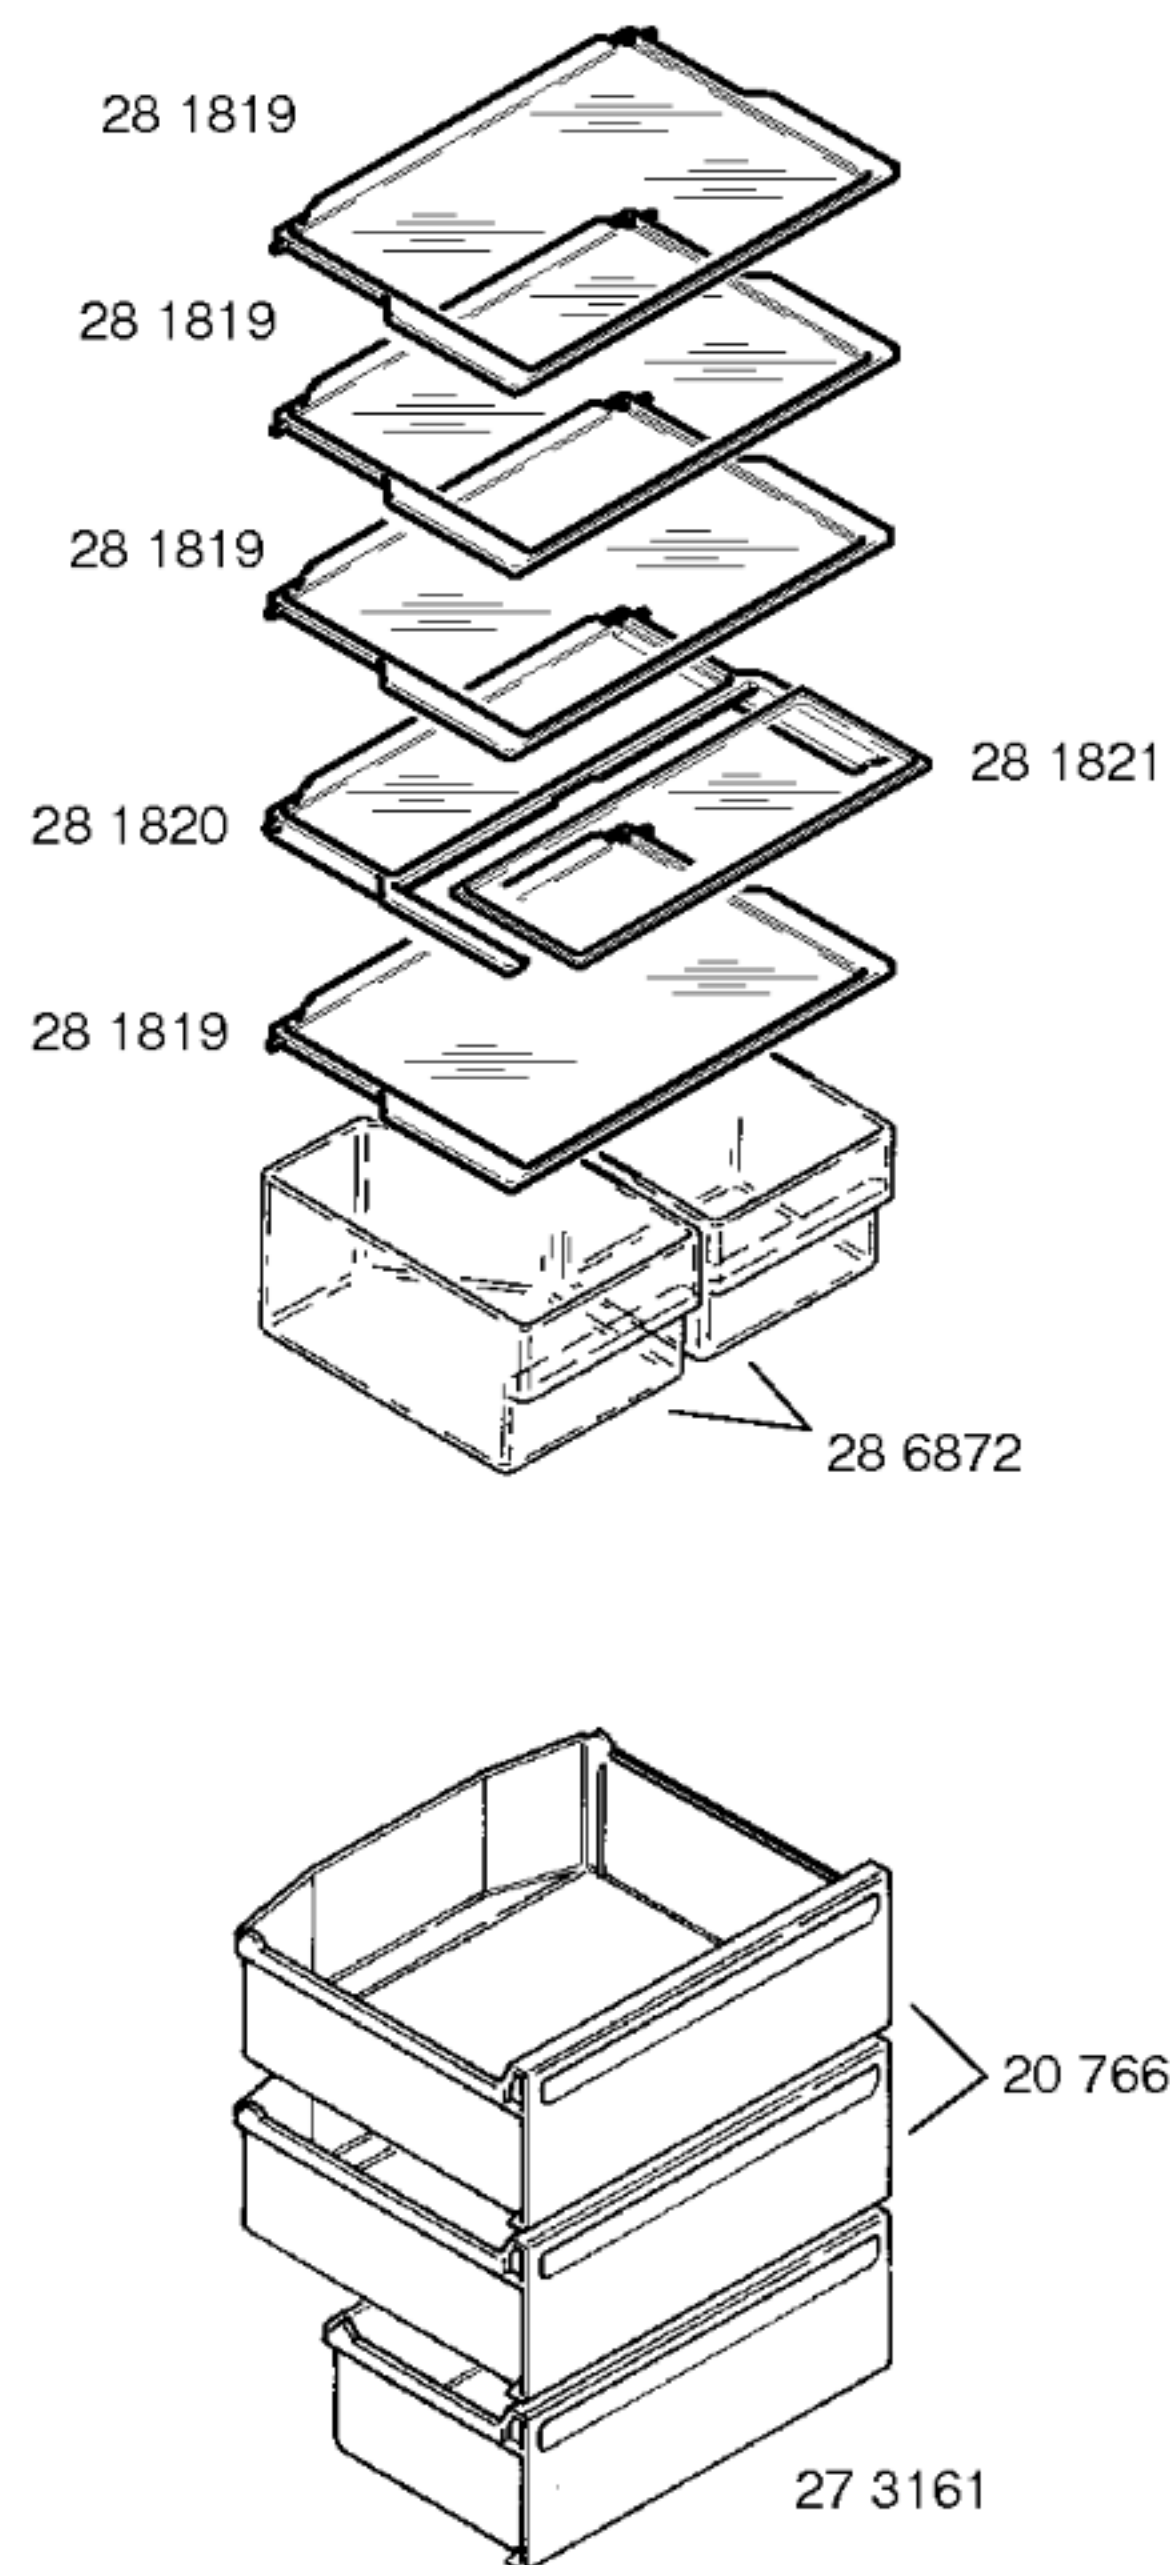

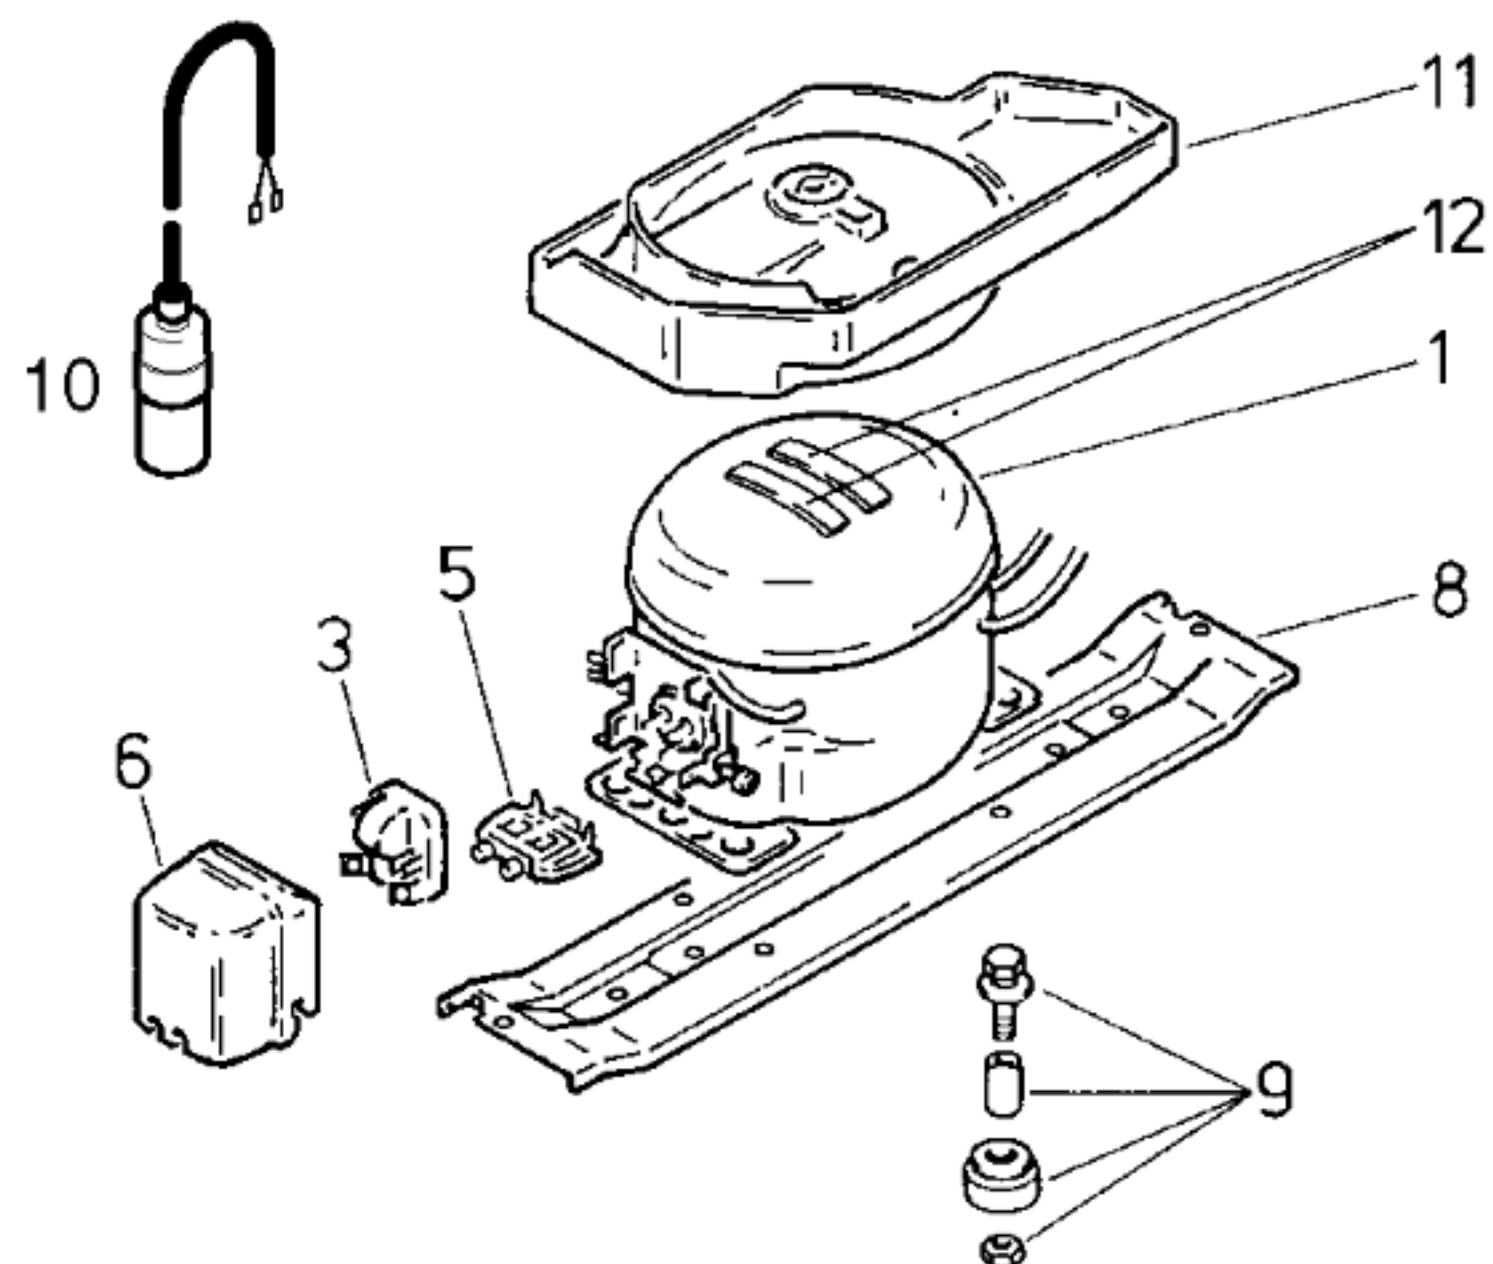

Pos.	V01, V02	V03	
	Danfoss NL7A	Danfoss NL7G	
1	14 1260	14 1774	
2			
3	05 9191	05 9191	
4			
5	02 7310	02 7310	
6	15 1072	15 1072	
7			
8	28 1825	28 1825	
9	05 0166	05 0166	
10			
11	28 1828	28 1828	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NL7G			
Förderleistung/Delivery/Débit		l/h	1576		
Anlaufstrom/Starting current/Cour. de démarrage		A	15,2		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	7,3	
		Hi/aux	Ω	12,0	
Temp.-Regler/Thermostat		Ranco		Innentemp.	
Typ/Type		K 52-1		K 50-L5772	
Reglerstellung/Position		°C			
Schaltwerte/Switching values/ Valeurs de commutation		„ein“		kalt	warm
		„aus“		+4	+7,5
		(„abtauen“ od.)		0	+10
		„alarm“			
Füllmenge/Fill.quantity/Charge		R134a	g	155	
Anschlußwert/Conn.load/Puiss. connectée			W	150	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Resistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur				Innen	Außen
Widerstand/Resistance/Résistance			Ω	1300	350
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		