




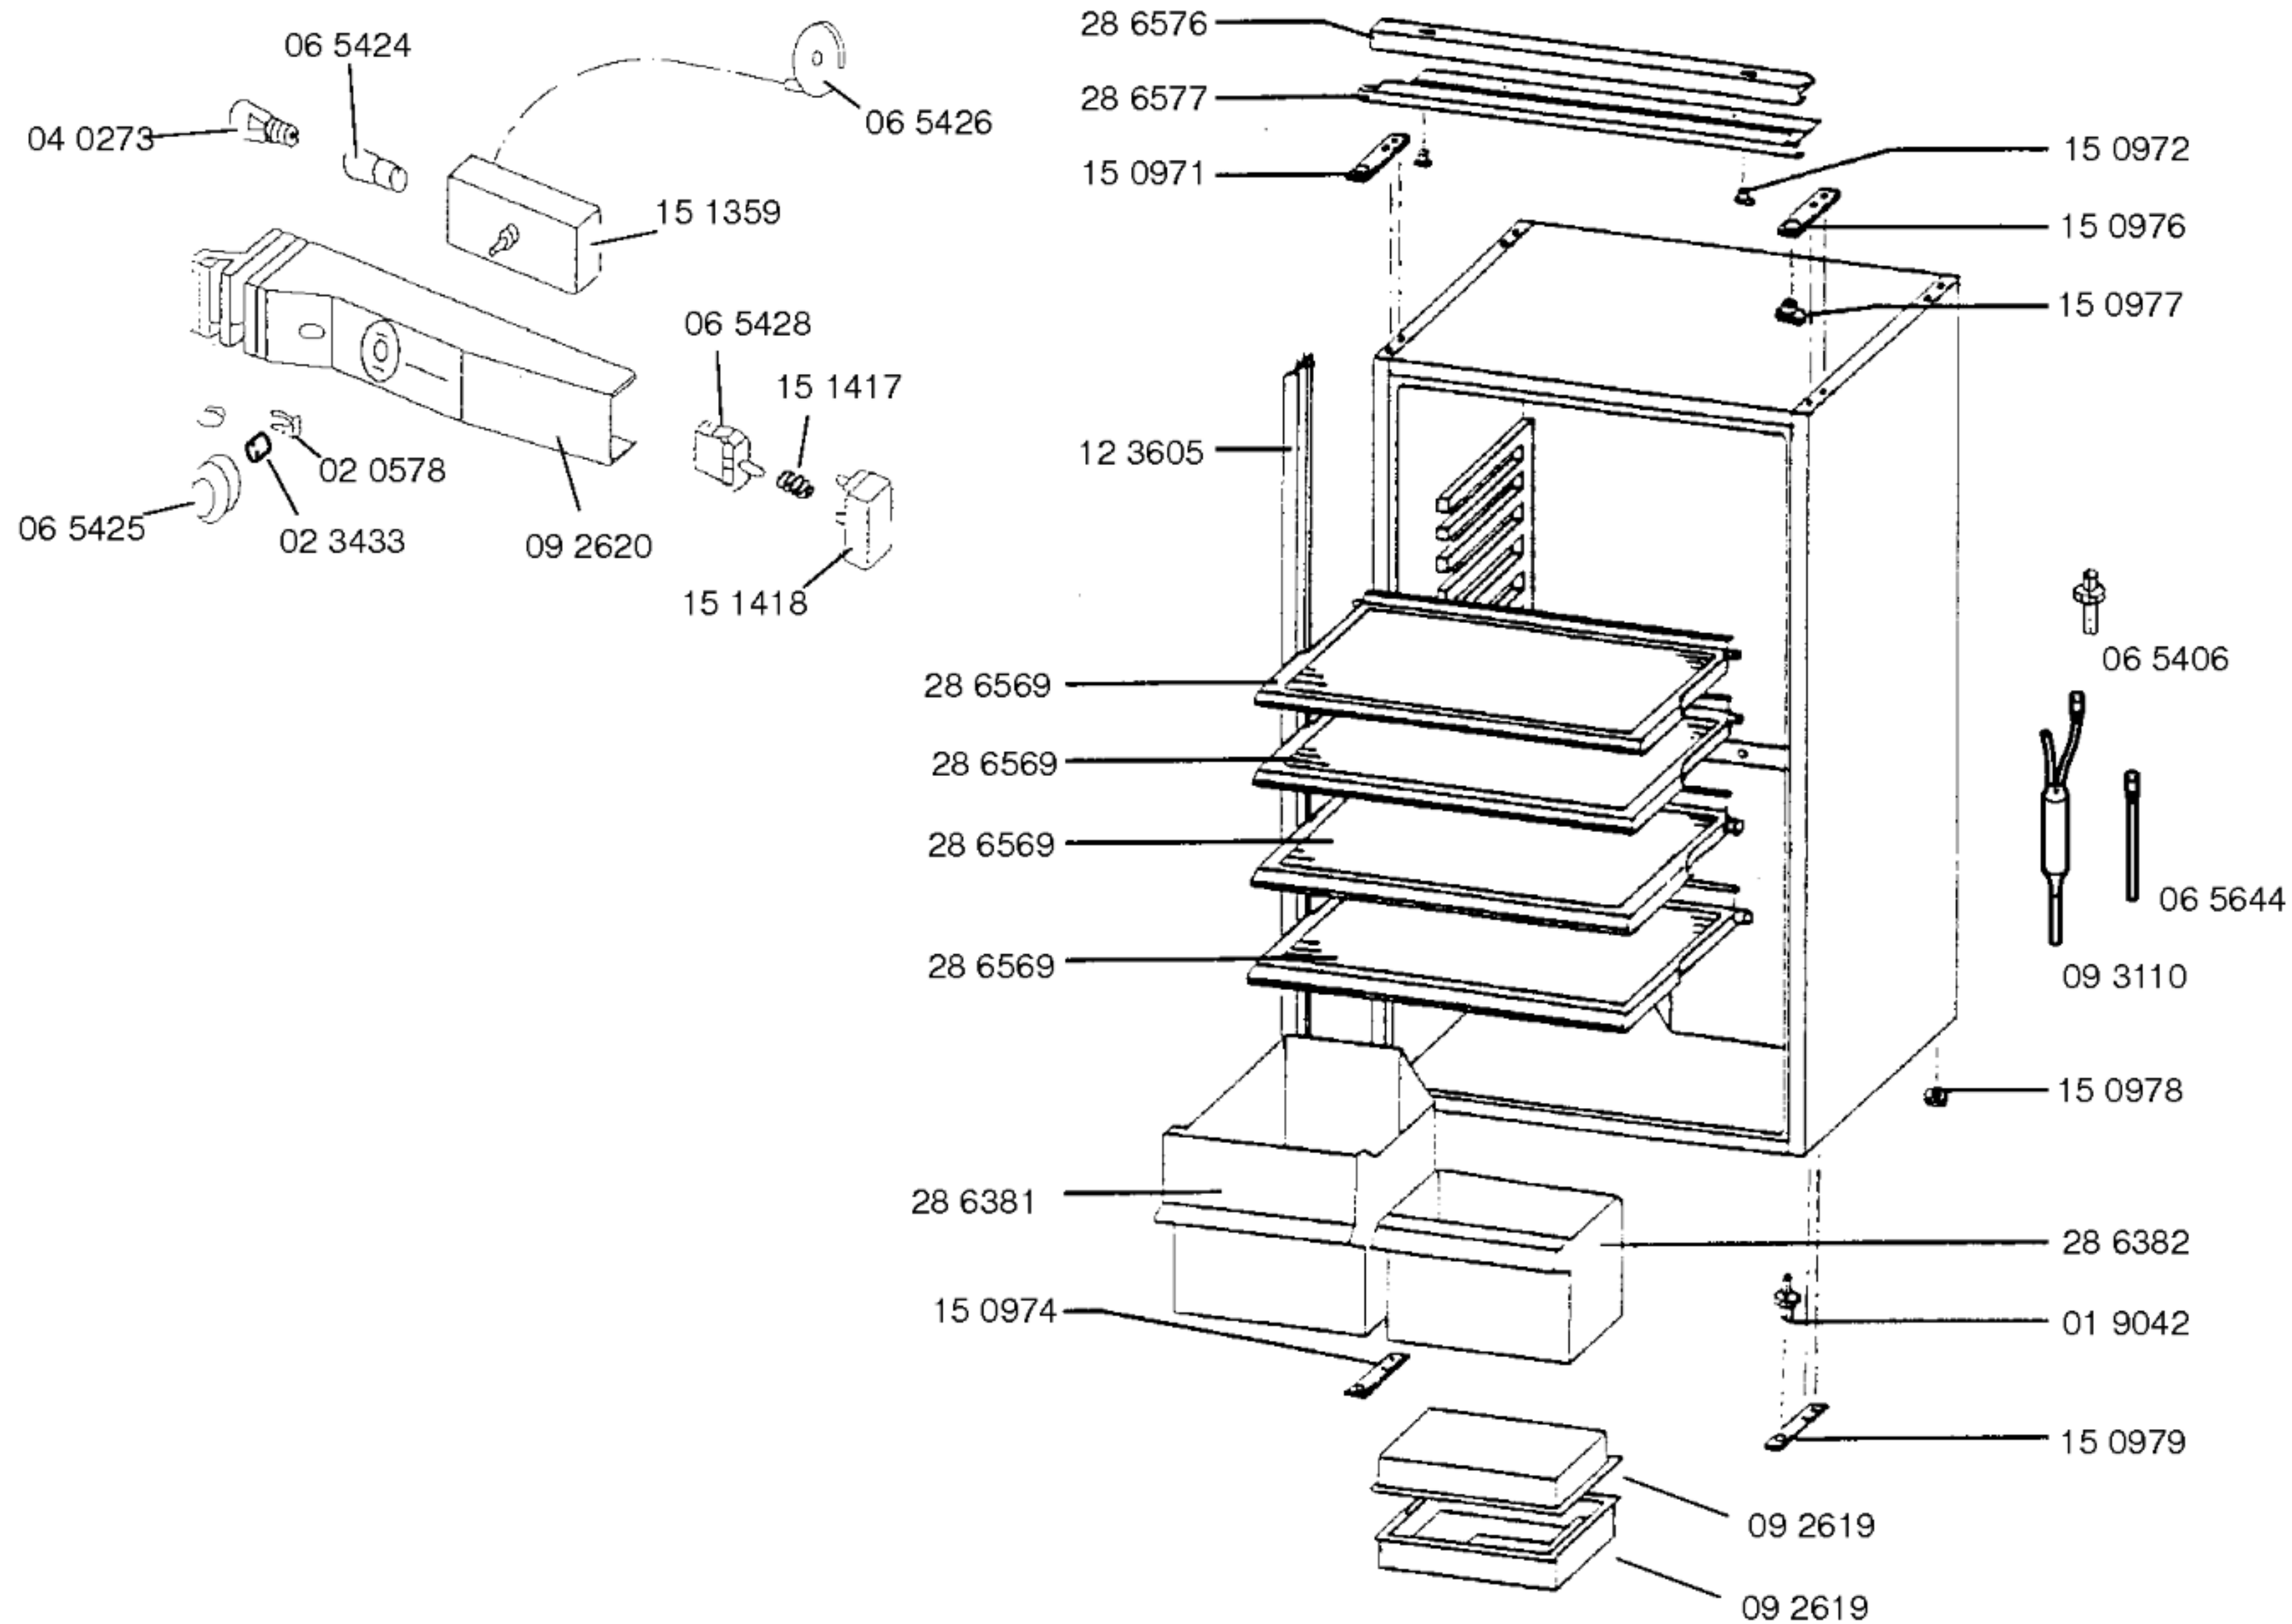

Gebrauchsanweisung
51 7288
(D,GB,F,I,E,NL)

Montageanleitung
51 7263

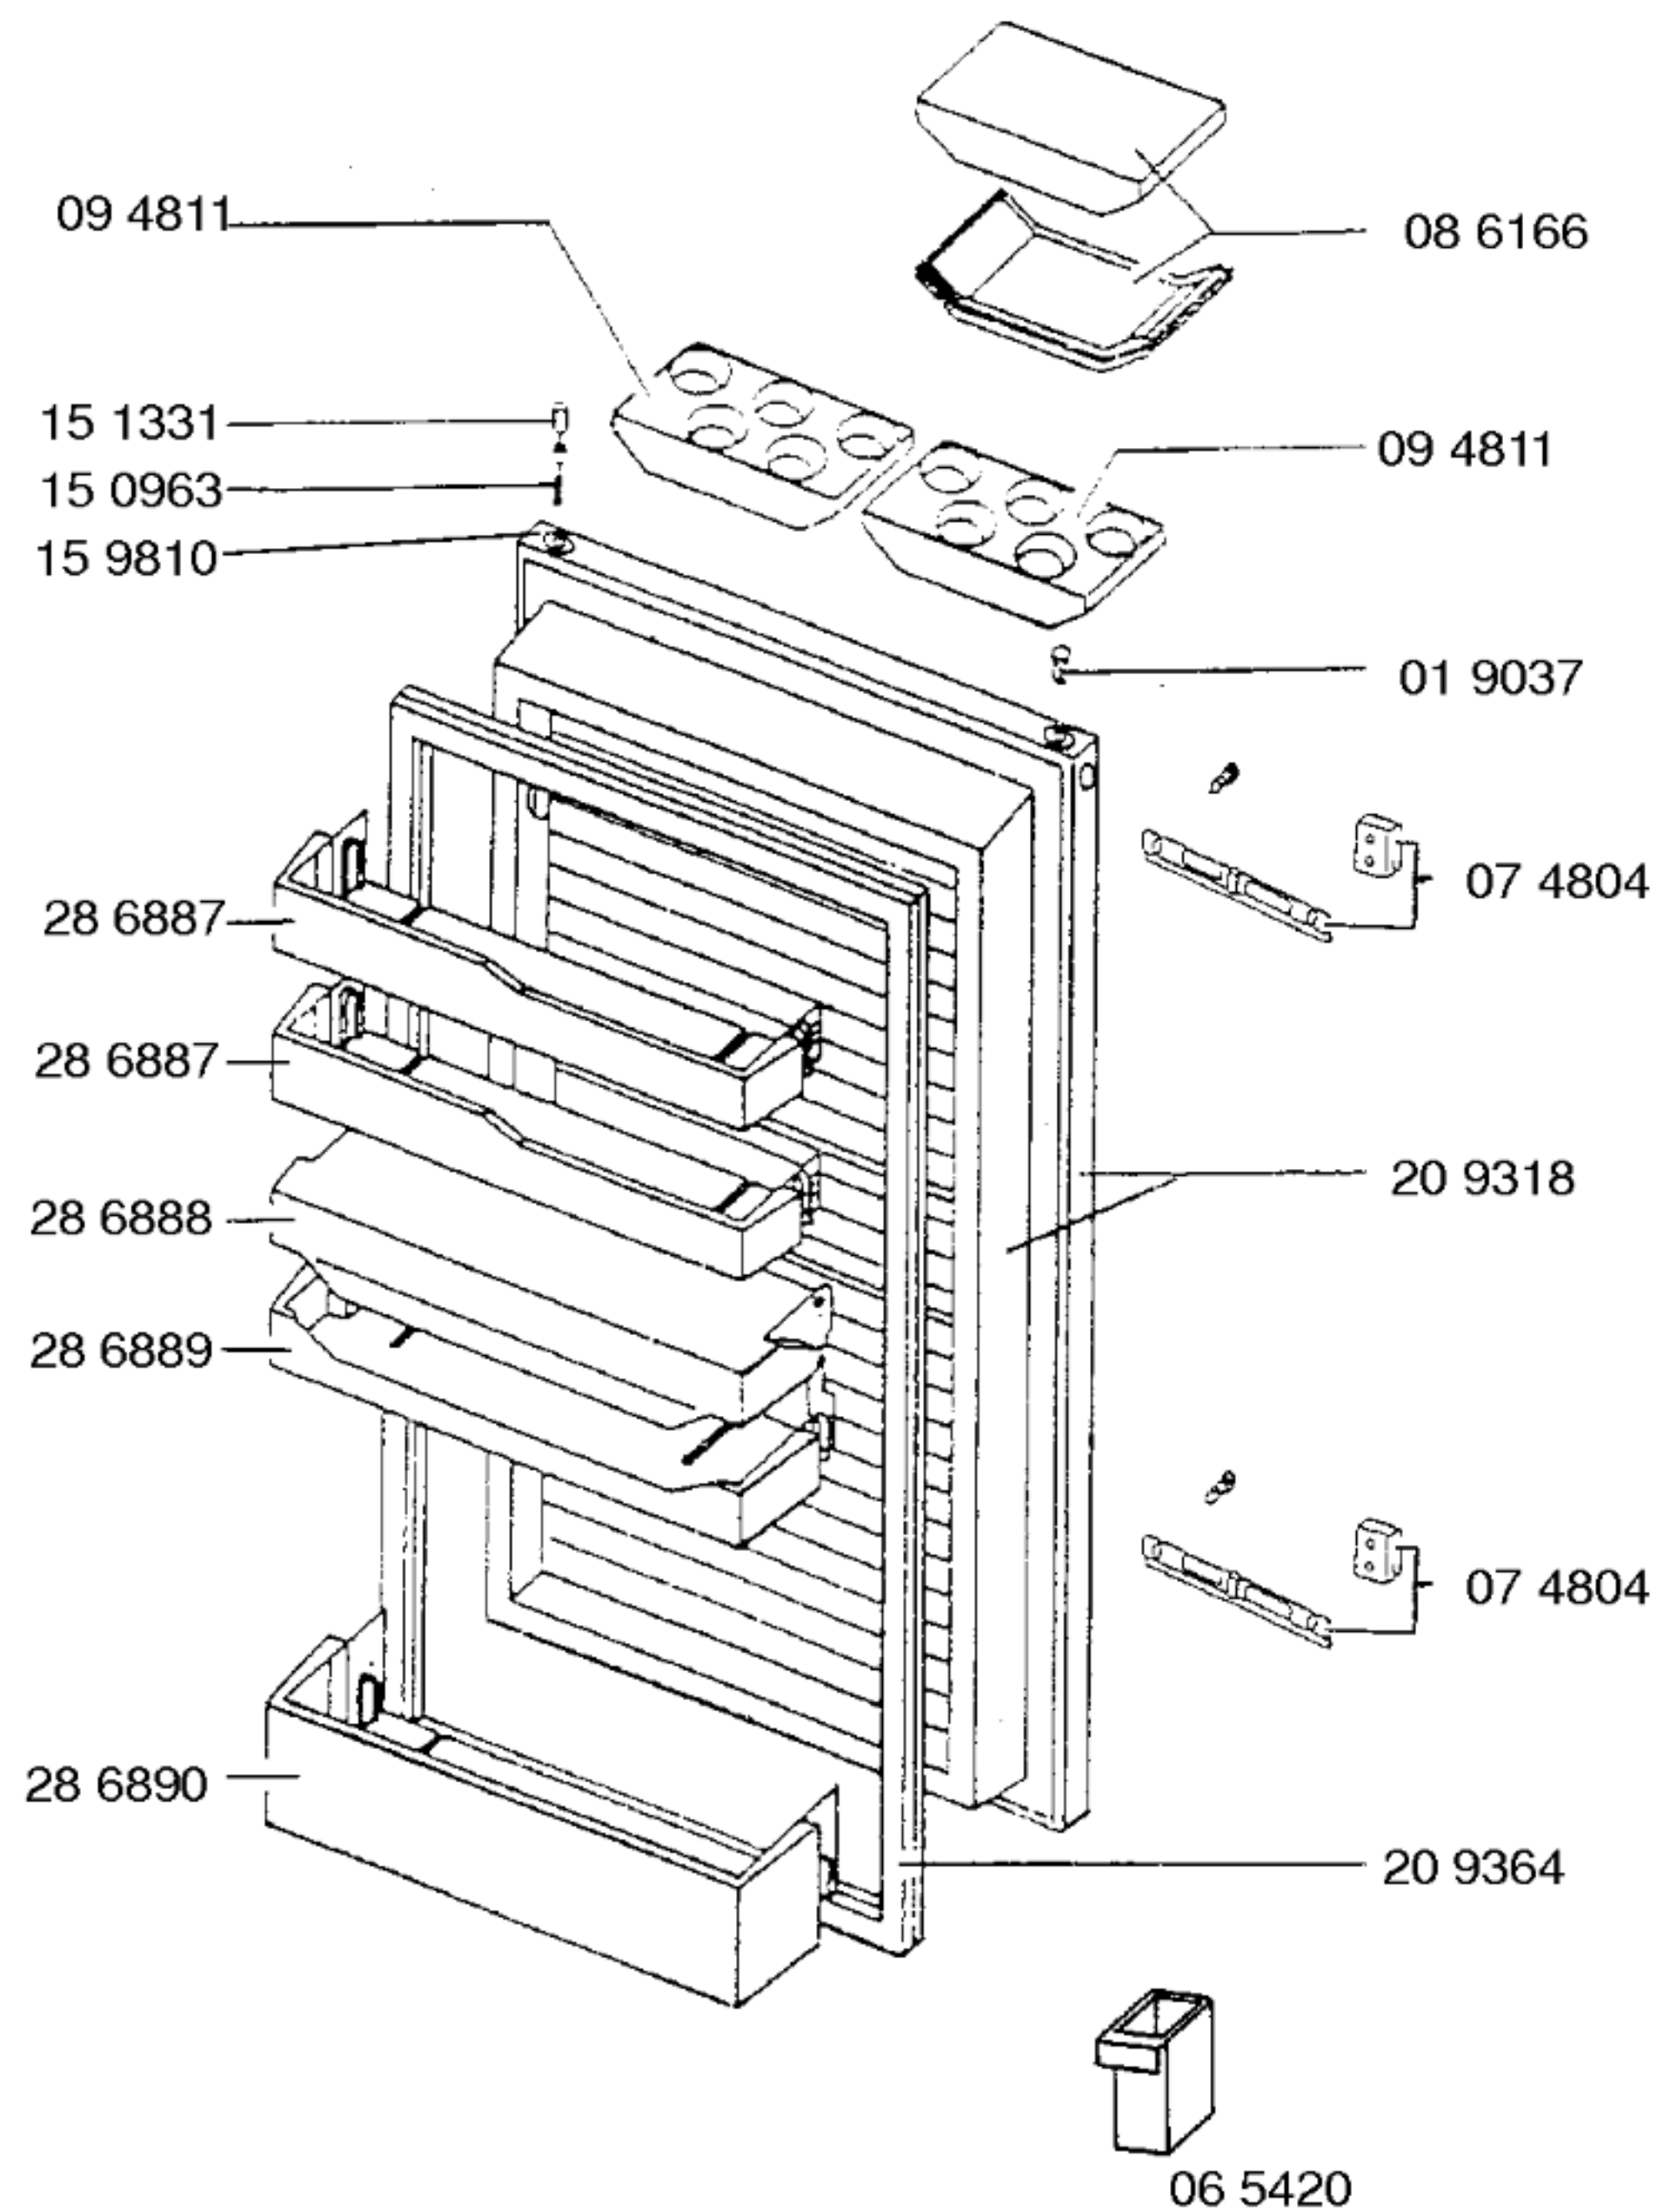

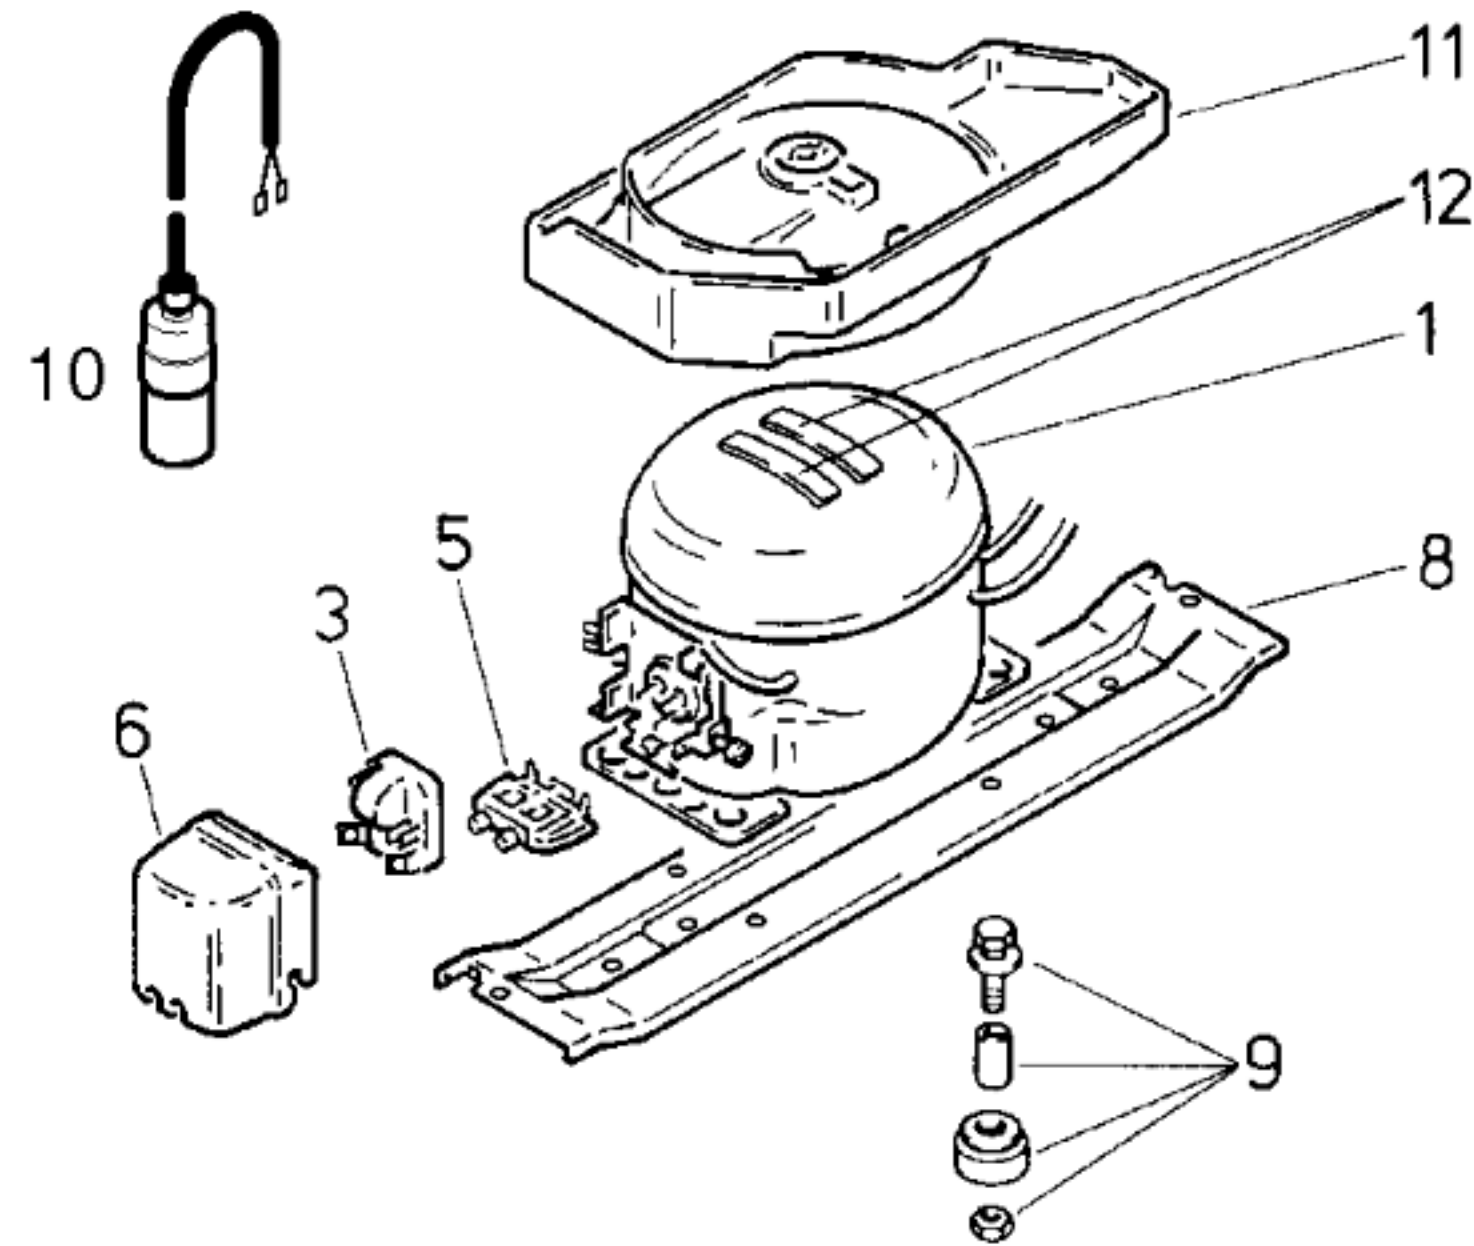

Pos.			
	Danfoss		
	TLES 4 F		
1	14 1244		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 4 F		
Förderleistung/Delivery/Débit	l/h	615		
Anlaufstrom/Starting current/Cour de démarrage	A	2,9		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	25,7		
	Hi/aux Ω	18,9		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+4	+4	
Valeurs de commutation	„aus“	-28,5	-16	
	(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge	R134a	g	55	
Anschlußwert/Conn.load/Puiss. connectée	W	65		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			