


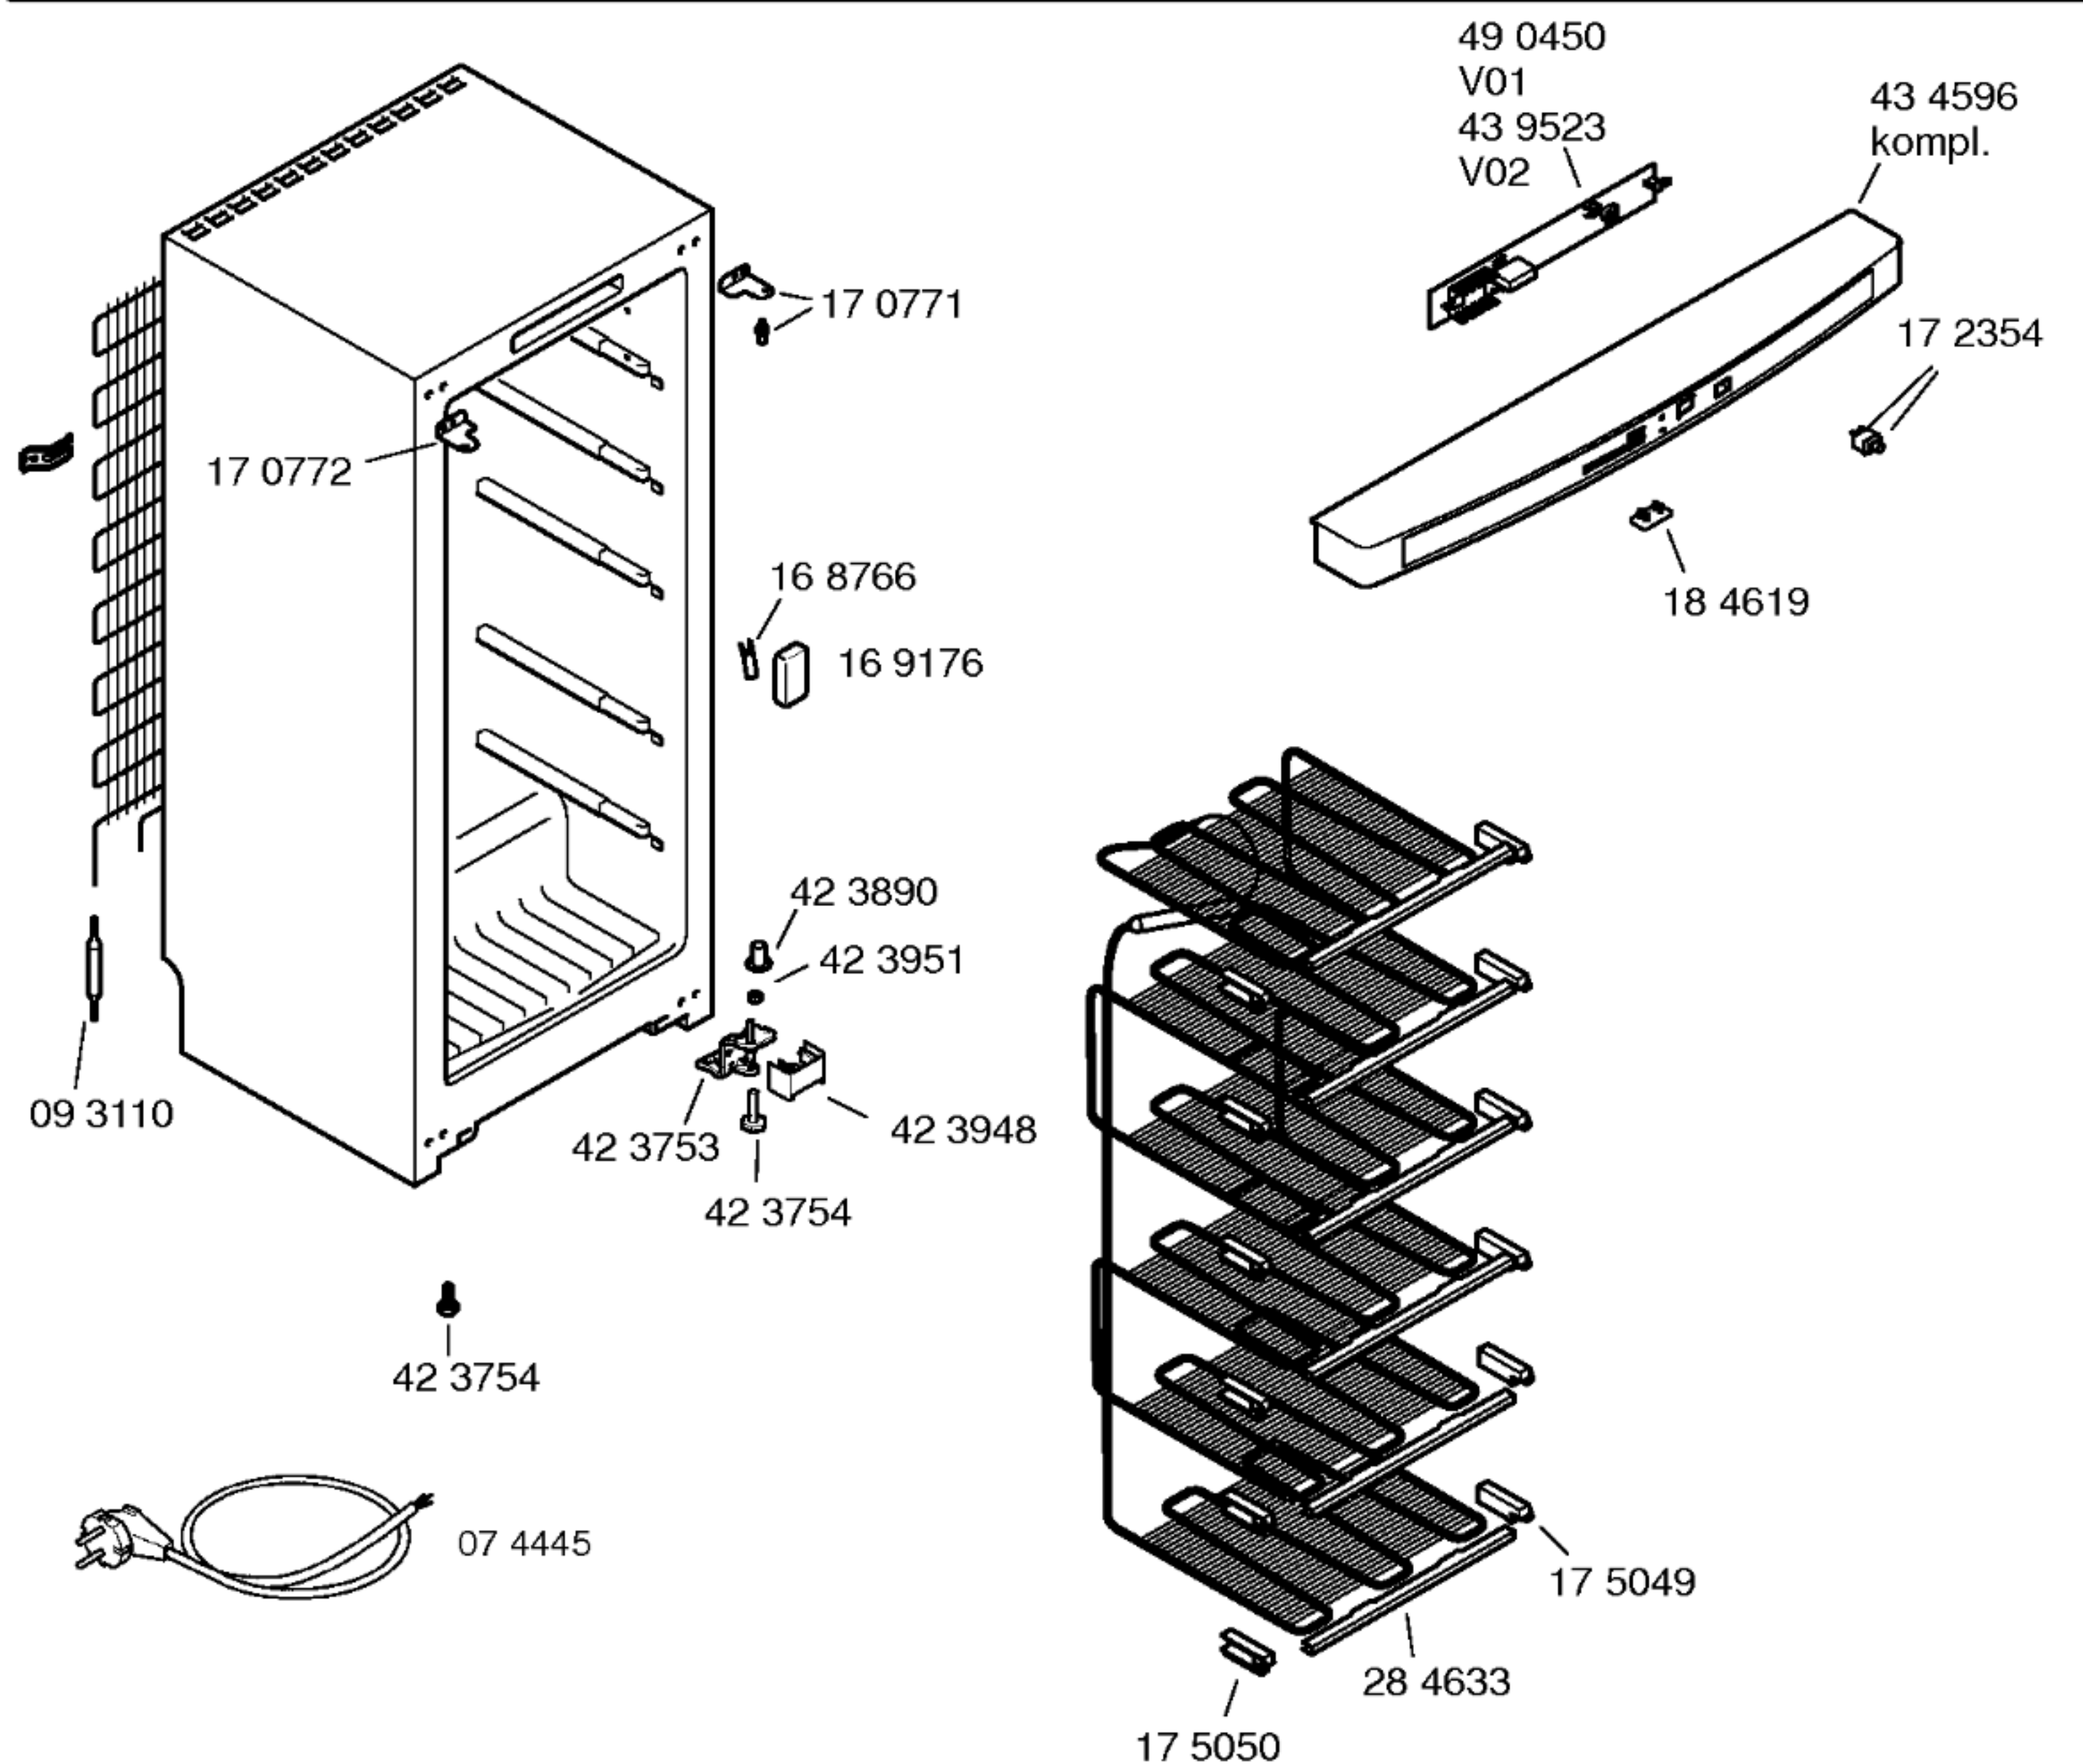
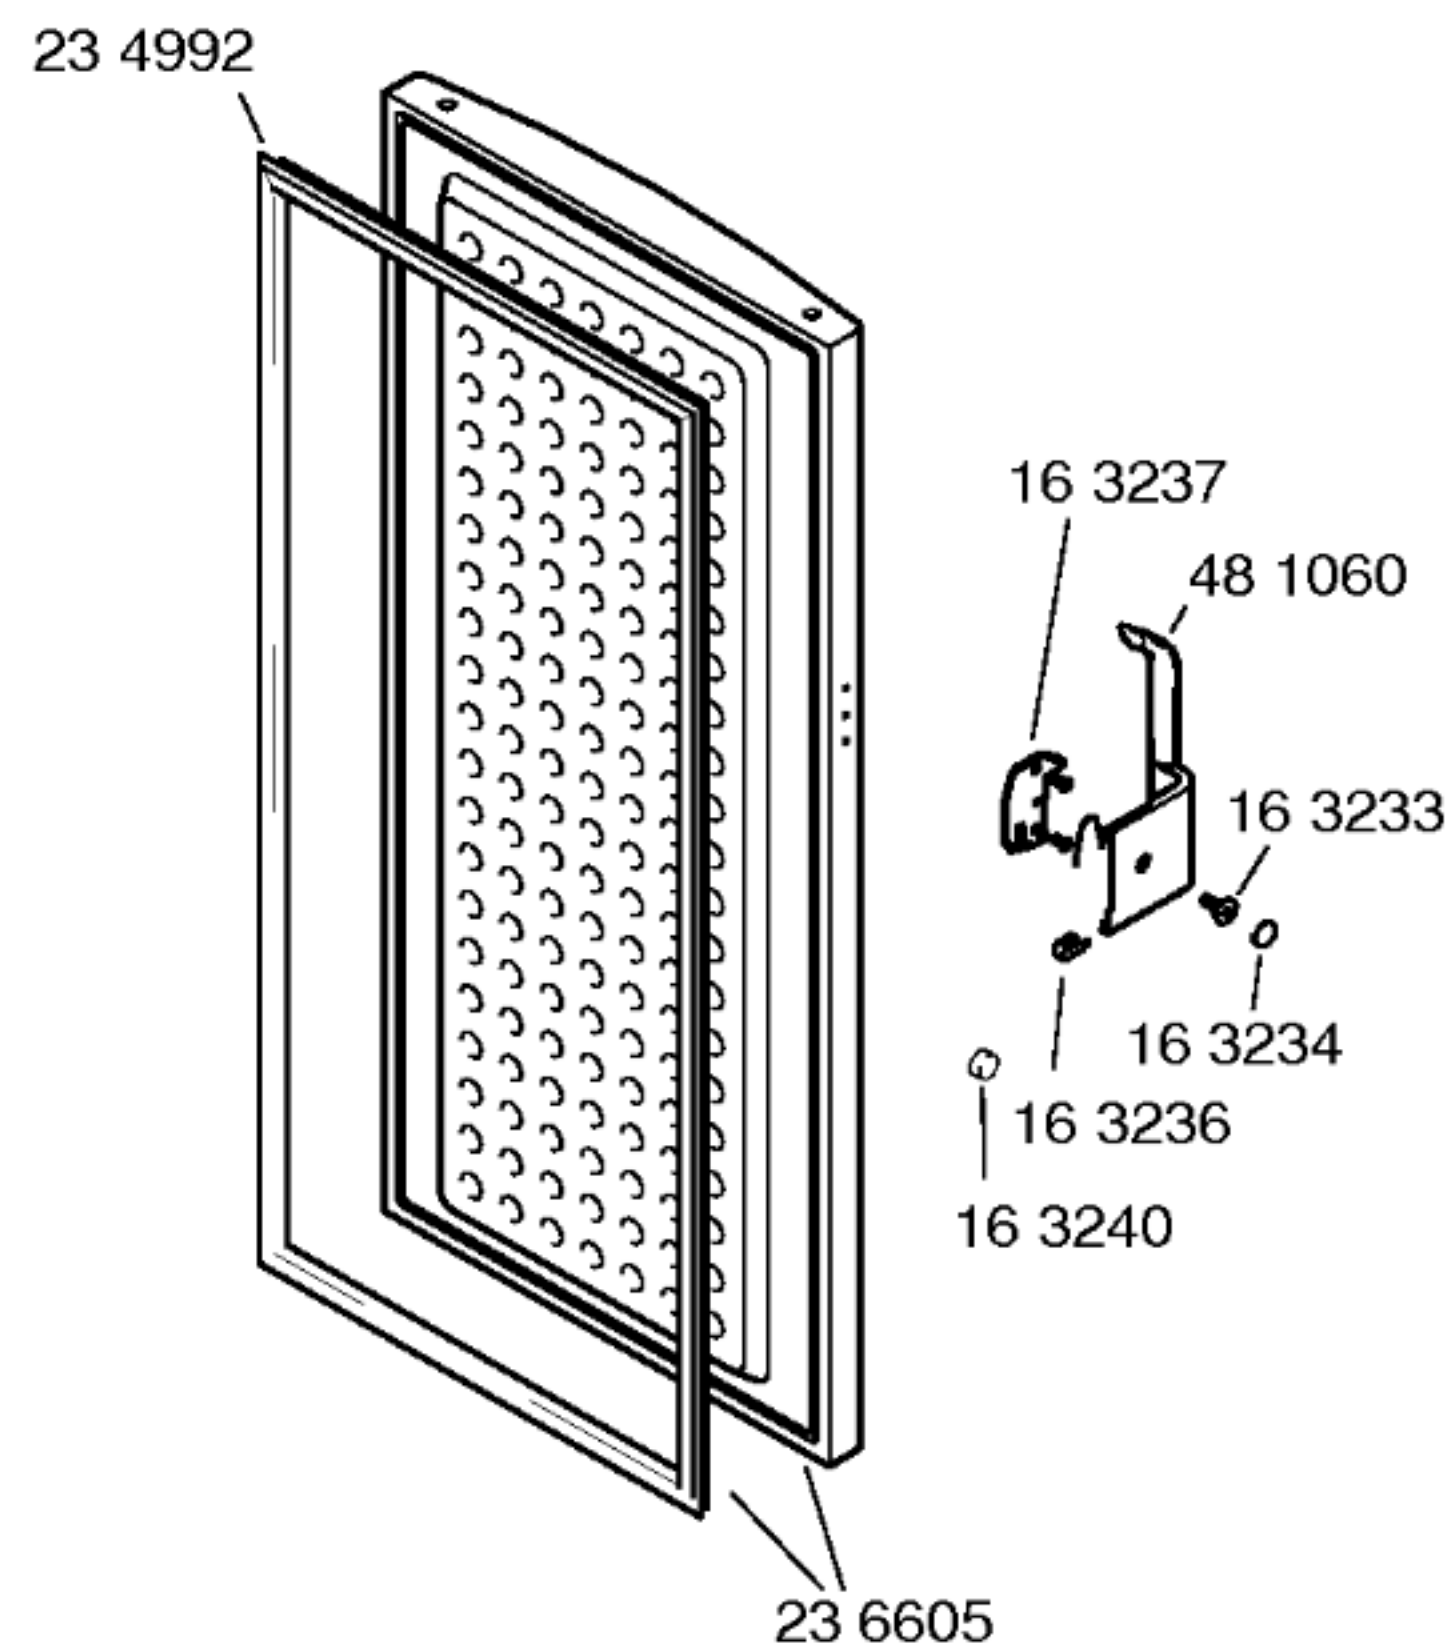


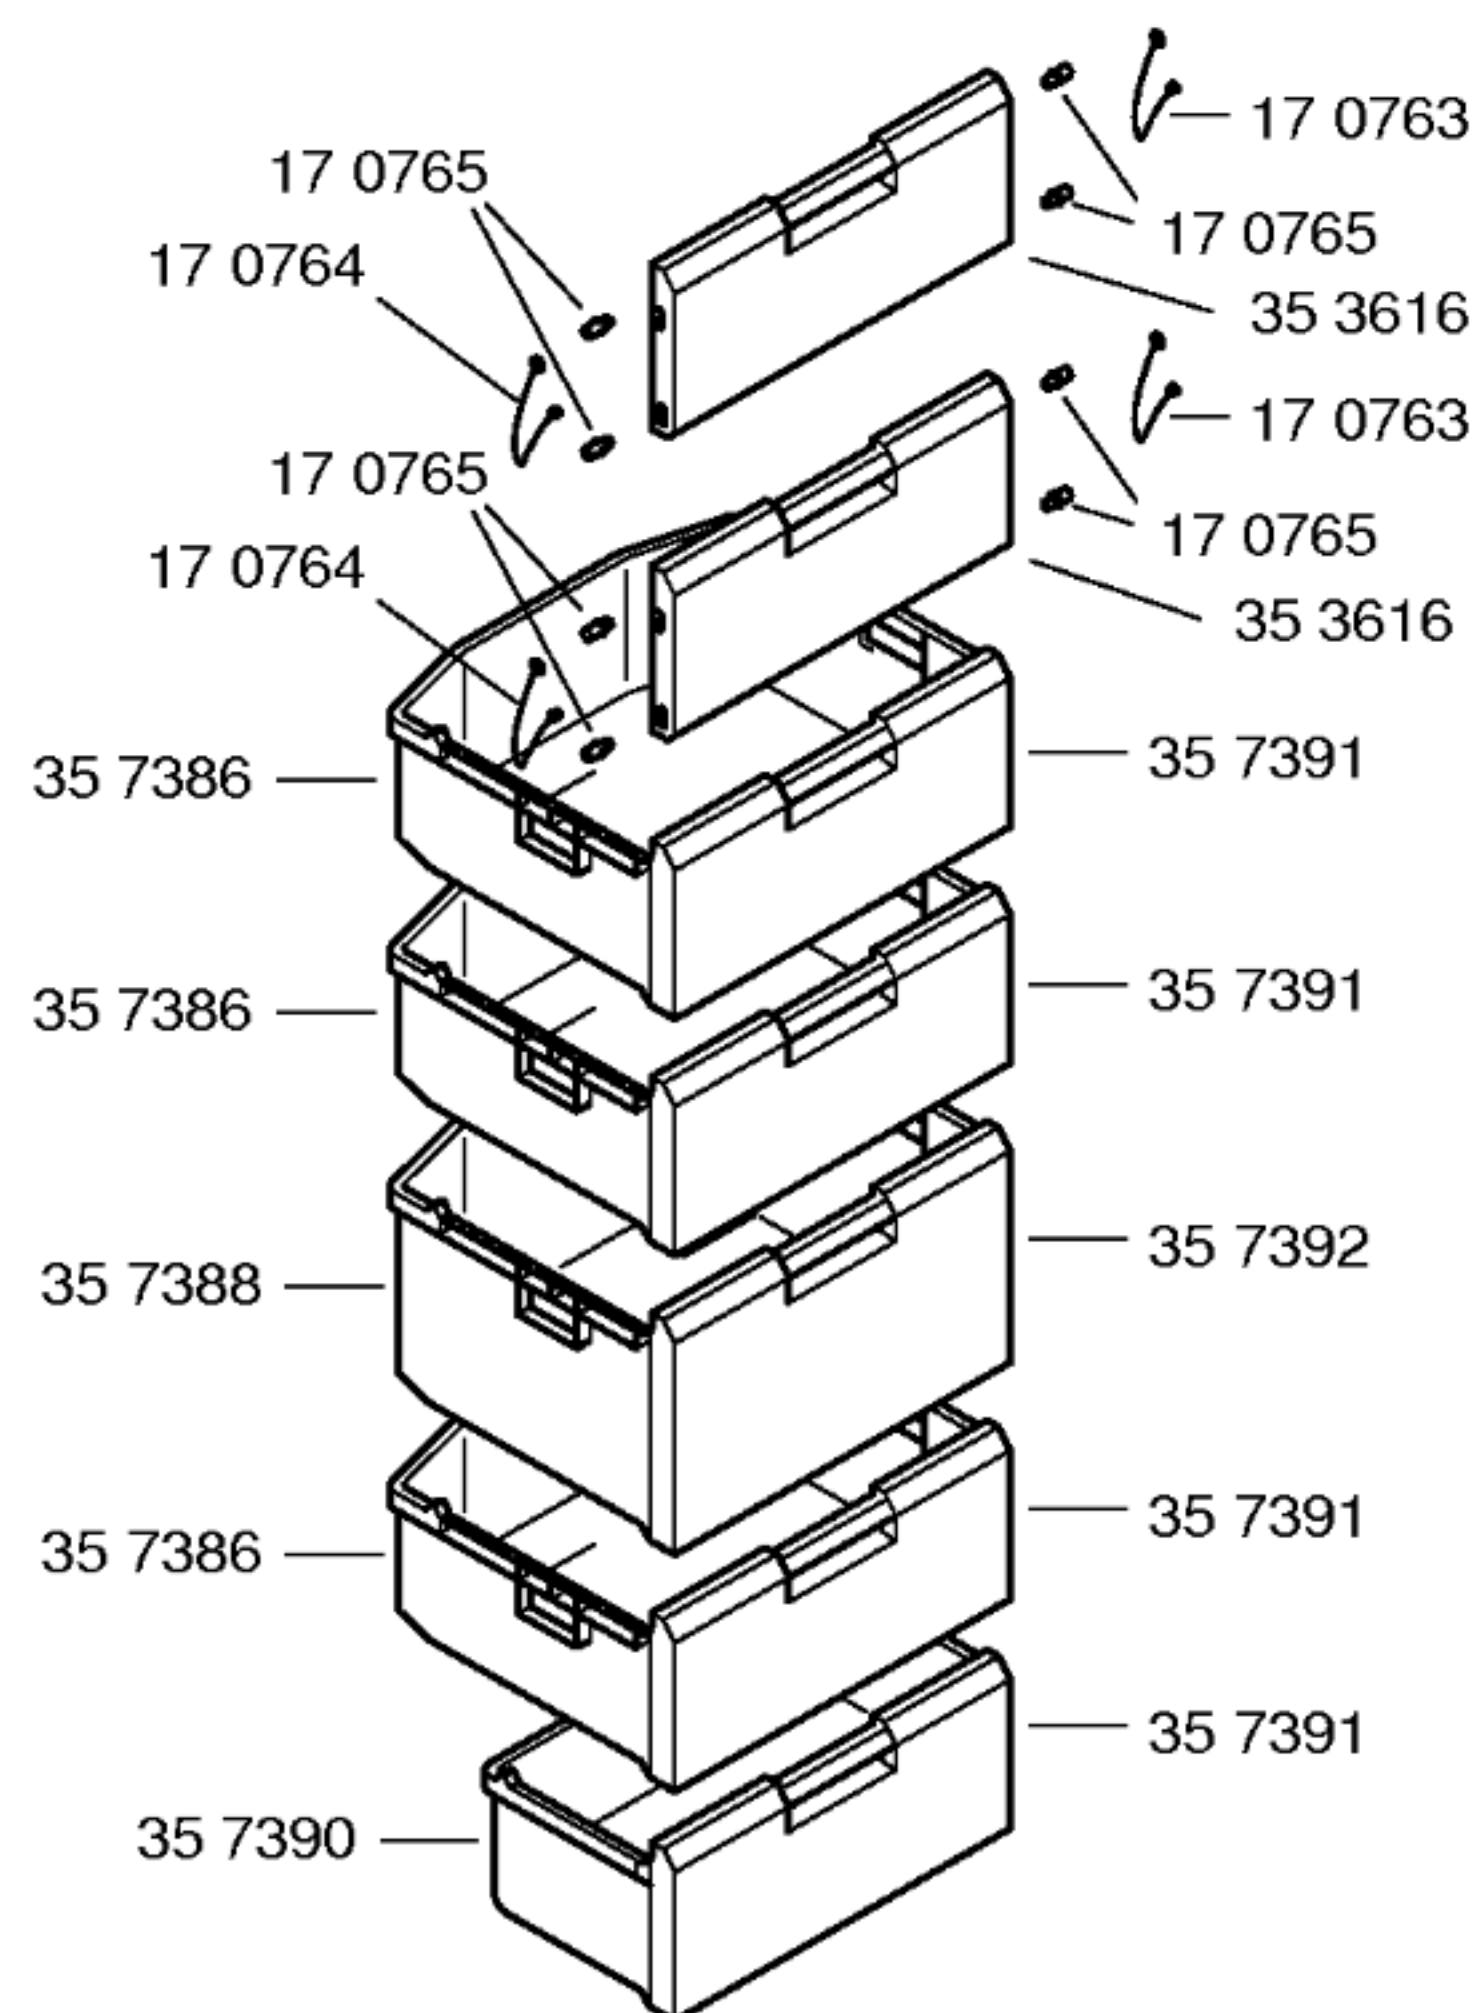

Mat. – Nr. – Konstante
3740
Gebrauchsanweisung
58 6511
(de,en,fr,it,nl)
58 6709
(da,no,sv,fi,es,pt)

Montageanleitung
58 9231
Beistellsatz
42 3948

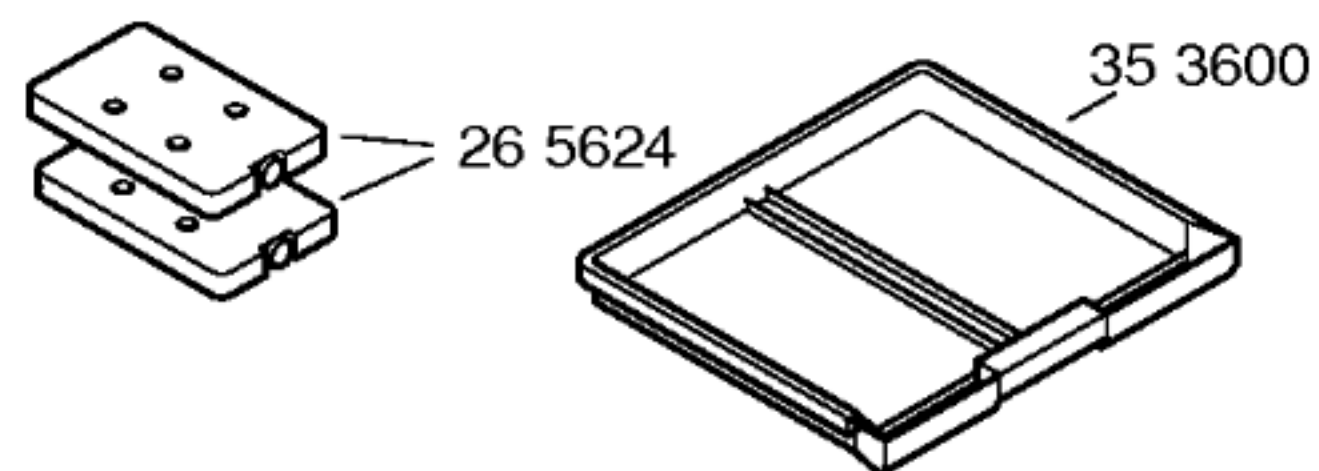

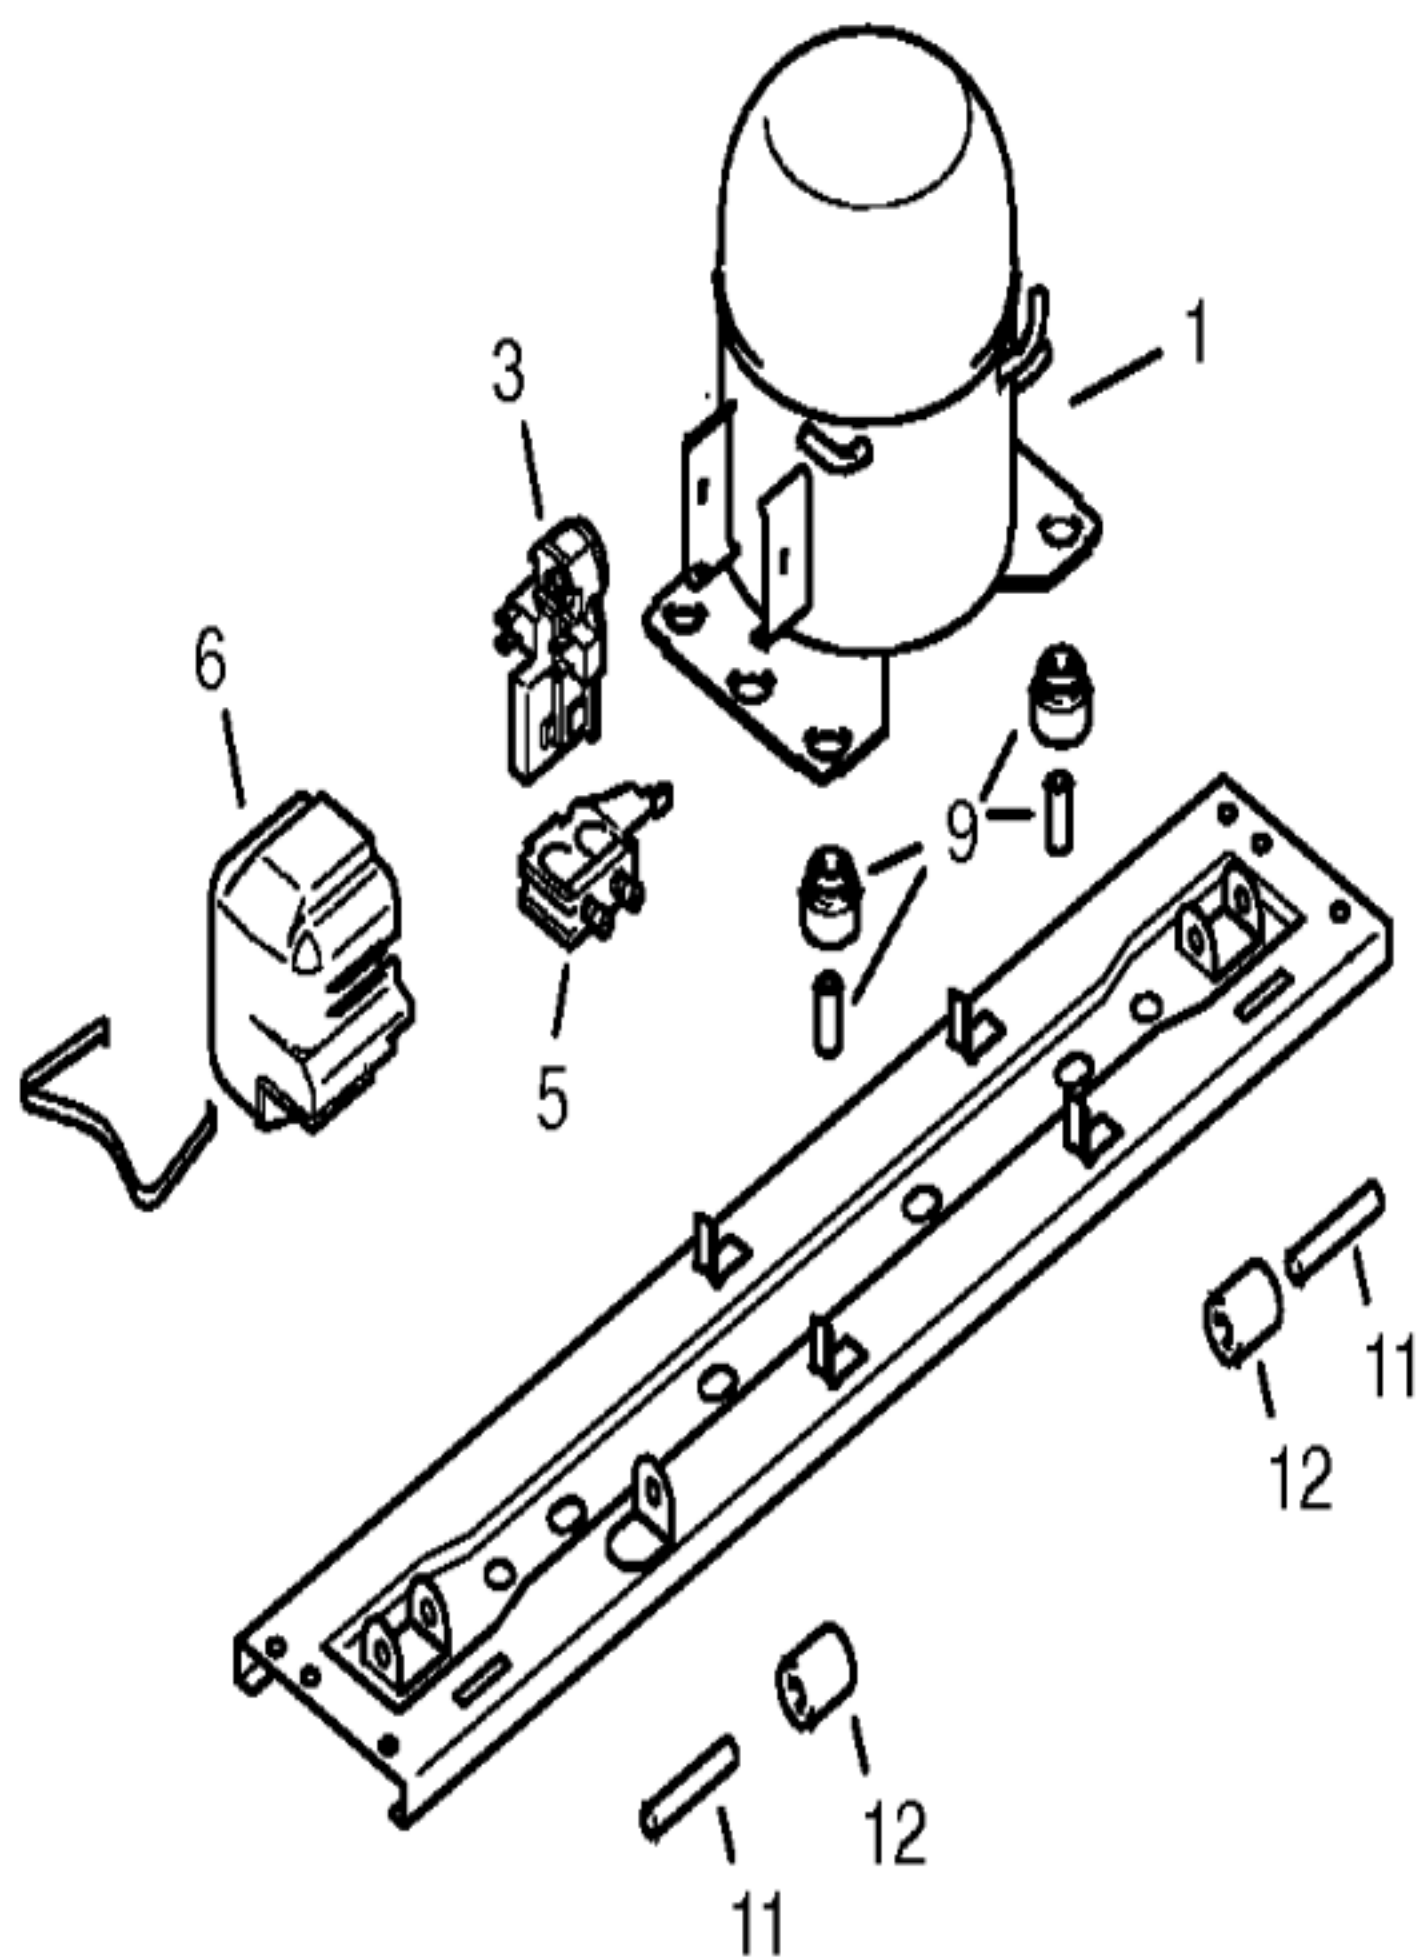

Pos.	V01		
	Matsushita		
	DC 125 E		
1	14 2131		
2			
3	17 2967		
4			
5	16 2549		
6	16 6782		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Matsushita		
Typ/Type	DC 125 E		
Förderleistung/Delivery/Débit	l/h	2246	
Anlaufstrom/Starting current/Cour de démarrage	A	9,2	
Widerstand/Resistance/Résistance	Ha/main/prin	Ω	12,1
	Hi/aux	Ω	13,8
Temp.-Regler/Thermostat			
Typ/Type			
Regelstellung/Position			
Schaltwerte/Switching values	"warm"		
Valeurs de commutation	"kalt"		
	"alarm"		
Füllmenge/Fill.quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
NTC-Fühler / Sensor	°C	kΩ	°C
	+10	9,95 ±0,18	-18
	+5	12,70 ±0,18	-22
	0	16,33 ±0,16	-26
Magnetventil/Magnetic valve/Electrovanne			
	Widerstand/Resistance/Résistance	Ω	
	Spannung/Voltage/Tension	V	