



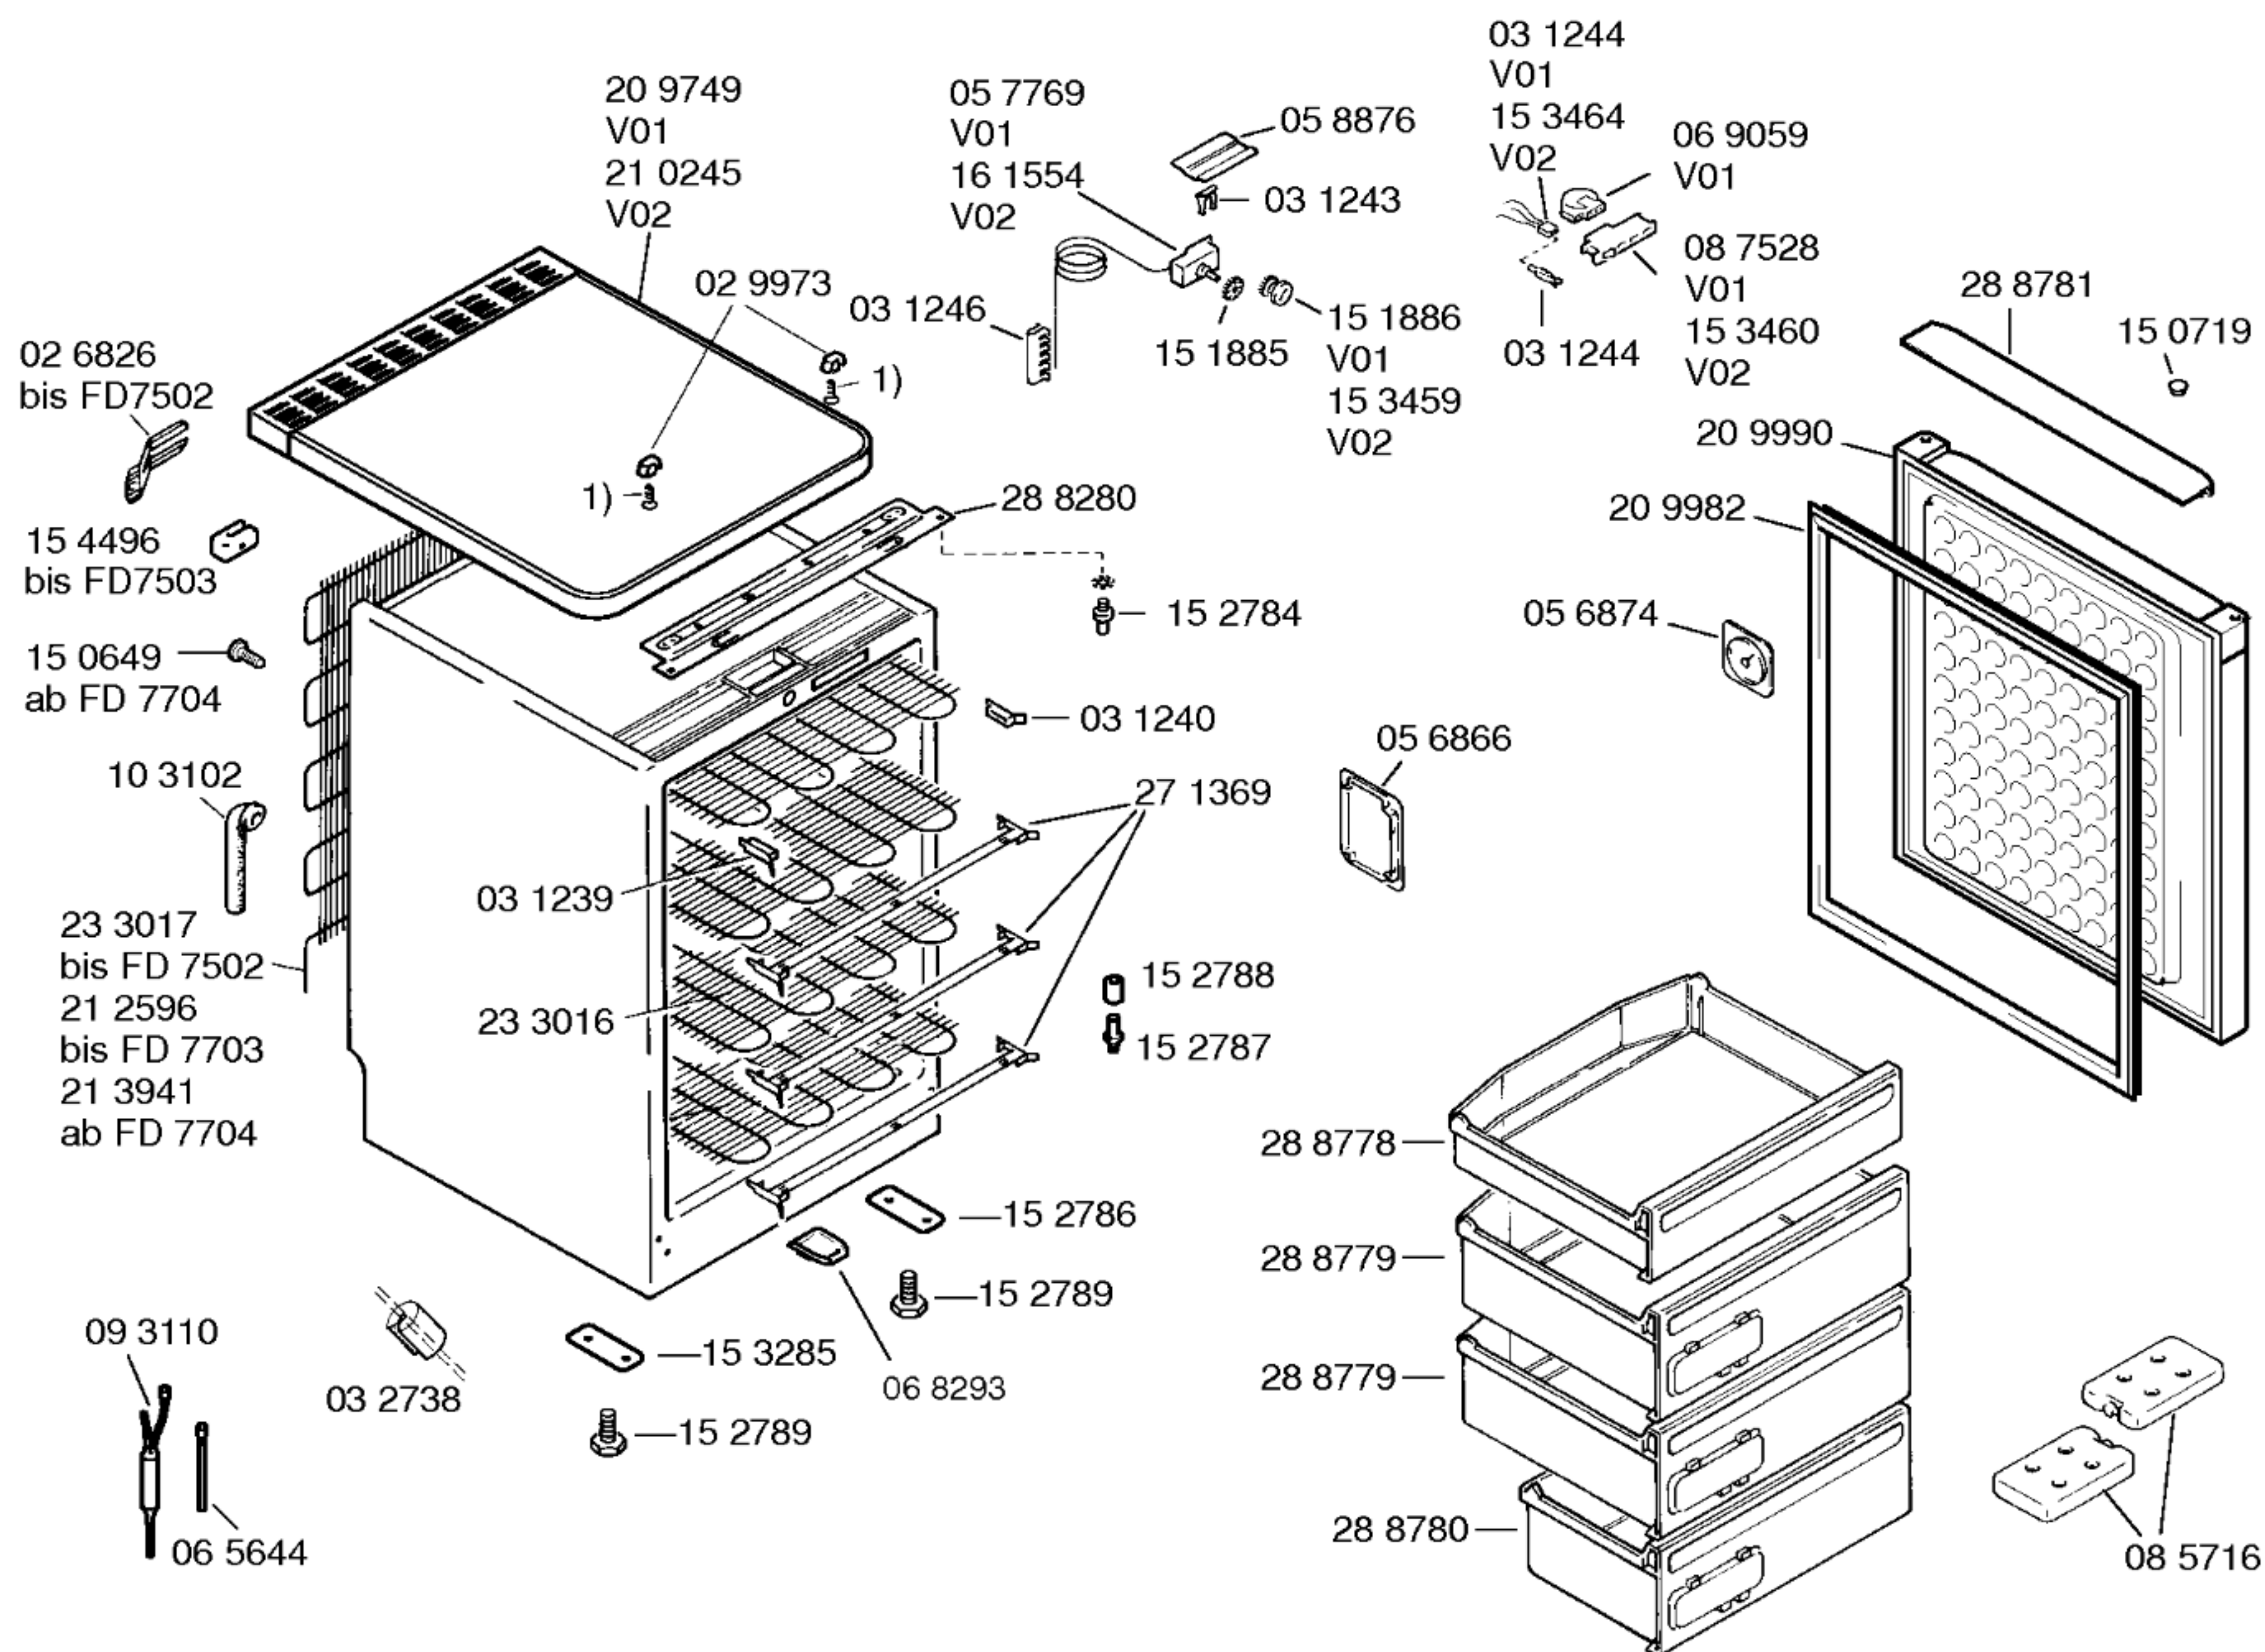

Gebrauchsanweisung
51 7755
(D,GB,F,I,NL,SF)
Montageanweisung
51 3592
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9829

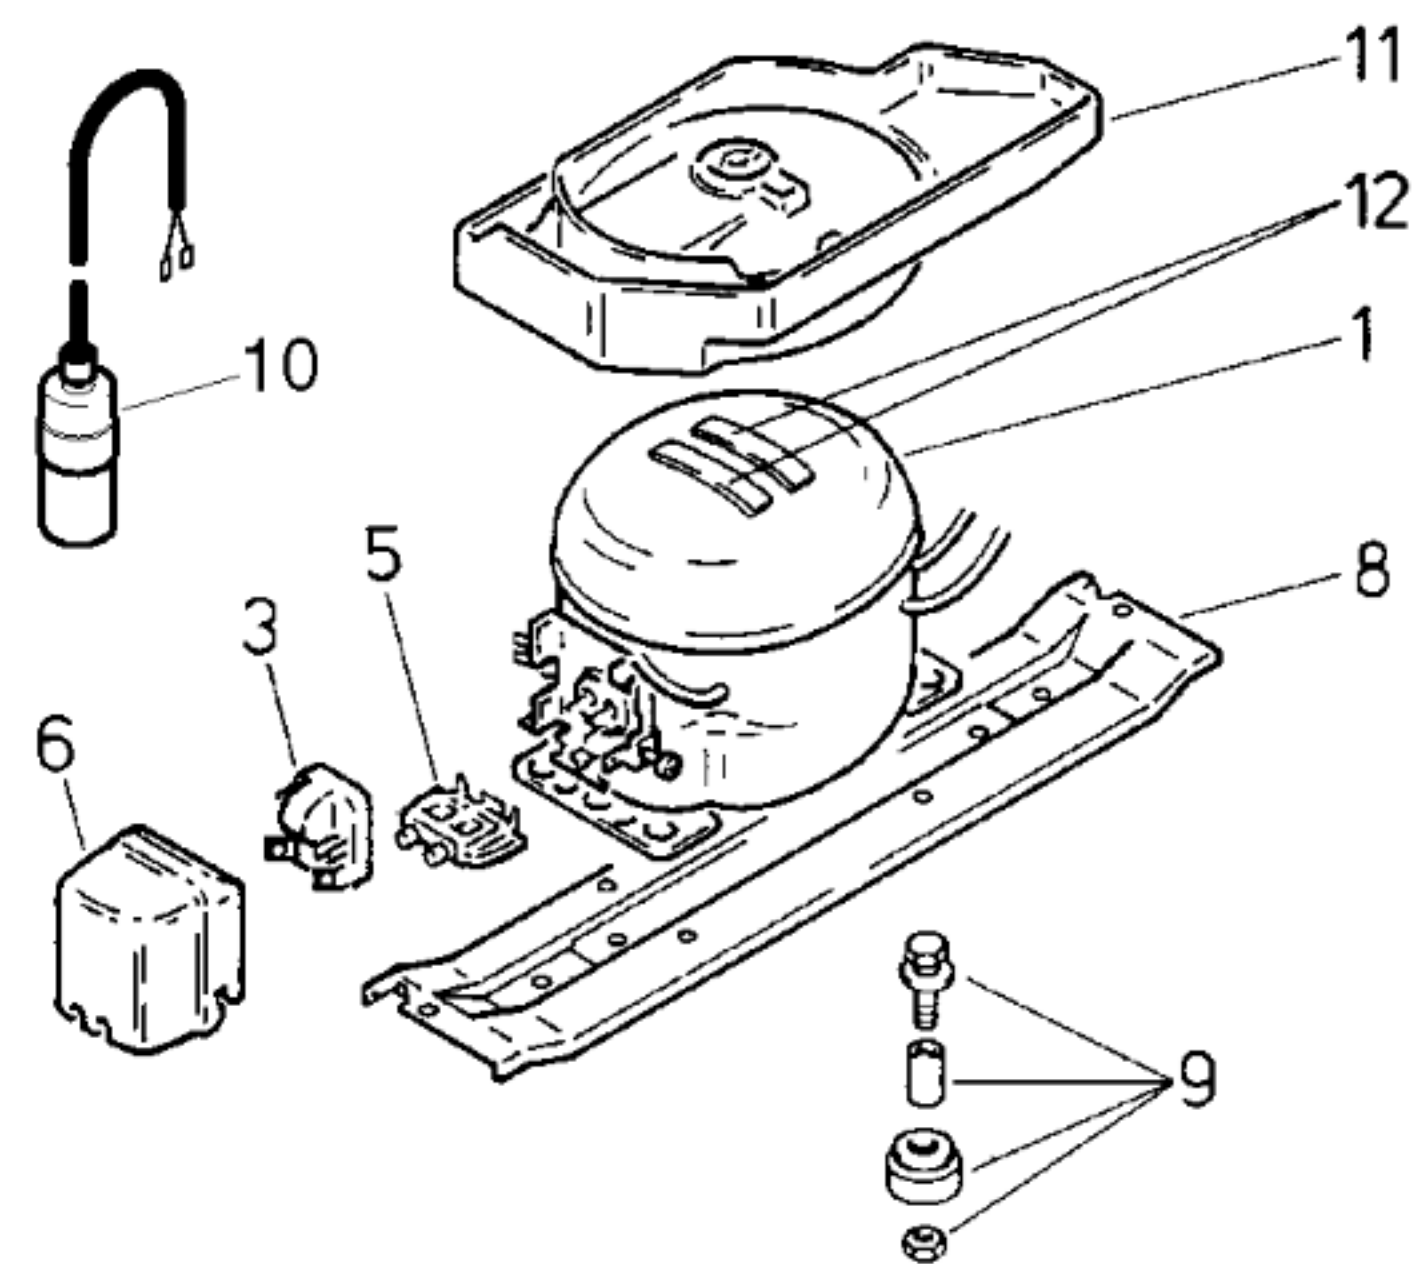

Pos.	Danfoss		
	TLES 7 K		
1	14 1239		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 0291		
9	05 0166		
10			
11	08 4744		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur	Danfoss			
Typ/Type	TLES 7 K			
Förderleistung/Delivery/Débit	l/h	1168		
Anlaufstrom/Starting current/Cour de démarrage	A	4,5		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	16,5	
	Hi/aux	Ω	16,9	
Temp.-Regler/Thermostat	WHF			
Typ/Type	TF 57 SF2			
Reglerstellung/Position	kalt	warm	kalt	warm
Schaltwerte/Switching values/	„ein“	°C	-25	-17
Valeurs de commutation	„aus“		-33	-23
	{„abtauen“ od. „alarm“}		-19,5	-13
Füllmenge/Fill.quantity/Charge	R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée	W	120		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild