

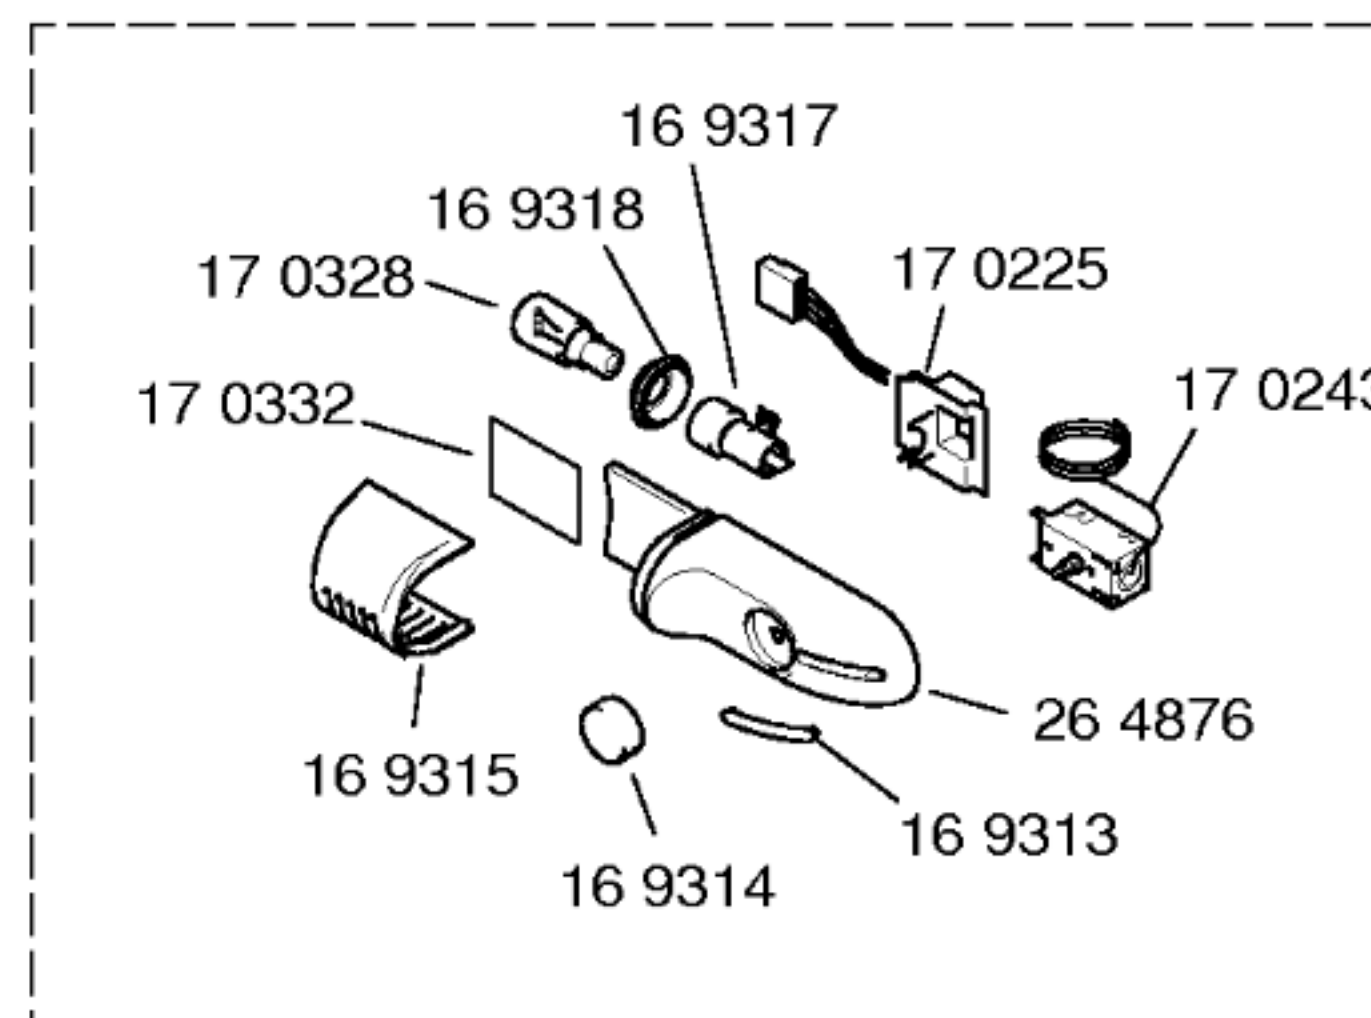


V01,V02

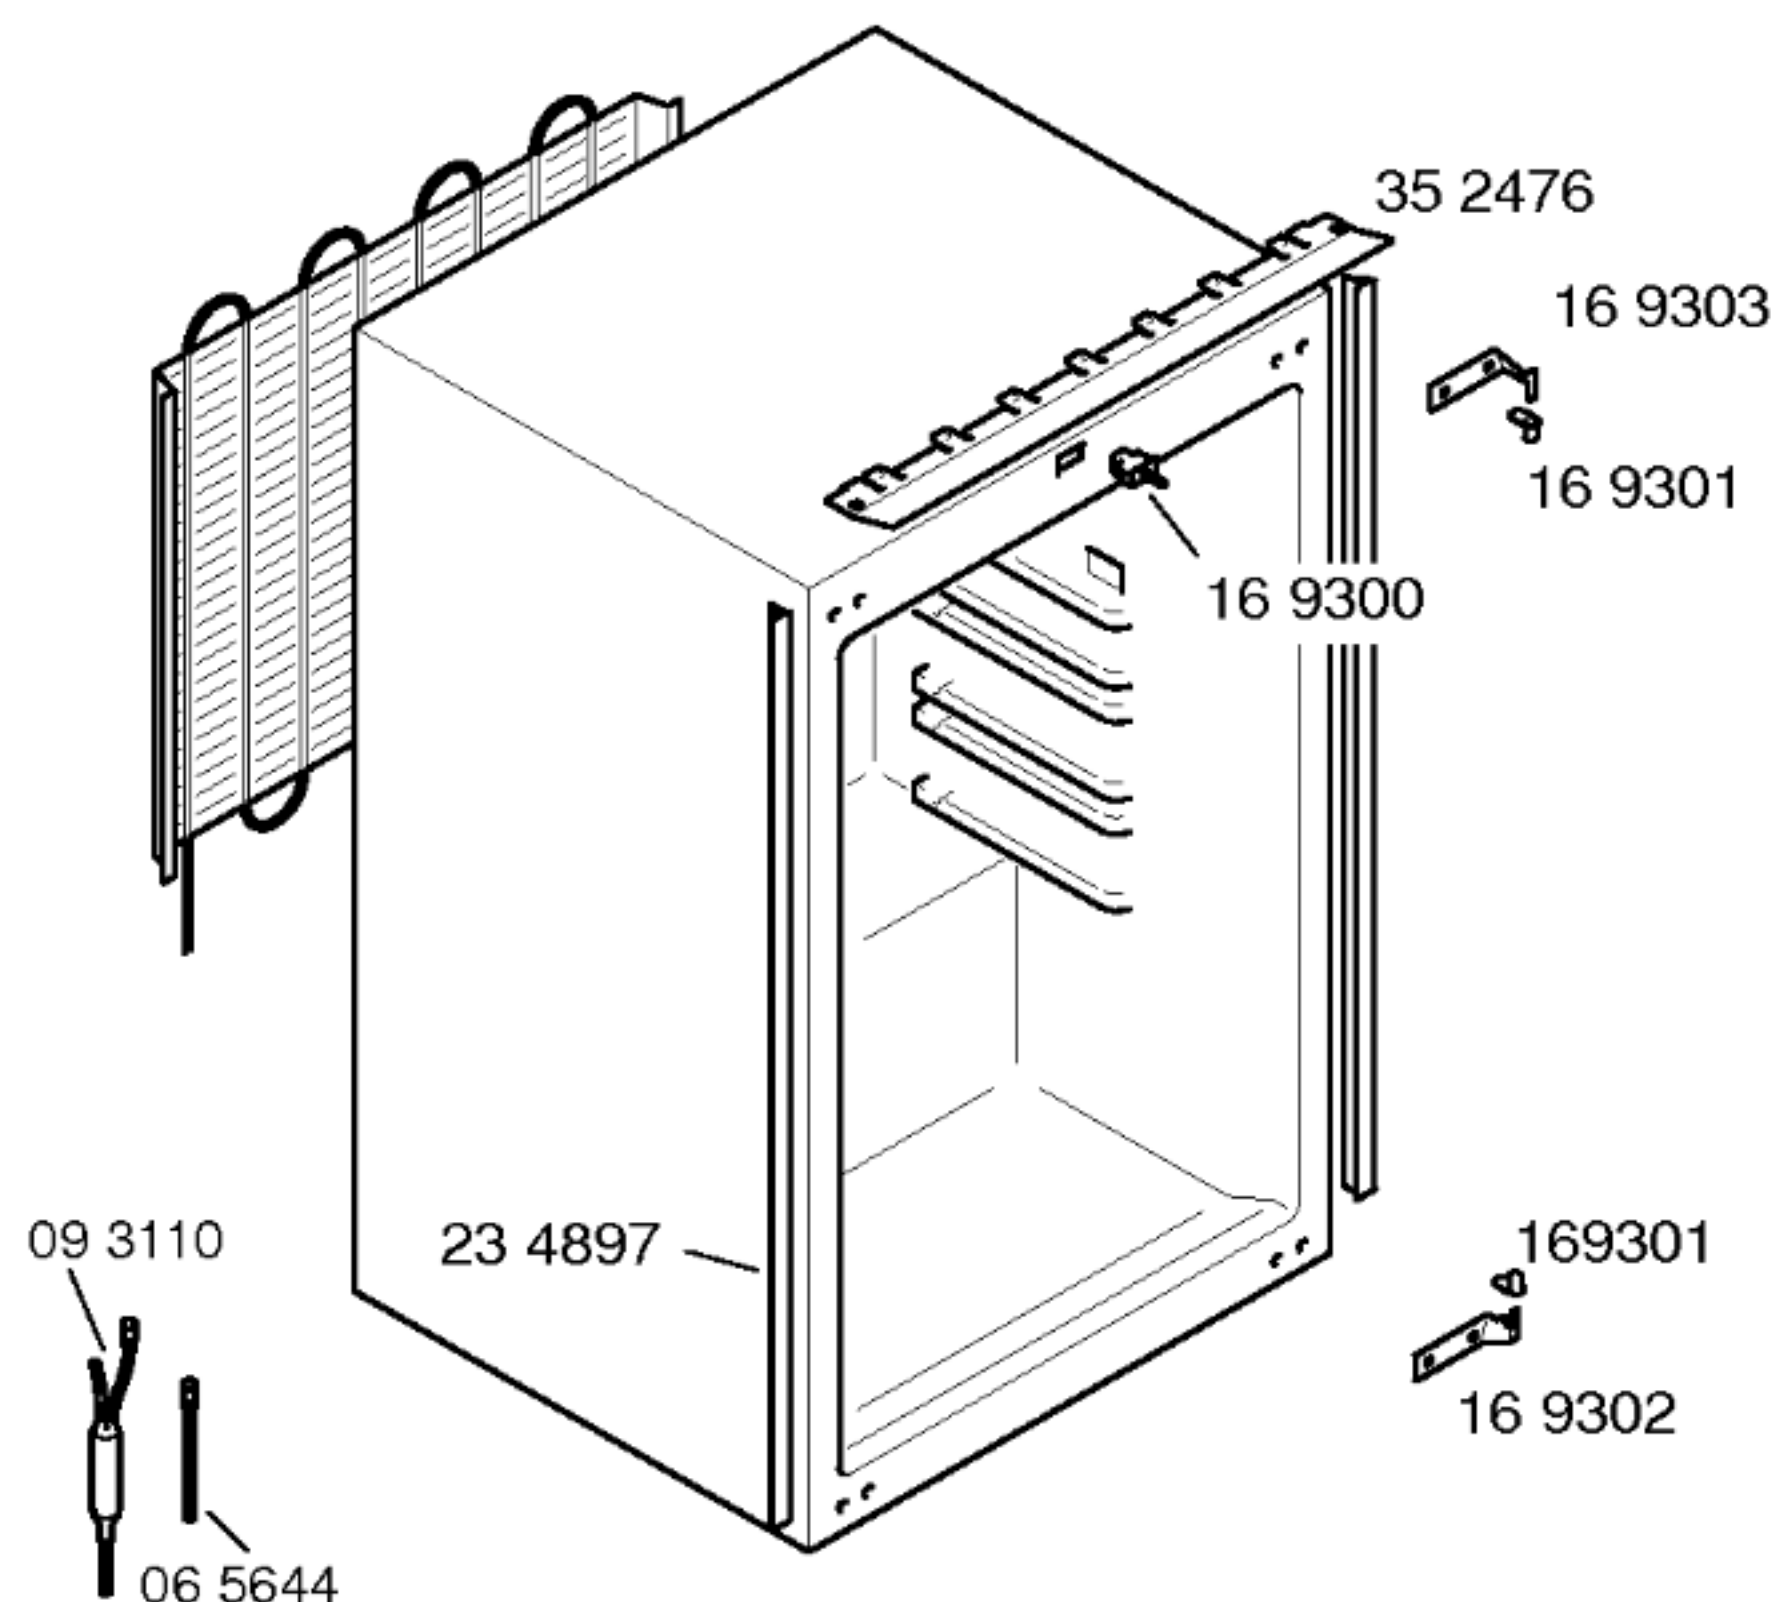

V03,V04

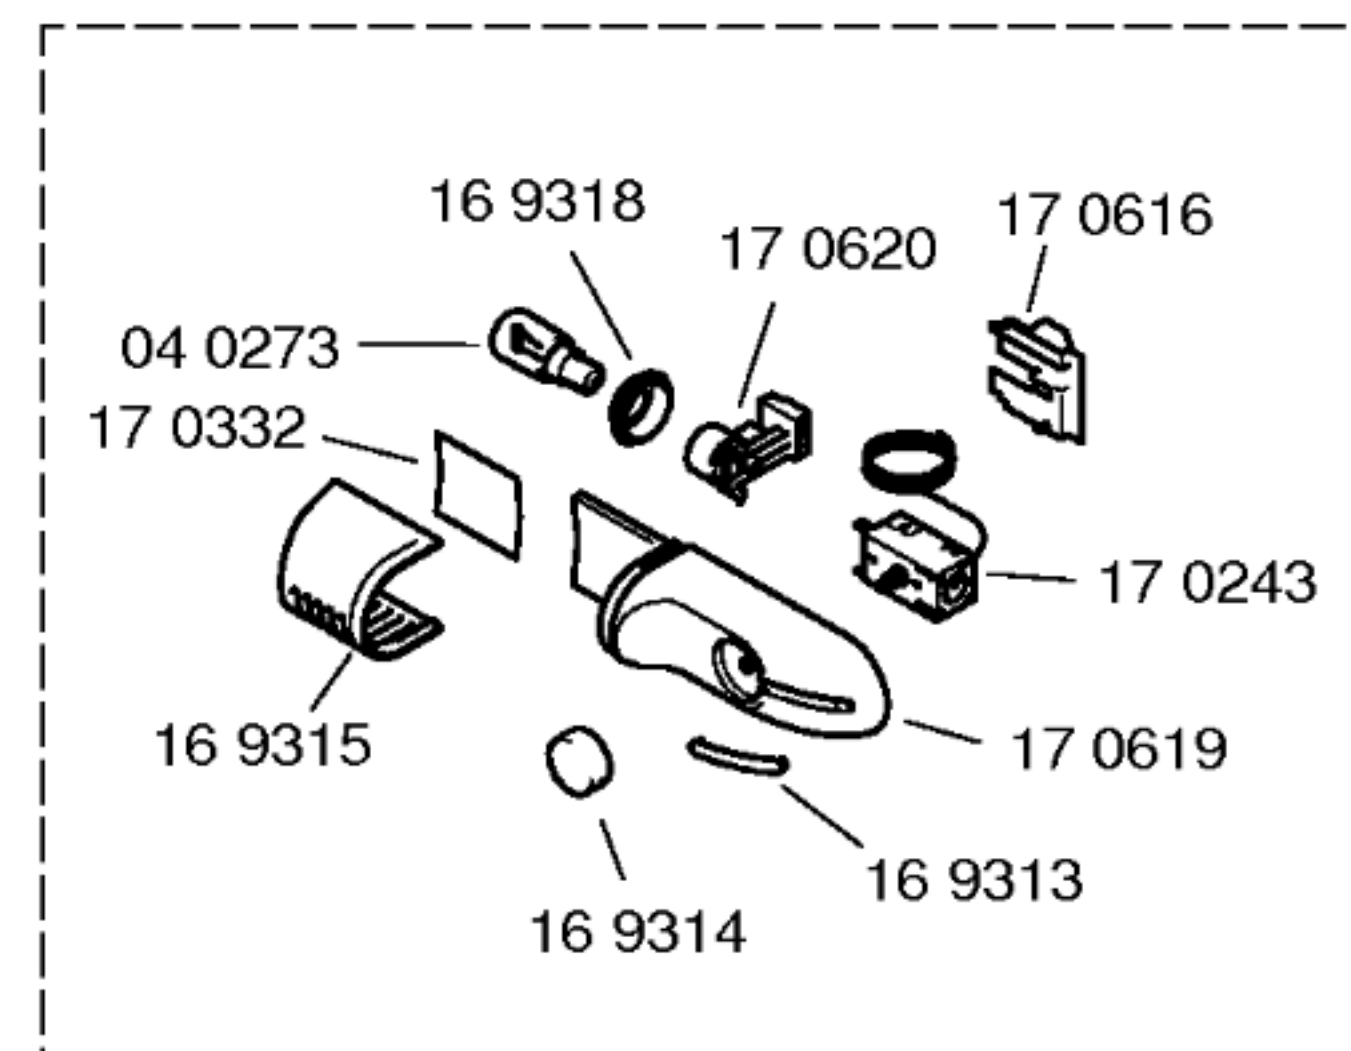



Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 2496
(D,GB,F,I,NL)

Montageanleitung
52 1893
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 4862

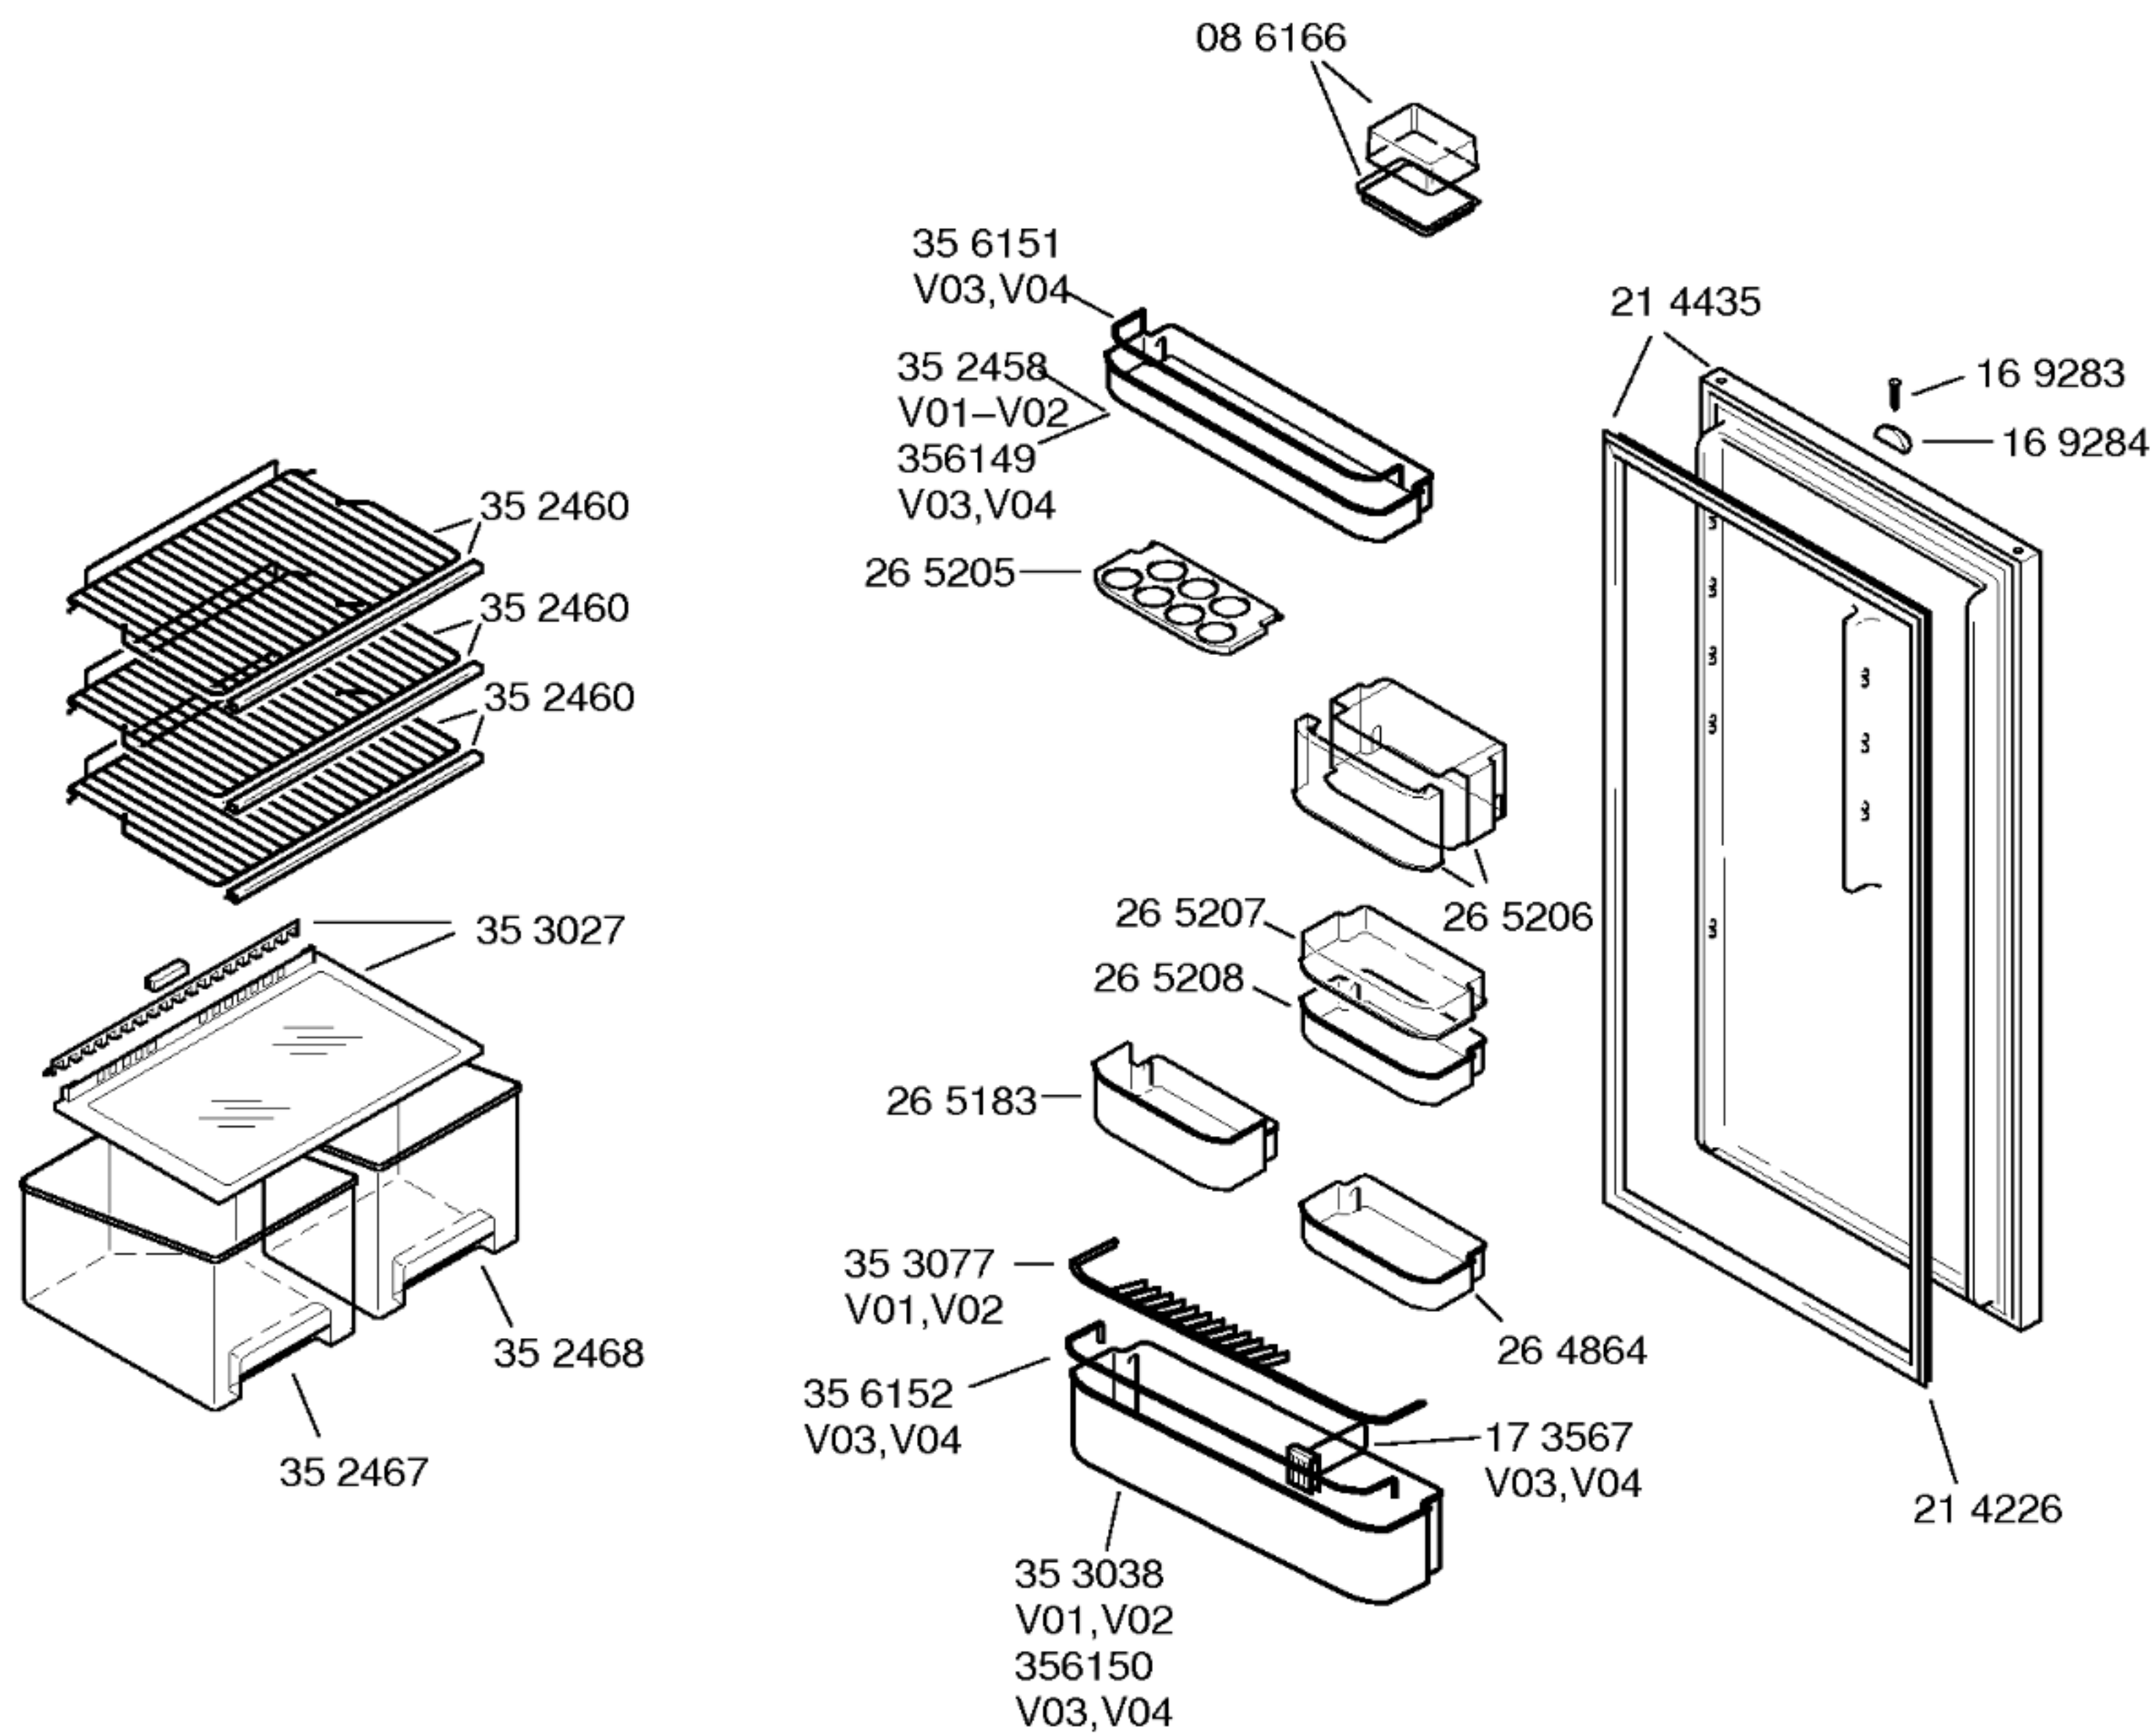

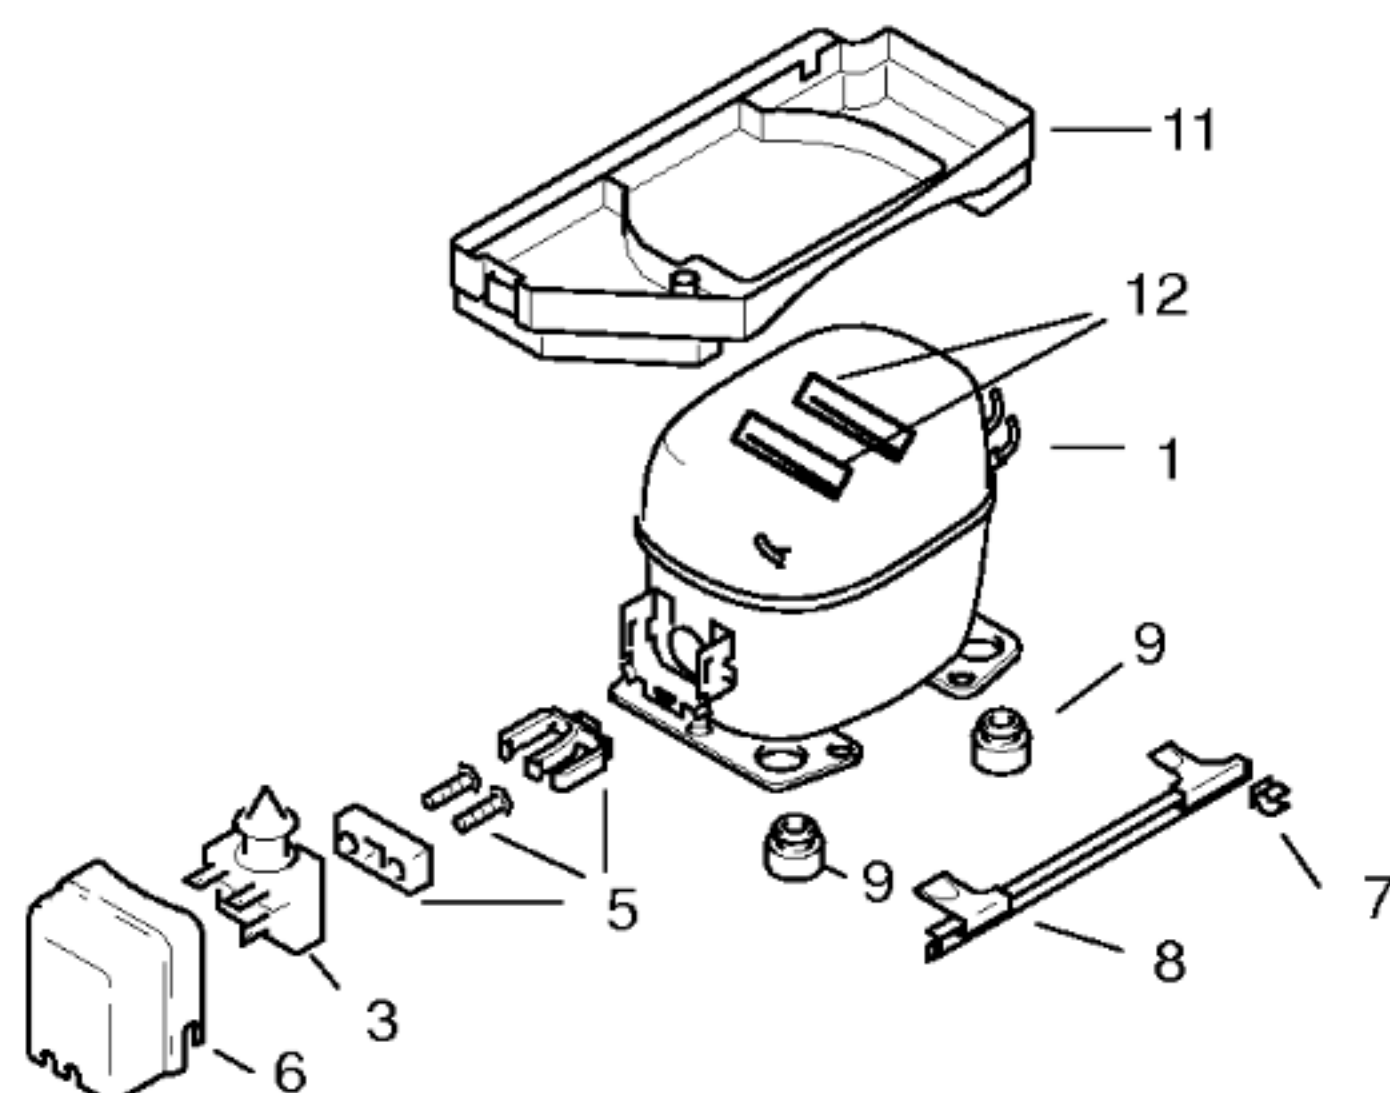

Pos.	Danfoss TLES6K		
1	14 1661		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	050166		
10			
11	26 4878		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES4K		
Förderleistung/Delivery/Débit	l/h	1026		
Anlaufstrom/Starting current/Cour de démarrage	A	4,0		
Widerstand/Resistance/Résistance Ha/main/prin	Ω	18,9		
Hi/aux	Ω	15,3		

Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values	"warm"	+5,0	+5,0	
Valeurs de commutation	"kalt"	-28,0	-10,0	
	"alarm"			

Füllmenge/Fill.quantity/Charge	R600a	+		
--------------------------------	-------	---	--	--

Anschlußwert/Conn.load/Puiss. connectée	W	70		
---	---	----	--	--

Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			

Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			

Temp.-Regler/Thermostat				
-------------------------	--	--	--	--

Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			