


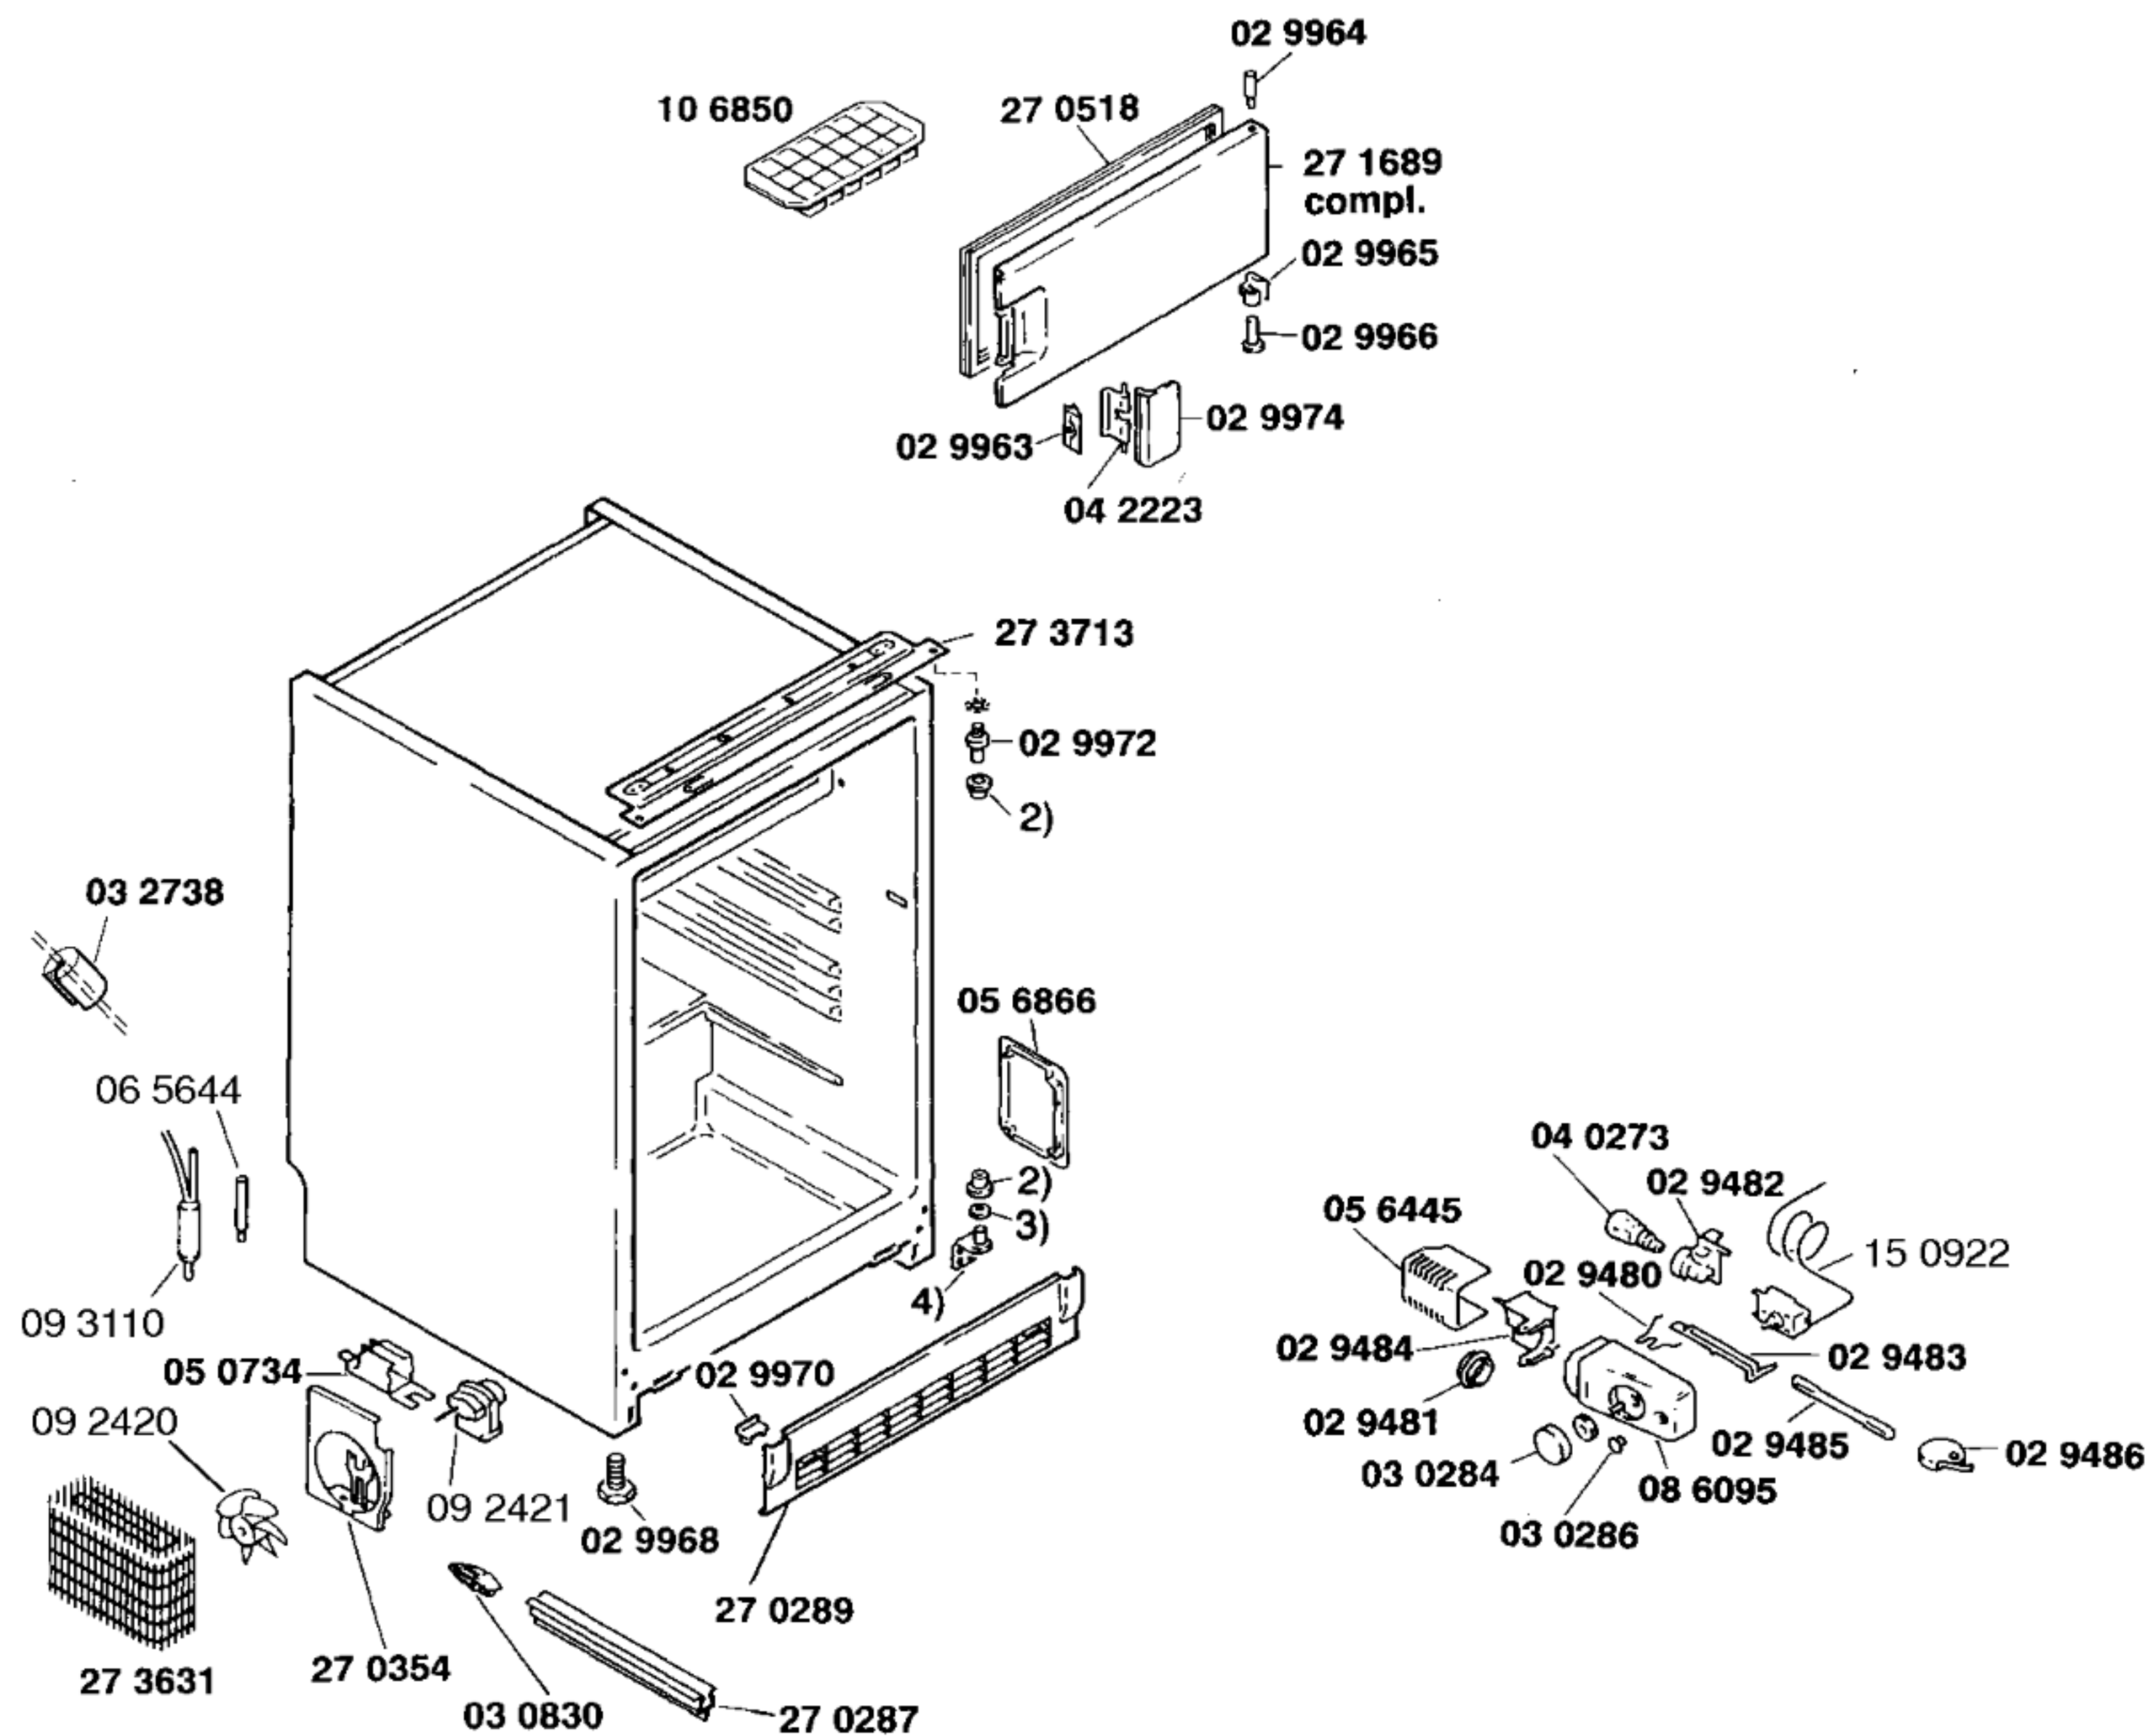

51 4331
Gebrauchsanweisung
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

51 4009
Montageanweisung
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

2) 01 9257


3) 02 0605

4) 02 9971

Zubehör:

Dekorrahmen
Z4110A1,Alu
Z4110W1,weiss


Sockel
Z4510X0

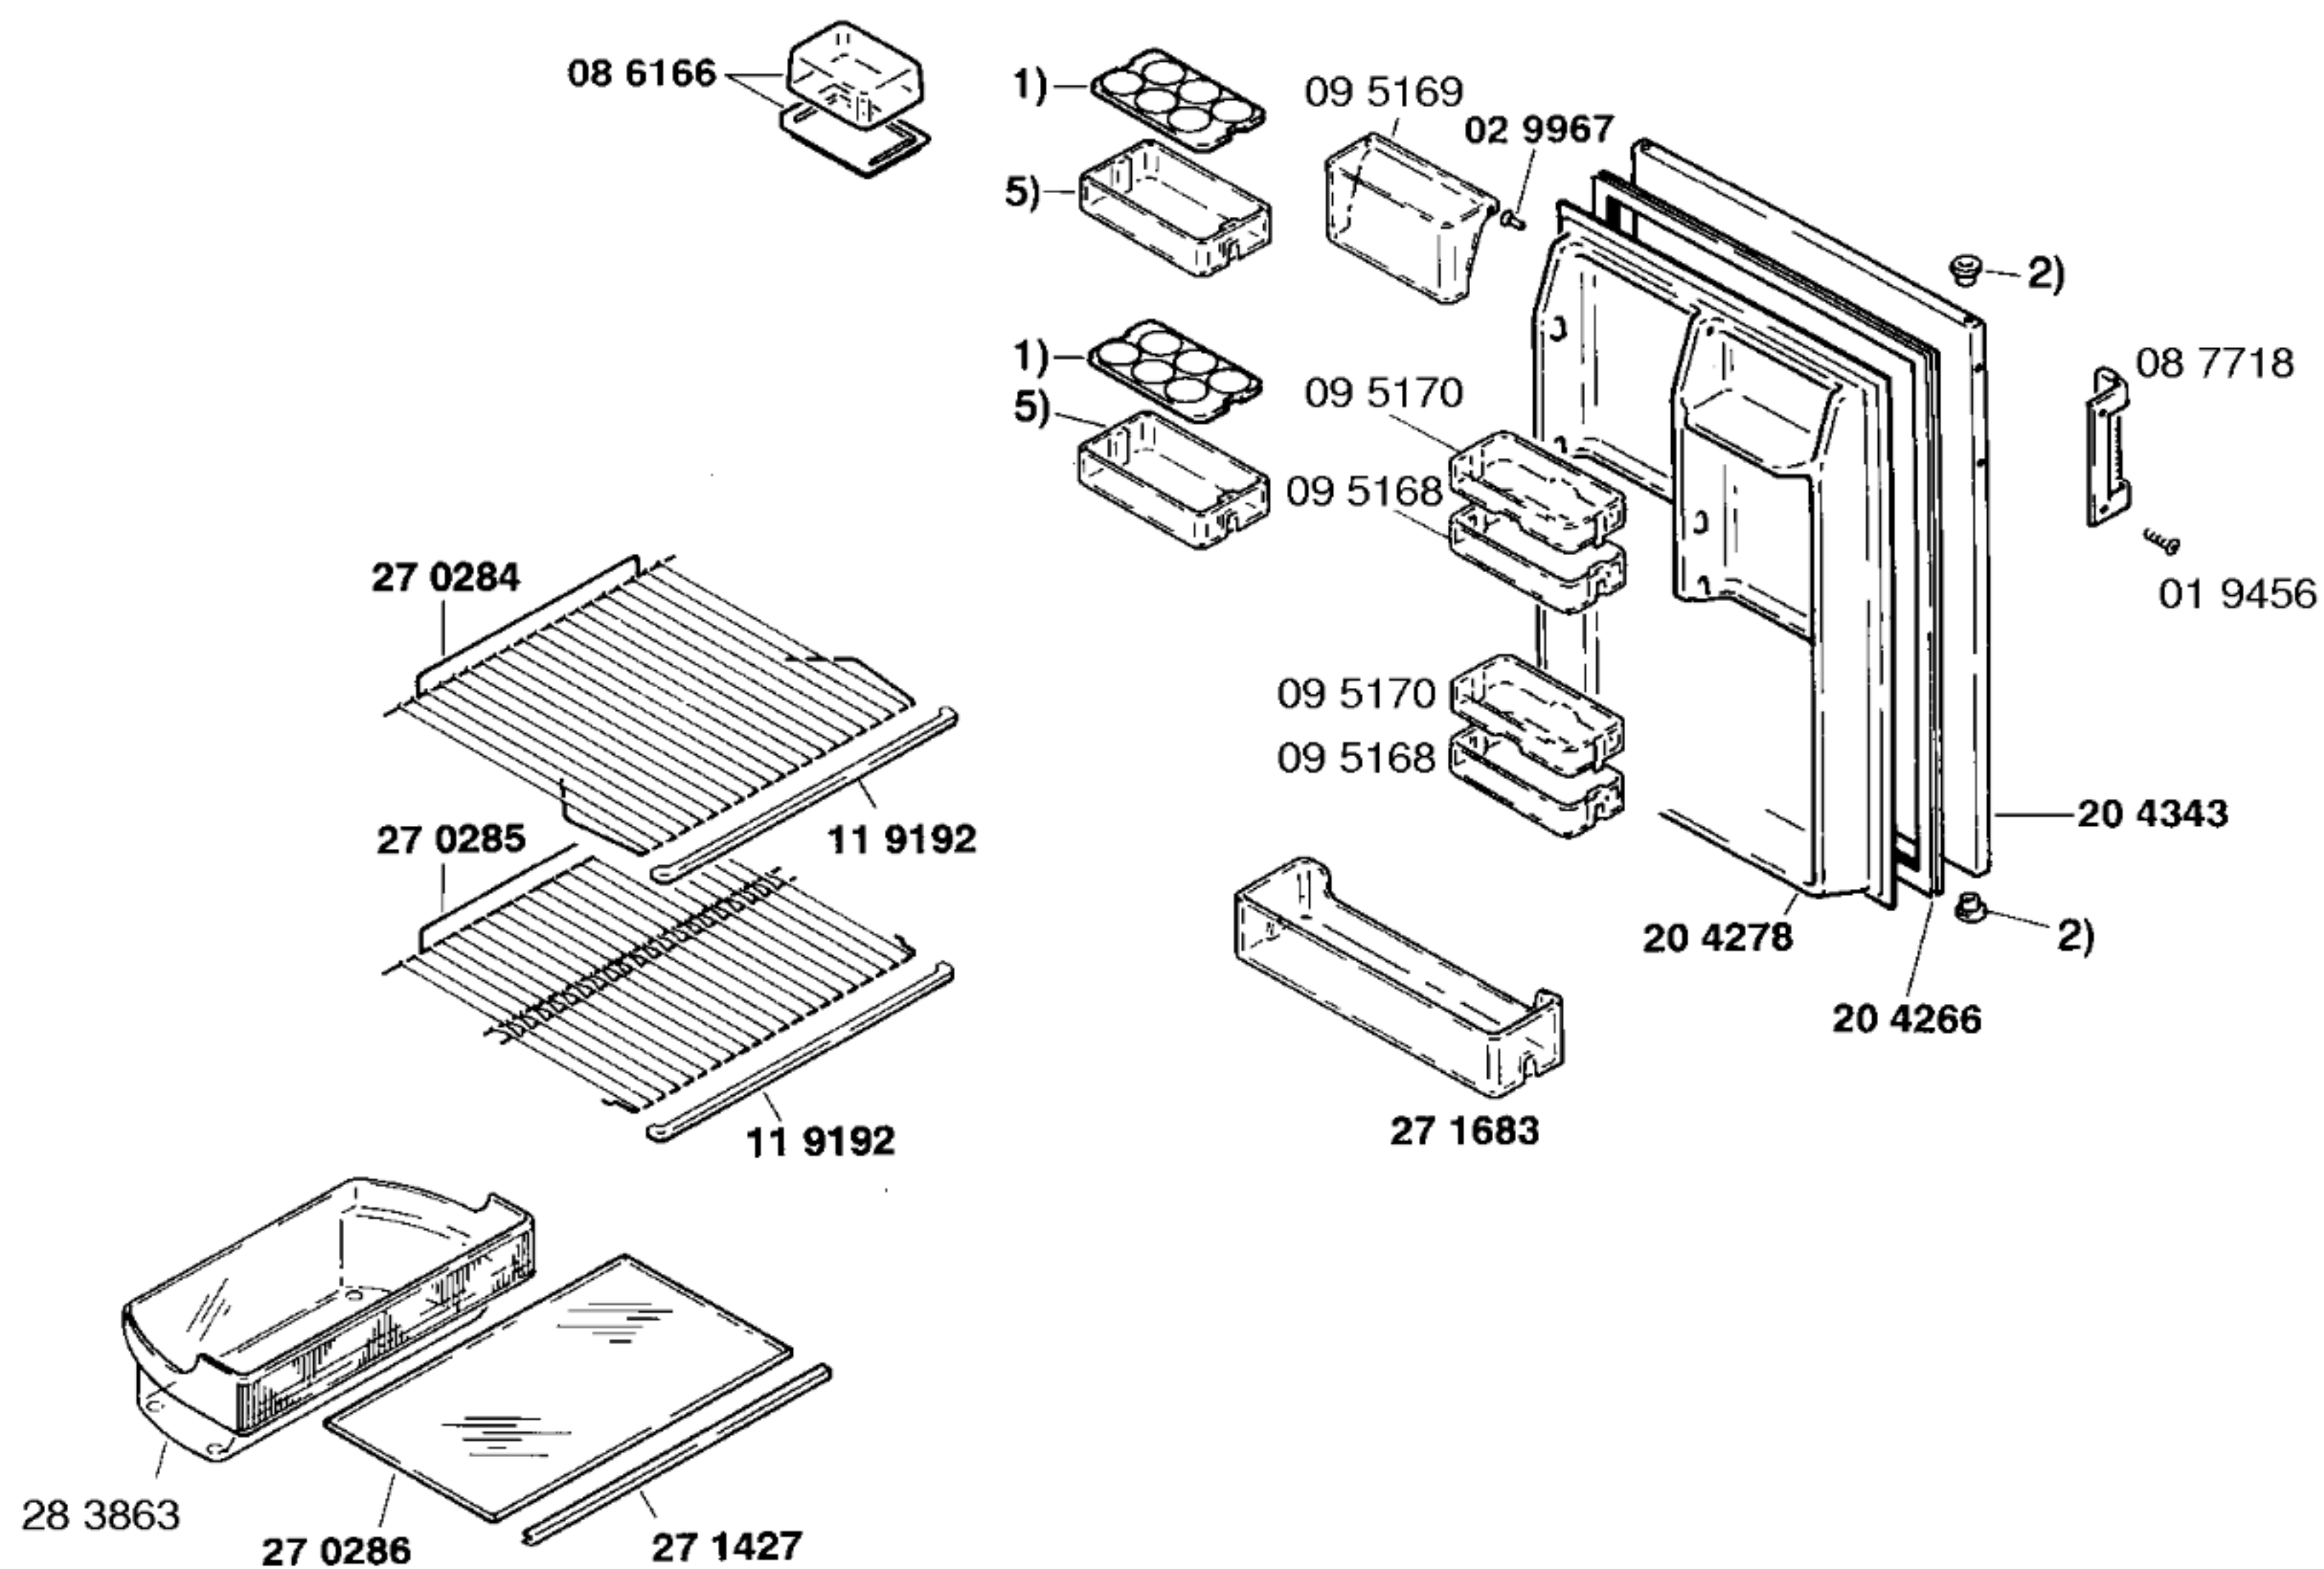

1) 08 5589

2) 01 9257

5) 08 7716

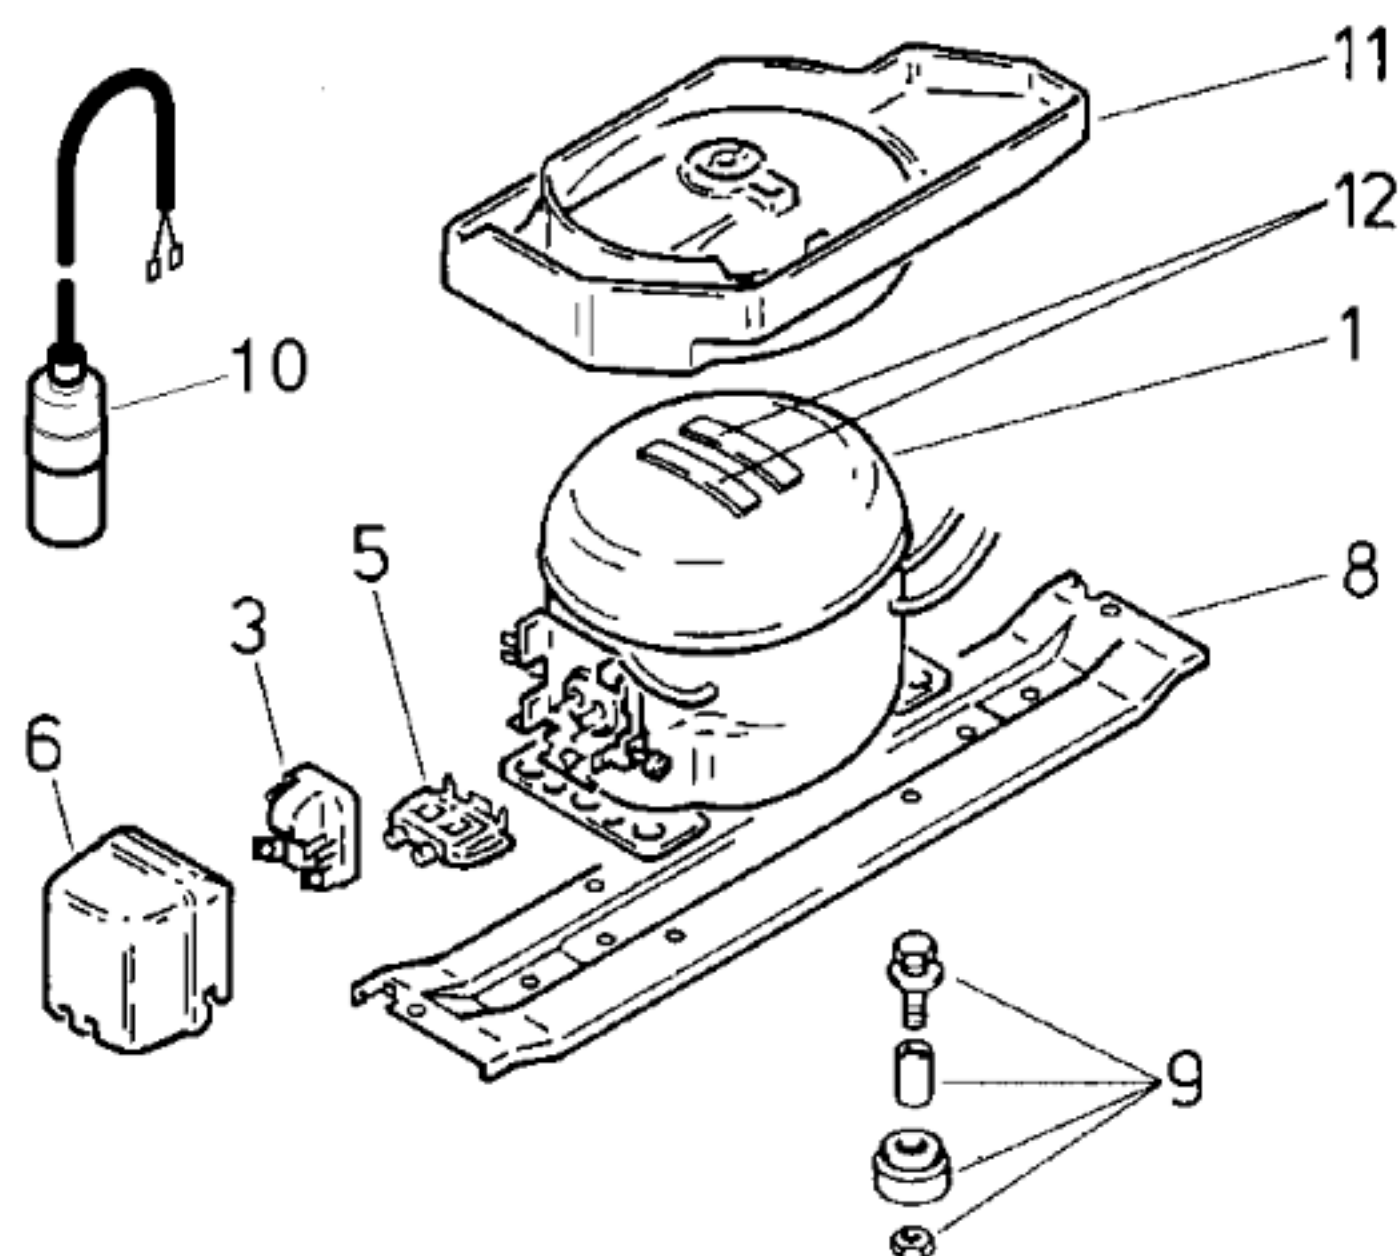

Pos.			
	Danfoss		
	TL 5 F		
1	14 1119		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	27 0291		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 5 F		
Förderleistung/Delivery/Débit		l/h	914	
Anlaufstrom/Starting current/Cour de démarrage		A	8,9	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	18,0	
		Hi/aux Ω	14,7	
Temp. Regler/Thermostat		Ranco		
Typ/Type		K 59		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“ $^{\circ}\text{C}$	+4,5	
		„aus“	+4,5	
		(„abtauen“ od.)	–31	
		„alarm“	–13,5	
Füllmenge/Fill.quantity/Charge		R134a	g	75
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		