 


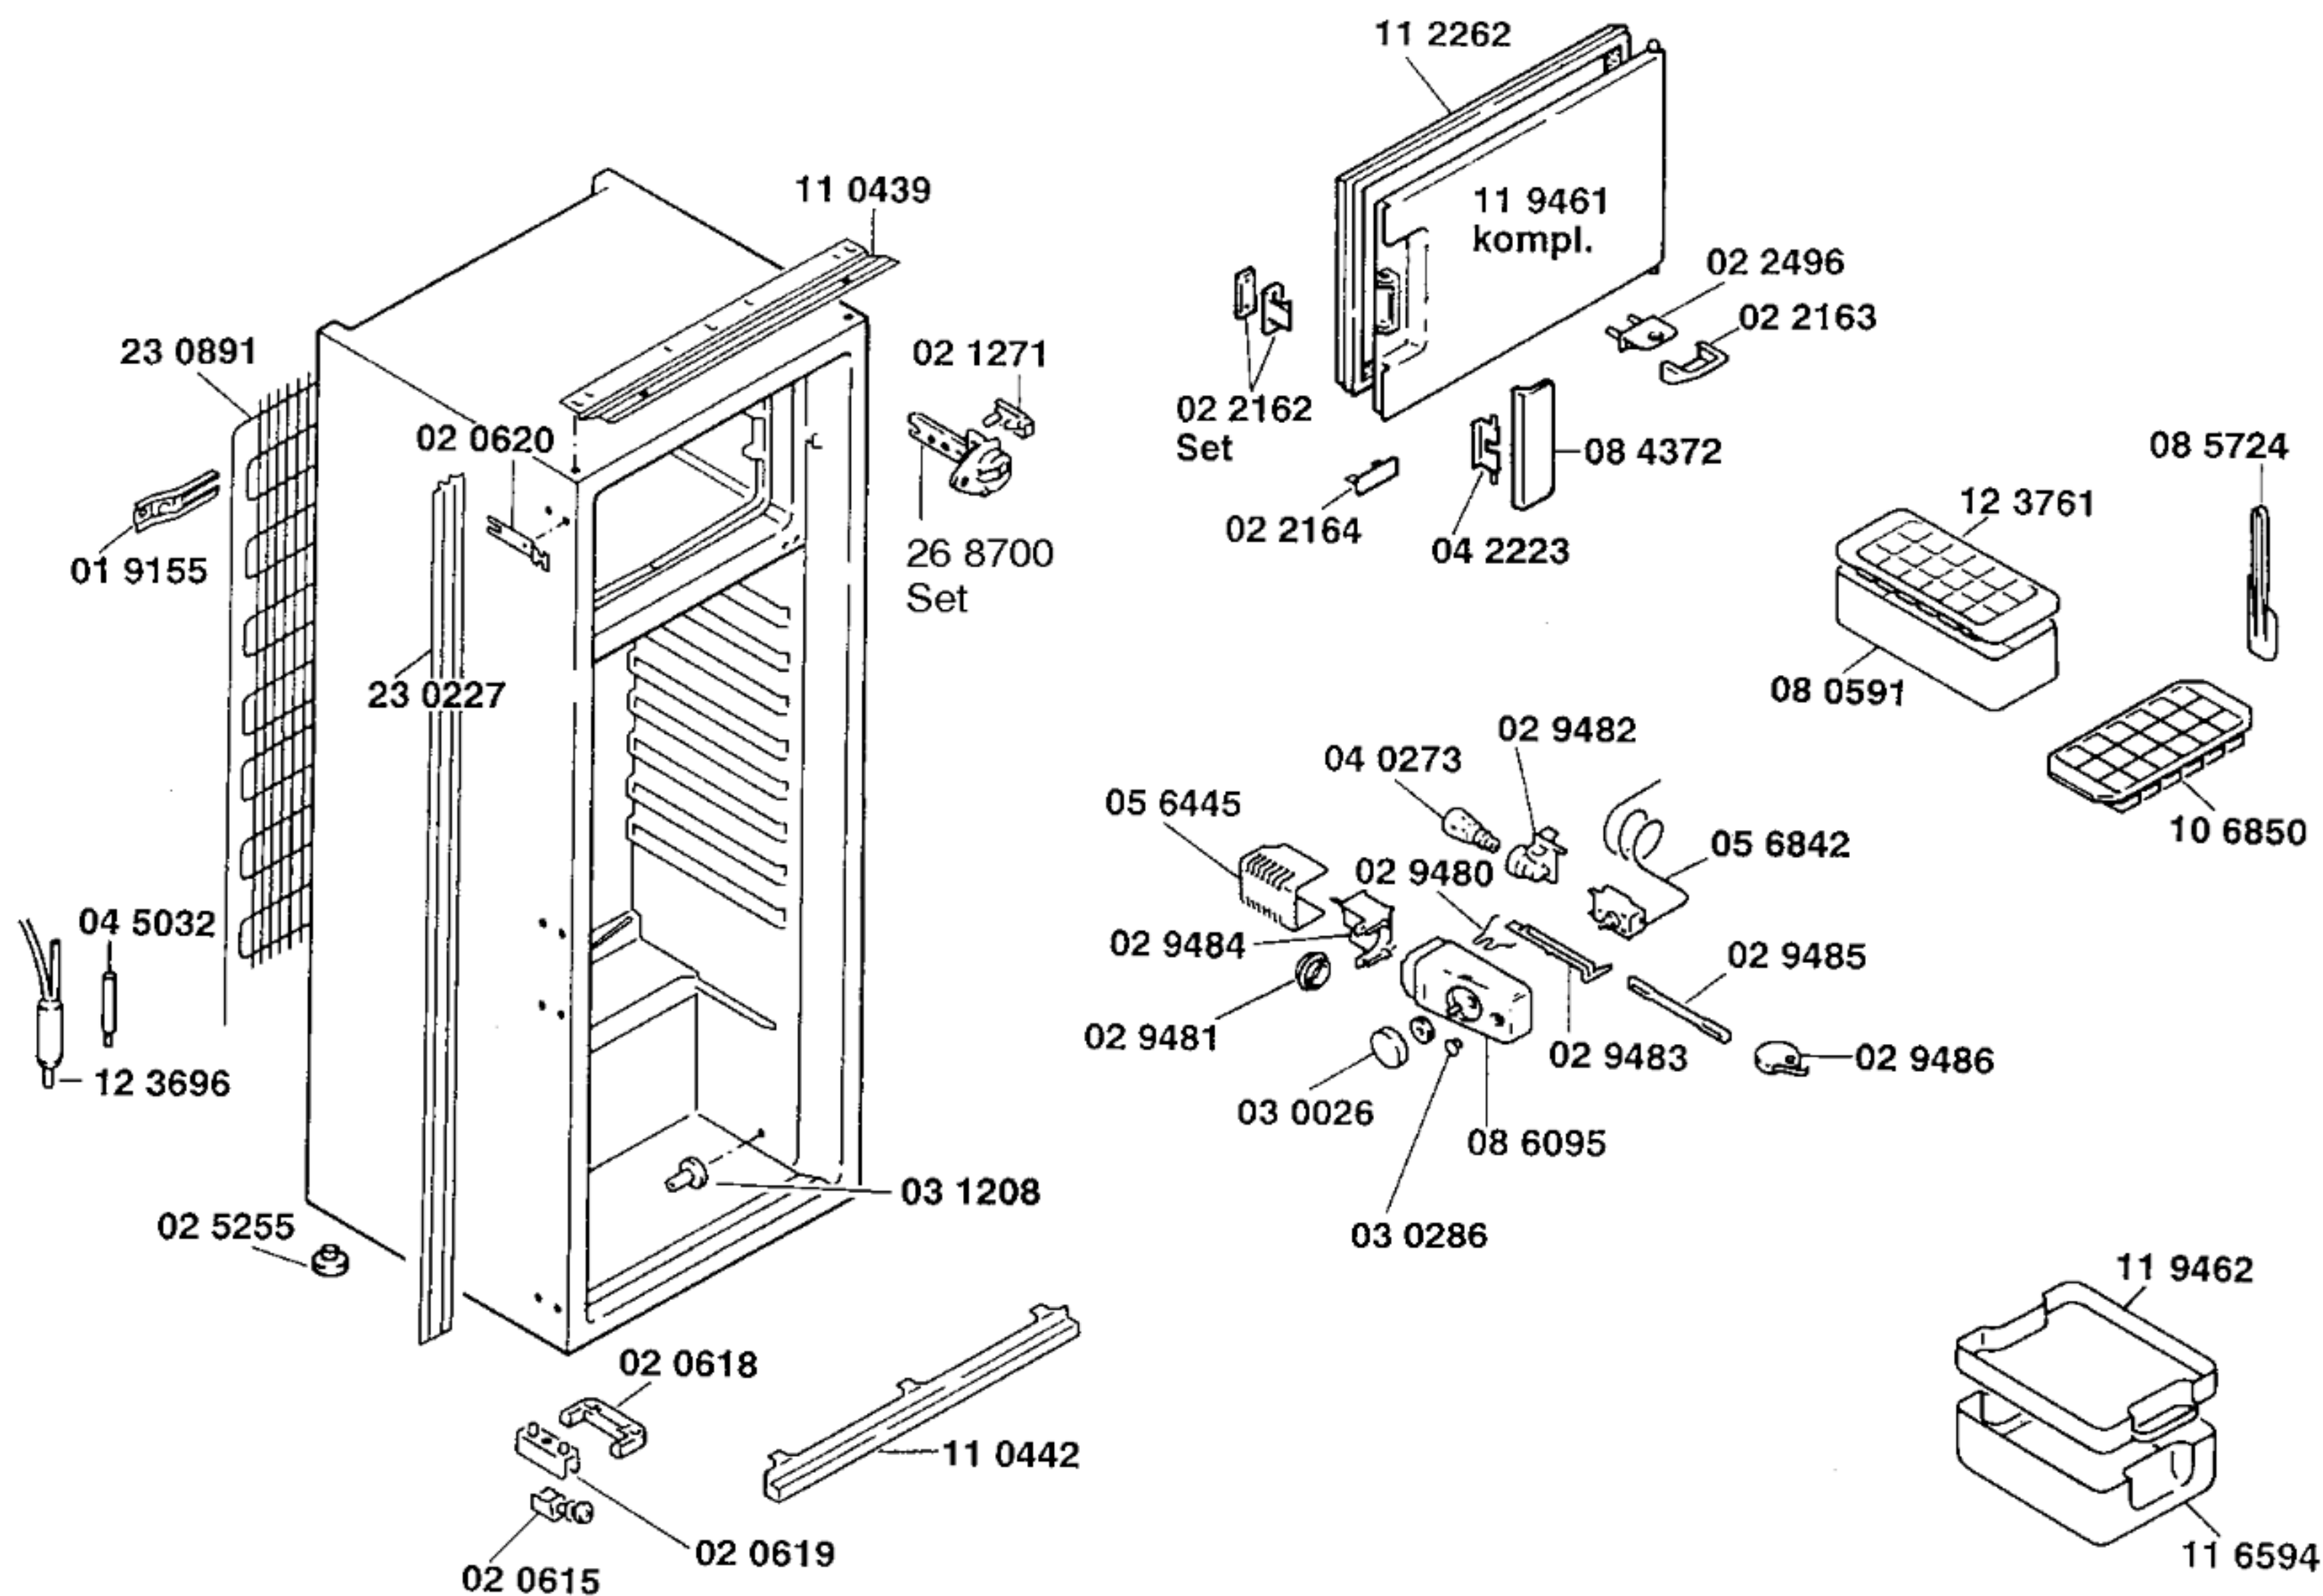


51 4430
Gebrauchsanweisung
(D,GB,F,I,NL,E)


51 2329
Montageanleitung
(D,GB,F,I,NL,N,S,E)

08 4136
Schraubensatz

 08 5059
Befestigungssatz

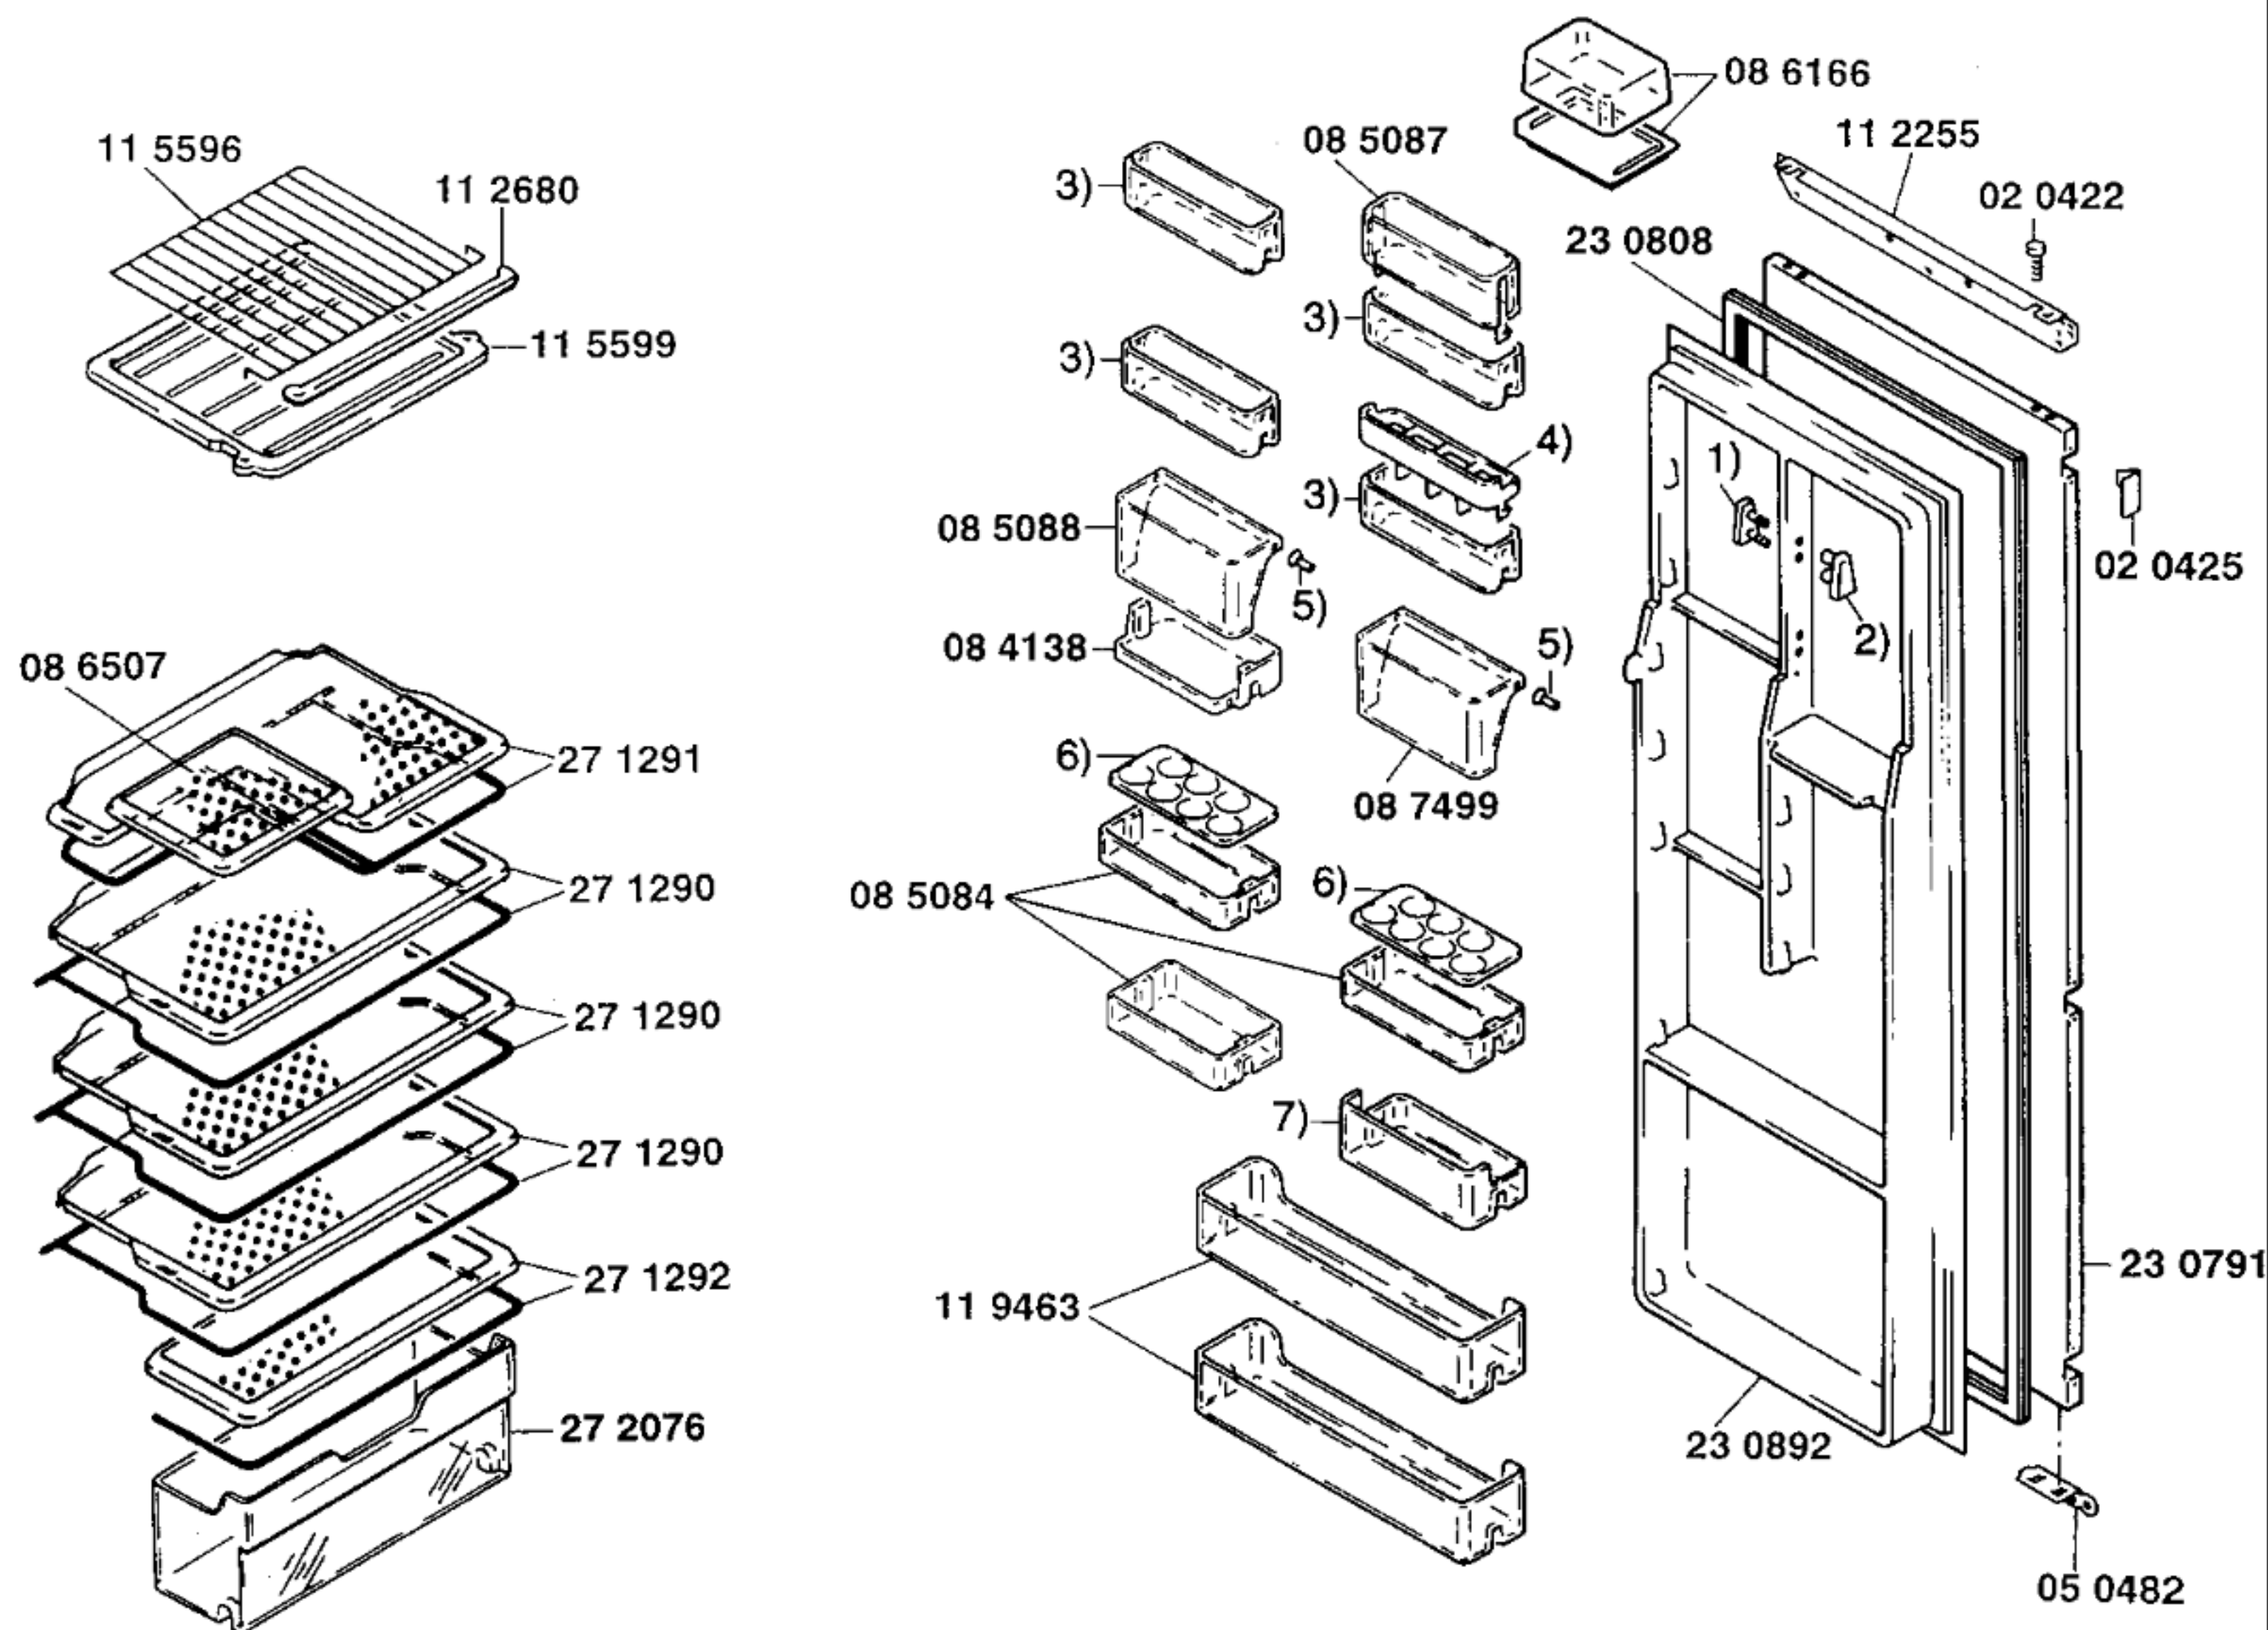

 - 1) 02 2437
- 2) 02 6566
- 3) 08 5089
- 4) 08 6169
- 5) 02 9967
- 6) 08 4592
- 7) 08 5085

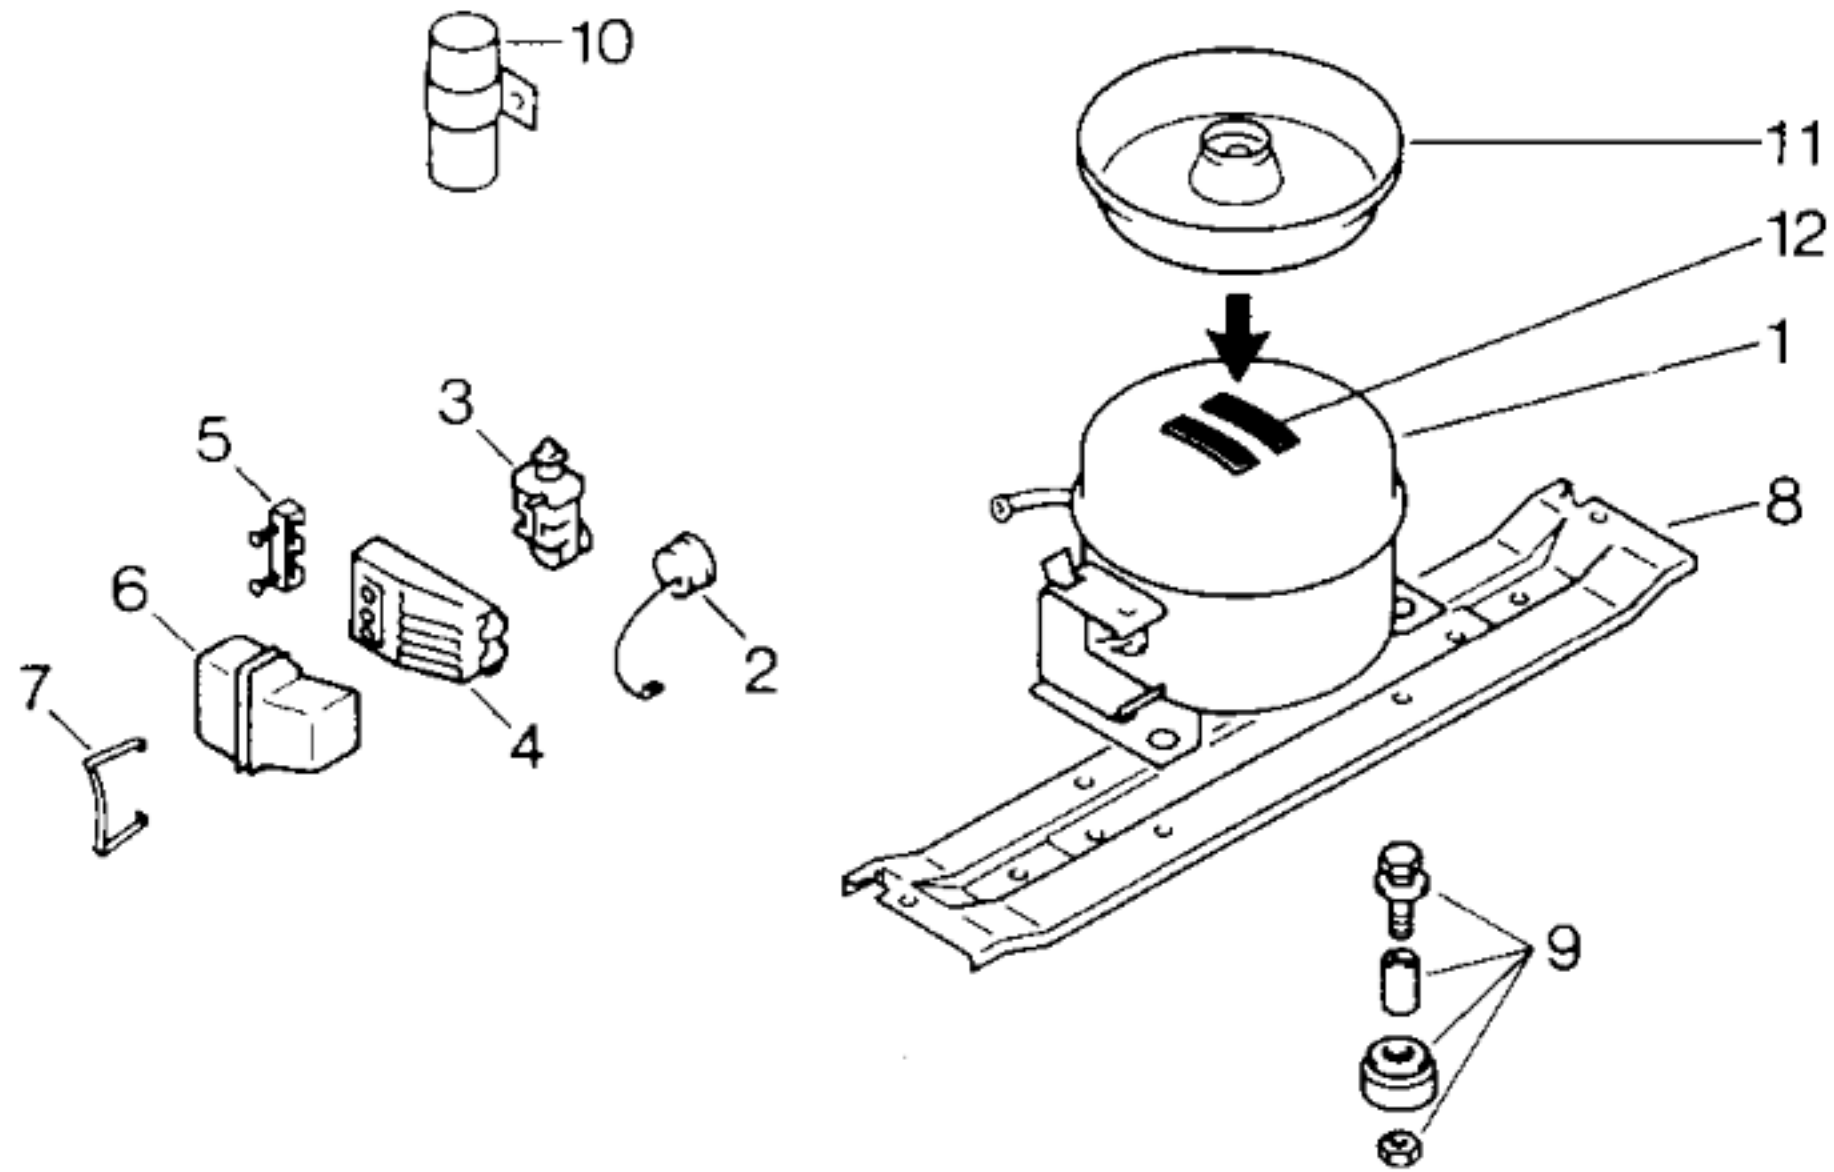

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita			
Typ/Type		D116LRAA			
Forderleistung/Delivery/Débit		l/h	1184		
Anlaufstrom/Starting current/Cour. de démarrage		A	8,75		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	12,0	
		Hi/aux	Ω	28,7	
Temp.-Regler/Thermostat		Ranco			
Typ/Type		K 59			
Reglerstellung/Position		kalt		°C	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	+ 4,5	°C	
		„aus“	- 31,0	°C	
		(„abtauen“ od.)	+ 4,5	°C	
		„alarm“	- 13,5	°C	
Füllmenge/Fill.quantity/Charge		R12	g	180	
Anschlußwert/Conn.load/Puiss. connectée			W	150	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance			Ω		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		

Pos.	EU1		
	Matsushita D116LRAA		
1	14 0563		
2	05 8506		
3			
4			
5			
6	05 8458		
7	02 6731		
8	11 1838		
9	05 0166		
10			
11	08 5182		
12	05 6008		