

**BOSCH**

EH 680 SC – 0 750 041 052–D1 bis FD 6207
 – 0 750 041 052–D2 ab FD 6211
 – 0 750 041 057–CH1

EH 680 SC - 0 750 041 079-S1

HERDE
 Stand-Herde


Ident-Nummern-Konstante
 3740


51 1405
 Gebrauchsanweisung
 D1, D2, CH1
 (D, GB, F, I, NL)

51 0832
 Tips und Rezepte
 D1, D2, CH1
 (D)

Sonderzubehör
 Blatt 13, 15

1) 08 0843
 1,5 kW
 D1, D2
 08 1244
 1,5 kW
 CH1
 08 2962
 1,5 kW
 S1

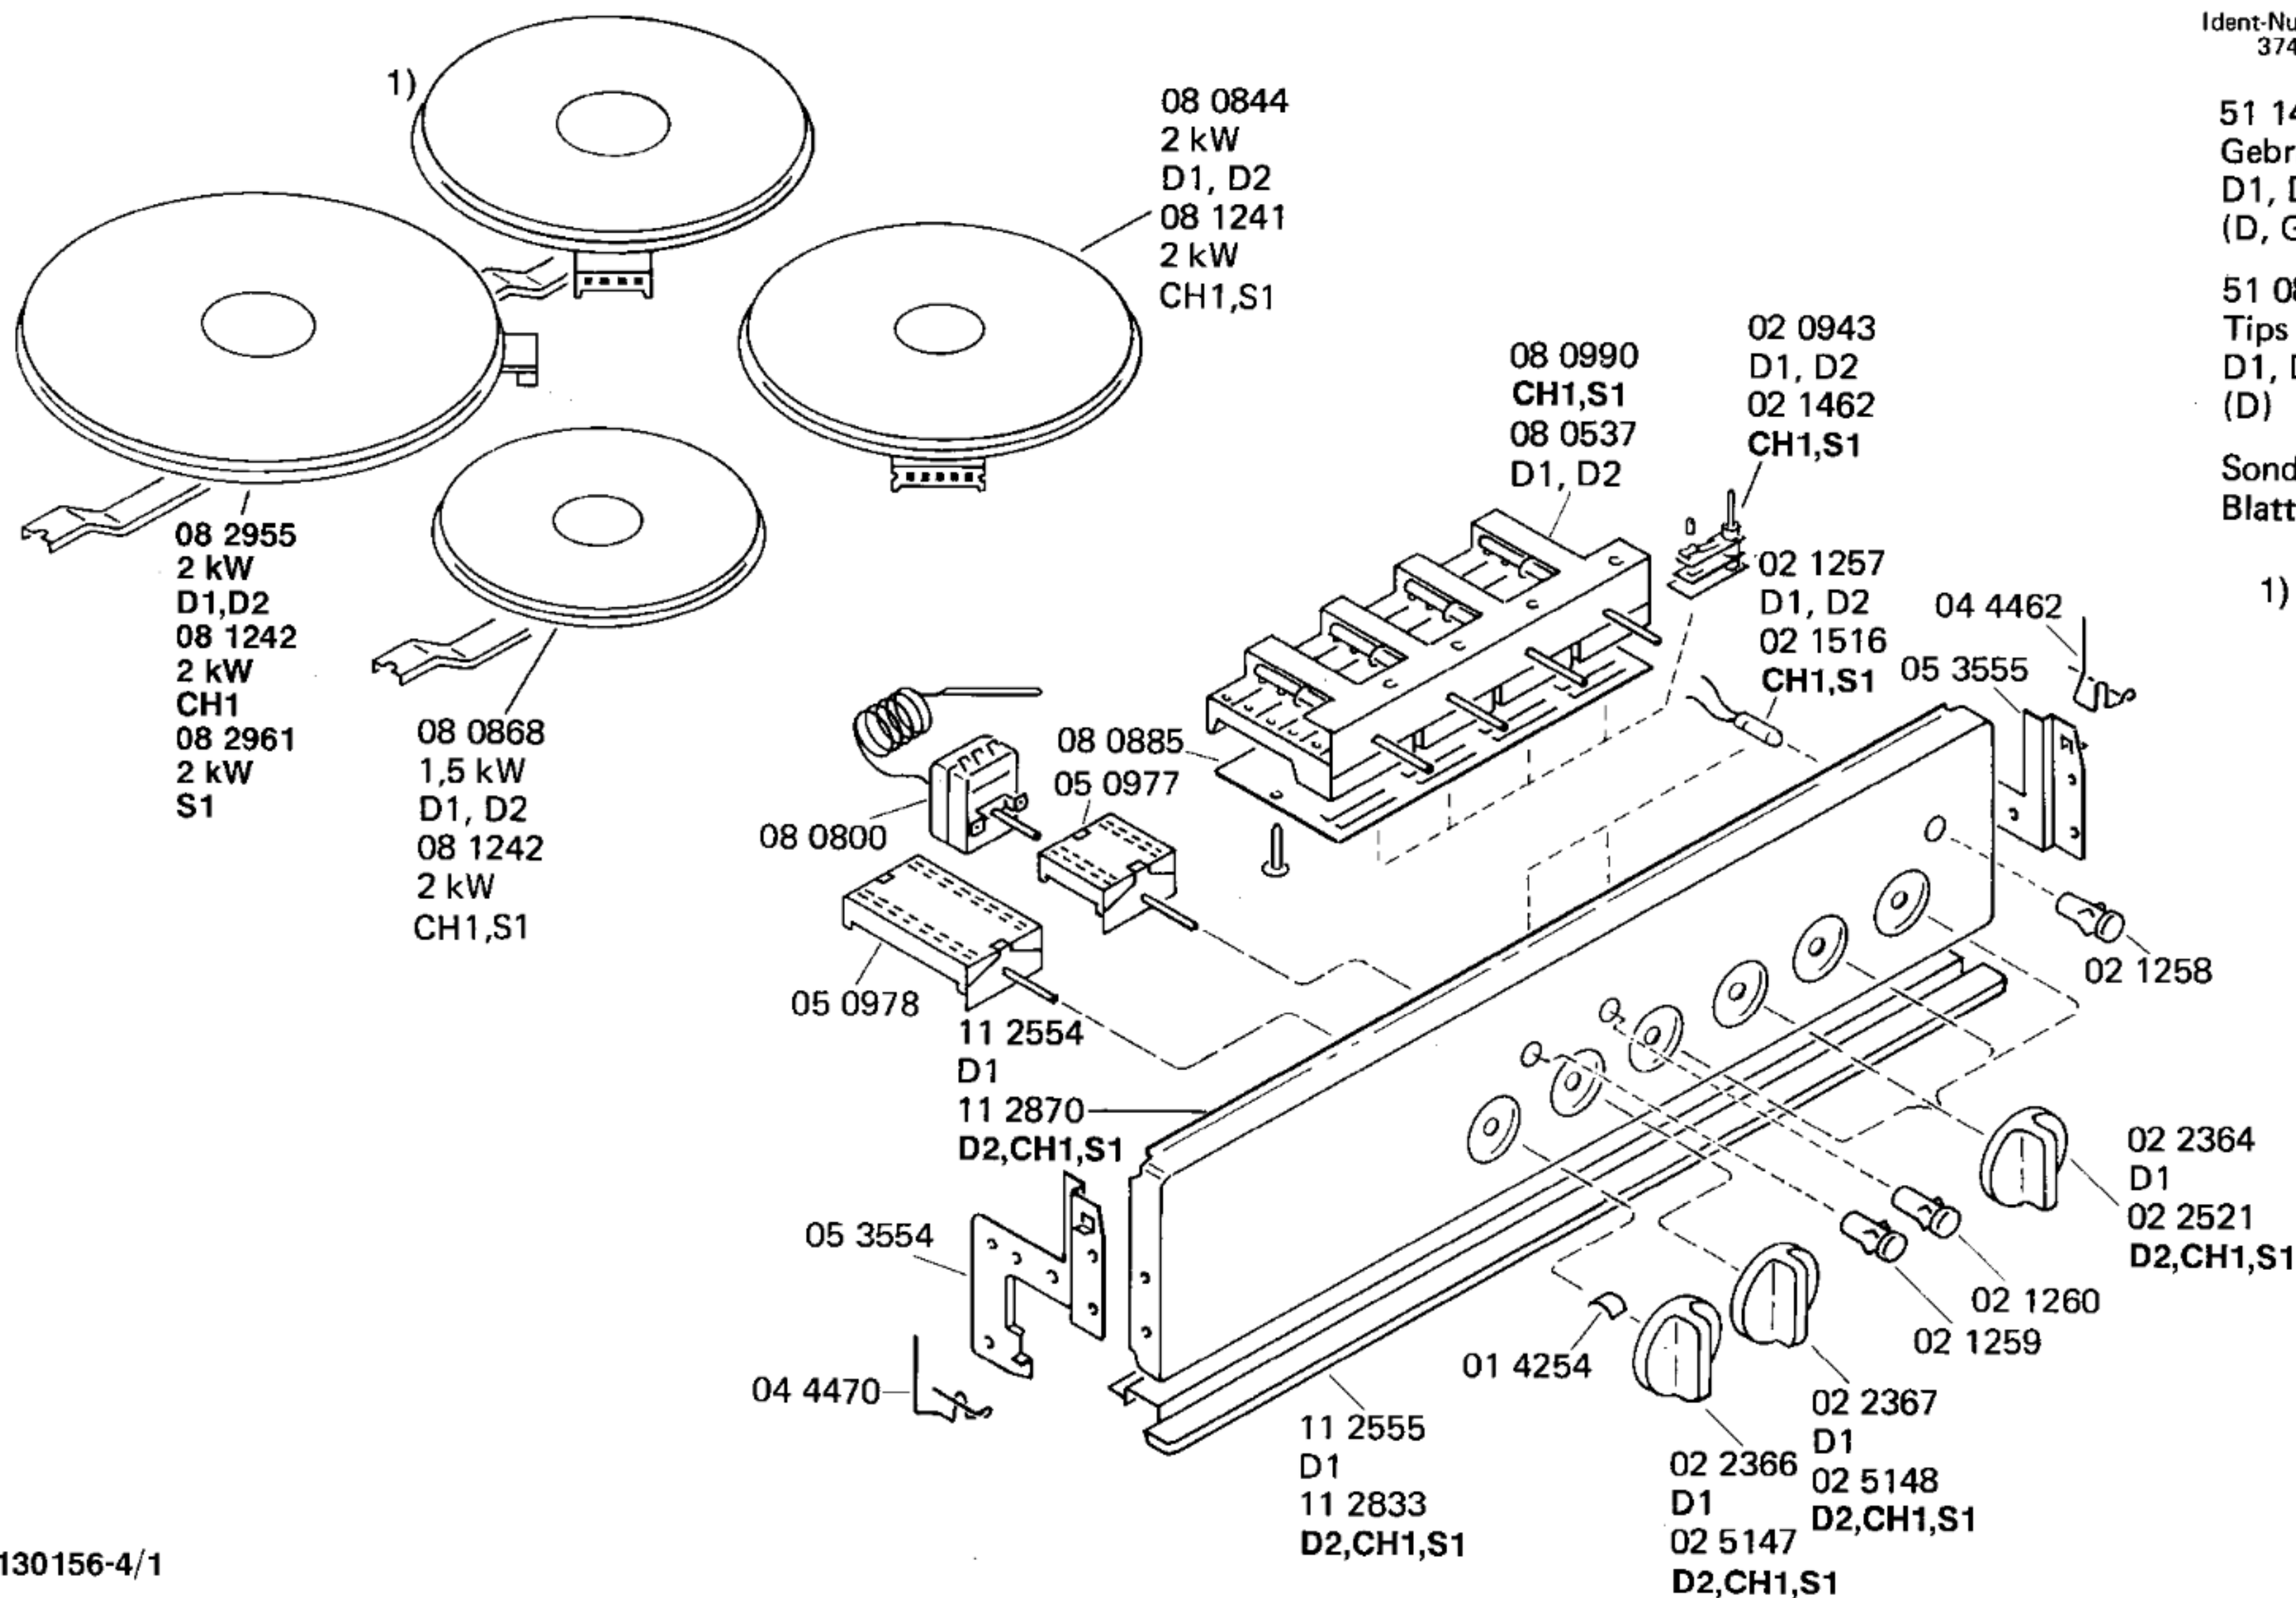

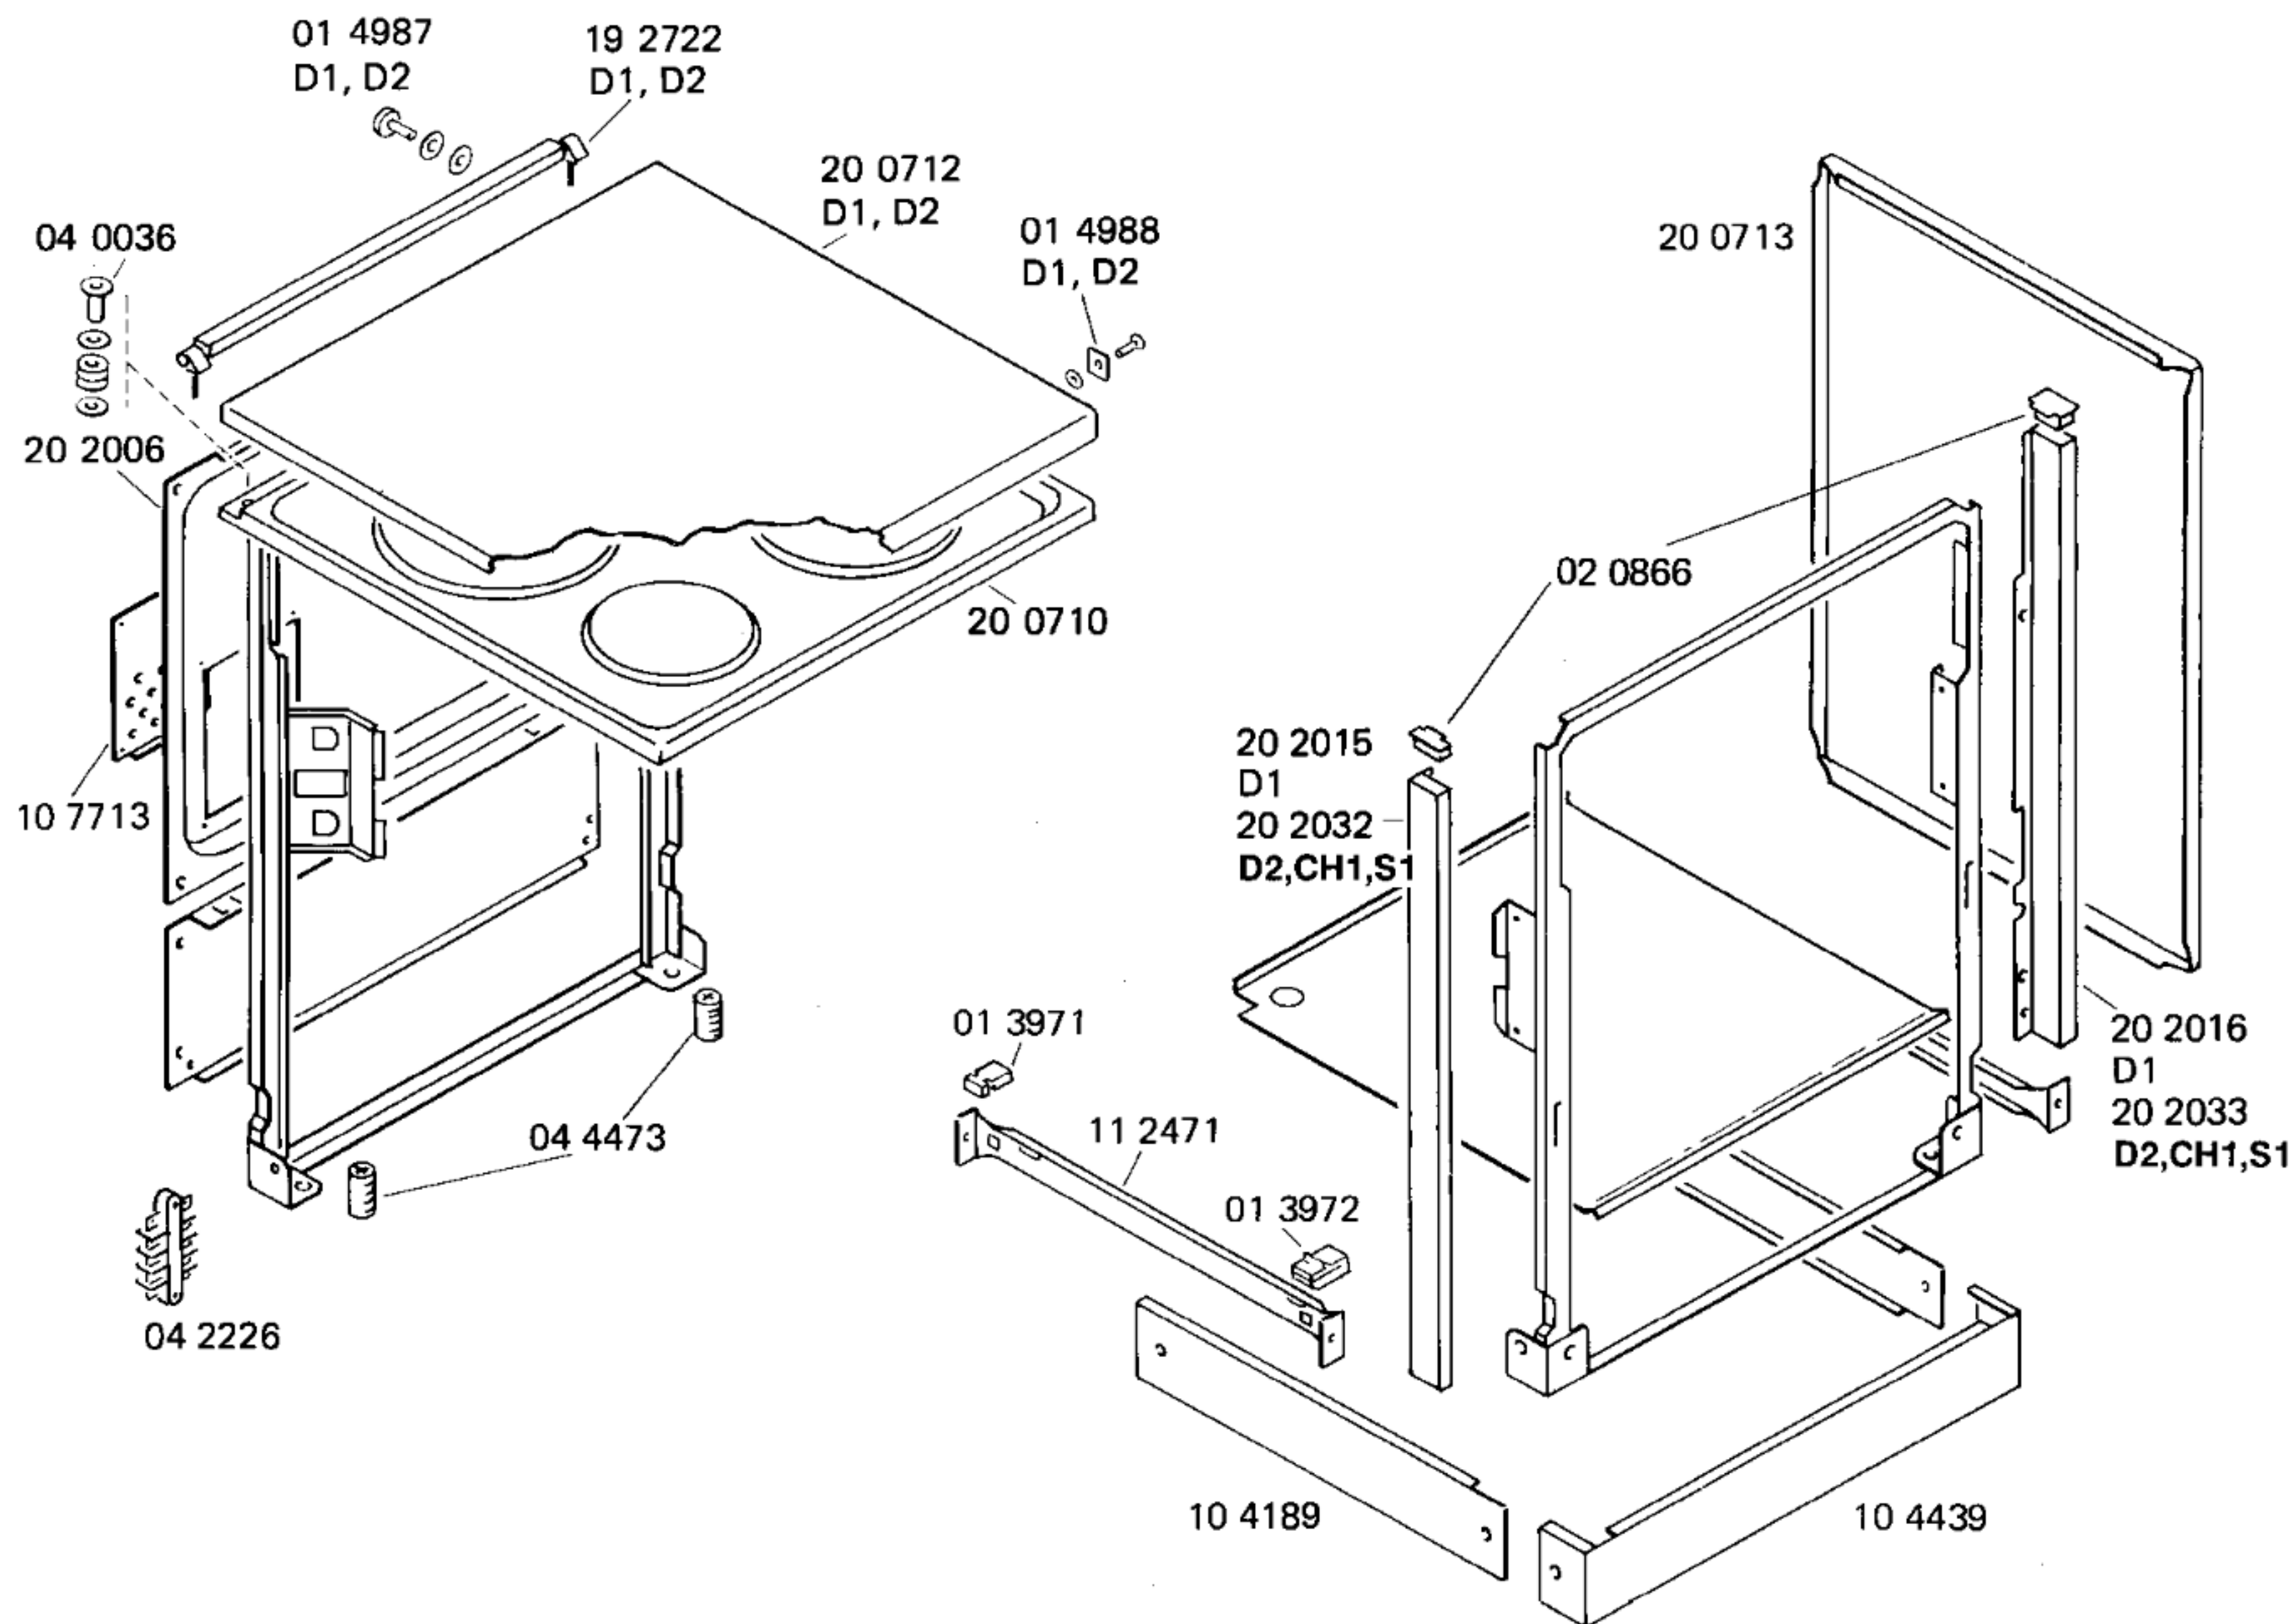

**BOSCH**

EH 680 SC — 0 750 041 052—D1 bis FD 6207
— 0 750 041 052—D2 ab FD 6211
— 0 750 041 057—CH1

EH 680 SC - 0 750 041 079-S1

HERDE
Stand-Herde

Ident-Nummern-Konstante
3740

