


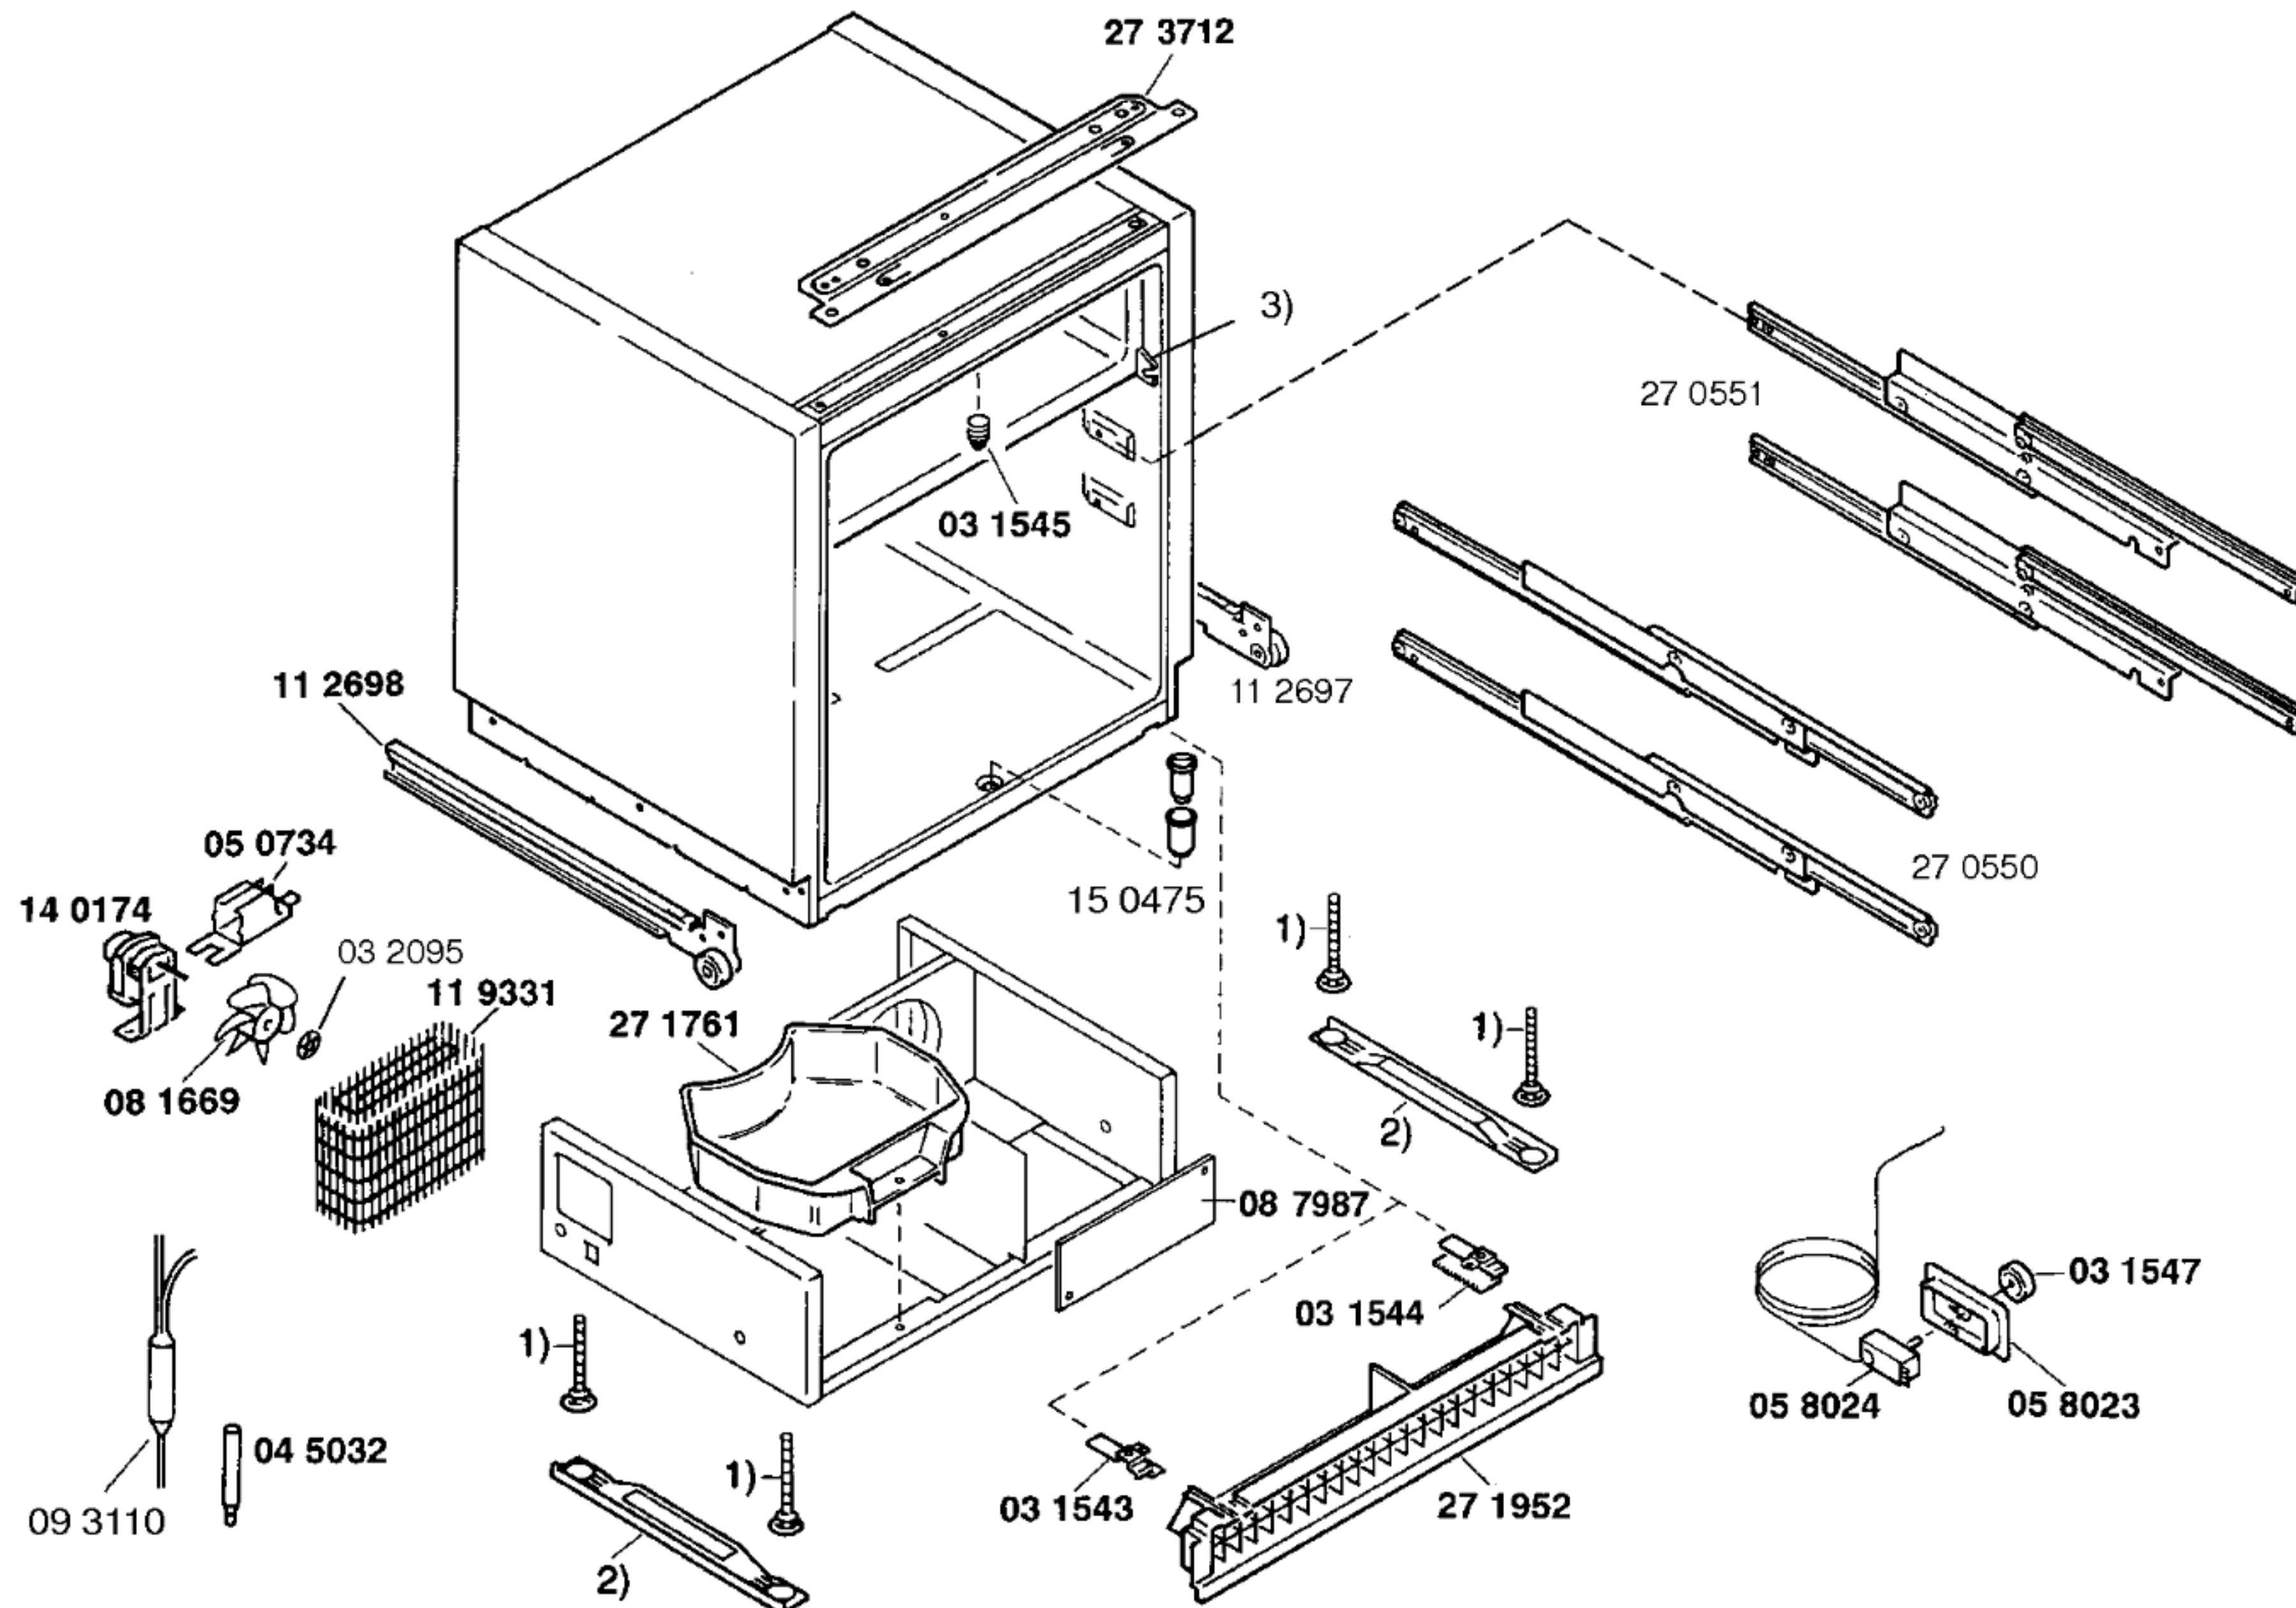



Gebrauchsanweisung
51 4403
(D,GB,F,I,NL,E)

51 4399
Montageanweisung
(D)

05 6188
Befestigungssatz

- 1) 05 4927
- 2) 11 2700
- 3) Rep.-Satz
rechts
17 3349
links
17 3350

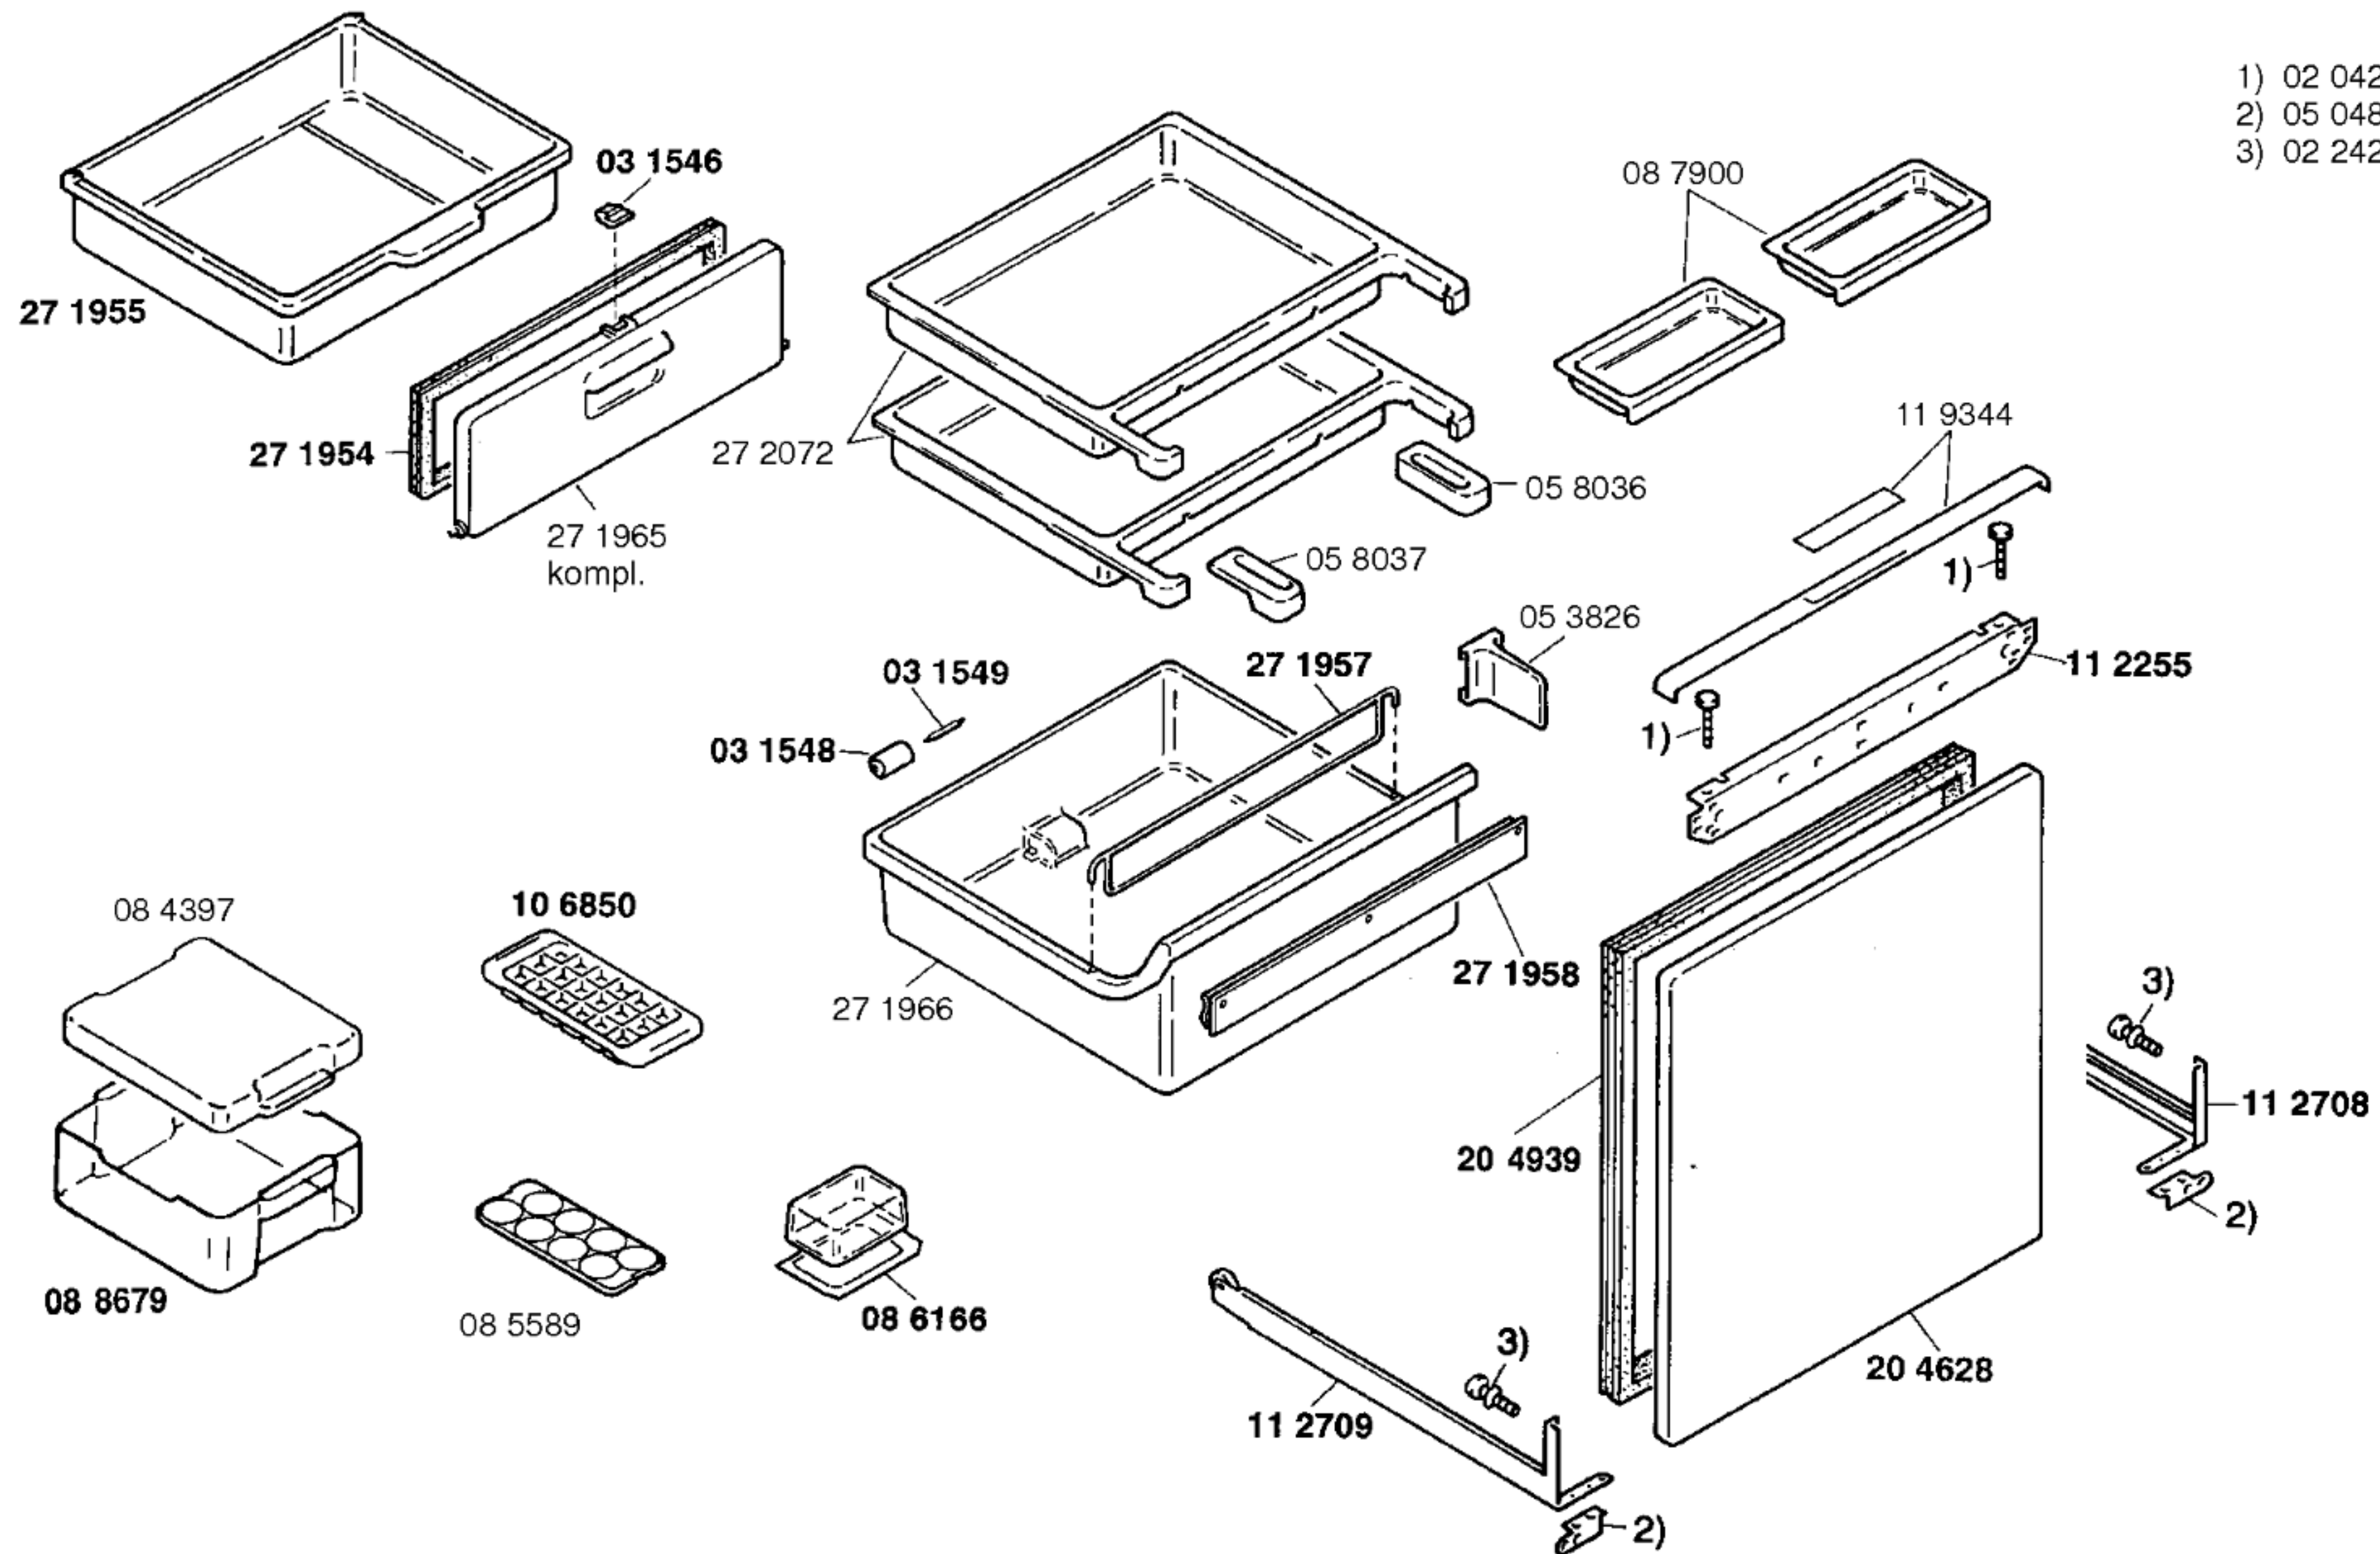

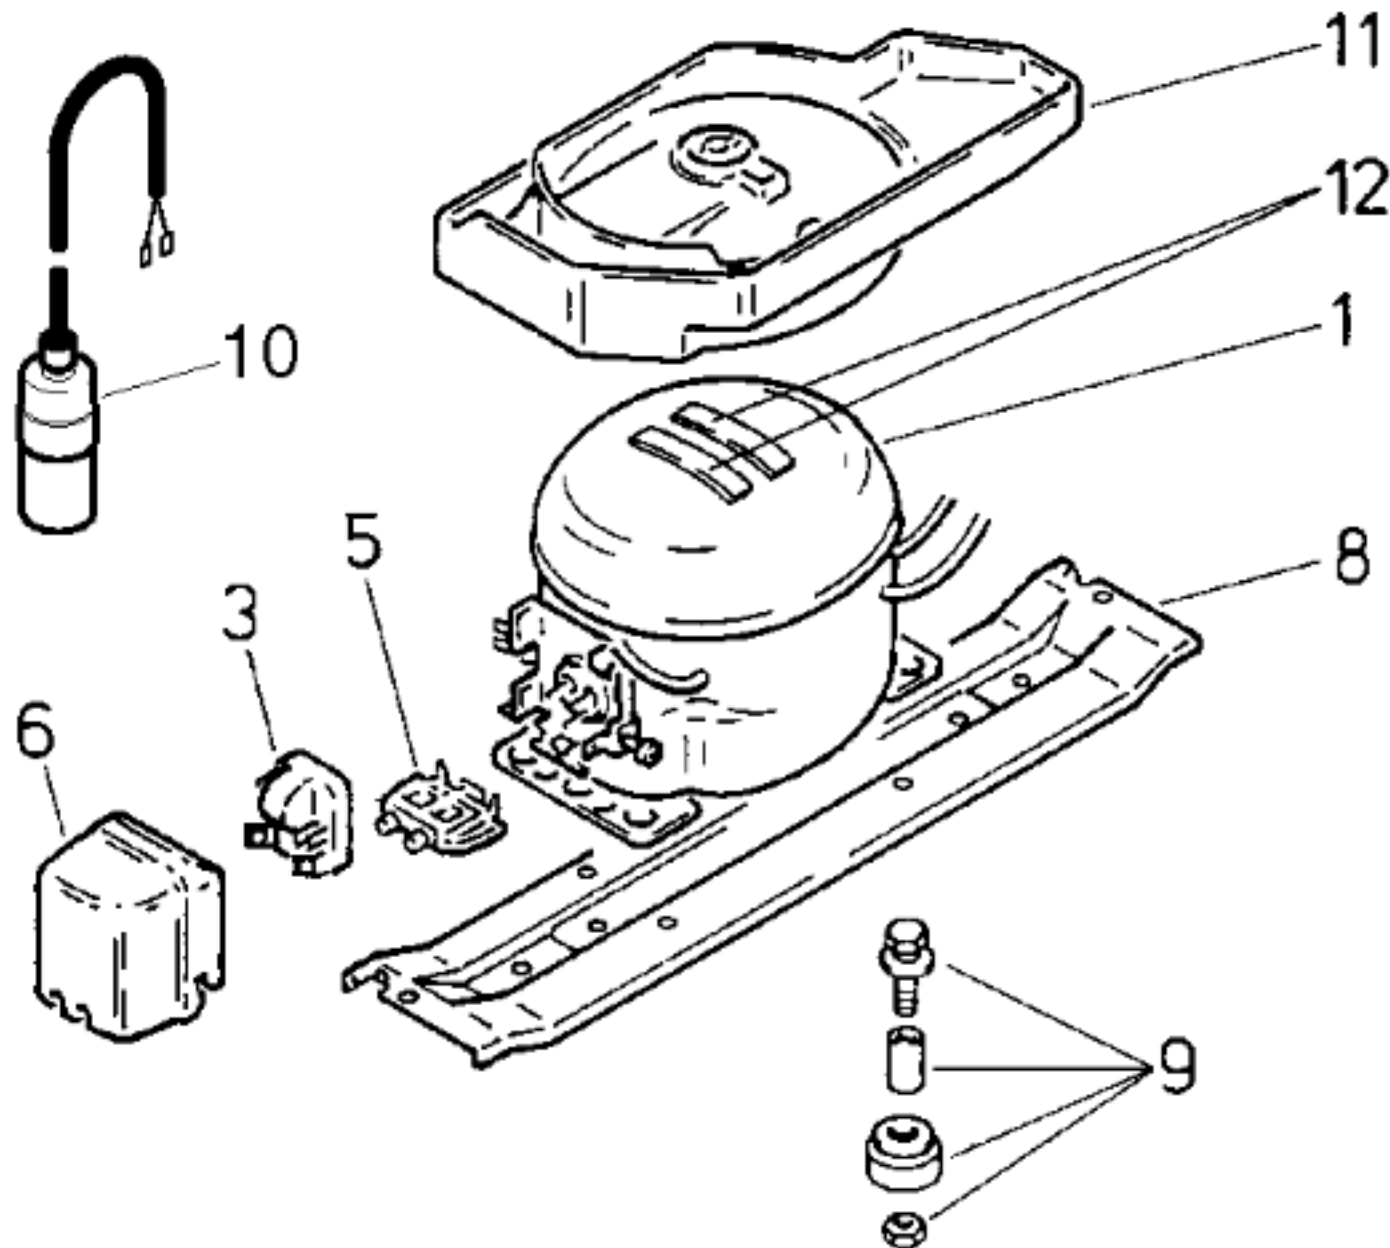

Pos.			
	Danfoss		
	TL 4 A		
1	13 1064		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8			
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TL4A	
Förderleistung/Delivery/Débit	l/h	695	
Anlaufstrom/Starting current/Cour de démarrage	A	8,3	
Widerstand/Resistance/Résistance	Ω	23,4	
	Hi/aux	15,5	
Temp.-Regler/Thermostat		WHF	
Typ/Type		TF57F1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“	+5	+5
Valeurs de commutation	„aus“	-30	-14
	(„abtauen“ od.)		
	„alarm“		
Füllmenge/Fill.quantity/Charge	R12	g	130
Anschlußwert/Conn.load/Puiss. connectée		W	110
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		Ω	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		Ω	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		Ω	
Spannung/Voltage/Tension		V	