



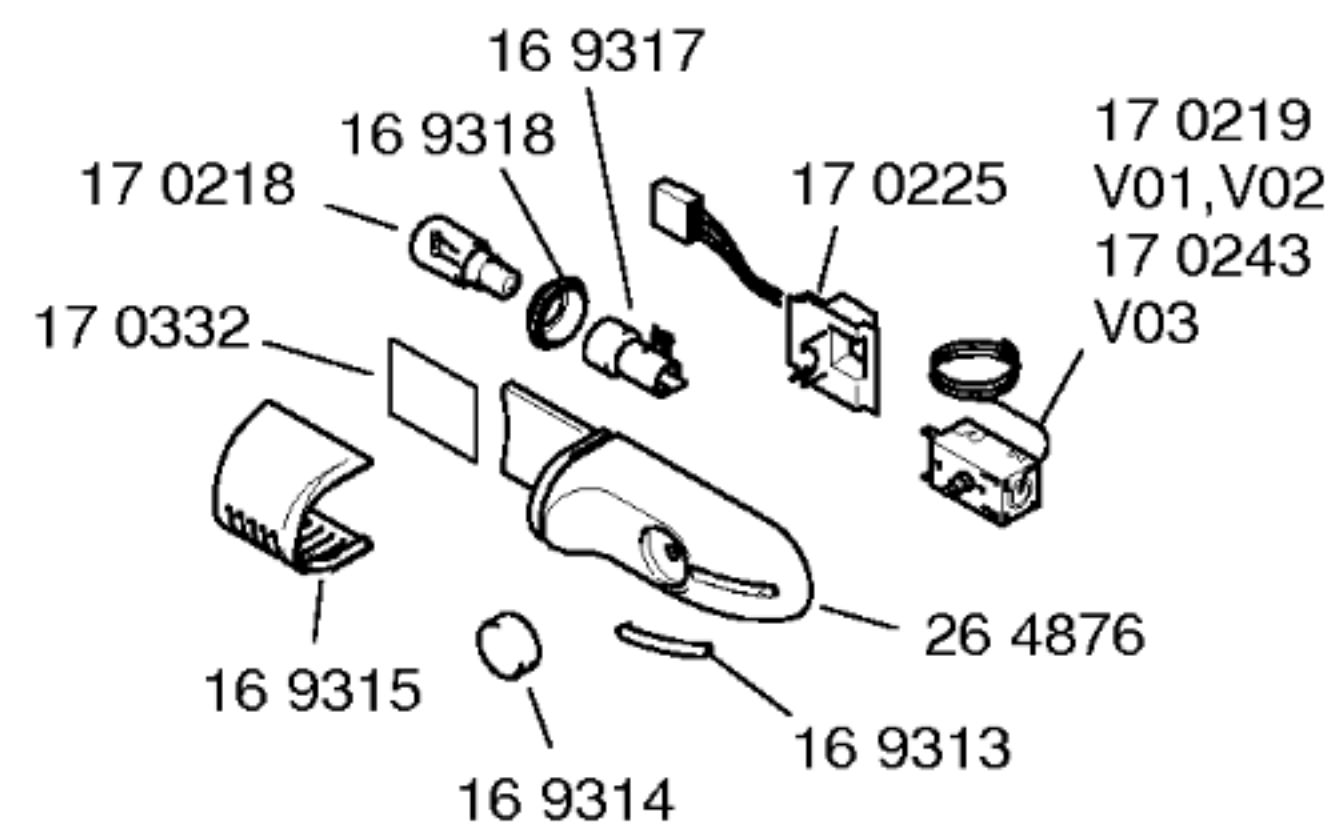


07 4445
V01
09 6325
V02

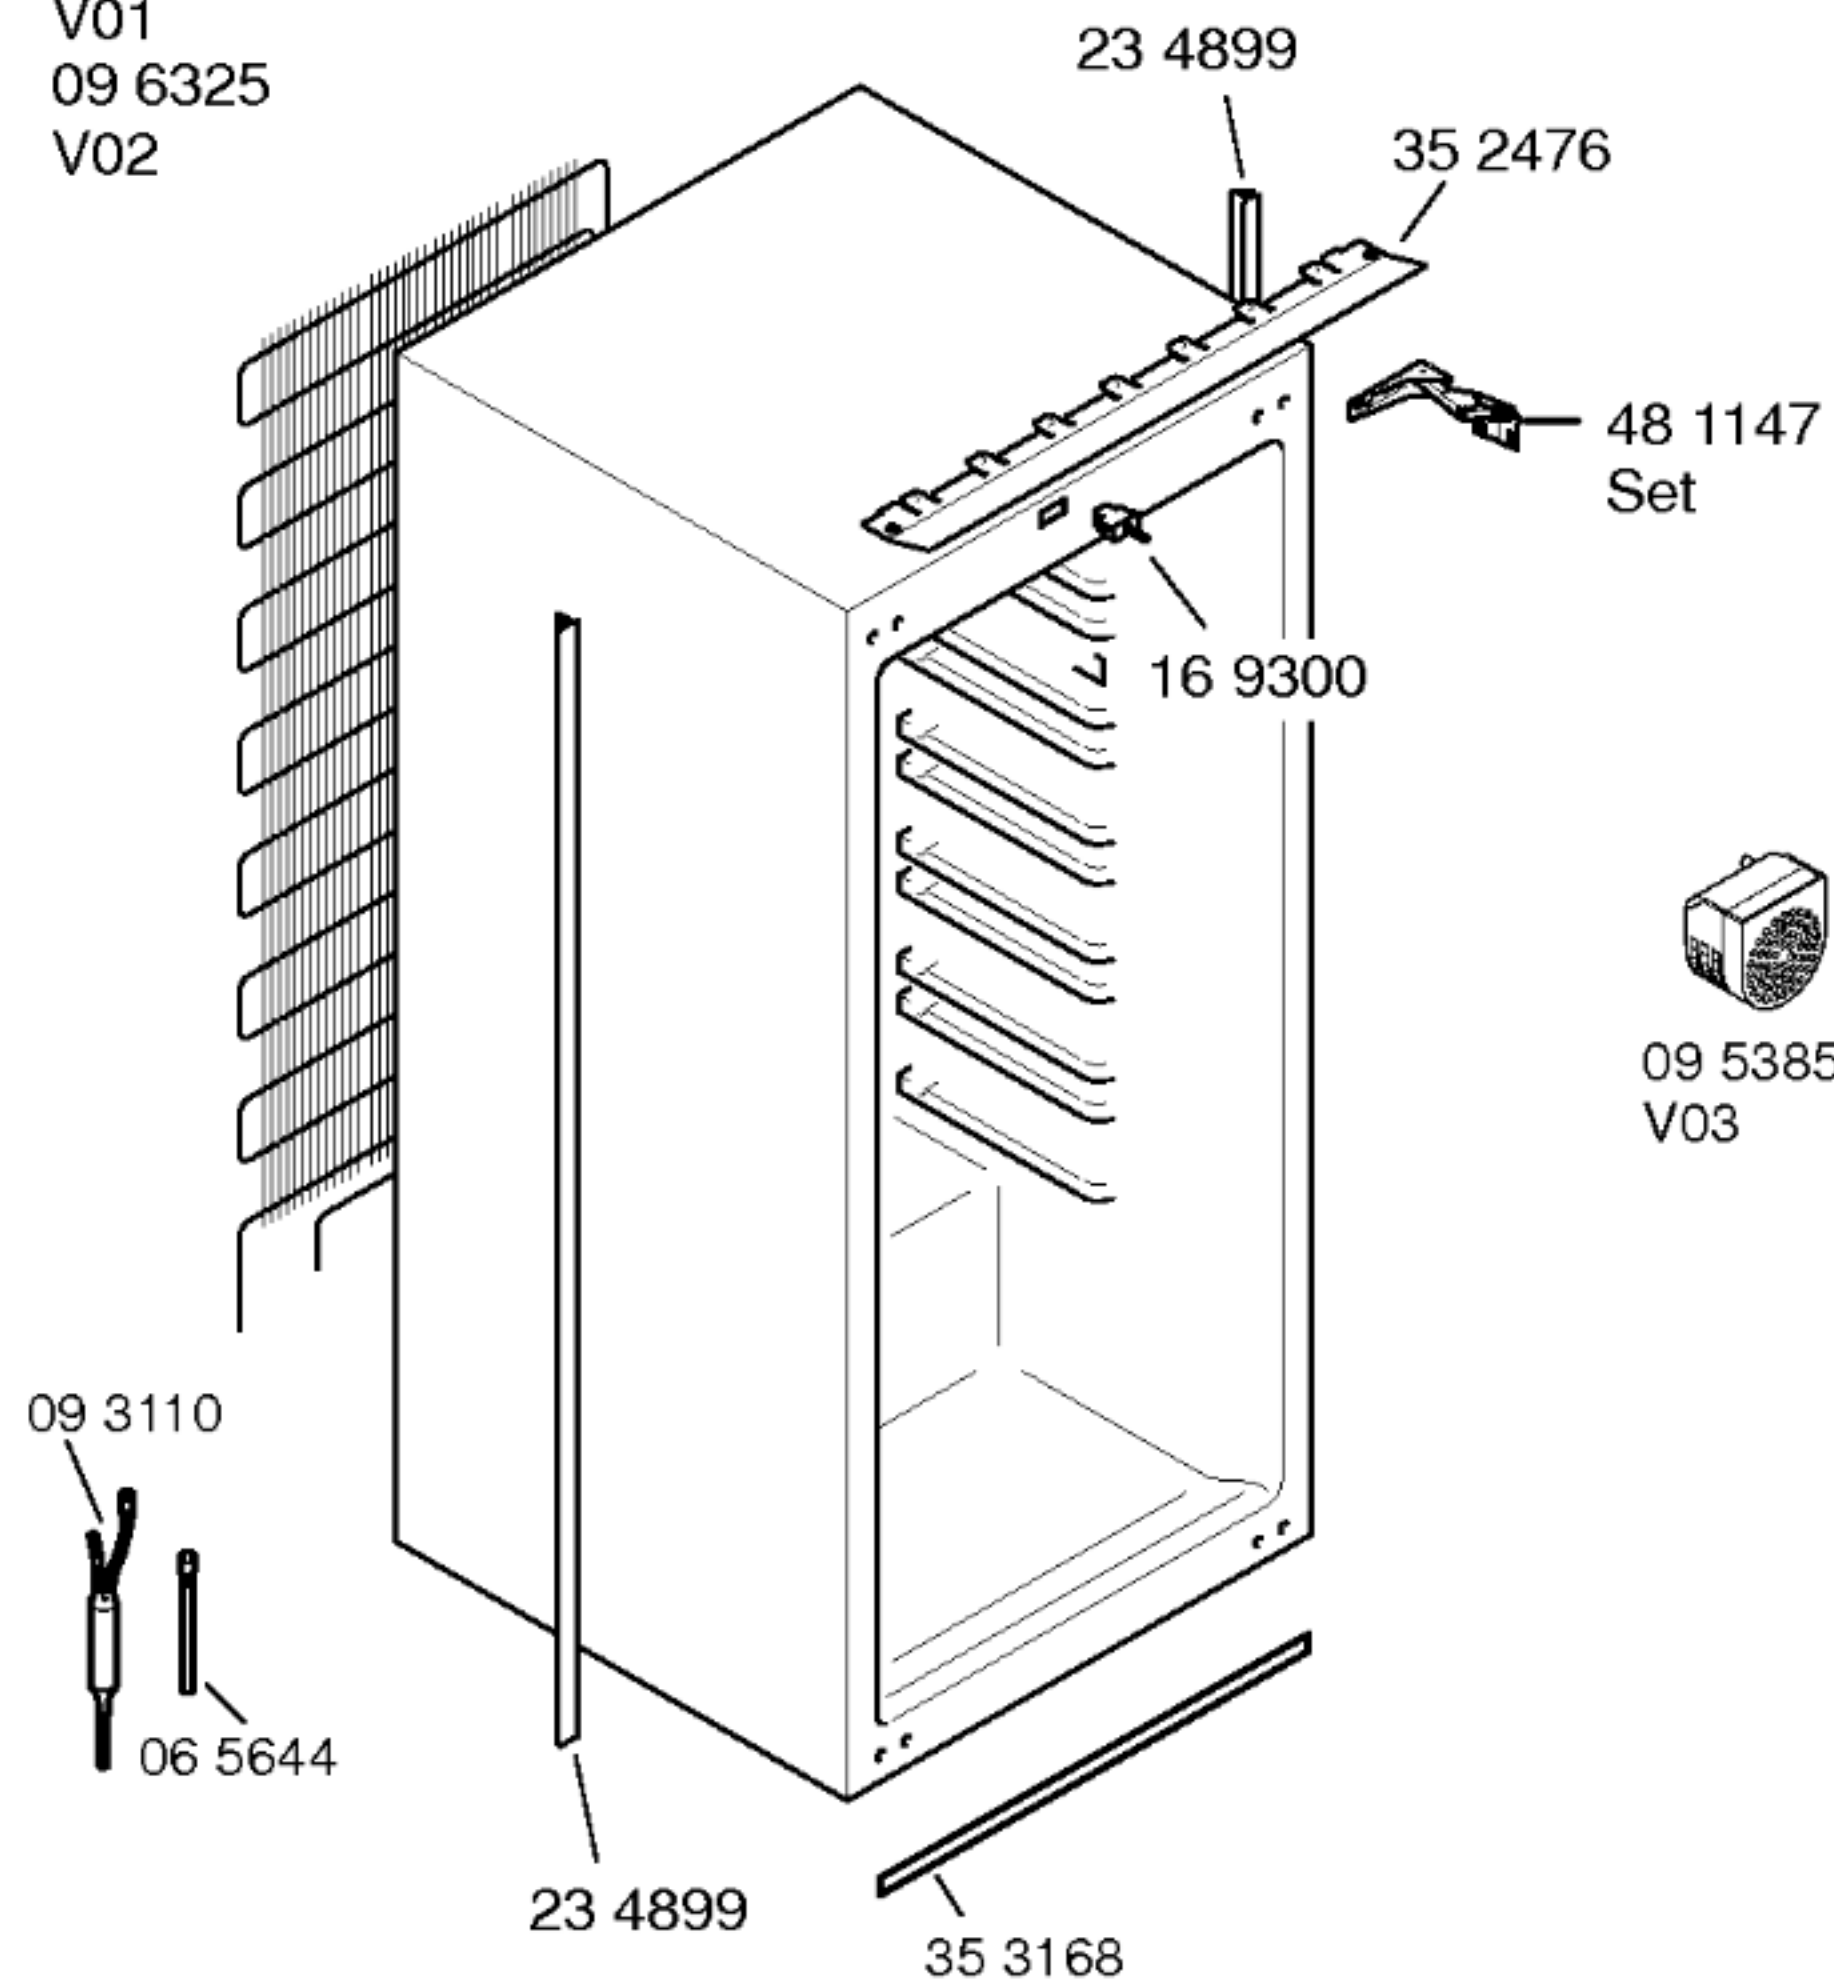


Gebrauchsanweisung
52 2542
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5163

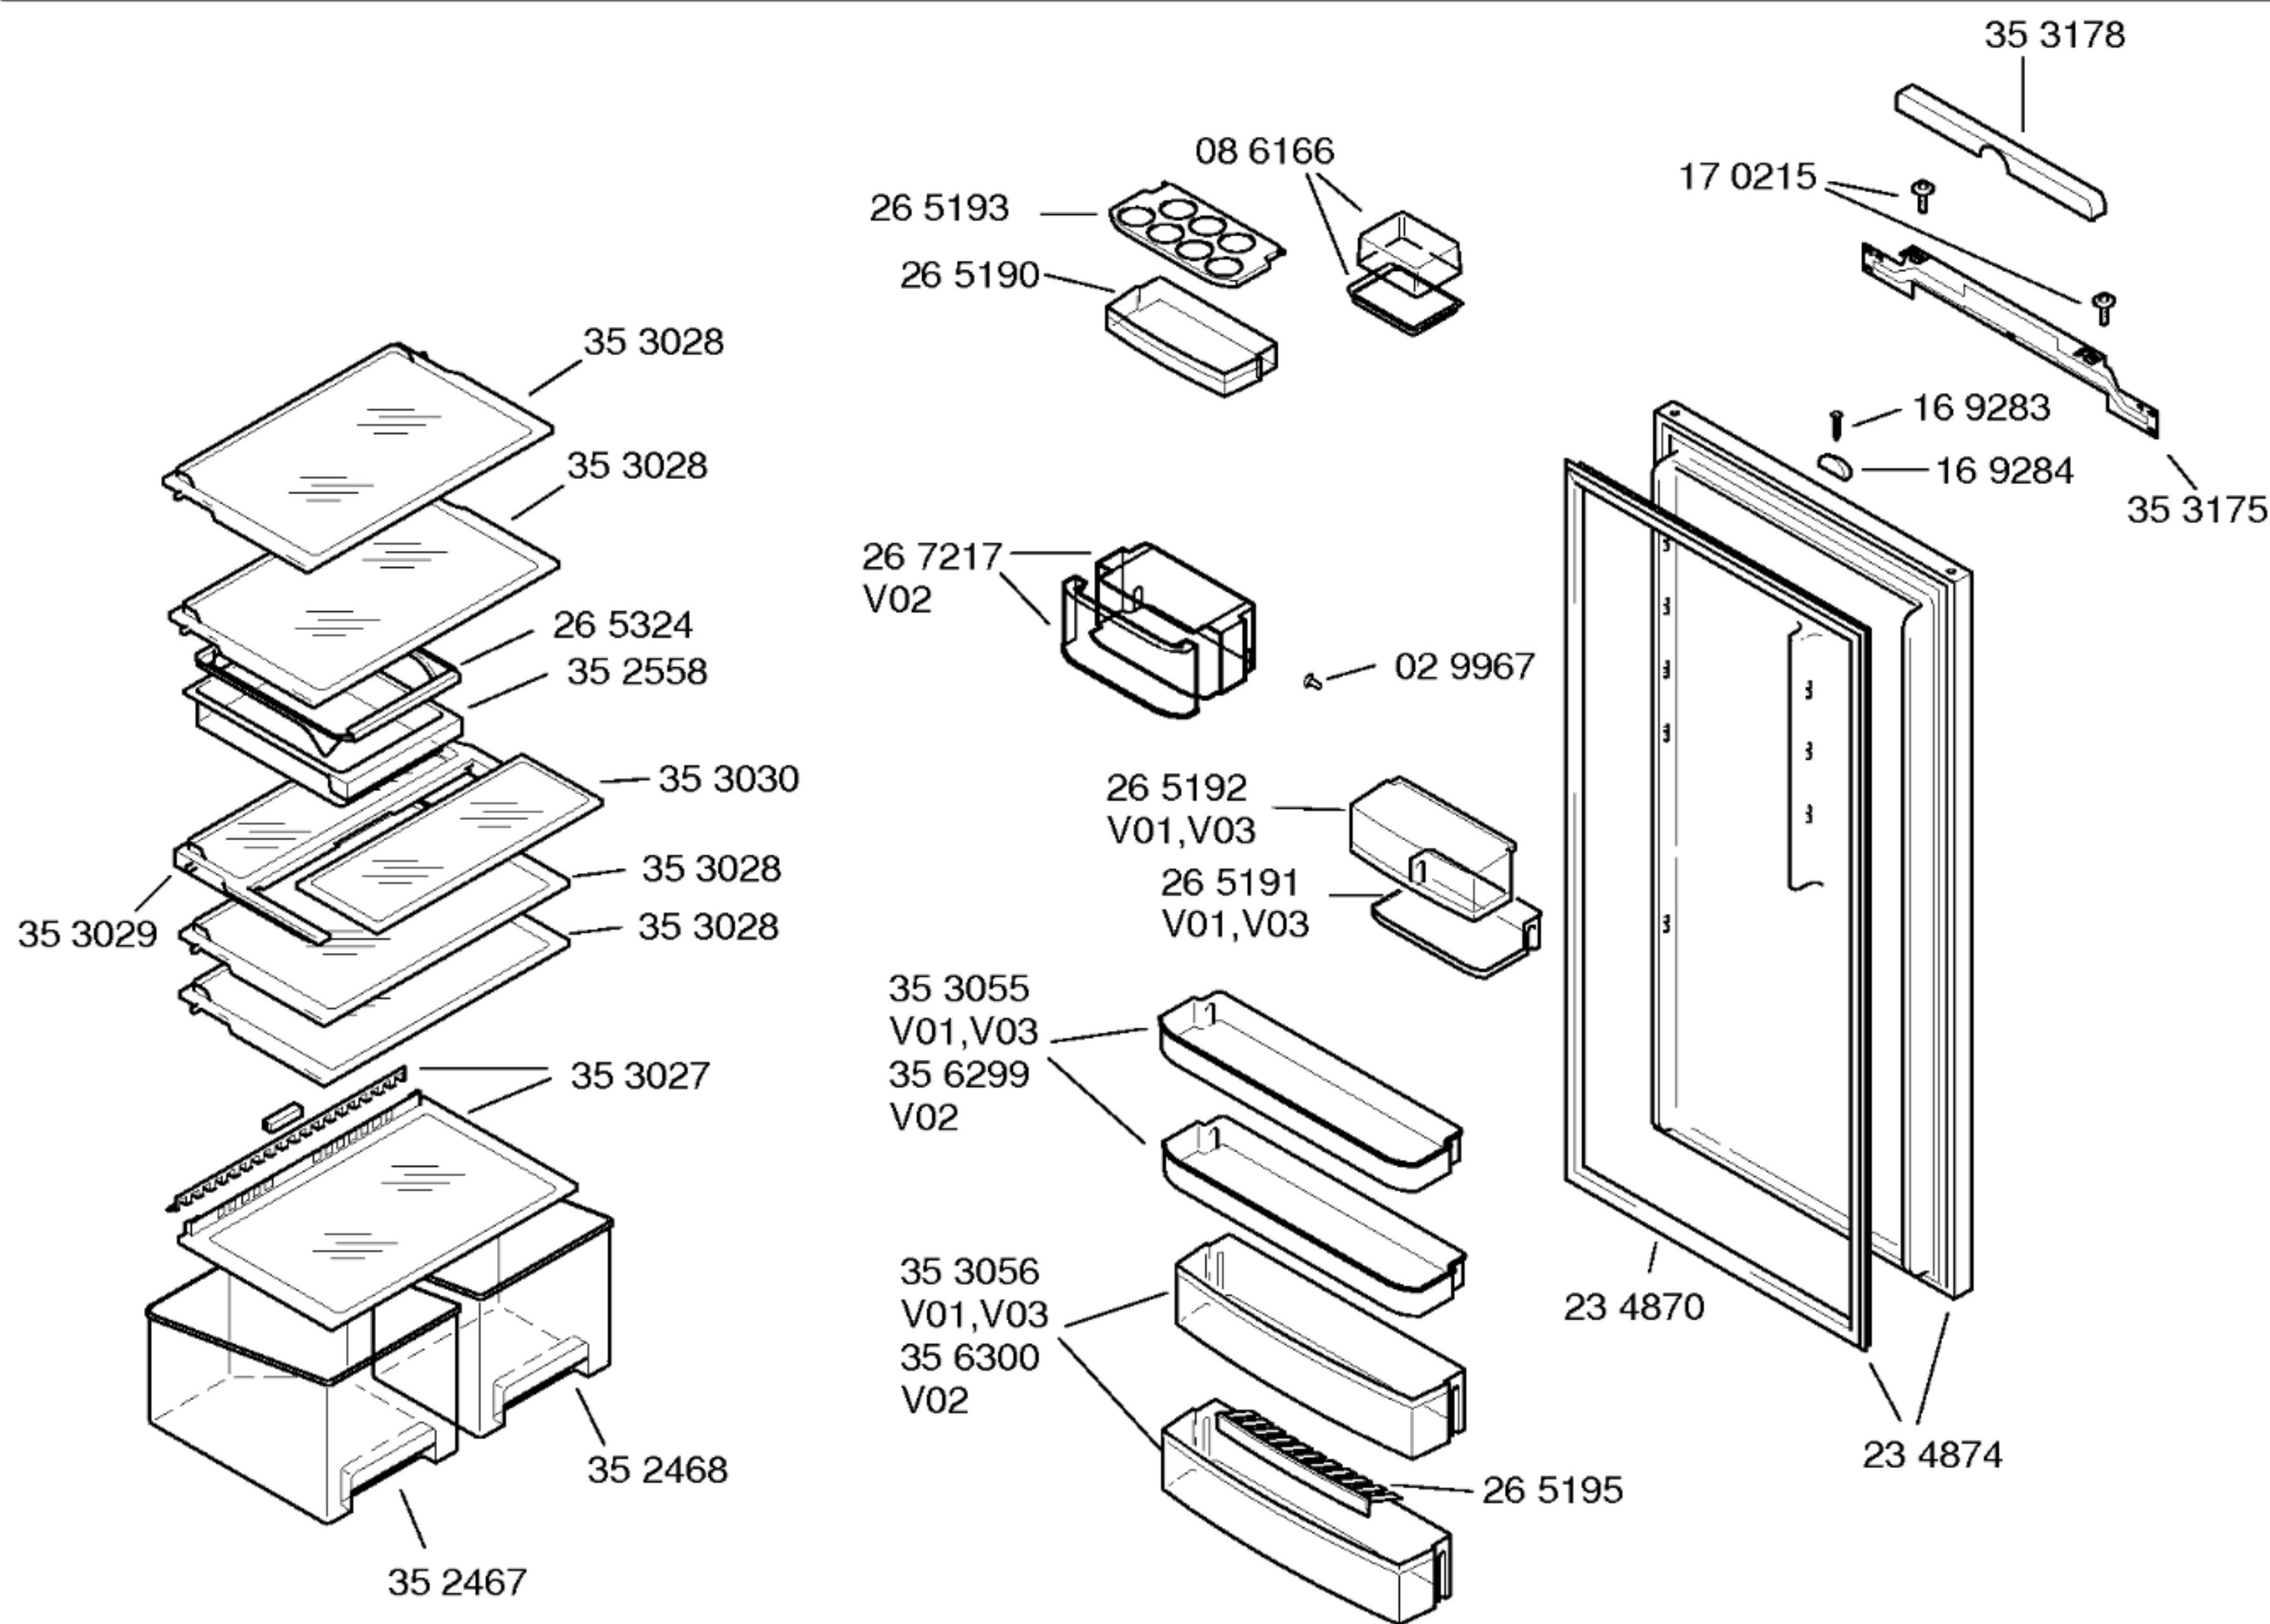

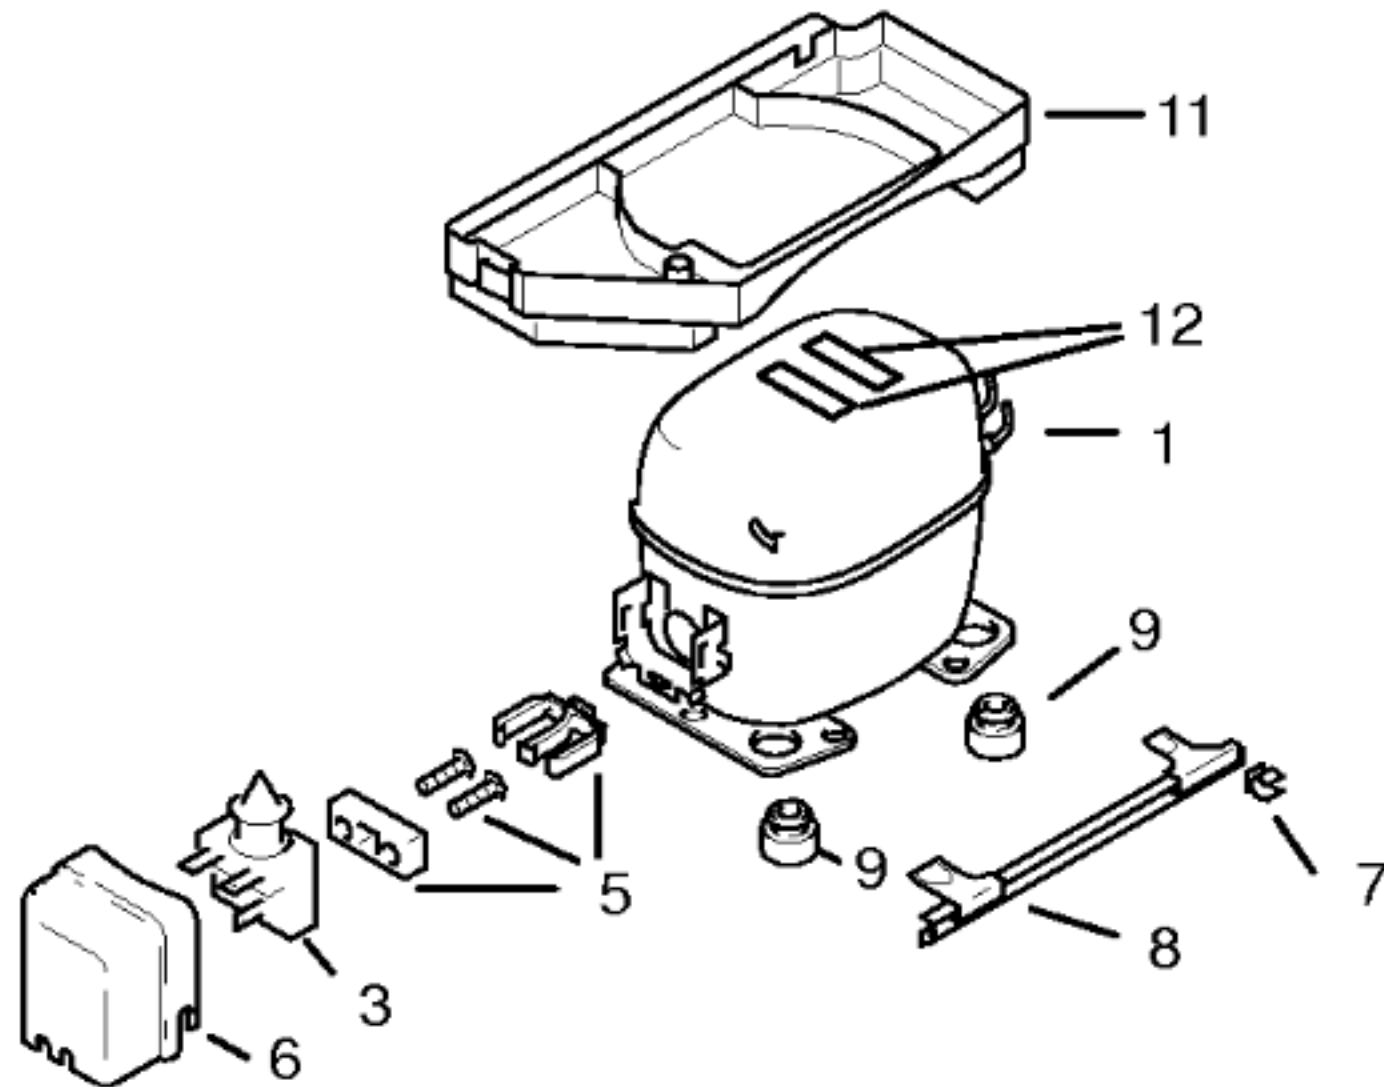

Pos.	V01,V02	V03	
	Danfoss	Danfoss	
	TLY4K	TLES4K	
1	14 1821	14 1663	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	050166	050166	
10			
11	26 4878	26 4878	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLY4K		
Förderleistung/Delivery/Débit	l/h	698		
Anlaufstrom/Starting current/Cour de démarrage	A	5,9		
Widerstand/Resistance/Résistance Ha/main/prin	W	59,0		
	Hi/aux	49,0		
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt		
Schaltwerte/Switching values	"warm"	+5,0		
Valeurs de commutation	"kalt"	-23,0		
	"alarm"	-10,0		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W		45
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	W			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	W			
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	W			
Spannung/Voltage/Tension	V			

* siehe Typenschild