



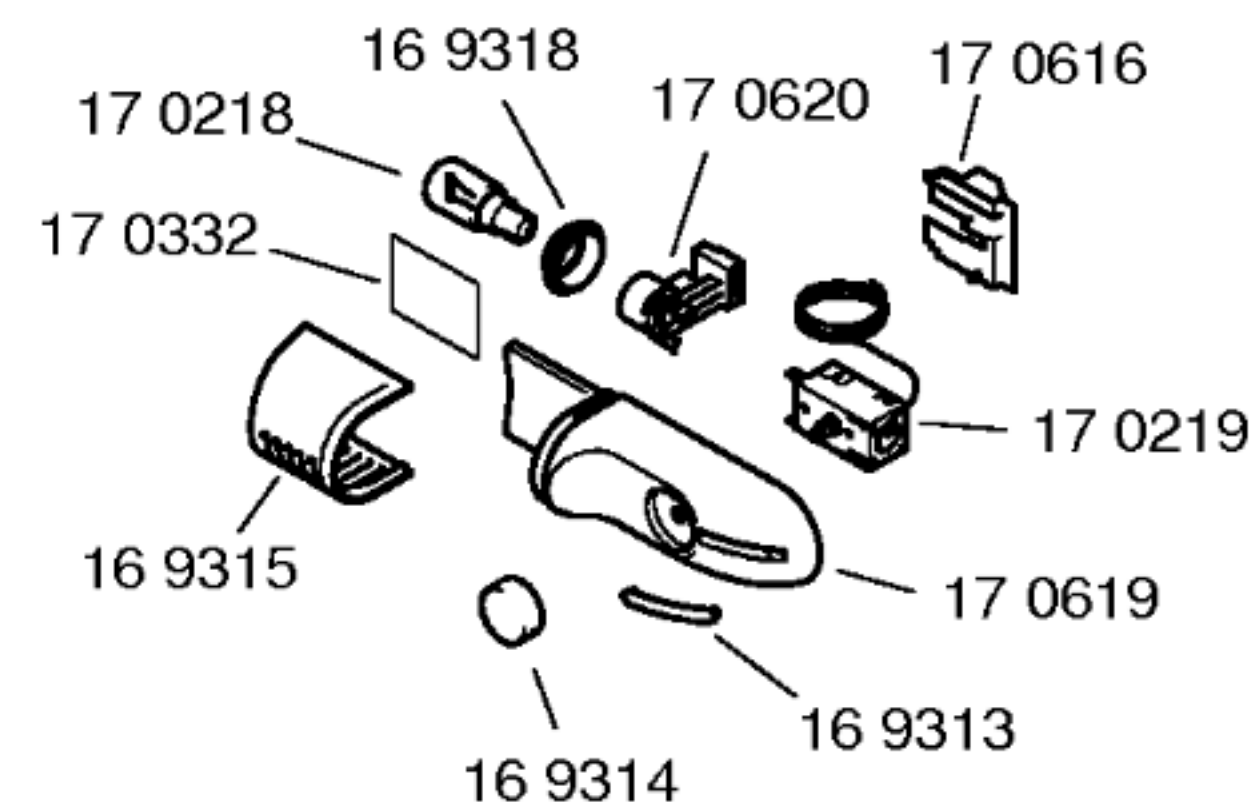

07 4445
V01,V04
09 6572
V02,V05
096325
V03,V06

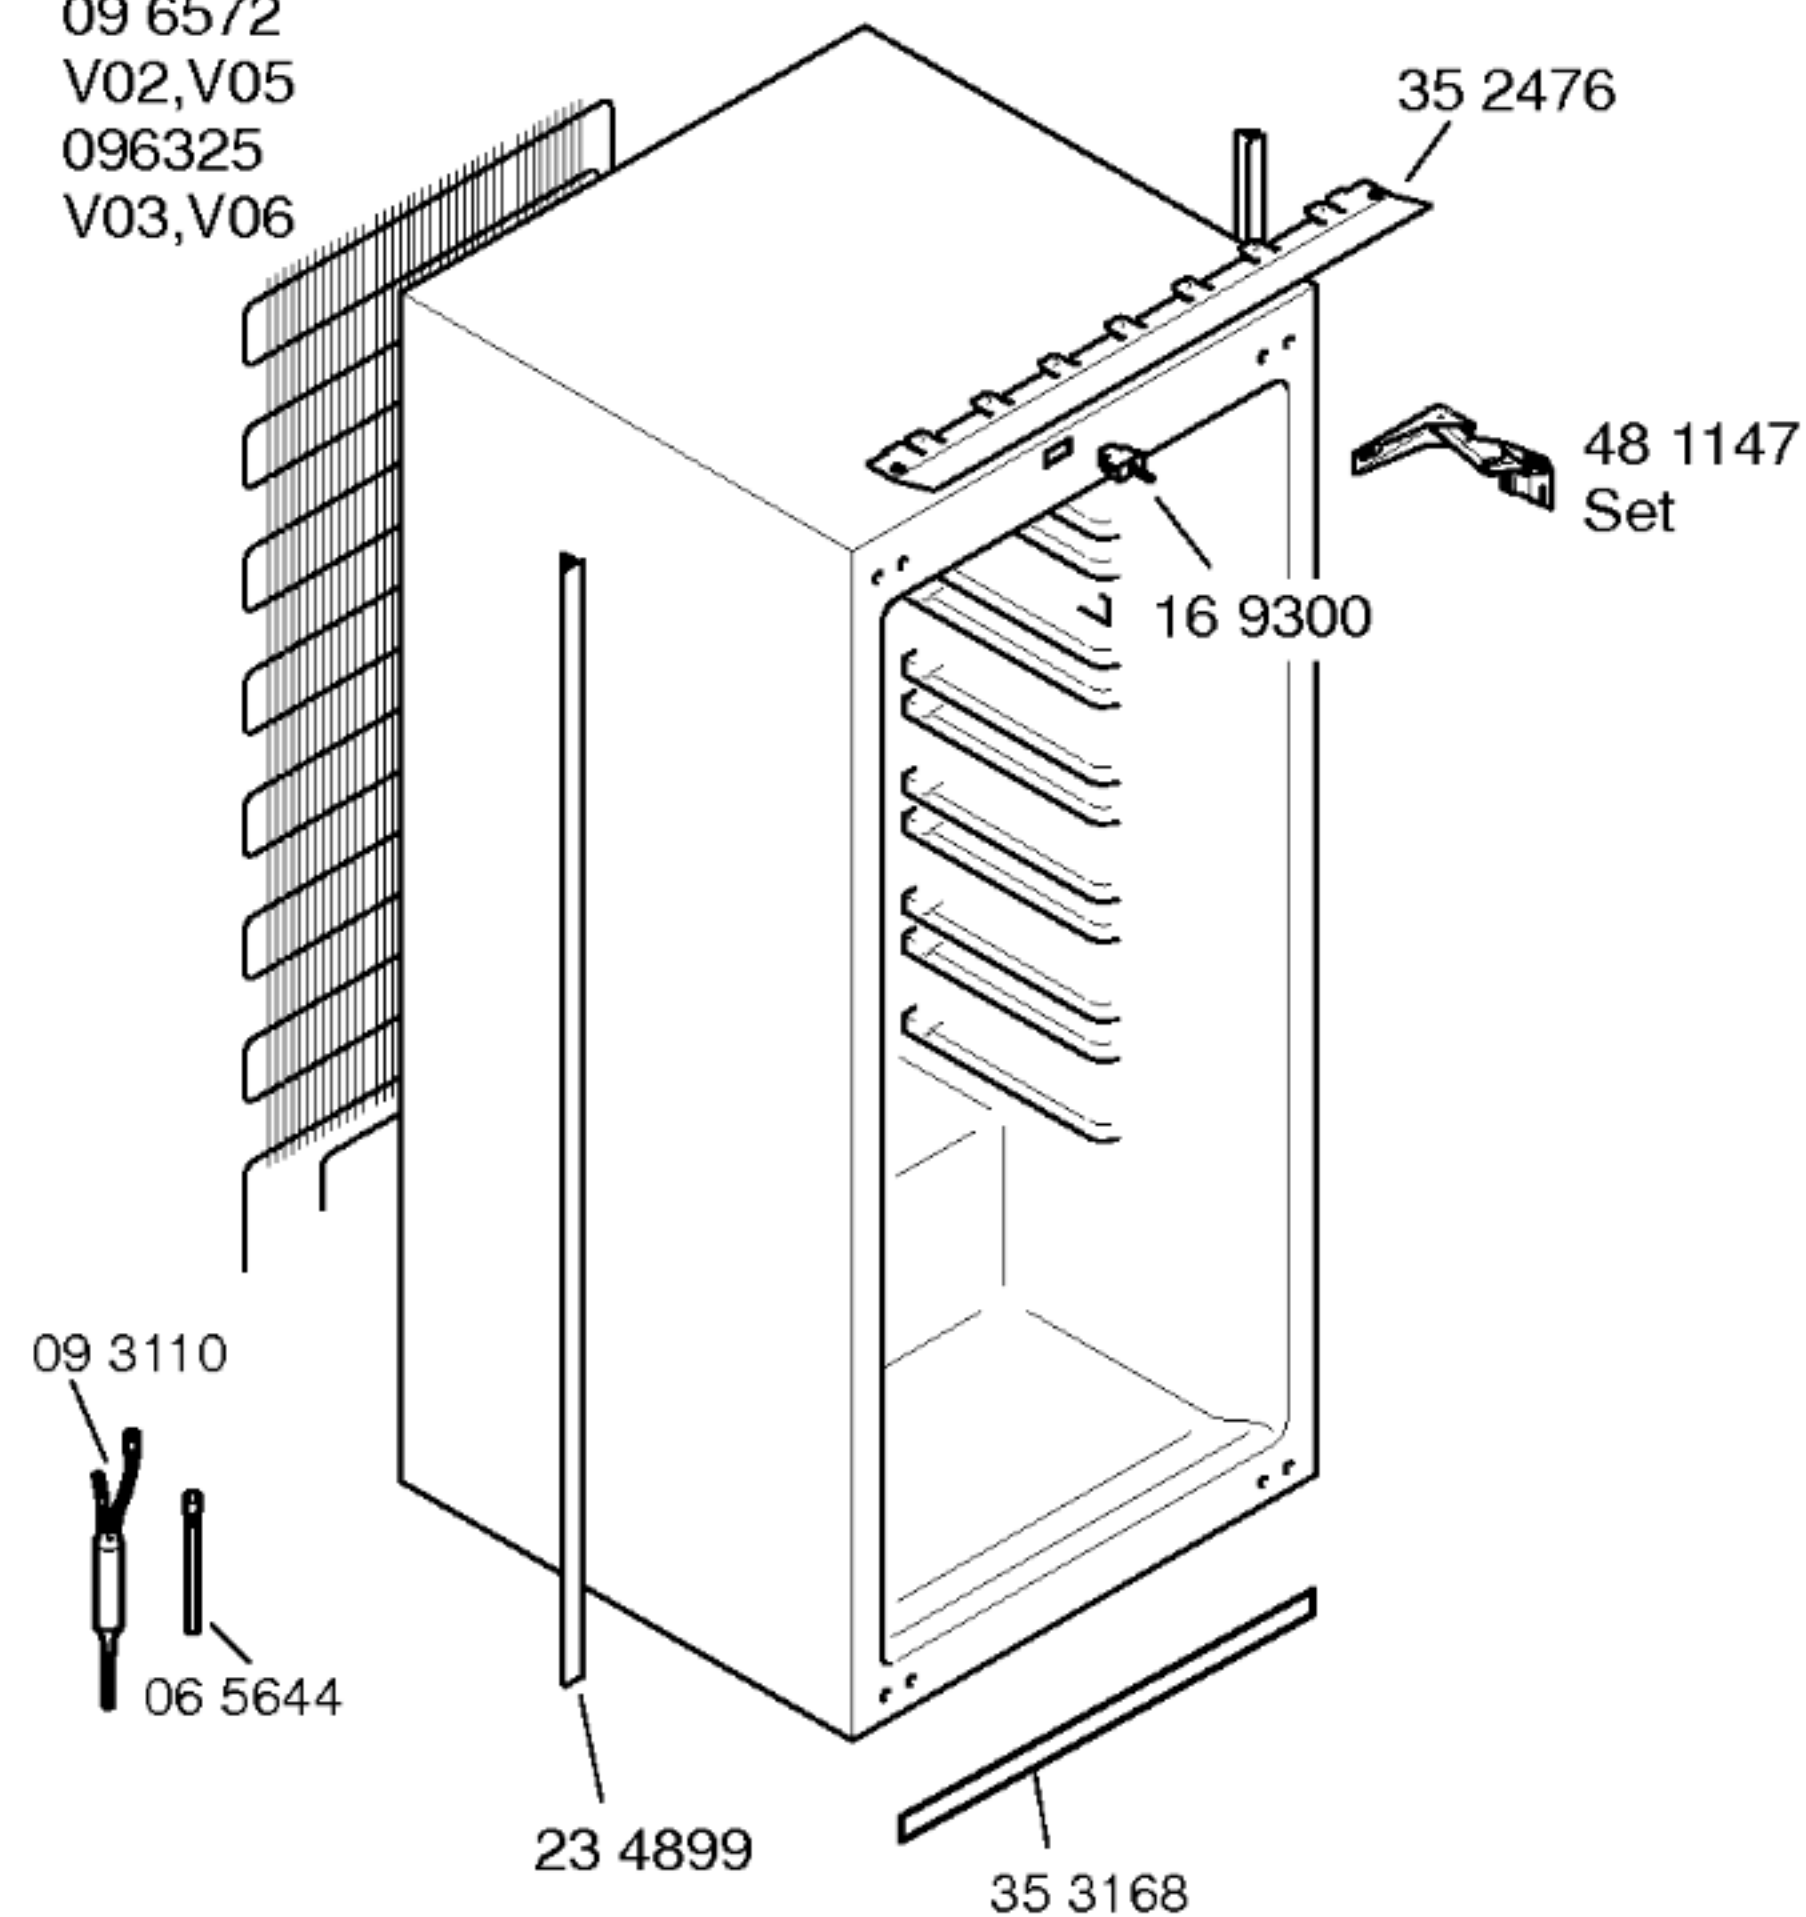


Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
52 2496
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR))

Beistellsatz
26 5163

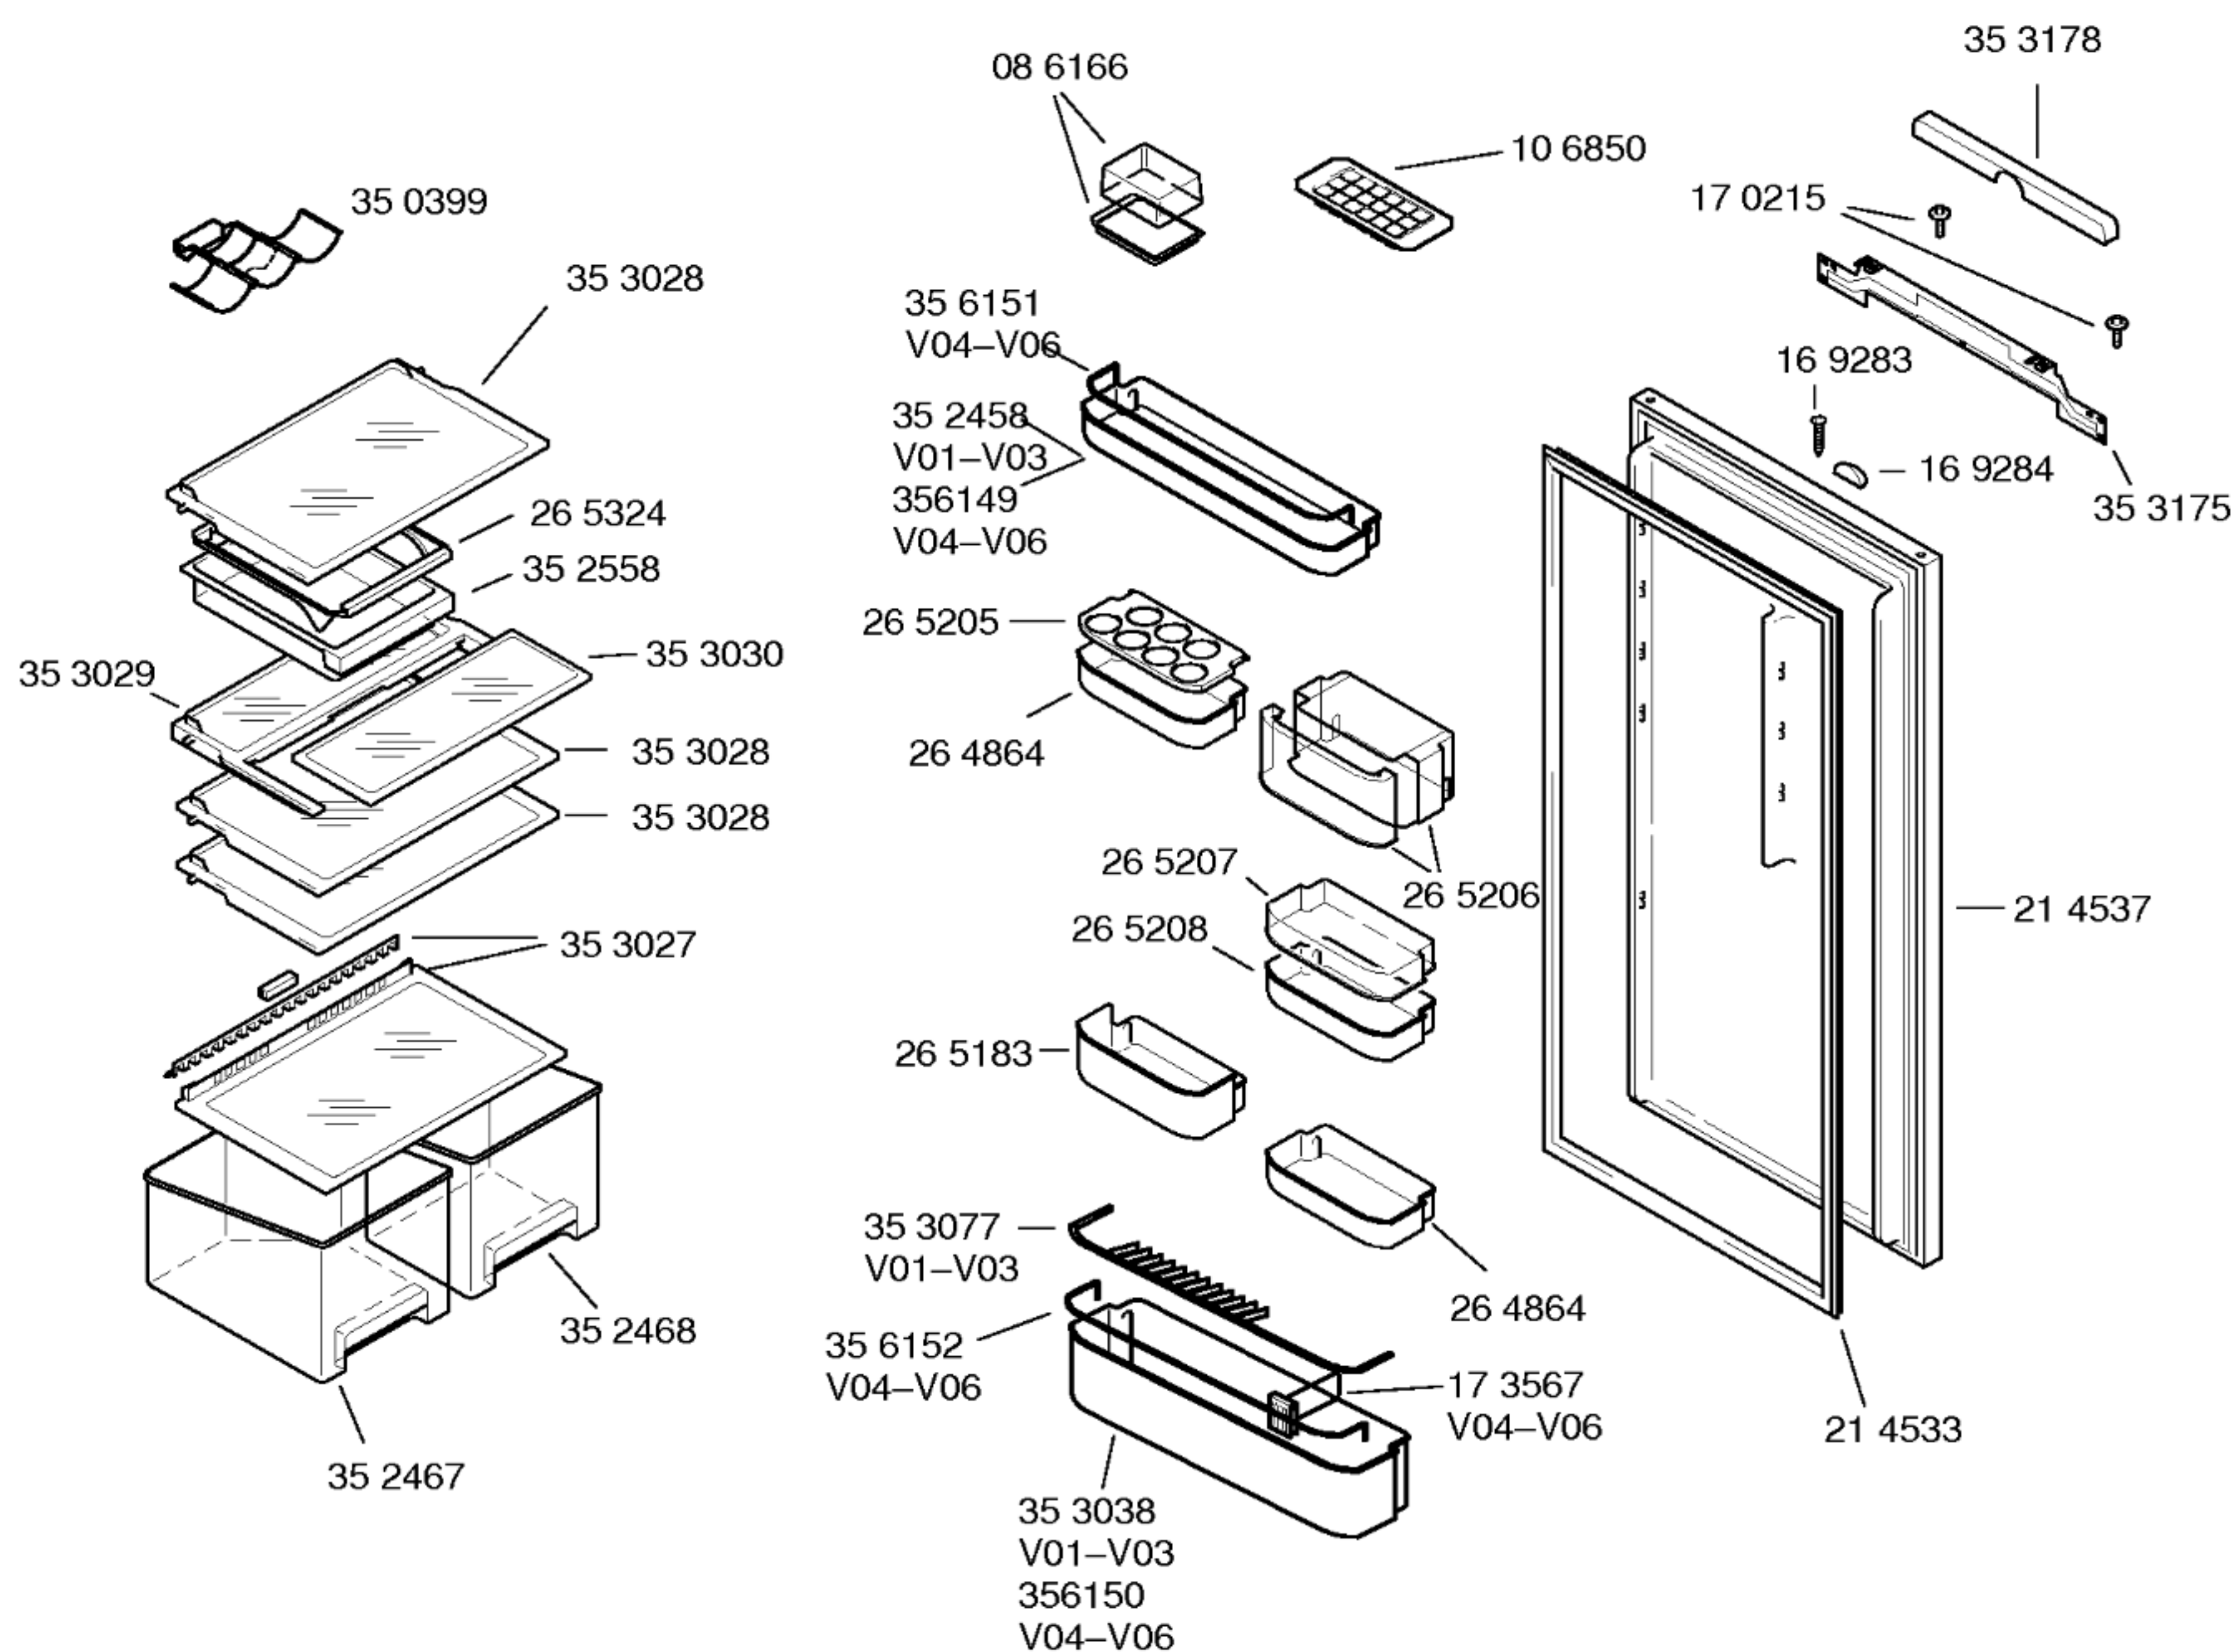

Mat. – Nr. – Konstante
3740

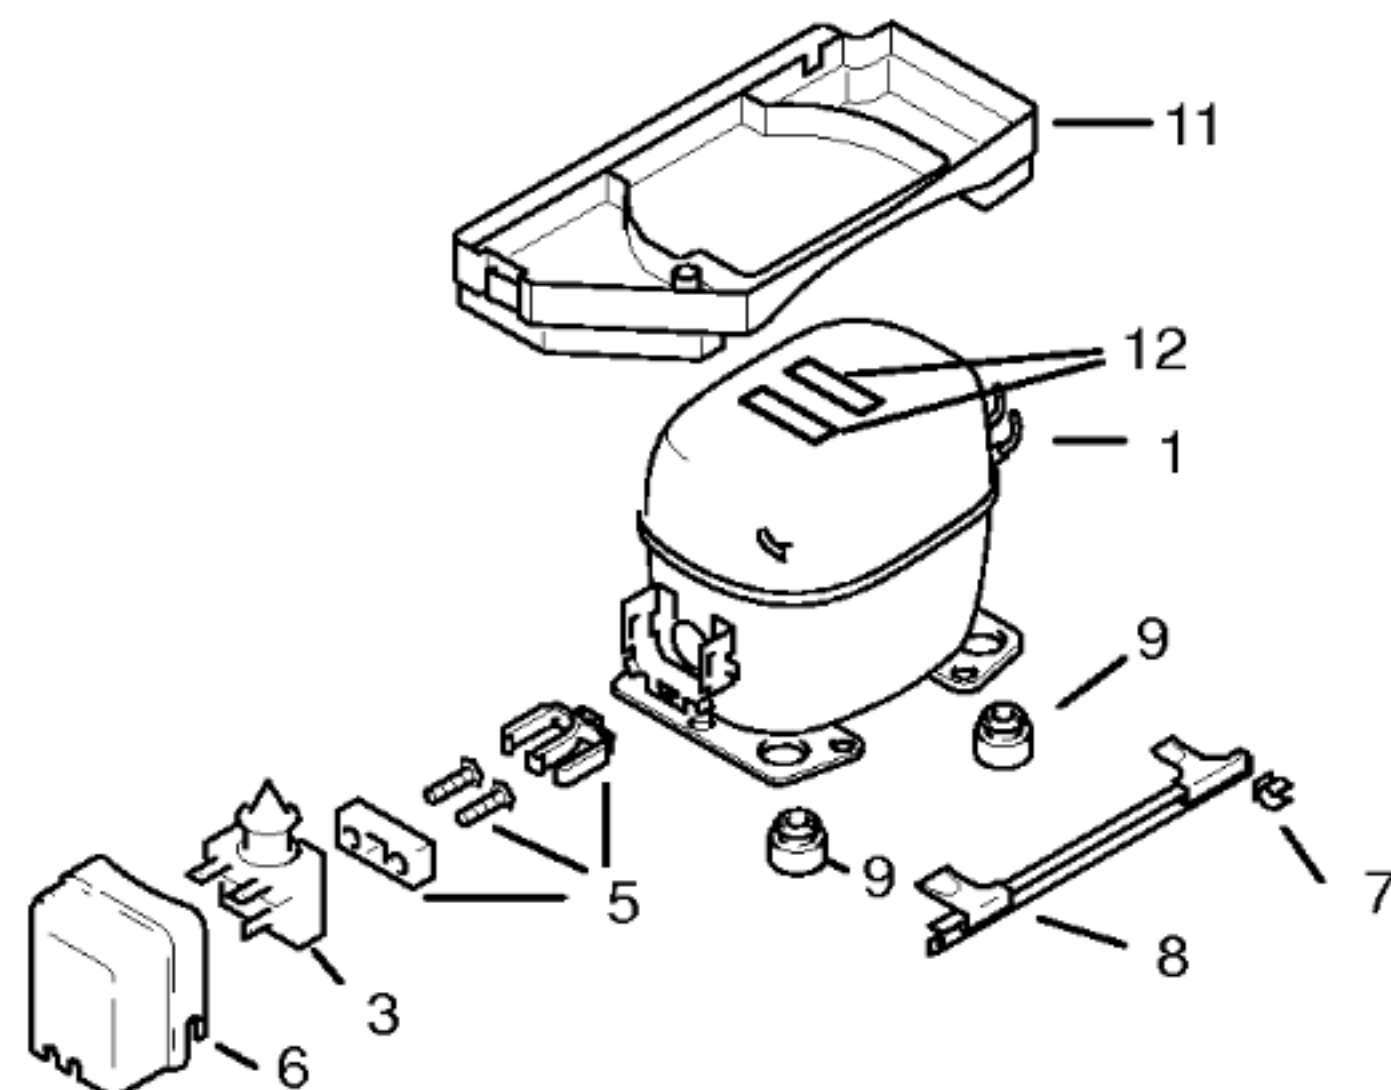

Pos.	Danfoss		
	TLY4K		
1	14 1821		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	050166		
10			
11	26 4879		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Danfoss		
Typ/Type	TLY4K		
Förderleistung/Delivery/Débit	l/h	698	
Anlaufstrom/Starting current/Cour de démarrage	A	5,9	
Widerstand/Resistance/Résistance Ha/main/prin	Ω	49,0	
Hi/aux	Ω	15,0	

Temp.-Regler/Thermostat	Ranco		
Typ/Type	K59		
Regelstellung/Position	kalt	warm	
Schaltwerte/Switching values	"warm"	+5,0	+5,0
Valeurs de commutation	"kalt"	-25,0	-10,0
	"alarm"		

Füllmenge/Fill.quantity/Charge	R600a	+	
--------------------------------	-------	---	--

Anschlußwert/Conn.load/Puiss. connectée	W	45	
---	---	----	--

Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		

Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		

Temp.-Regler/Thermostat			
-------------------------	--	--	--

Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		