



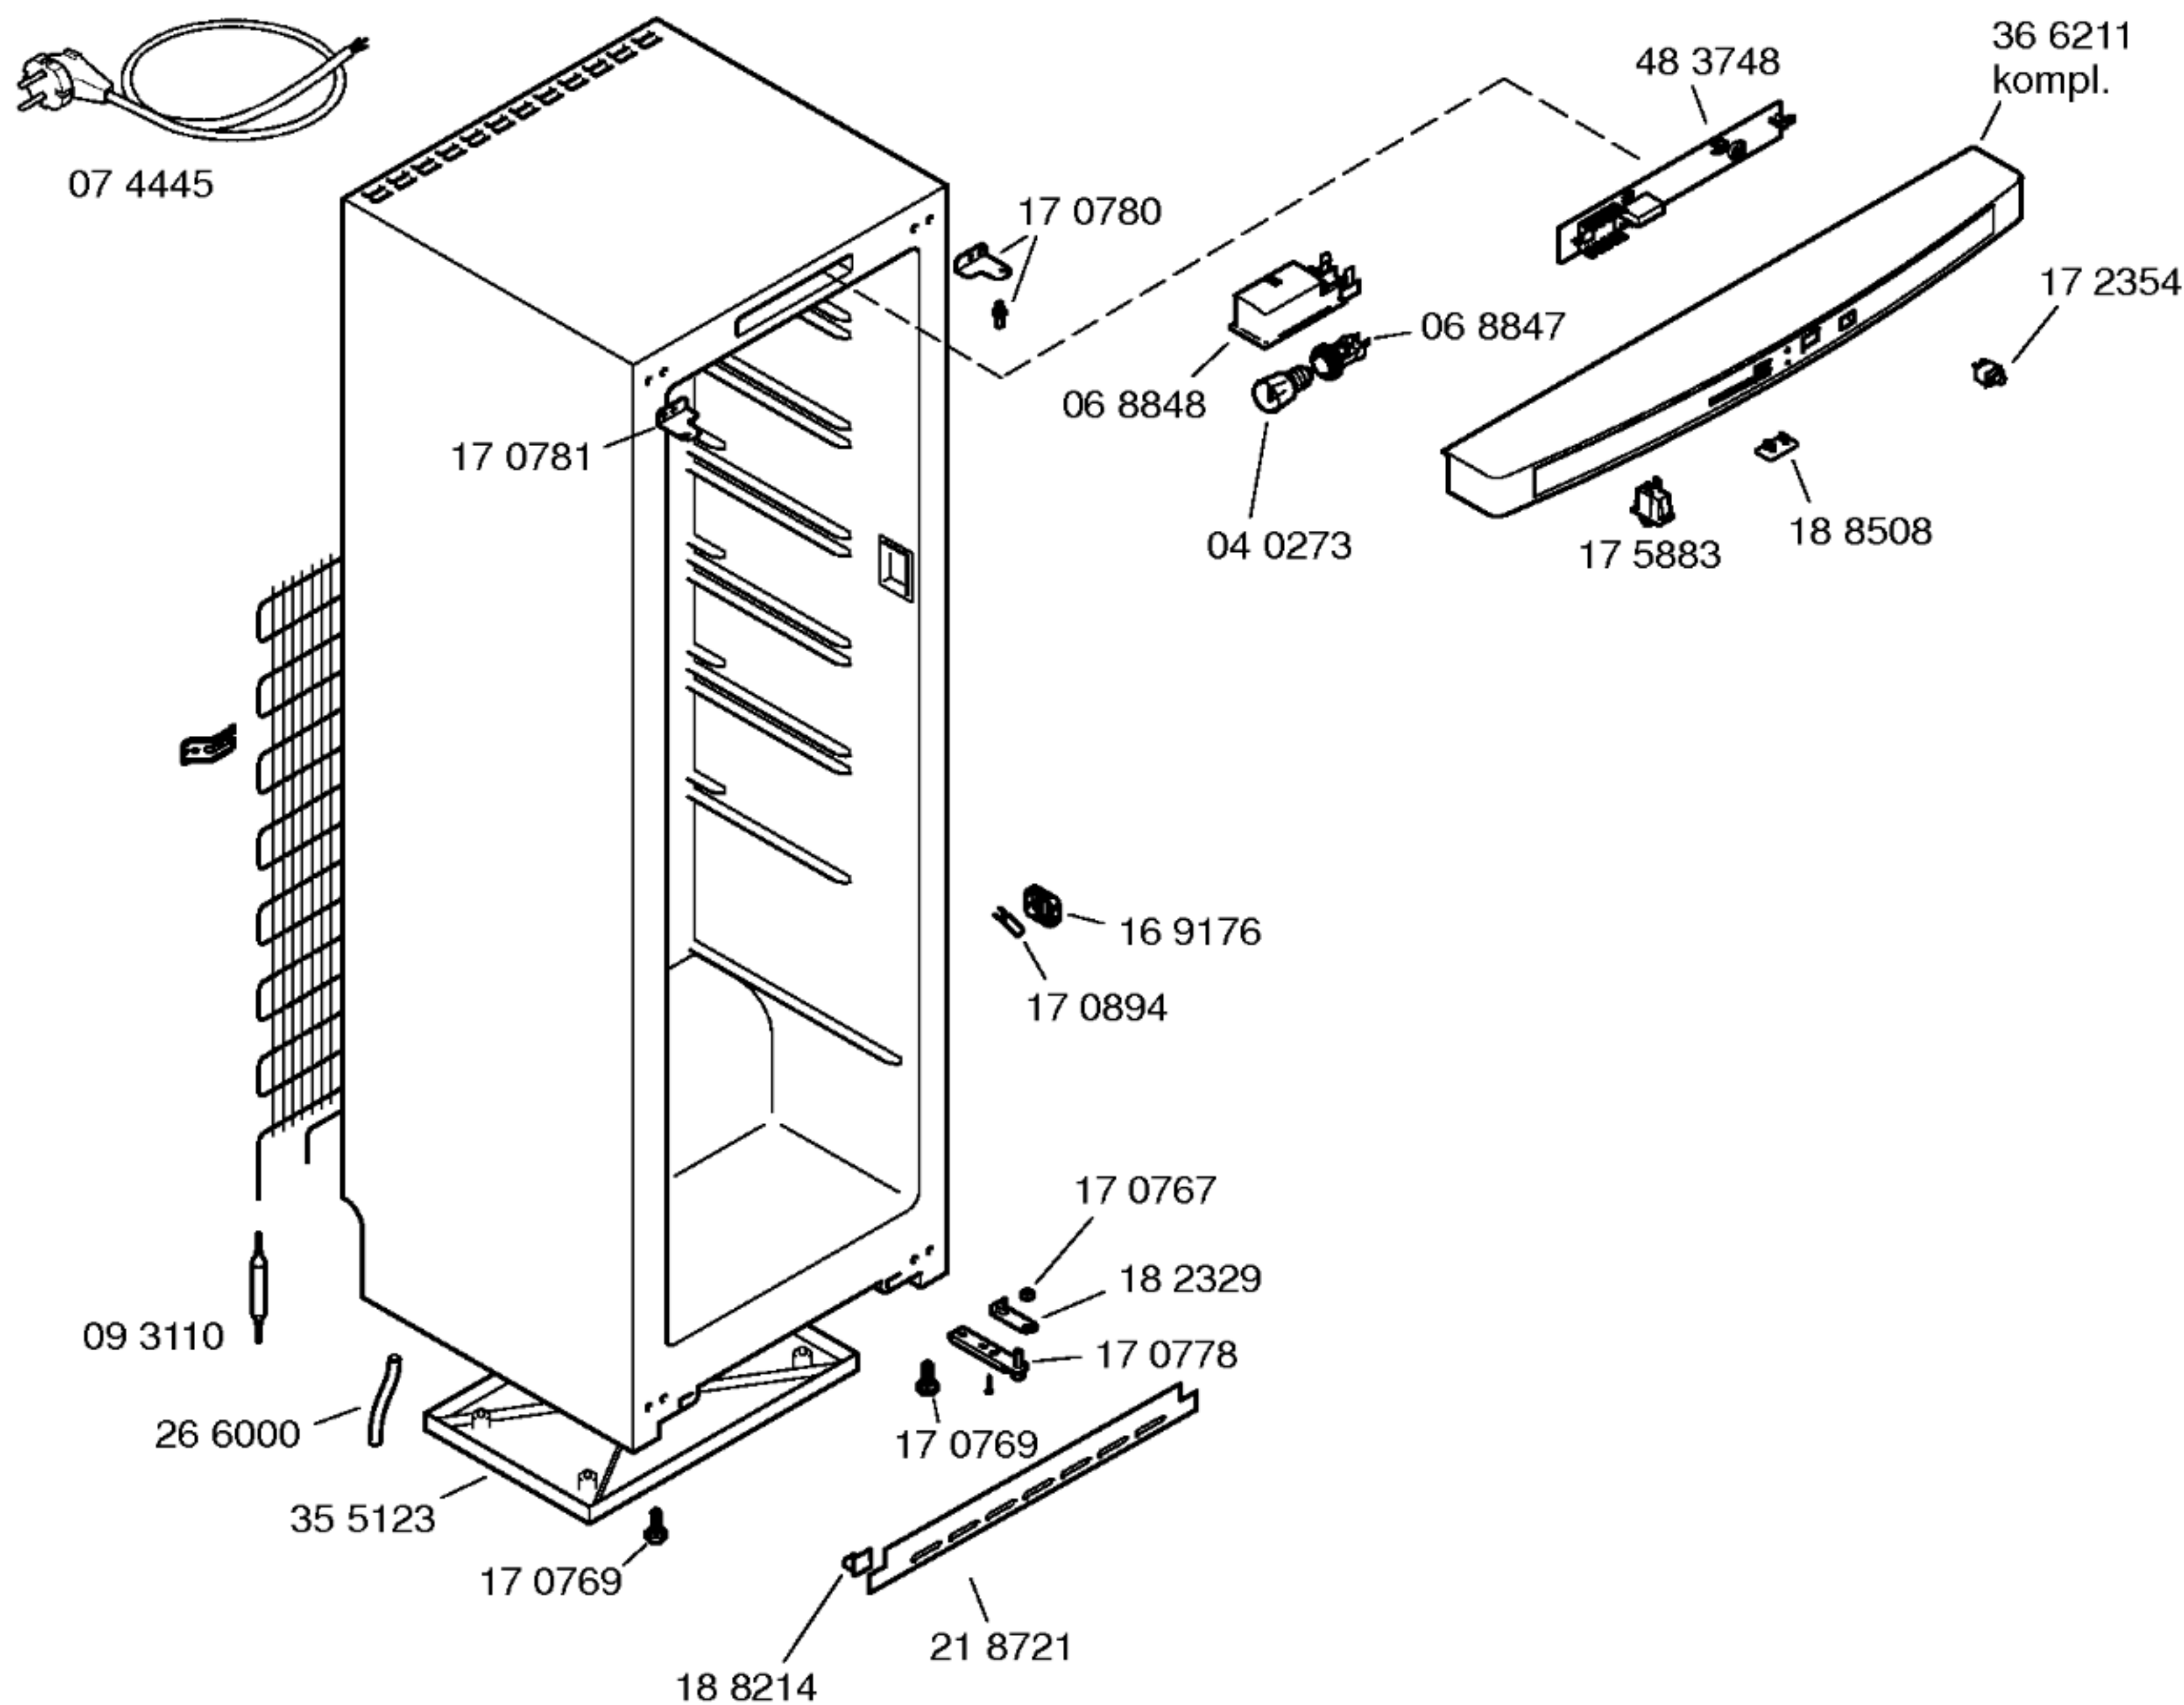



Gebrauchsanweisung
58 0709
(D,GB,F,I,NL,N,SF,S.E,
P,GR,TR)

Montageanleitung
58 0241

Beistellsatz
26 5629

Edelstahlpflegemittel
16 6787

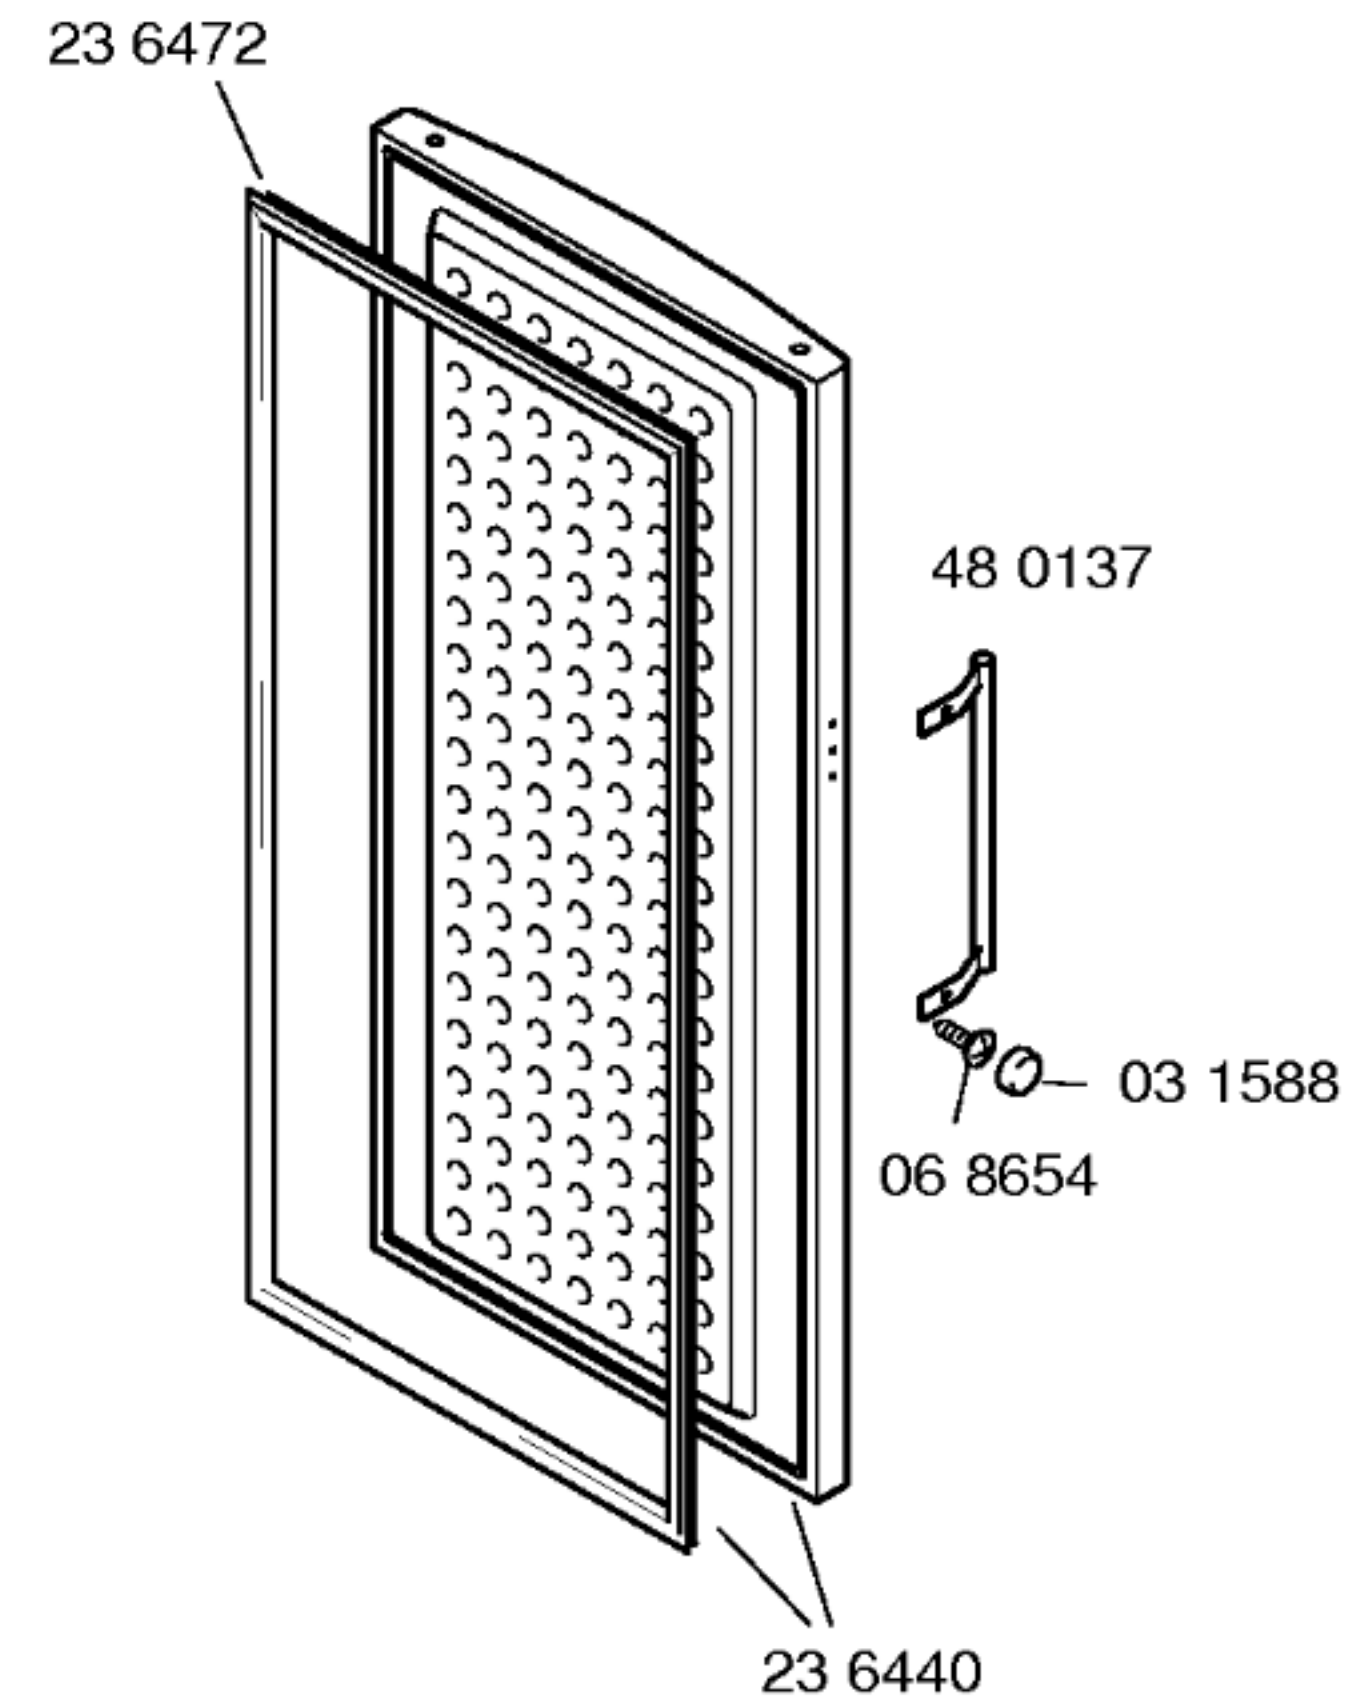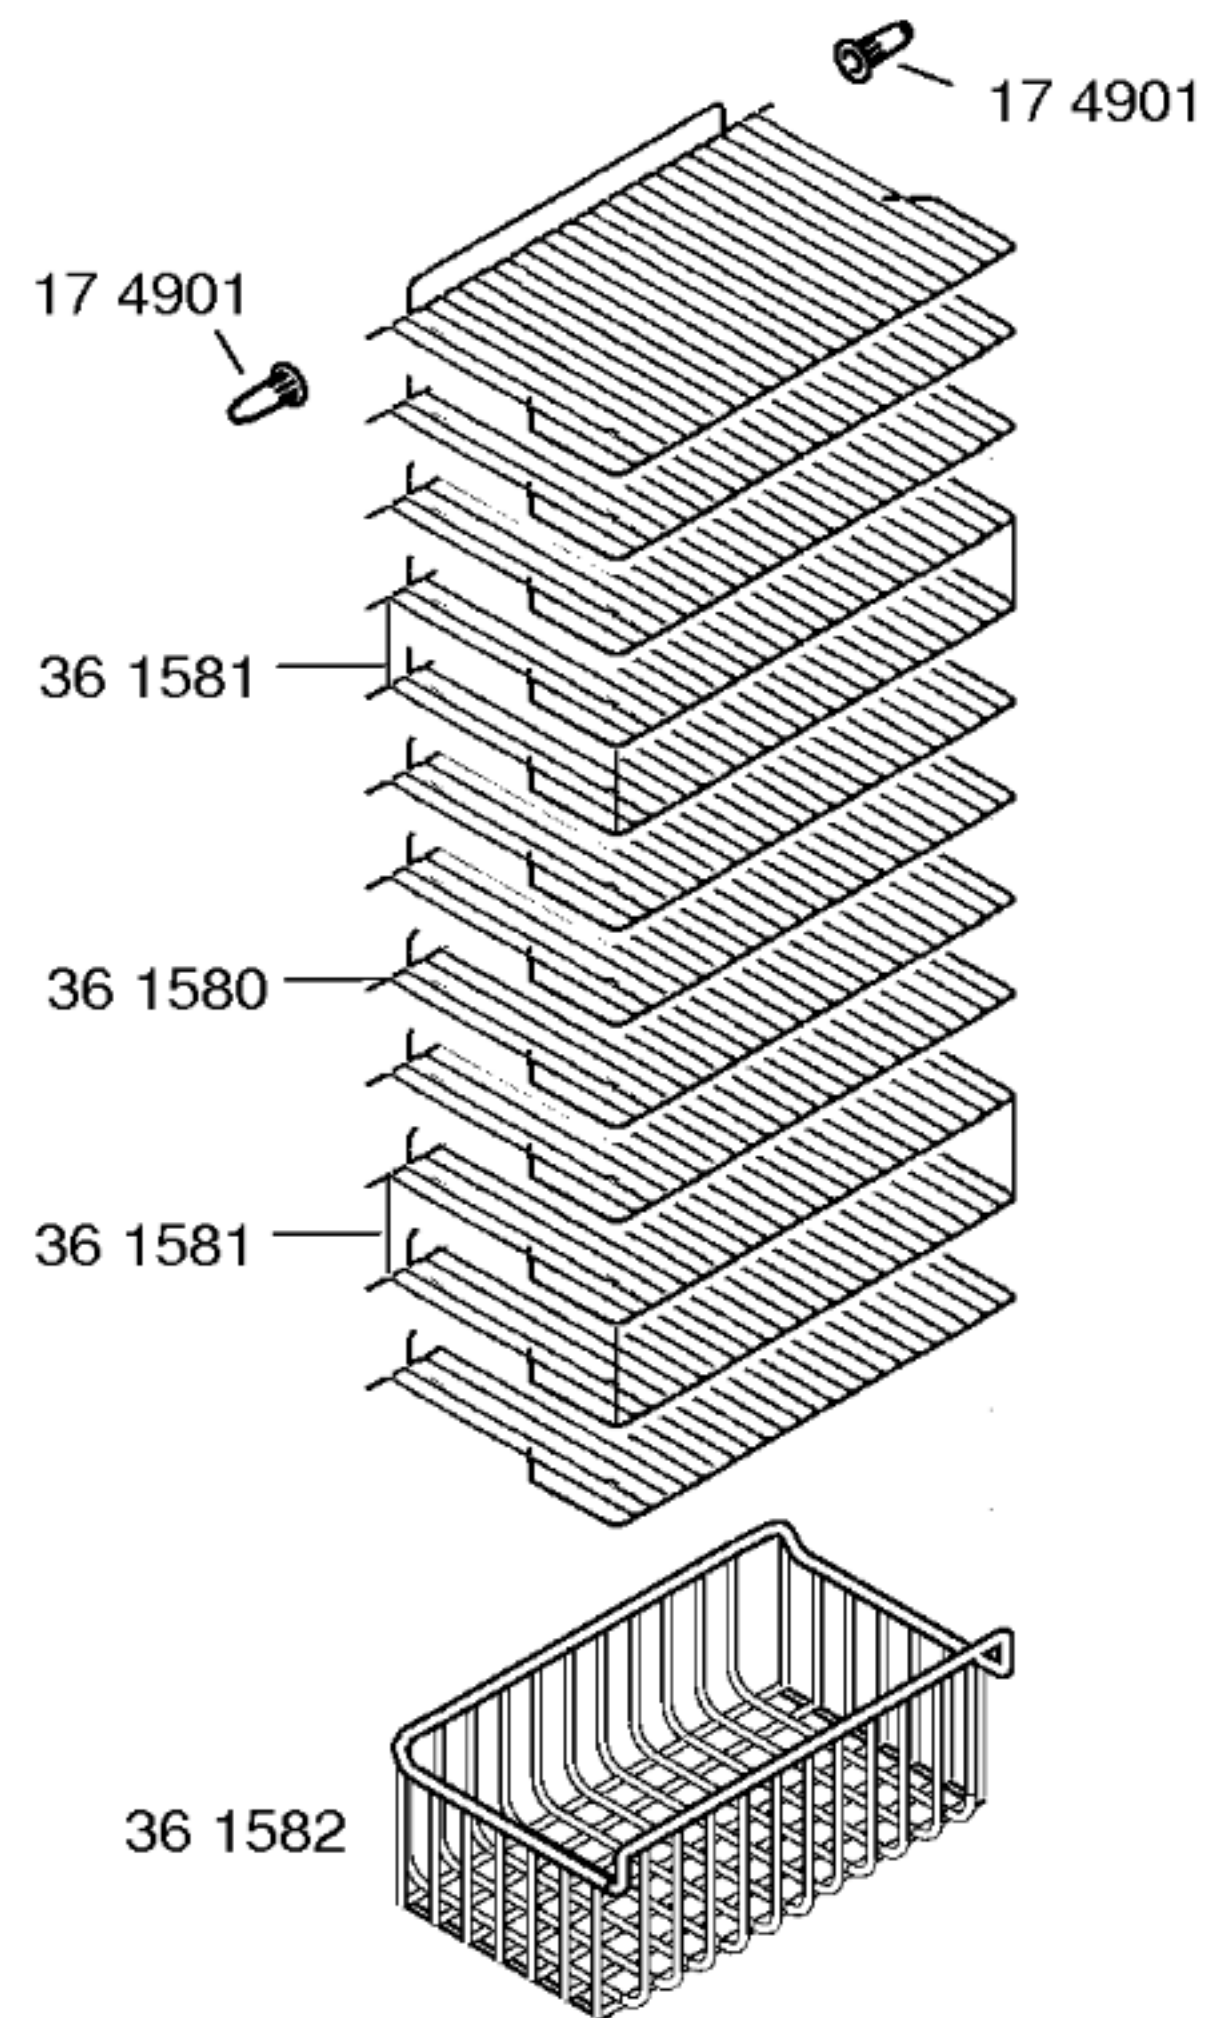

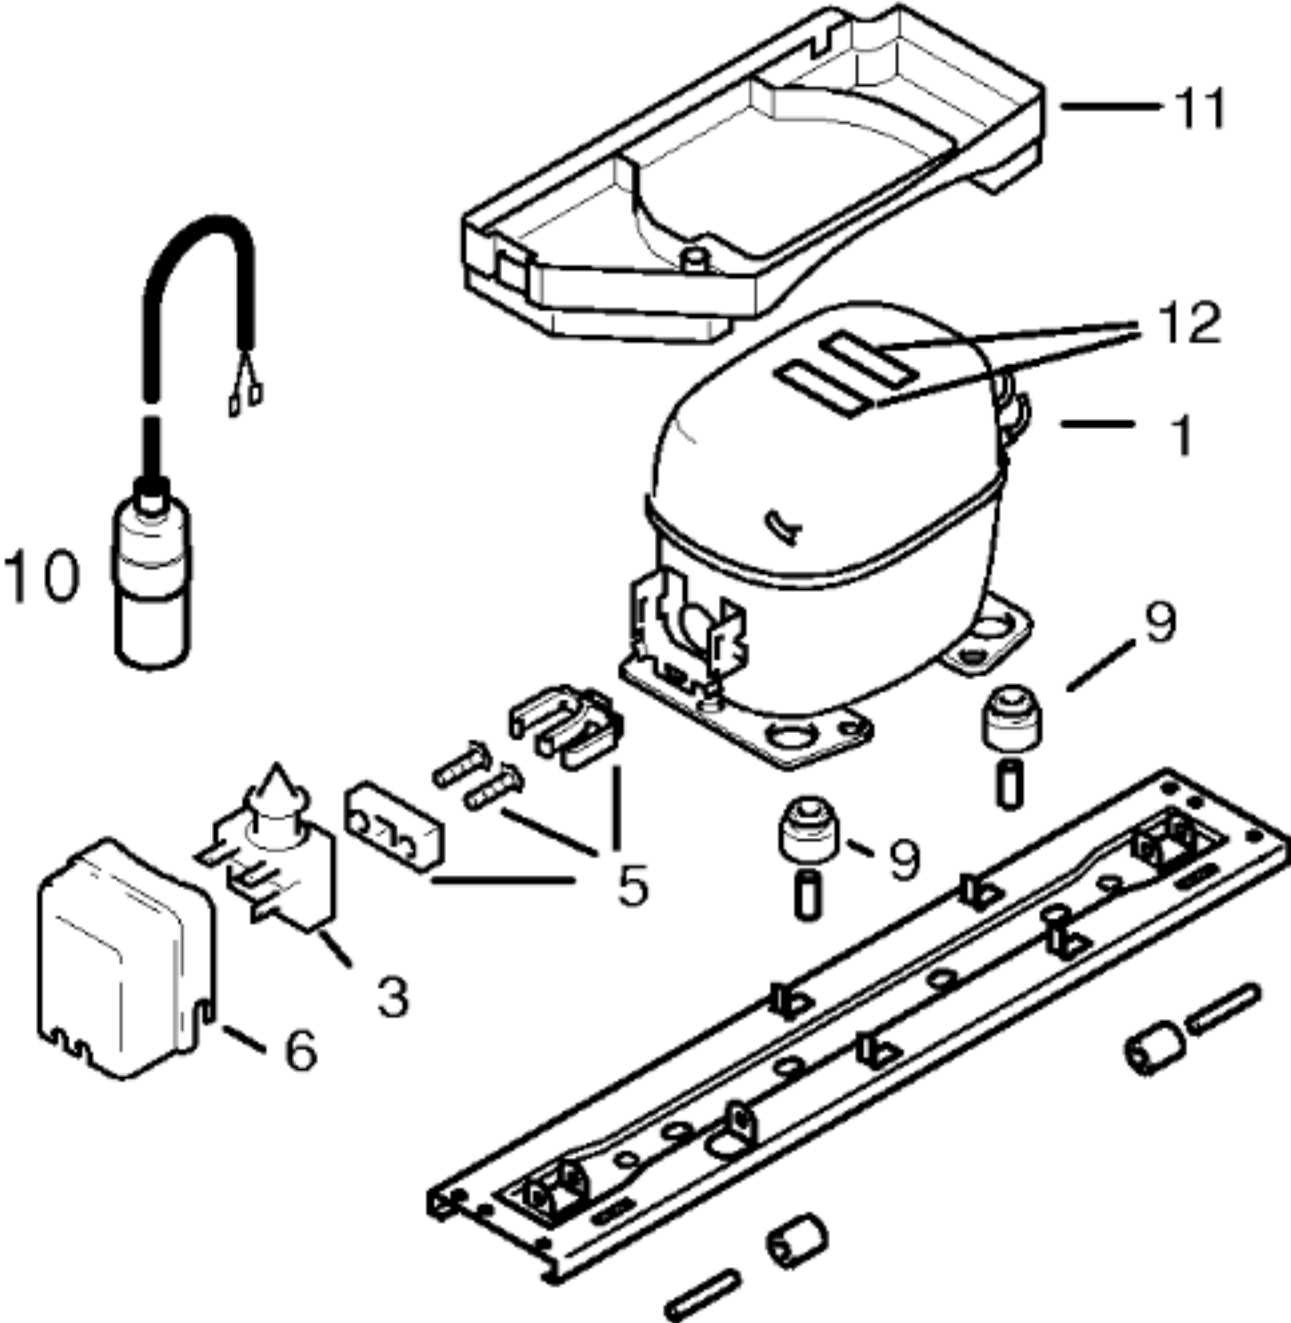

Pos.	V01		
	Danfoss TLES 5 KK2		
1	14 1633		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	08 4744		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 5 KK2		
Förderleistung/Delivery/Débit		l/h	914	
Anlaufstrom/Starting current/Cour de démarrage		A	2,9	
Widerstand/Resistance/Résistance		Ω	25,7	
Hi/aux		Ω	15,7	
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	59	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild