



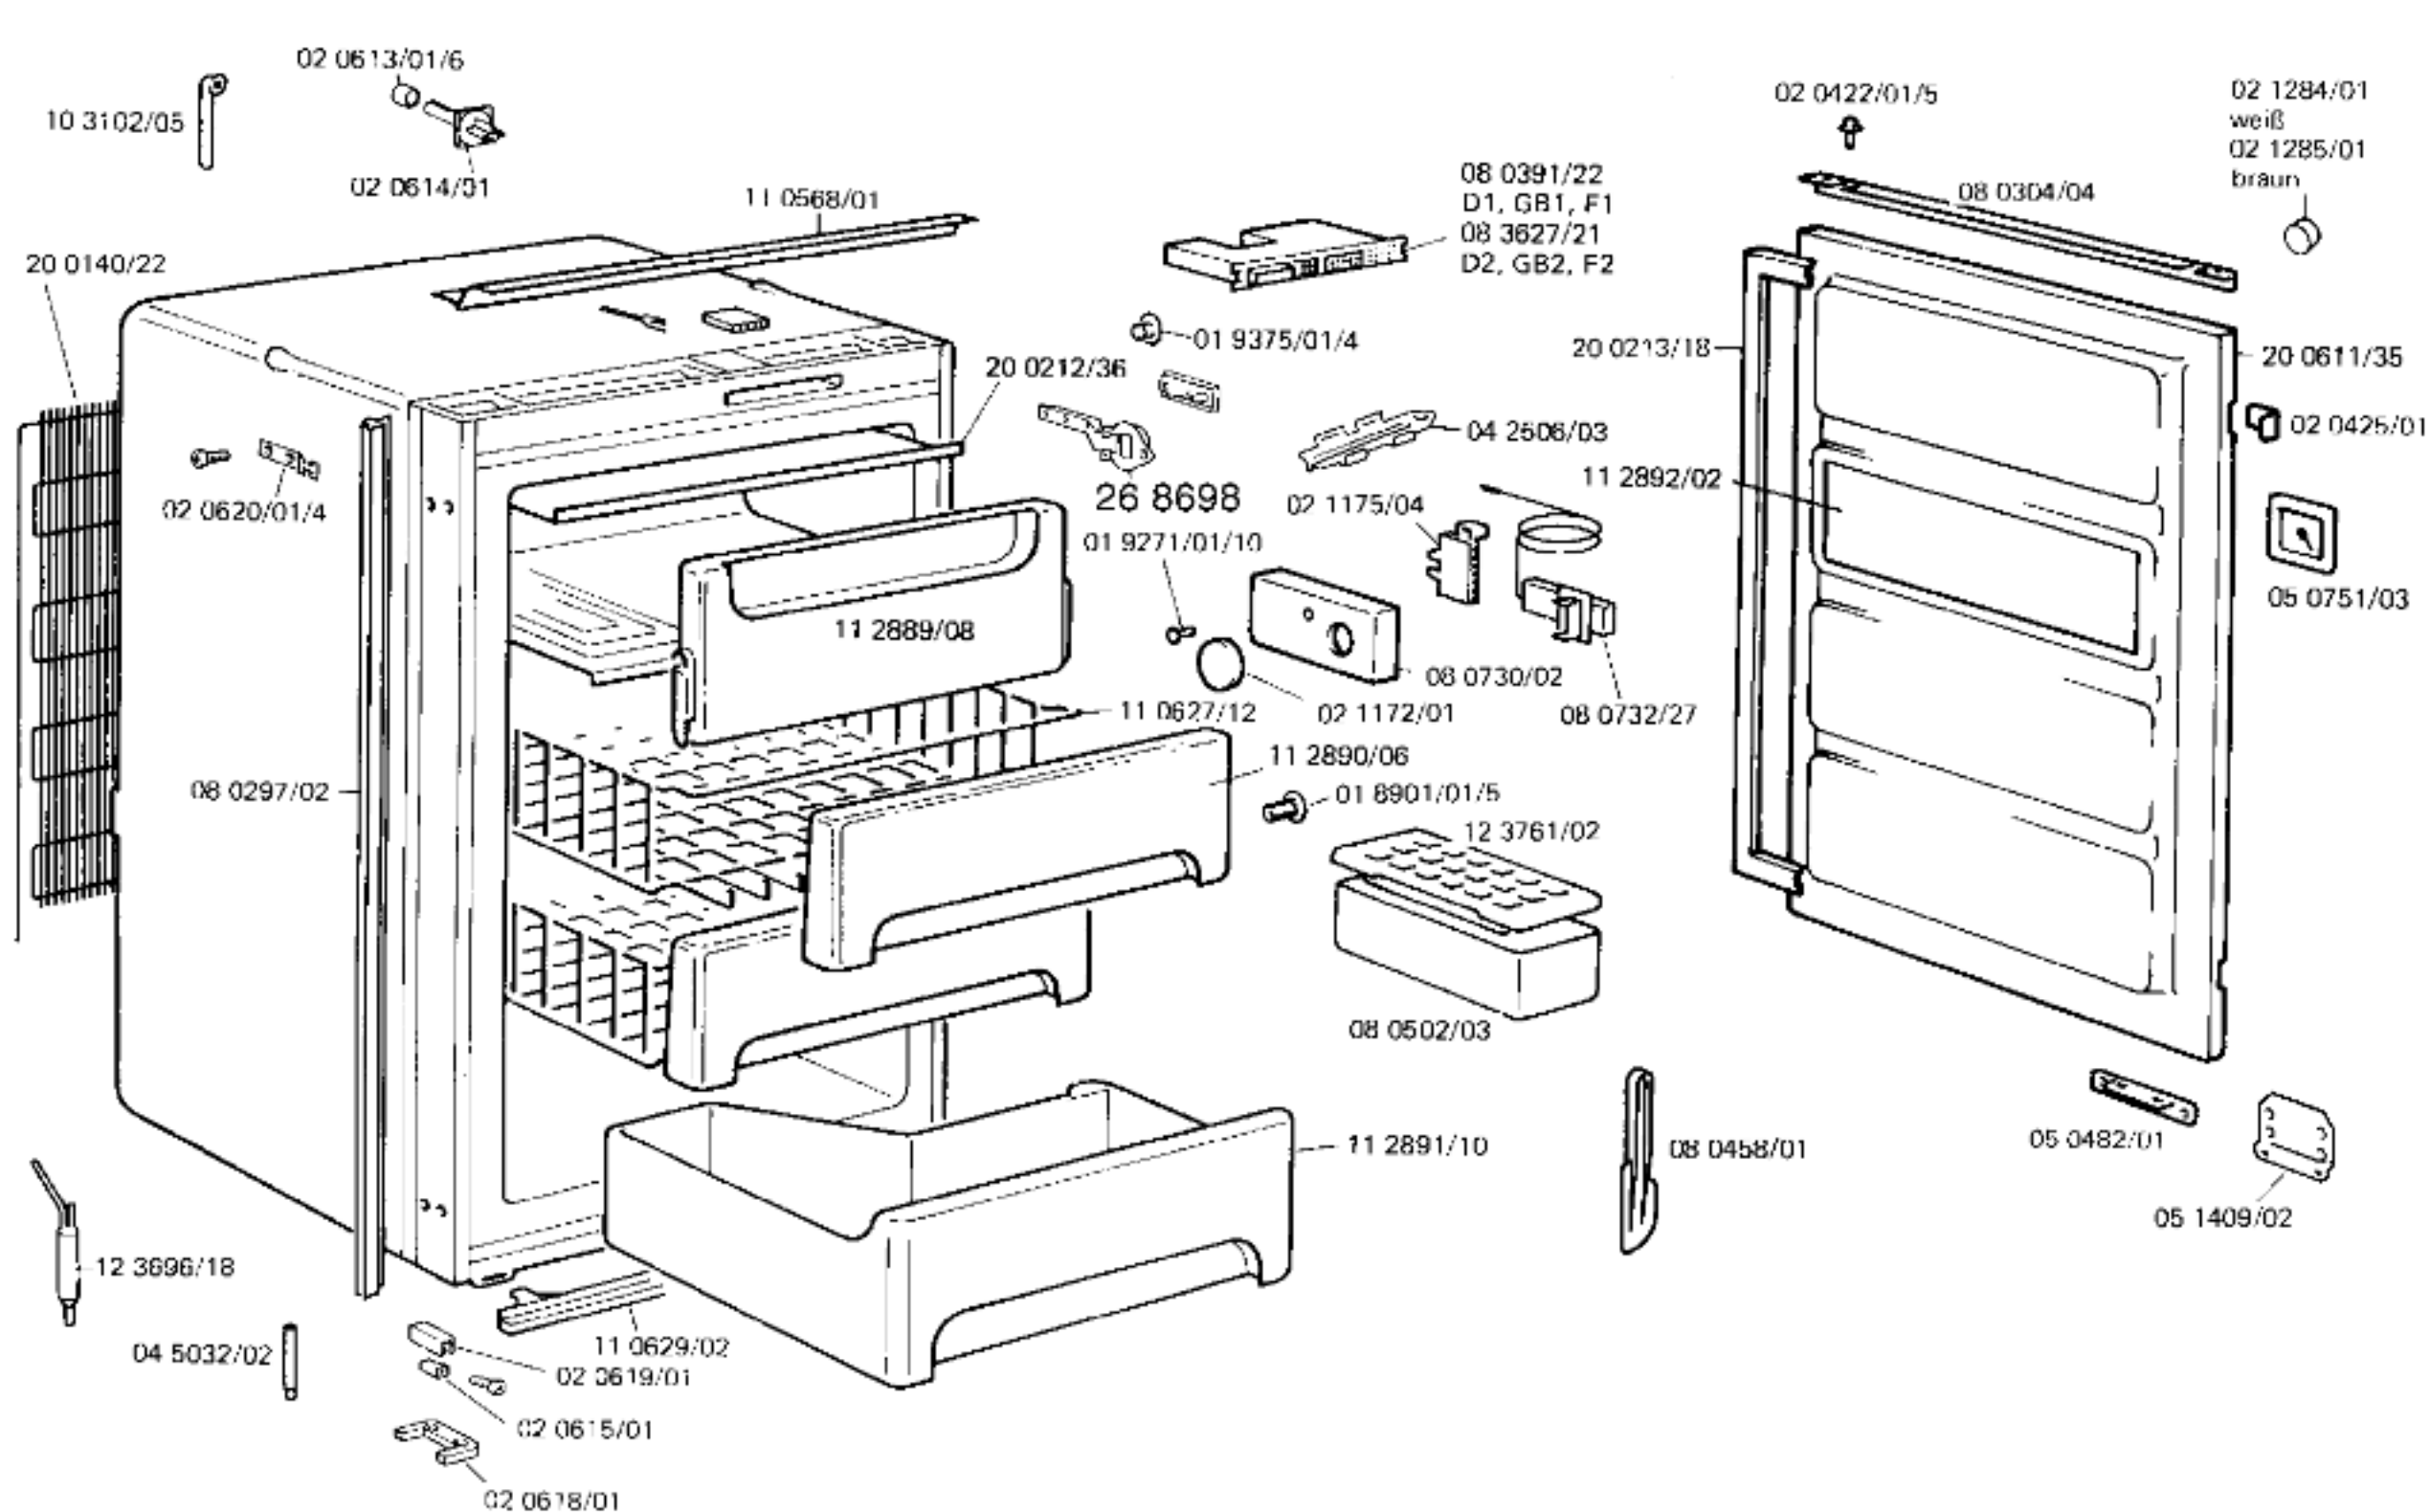

51 0384/00
D1, D2, GB1, GB2, F1, F2
Montageanleitung
(D, GB, F, I, NL, DK,
N, S, SF, E)

51 1409/00
D1, D2, GB1, GB2, F1, F2
Gebrauchsanweisung
(D, GB, F, I, NL, DK,
N, S, SF, E)

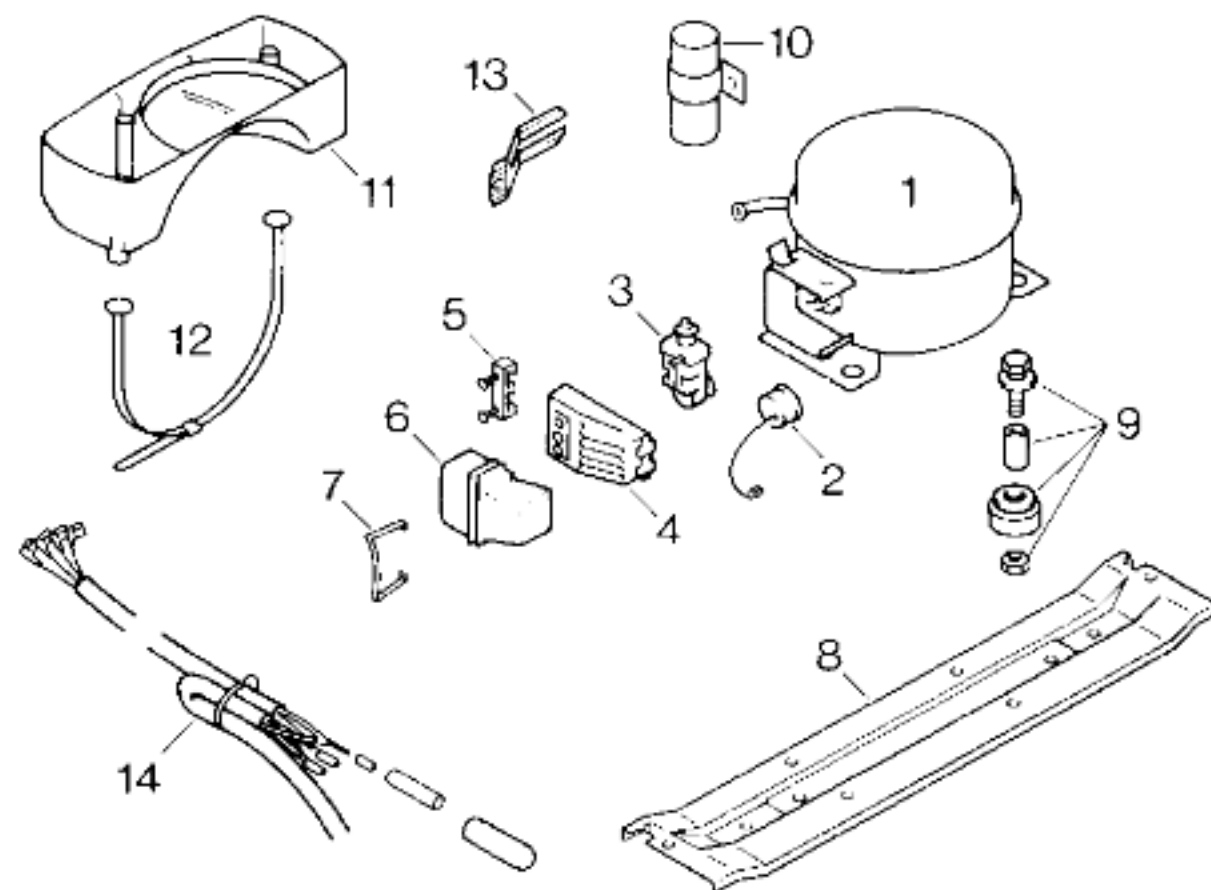

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 5 A			
Förderleistung/Delivery/Débit		l/h	V 920		
Anlaufstrom/Starting current/Cour. de démarrage		A	9,2		
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	15,7		
	Hi/aux	Ω	18,8		
Temp.-Regler/Thermostat		M + J			
Typ/Type		TF 57 SF			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/ Valeurs de commutation	„ein“	°C	-28	-19	
	„aus“		-34	-26	
	(„abtauen“ od.)	„alarm“	-20	-15	
Füllmenge/Fill quantity/Charge	R12	g	90		
Anschlußwert/Conn.load/Puiss. connectée	W	120			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

Pos.				
	Danfoss			
1	14 0065/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				