 
 
 


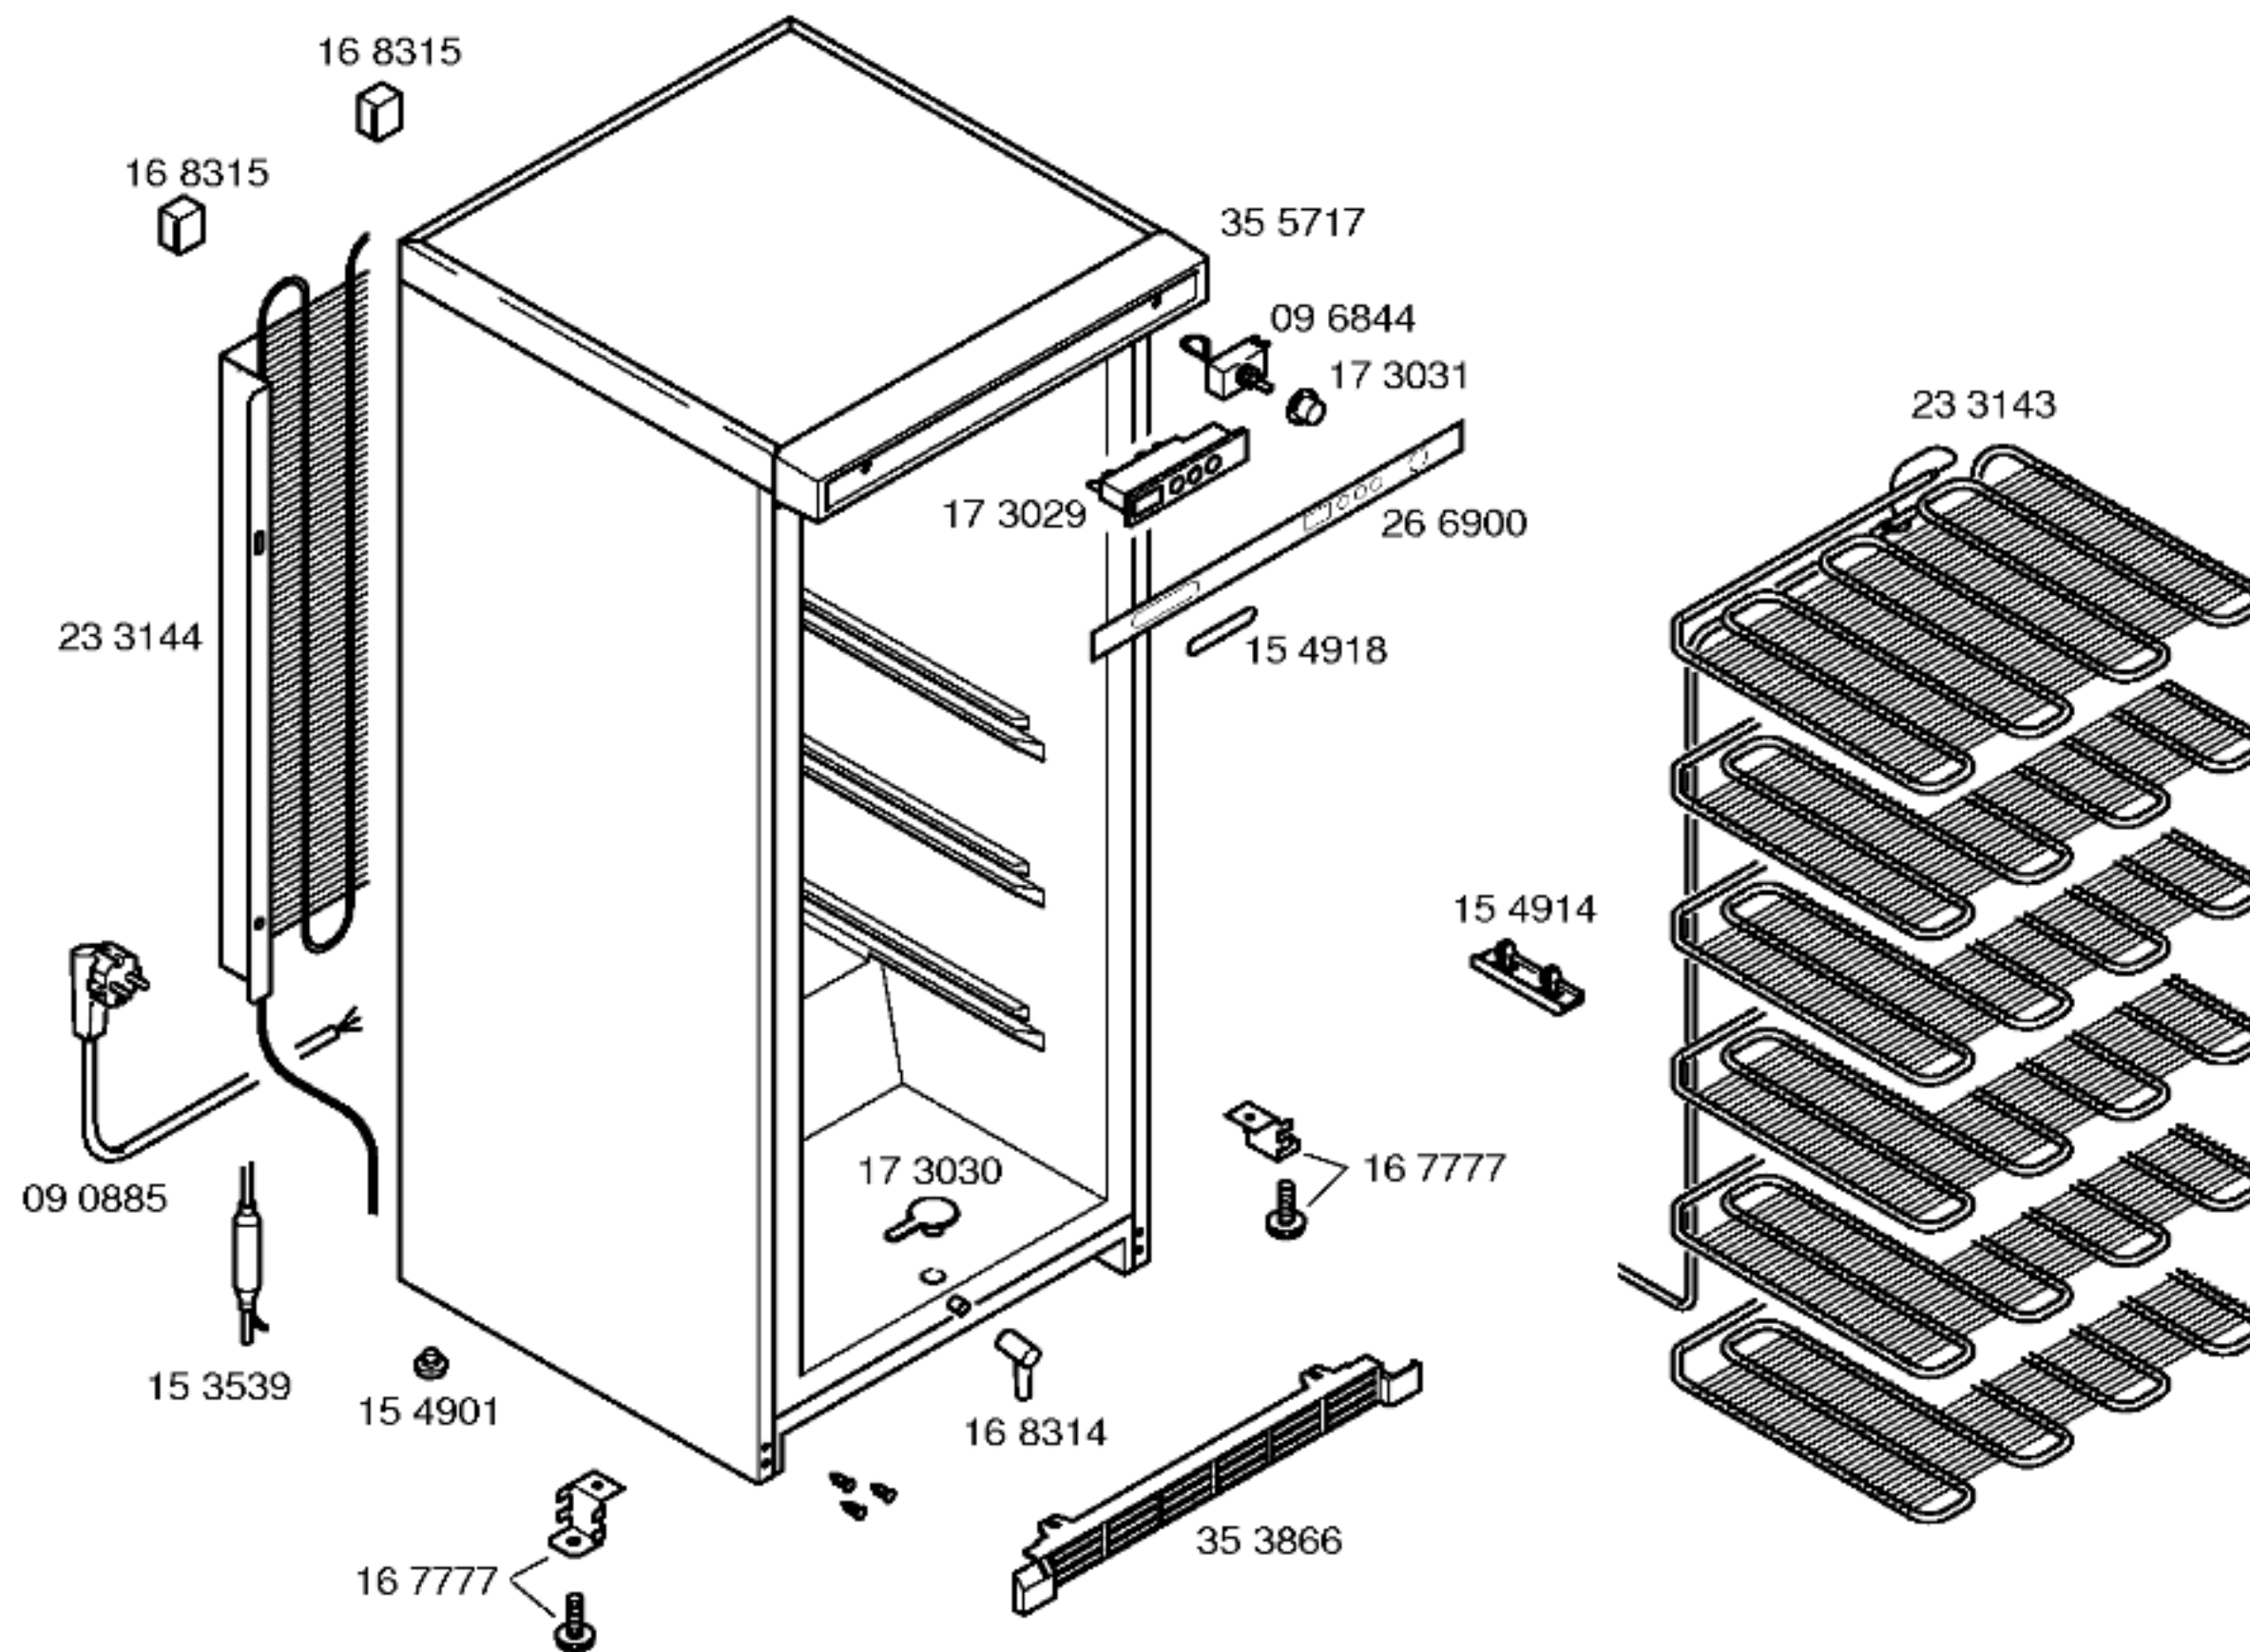

Libro de instrucciones
52 3655
(D,GB,F,E,I,P)

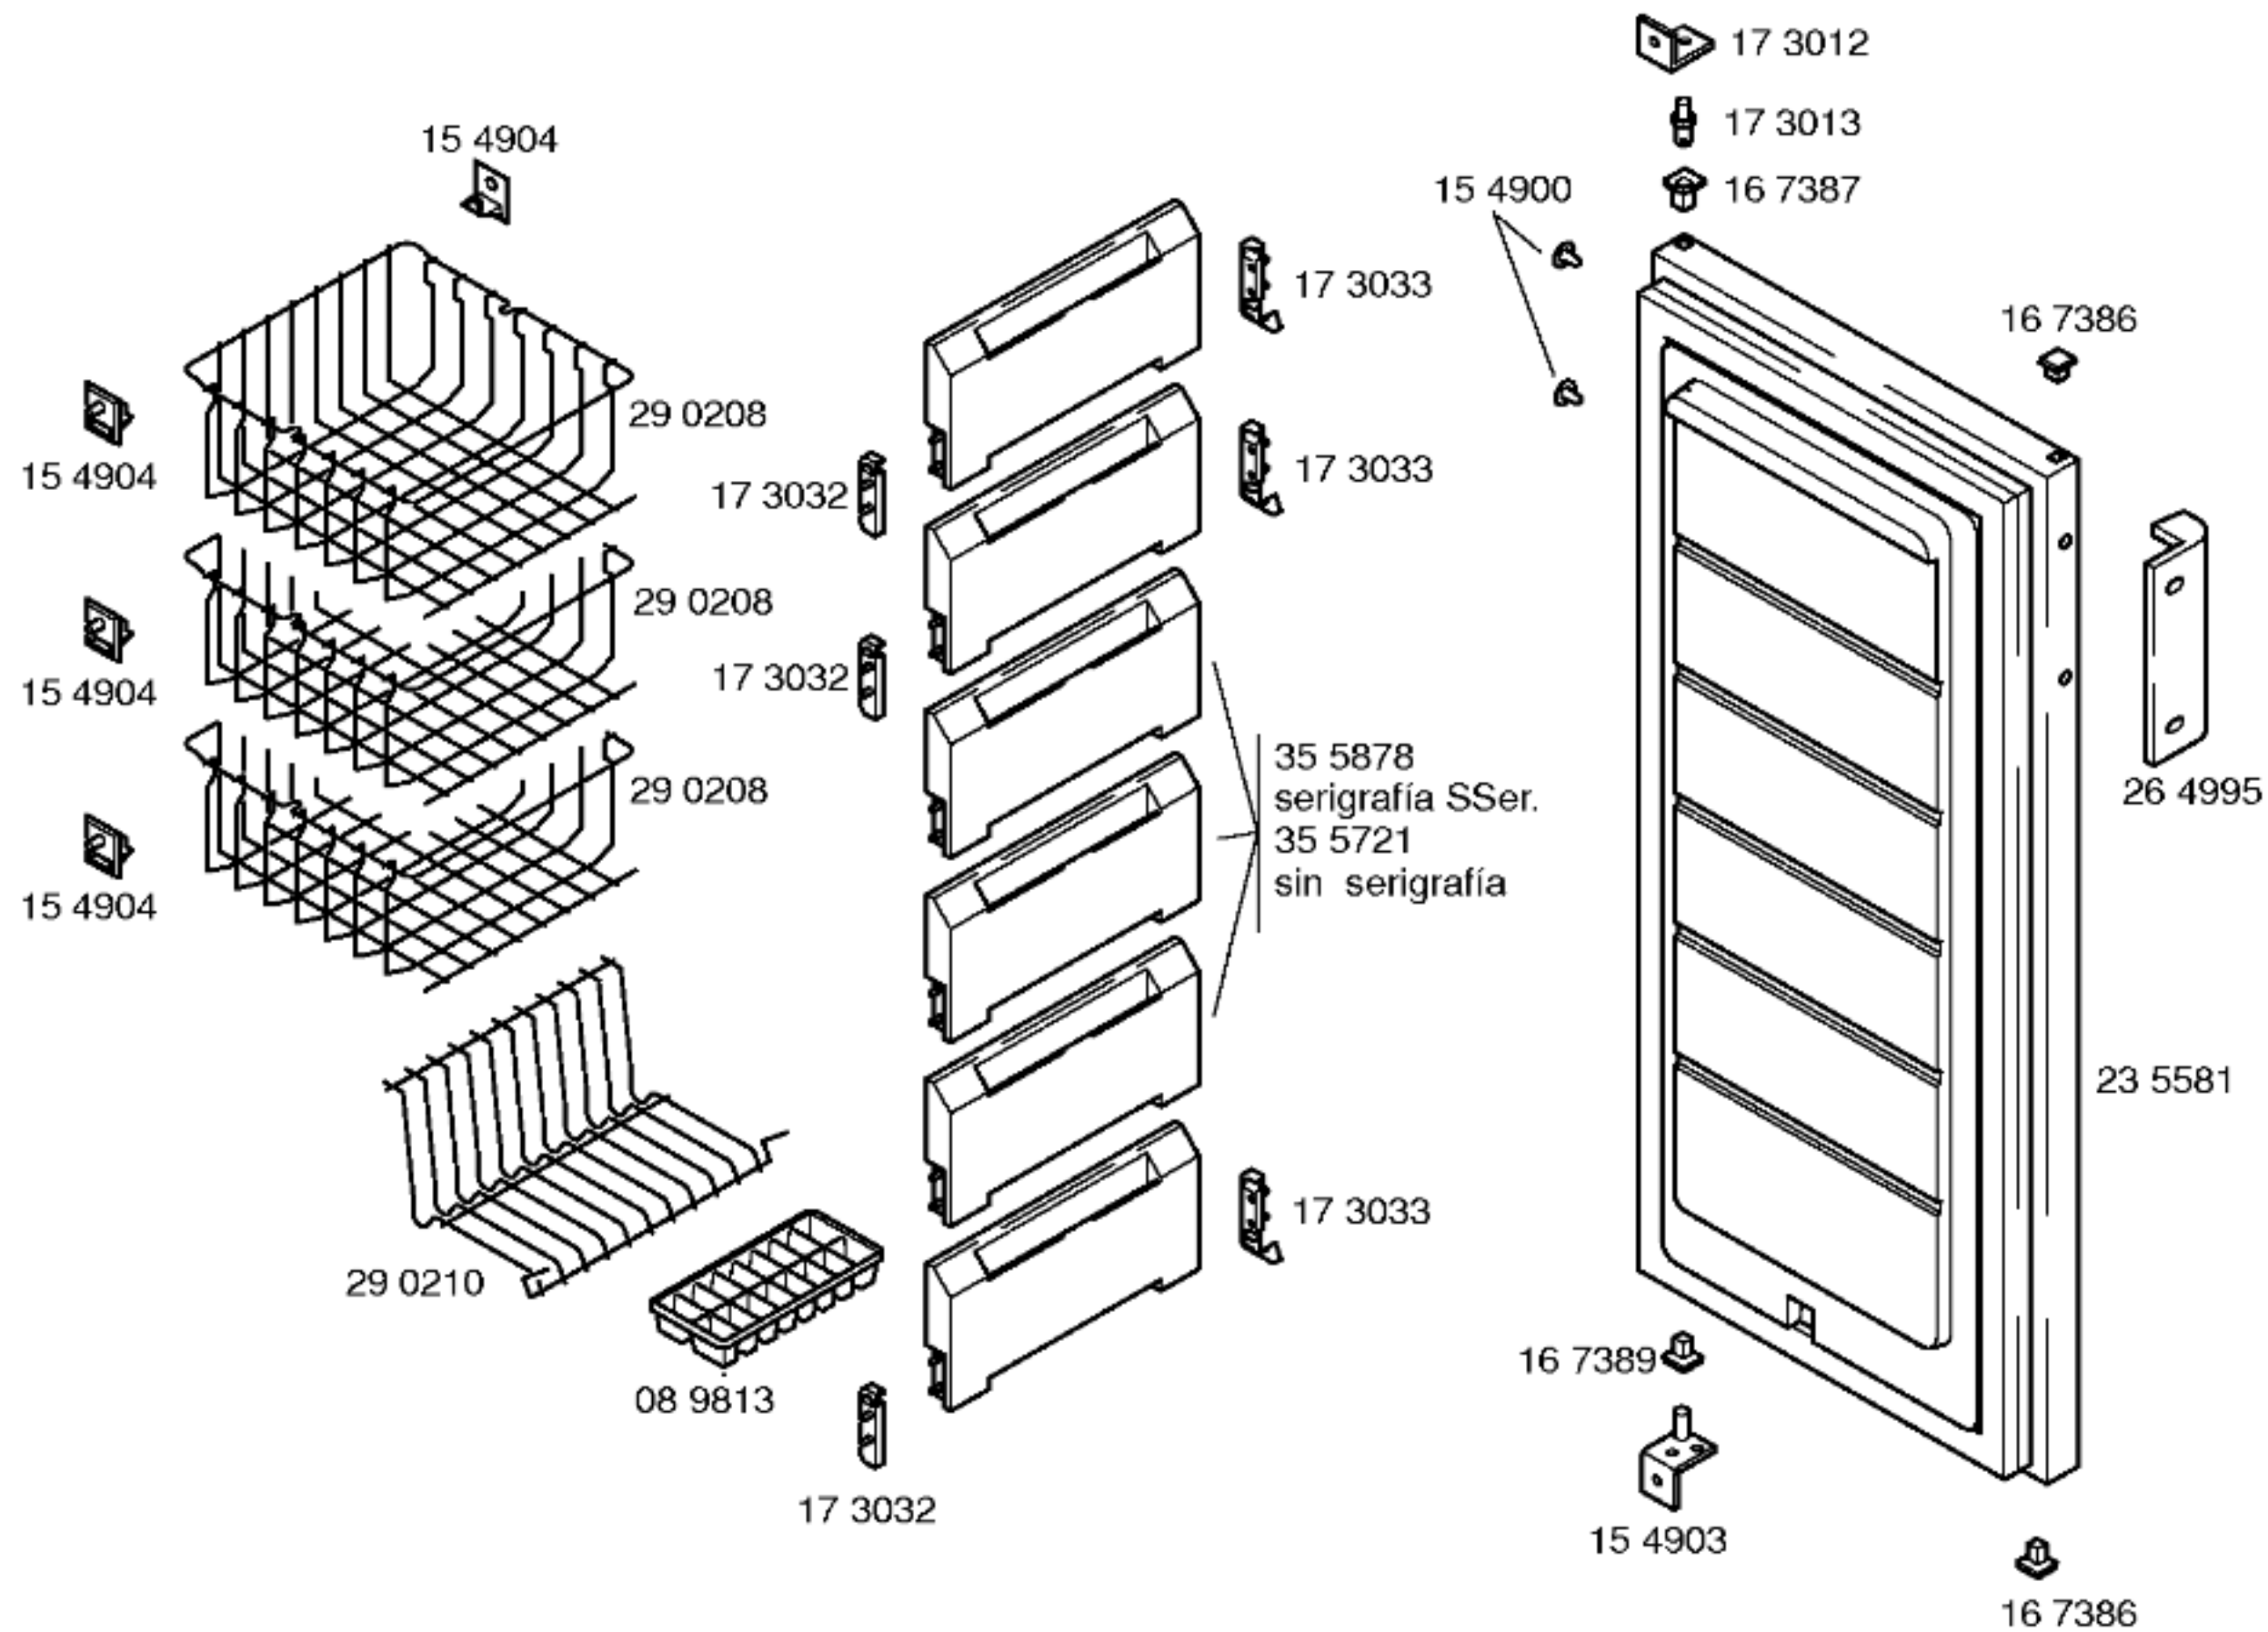

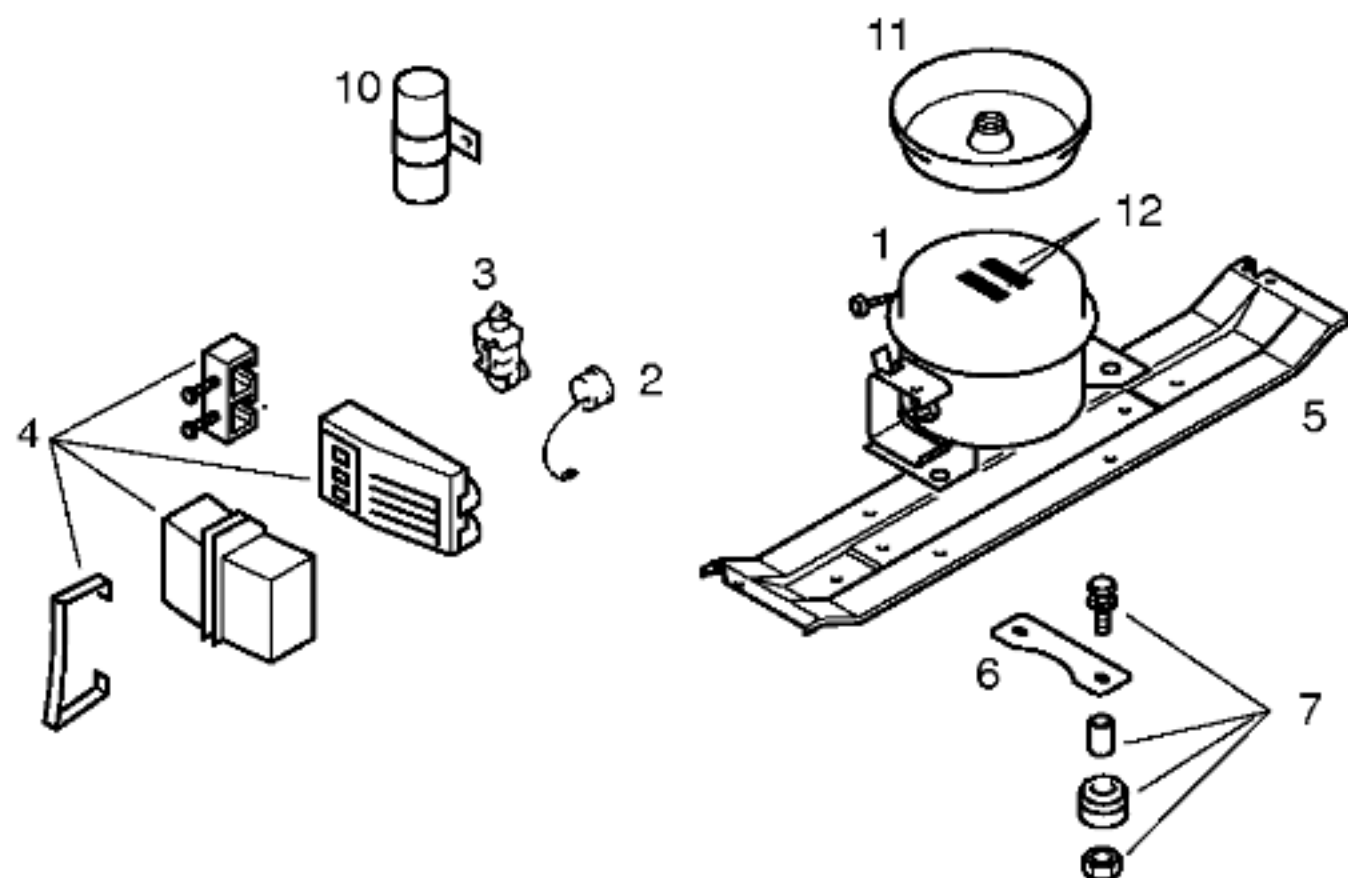

Pos.	ASPERA	ZEM
	B1116Z	GL80AB
1	14 1599	14 1599
2	16 1628	15 4890
3	16 1631	15 4887
4	16 1633	09 6836
5	29 0214	29 0214
6	15 4915	15 4915
7	05 0166	05 0166
8		
9		
10		
11		
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int. arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	ASPERA B1116Z	ZEM GL80AB
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	RANCO K54-L1936 MIN. MAX. -17° -23,5° — -29°	
Füllmenge/Fill. quantity/Charge/Carga R134a	g	*
Anschlußwert/Comm. load/puiss. Connect./Potenc.	W	
Heizung/Heater/Chaufrage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Volage/Tension/Tensión	Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		

* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características