



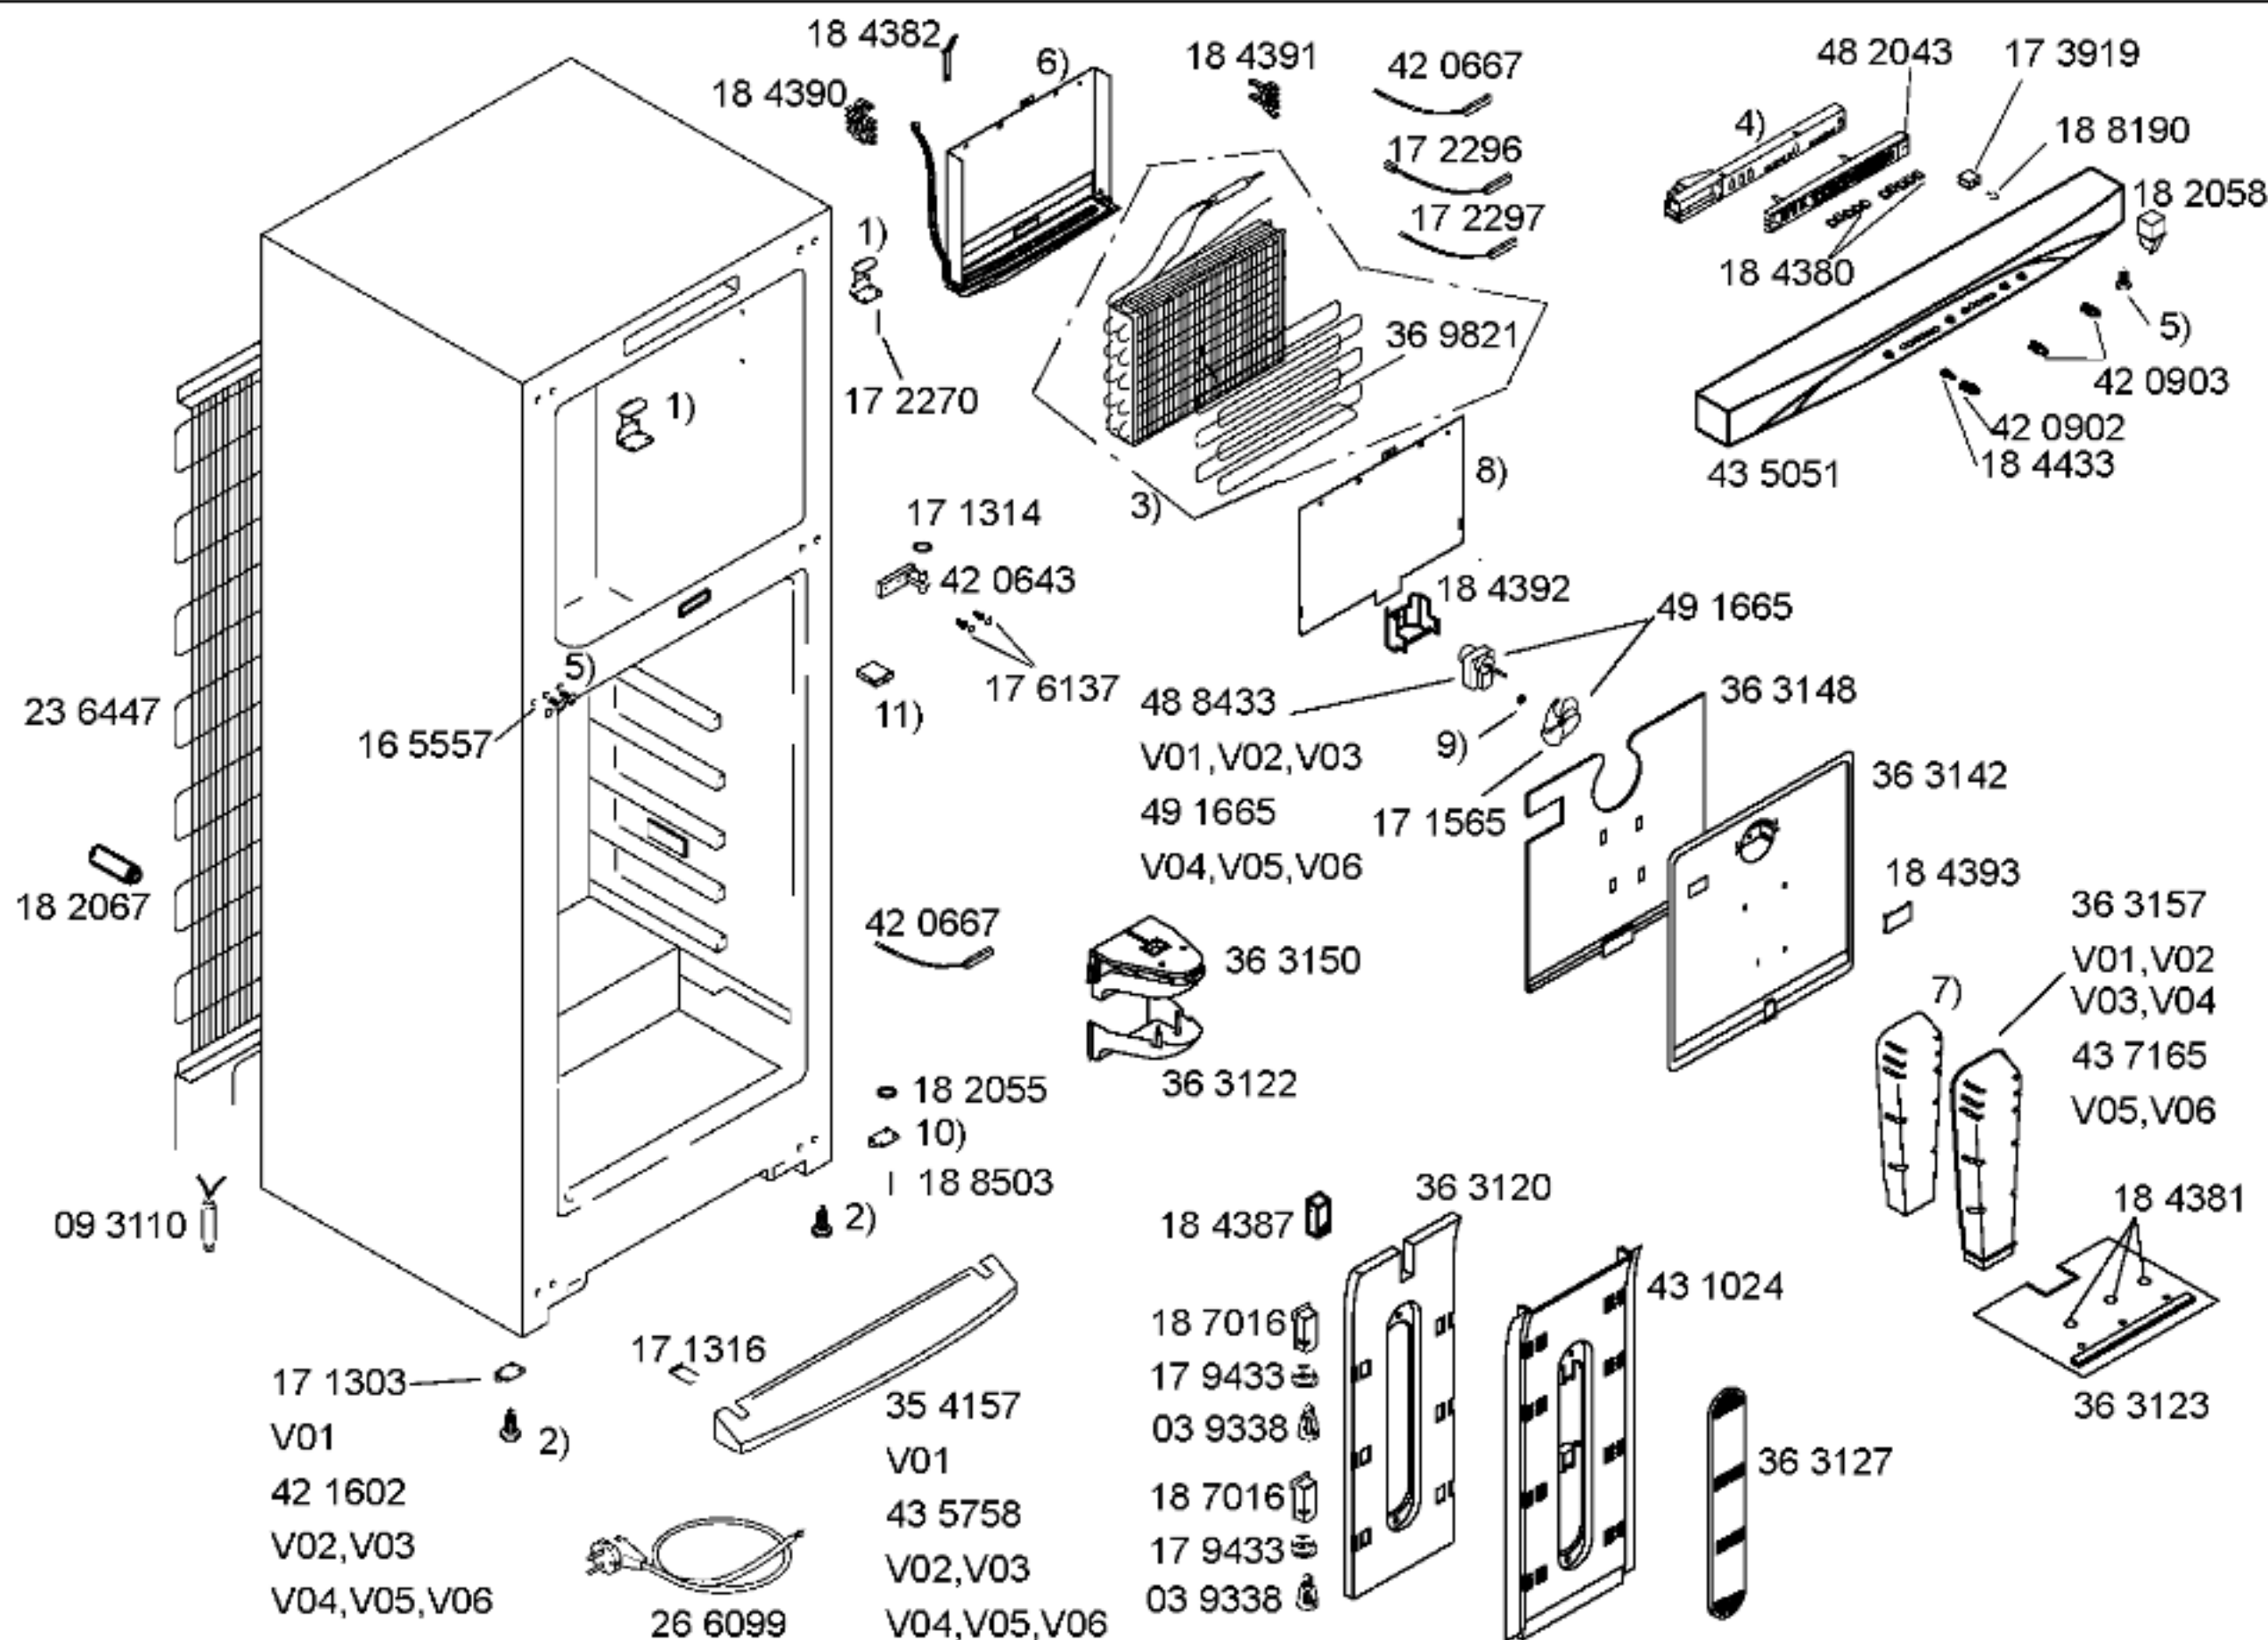


Gebrauchsanweisung
 58 7167

- 1) 17 1312
 2) 18 9089
 V01
 42 1516
 V02,V03,V04,V05
 V06
 3) 36 9818
 4) 48 9131
 5) 16 5552
 6) 36 9510
 7) 36 6309
 V01,V02,V03,V04
 43 7166
 V05,V06
 8) 36 6904
 9) 17 1508
 10) 17 1303
 V01
 42 1601
 V02,V03,V04,V05
 V06
 11) 17 1307
 V01,V02,V03
 42 2141
 V04,V05,V06

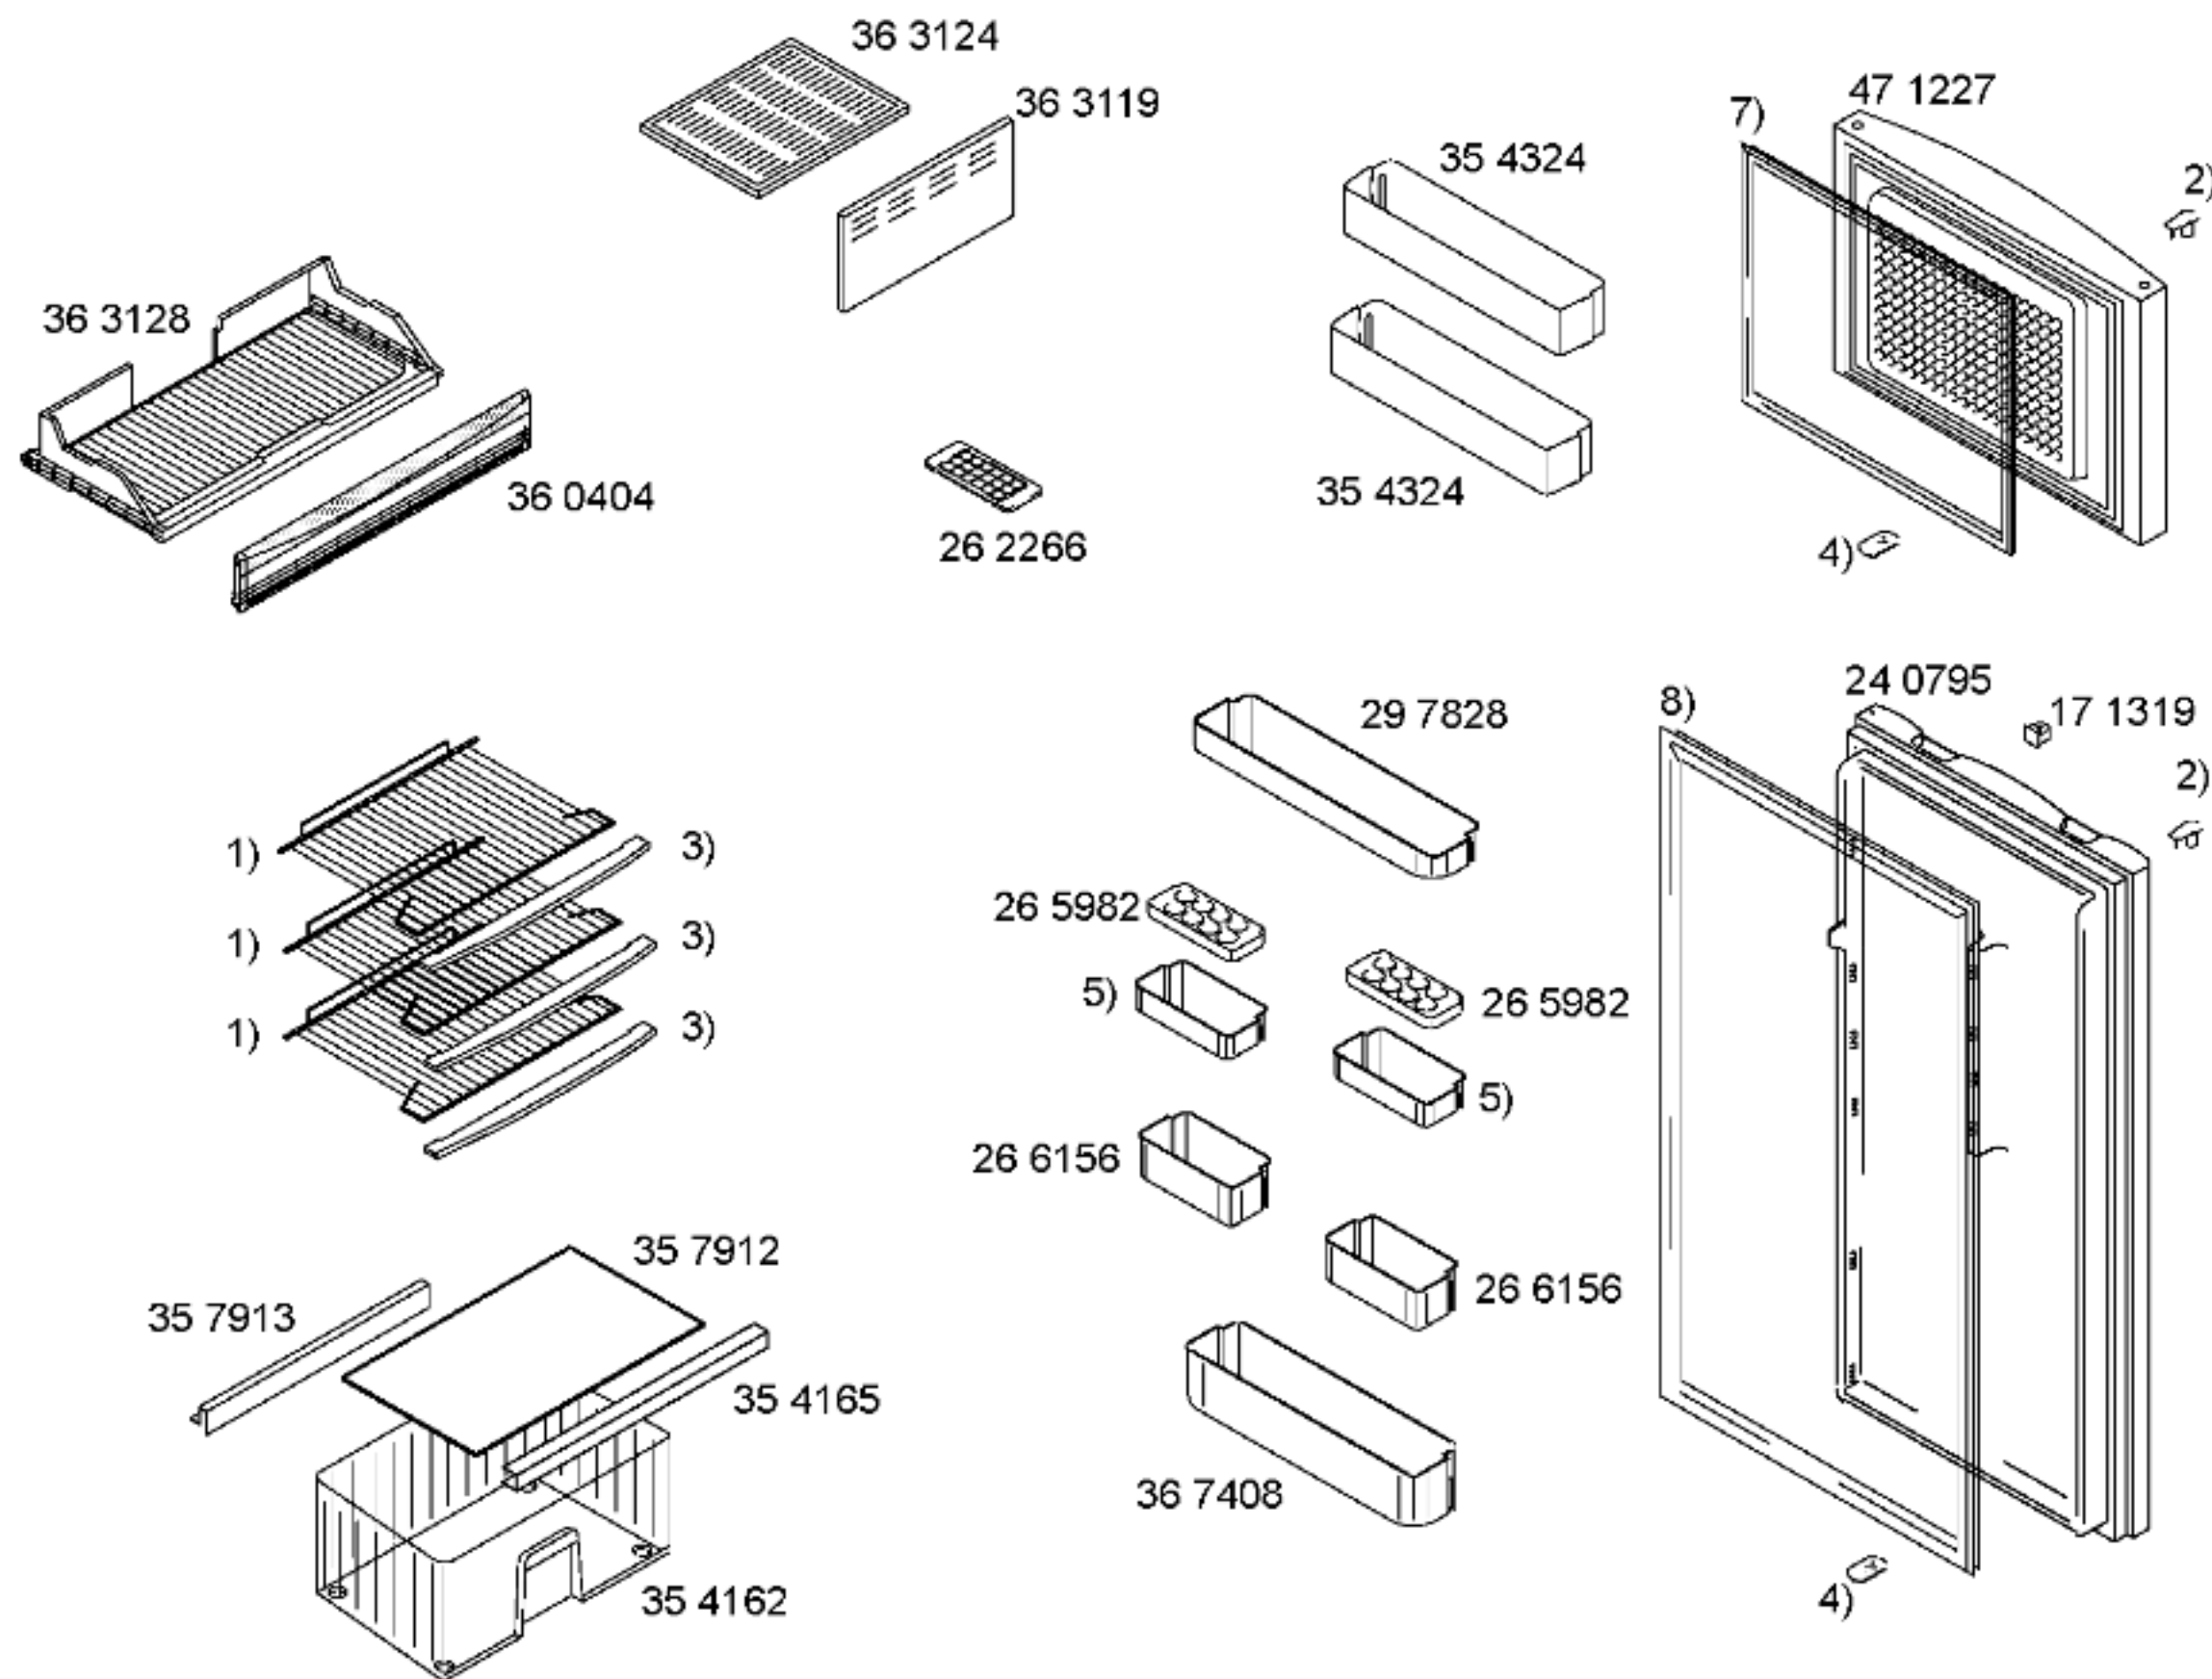

- 1) 35 4314
- 2) 17 1321
- 3) 43 5052
- 4) 41 6553
- 5) 49 0880
- 7) 21 8854
- V01,V02,V03,V04
- V05
- 47 2147
- V06
- 8) 23 8422
- V01,V02,V03,V04
- V05
- 24 1344
- V06

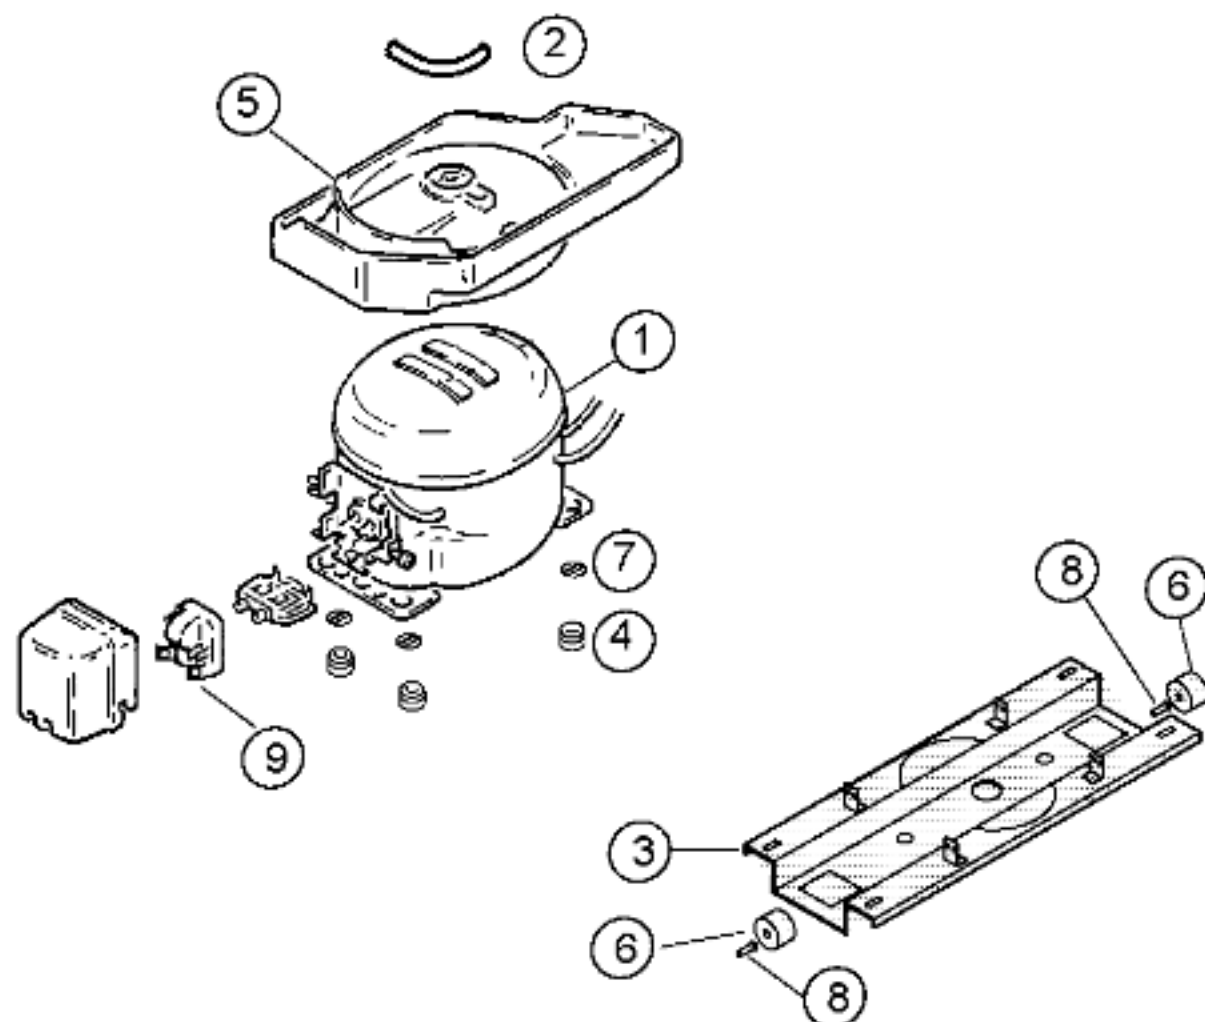

Pos.	Aspera		
	NBT 1116Y		
1	14 2193		
2	42 0376		
3	35 4158		
4	16 3427		
5	36 3166		
6	17 1318		
7	17 1519		
8	18 1014		
9	43 8467		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER		V01	V02 V03	
Verdichter/Compressor/Kompresör		Aspera		
Typ/Type/Tip		NBT1118Y		
Förderleistung/Delivery/Verim/h		2574		
Anlaufstrom/Starting current/Giris akimi		A		
Widerstand/Resistance/Rezistans Ha/		Ω	11,0	
Hi/aux.			16,4	
Temp.Reyler/Thermostat/Termostat		Elektronisch		
Typ/Type/Tip				
Reglerstellung/Position/Termostat pozisyonu				
Schaltwerte/Acma kapama degerleri		..ein/acma °C		
Valeurs de commutation/Termostat degeri		..aus"/kapama		
(..abtaven' od)		..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı		R600a	g	*
Anschlusswert/Comm. load/Giris gucu		W		
Heizung/Heater/Rezistans		Ablaufrinne	Klappe	
Widerstand/Resistance/Direnc		1,4	13,49	
Leistung/Power/Guc (Min Annehmbare Werte in 220V)		W	37,5/230	4/230
Ventilador/Blower/Vantilatör		Verdampfer		
Widerstand/Resistance/Rezistans		K Ω	0,41	
Magnetventil/Magnetic valve/Manyetik valjK				
Widerstand/Resistance/Rezistans		K Ω		
Spannung/Voltage/Gerilim		V		
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz