


**BOSCH**

BOSCH T 4652 -- 0 728 144 088-D1
-- 0 728 144 093-CH1,DK1,S1

WASCHGERÄTE
Trockner


Ident-Nummern-Konstante
3740

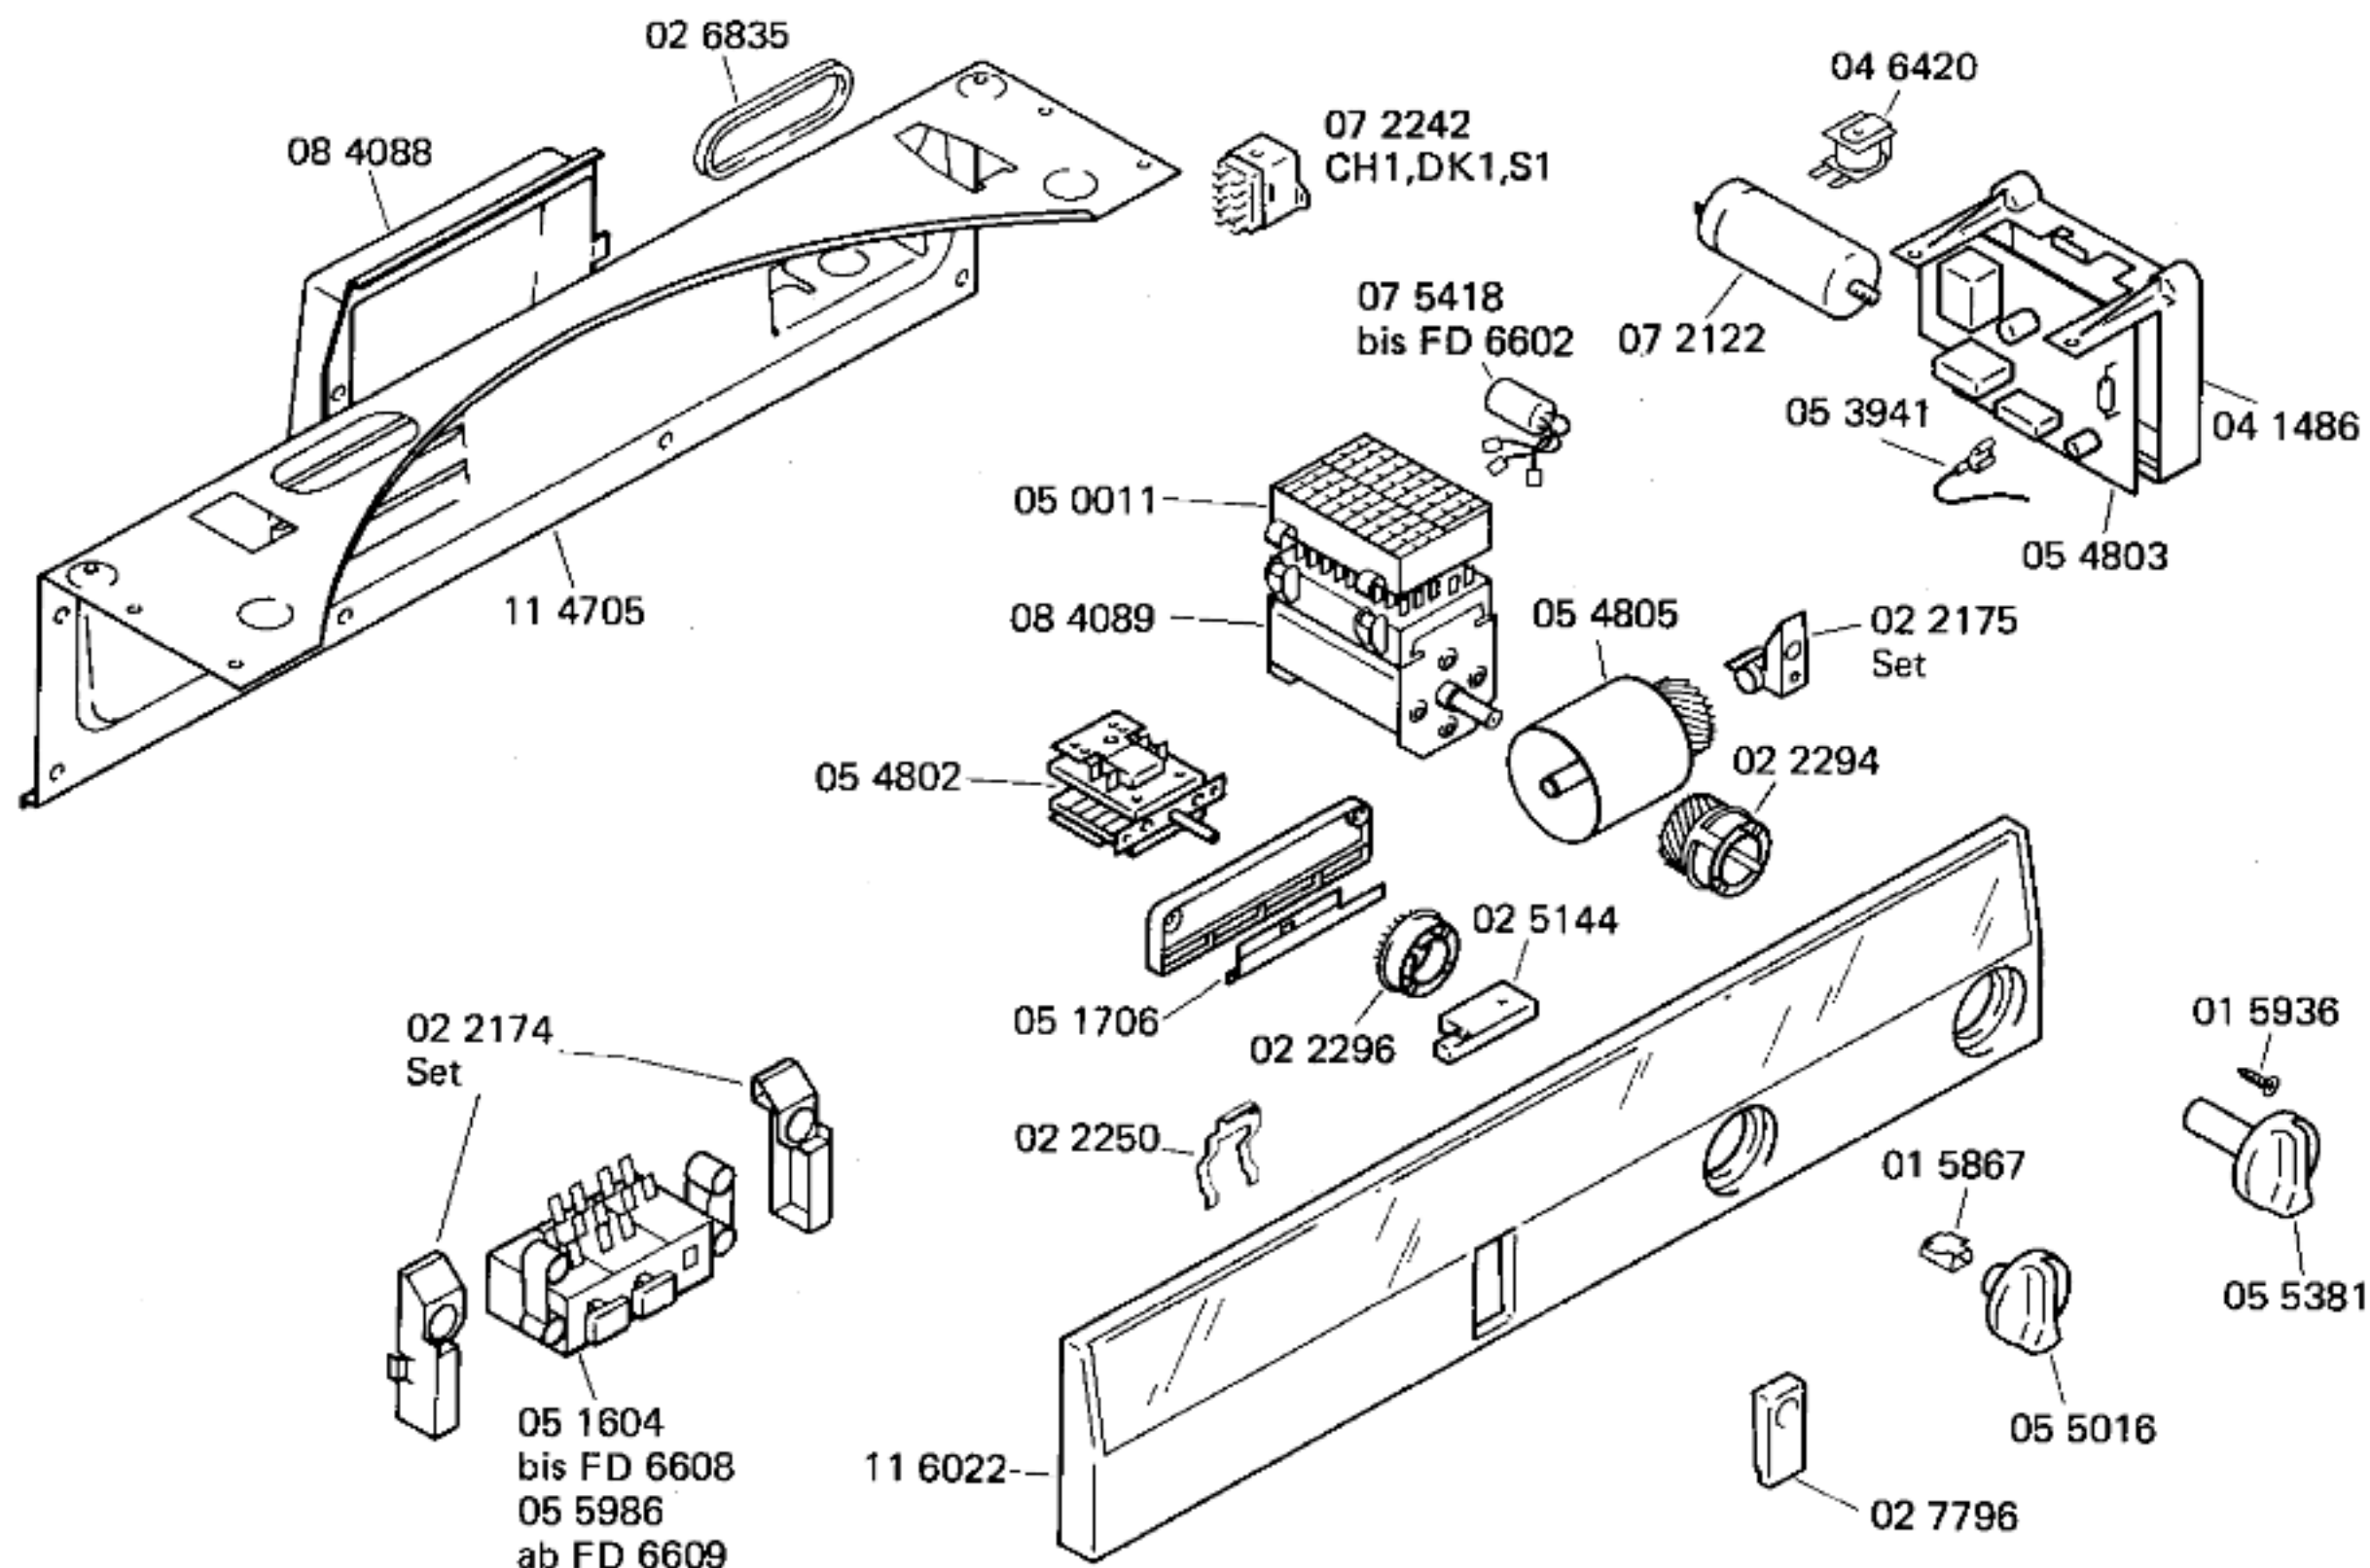

Gebrauchsanweisungen
51 1976
(D,GB,F,I,NL)
51 1981
(D,F,I,DK,S)
Aufstellanweisungen
51 1191
(D,GB,F,I,NL,E)
51 1366
(D,F,I,DK,S)

Ident-Nummern-Konstante
3740

- 1) 02 0159
2) 01 5938

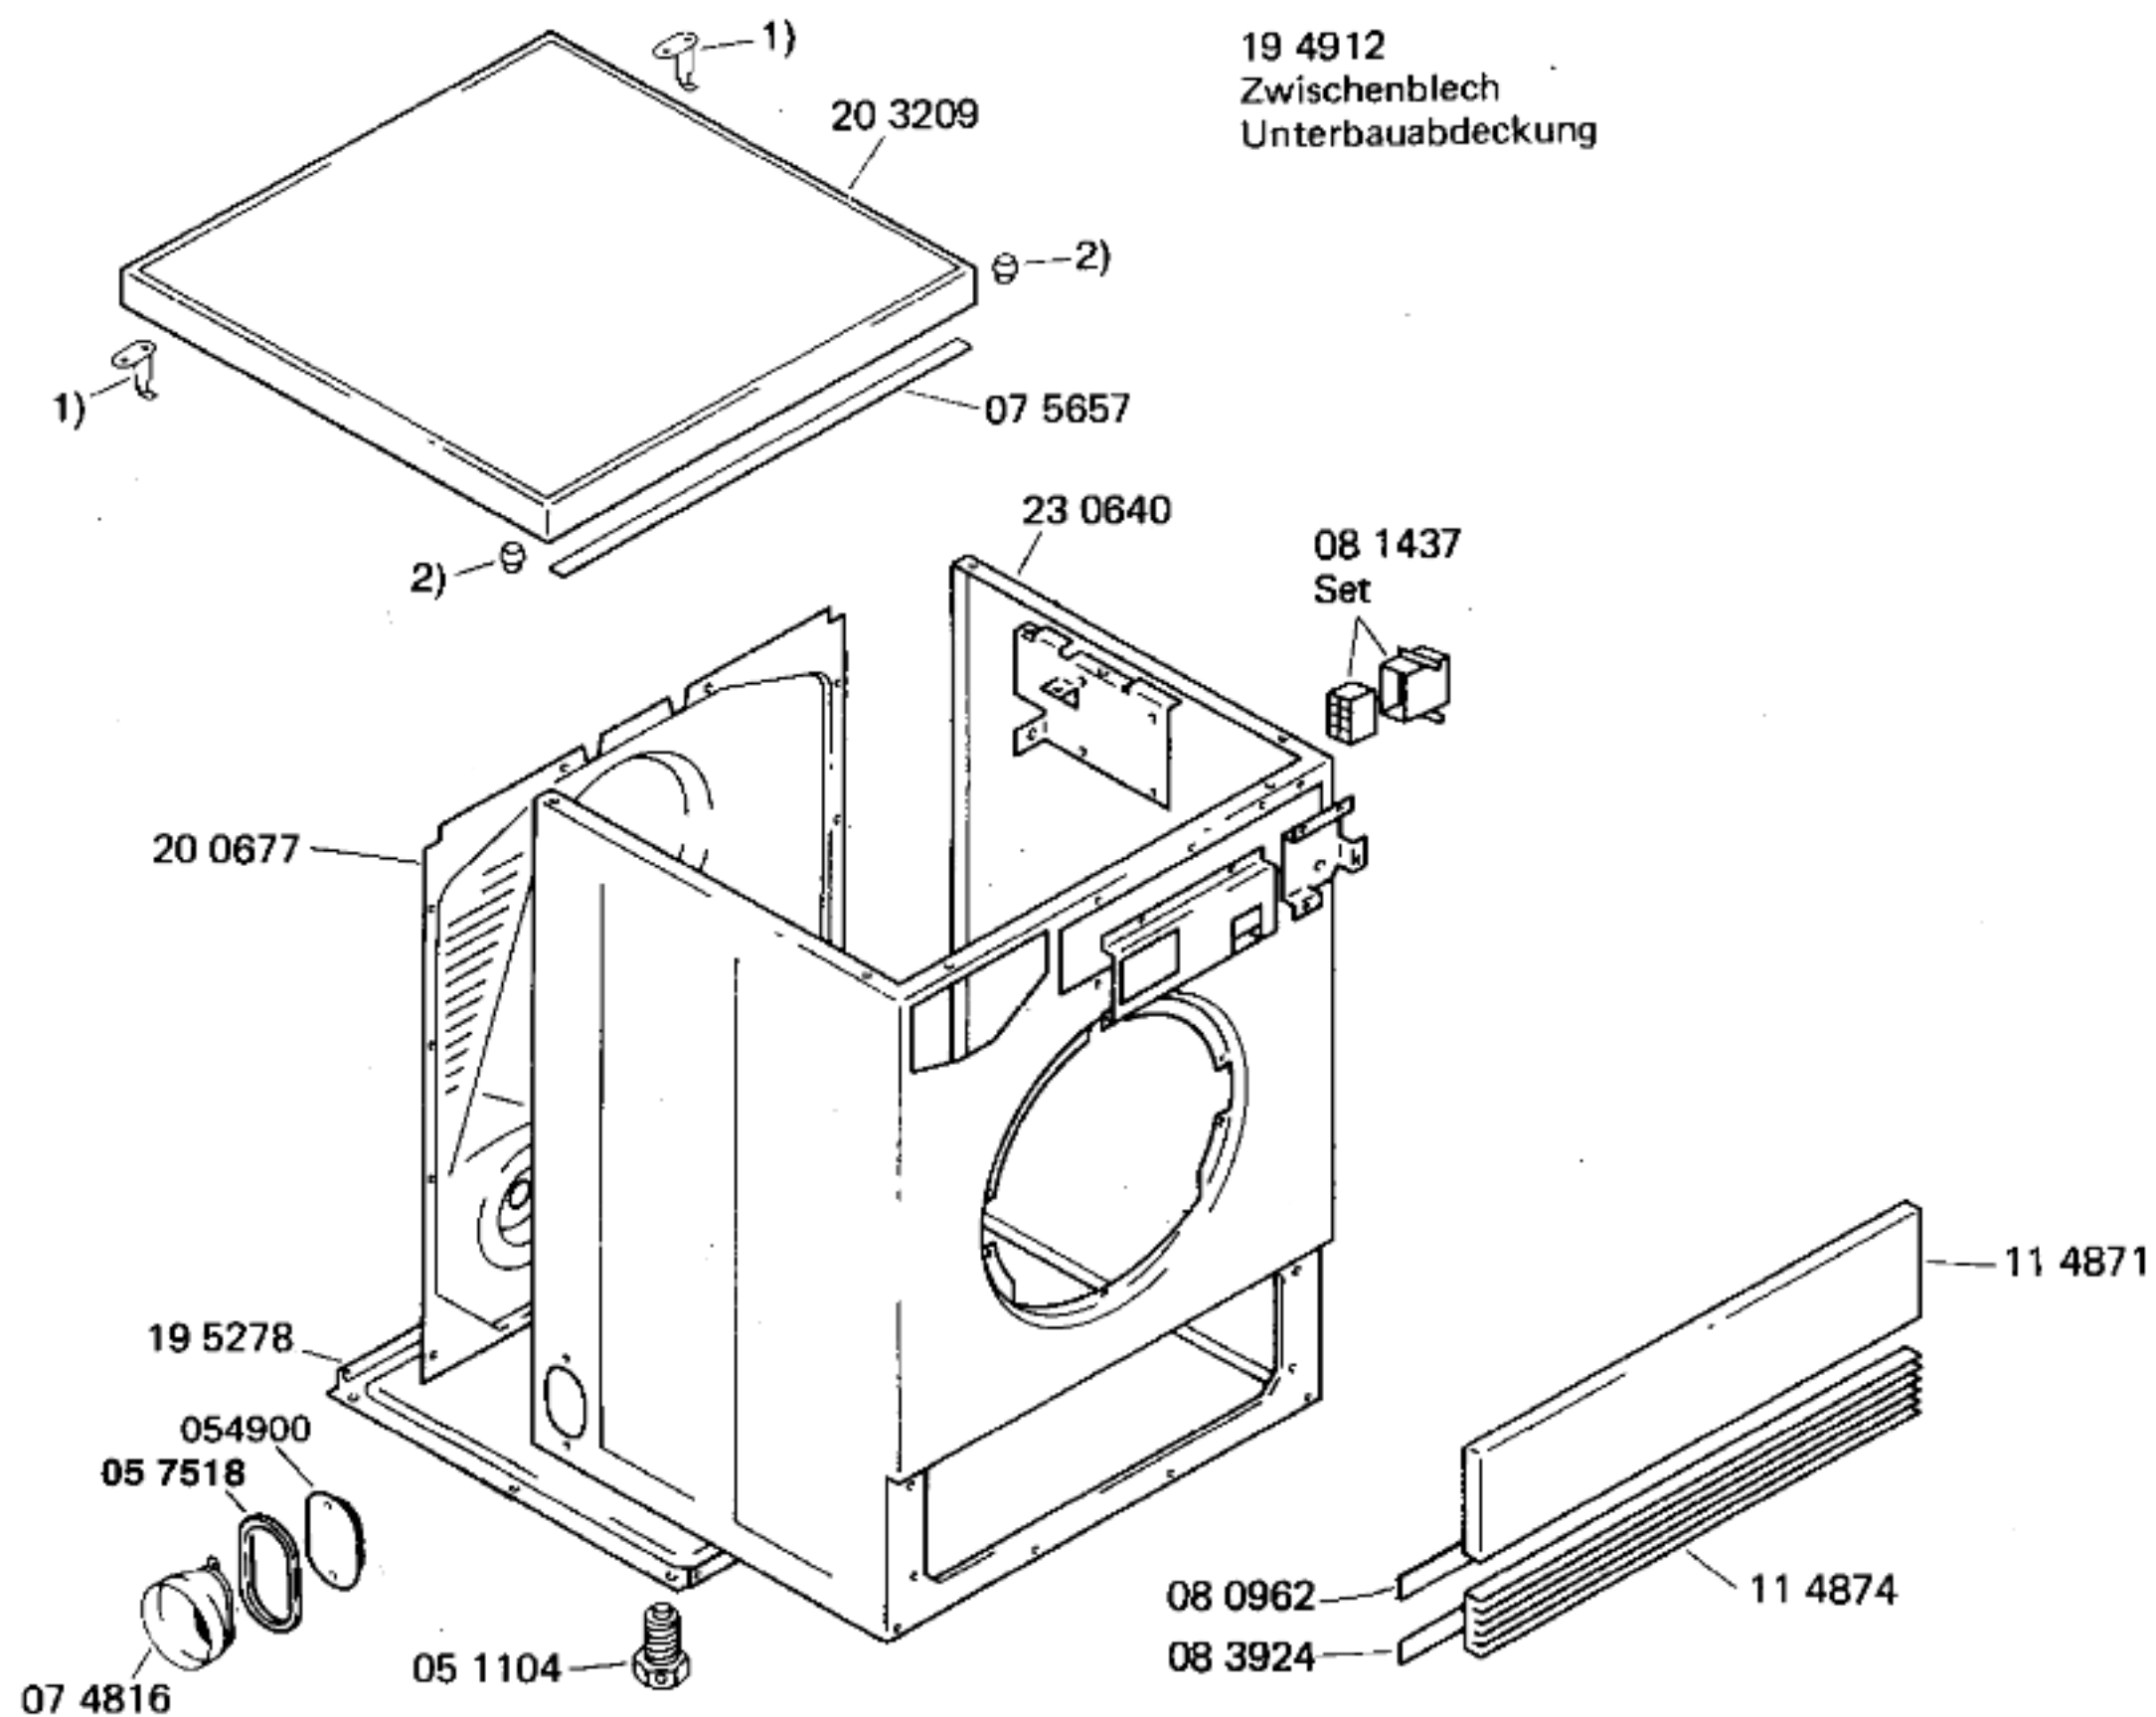



**BOSCH**

BOSCH T 4652 — 0 728 144 088—D1
— 0 728 144 093—CH1,DK1,S1

WASCHGERÄTE
Trockner

Ident-Nummern-Konstante
3740

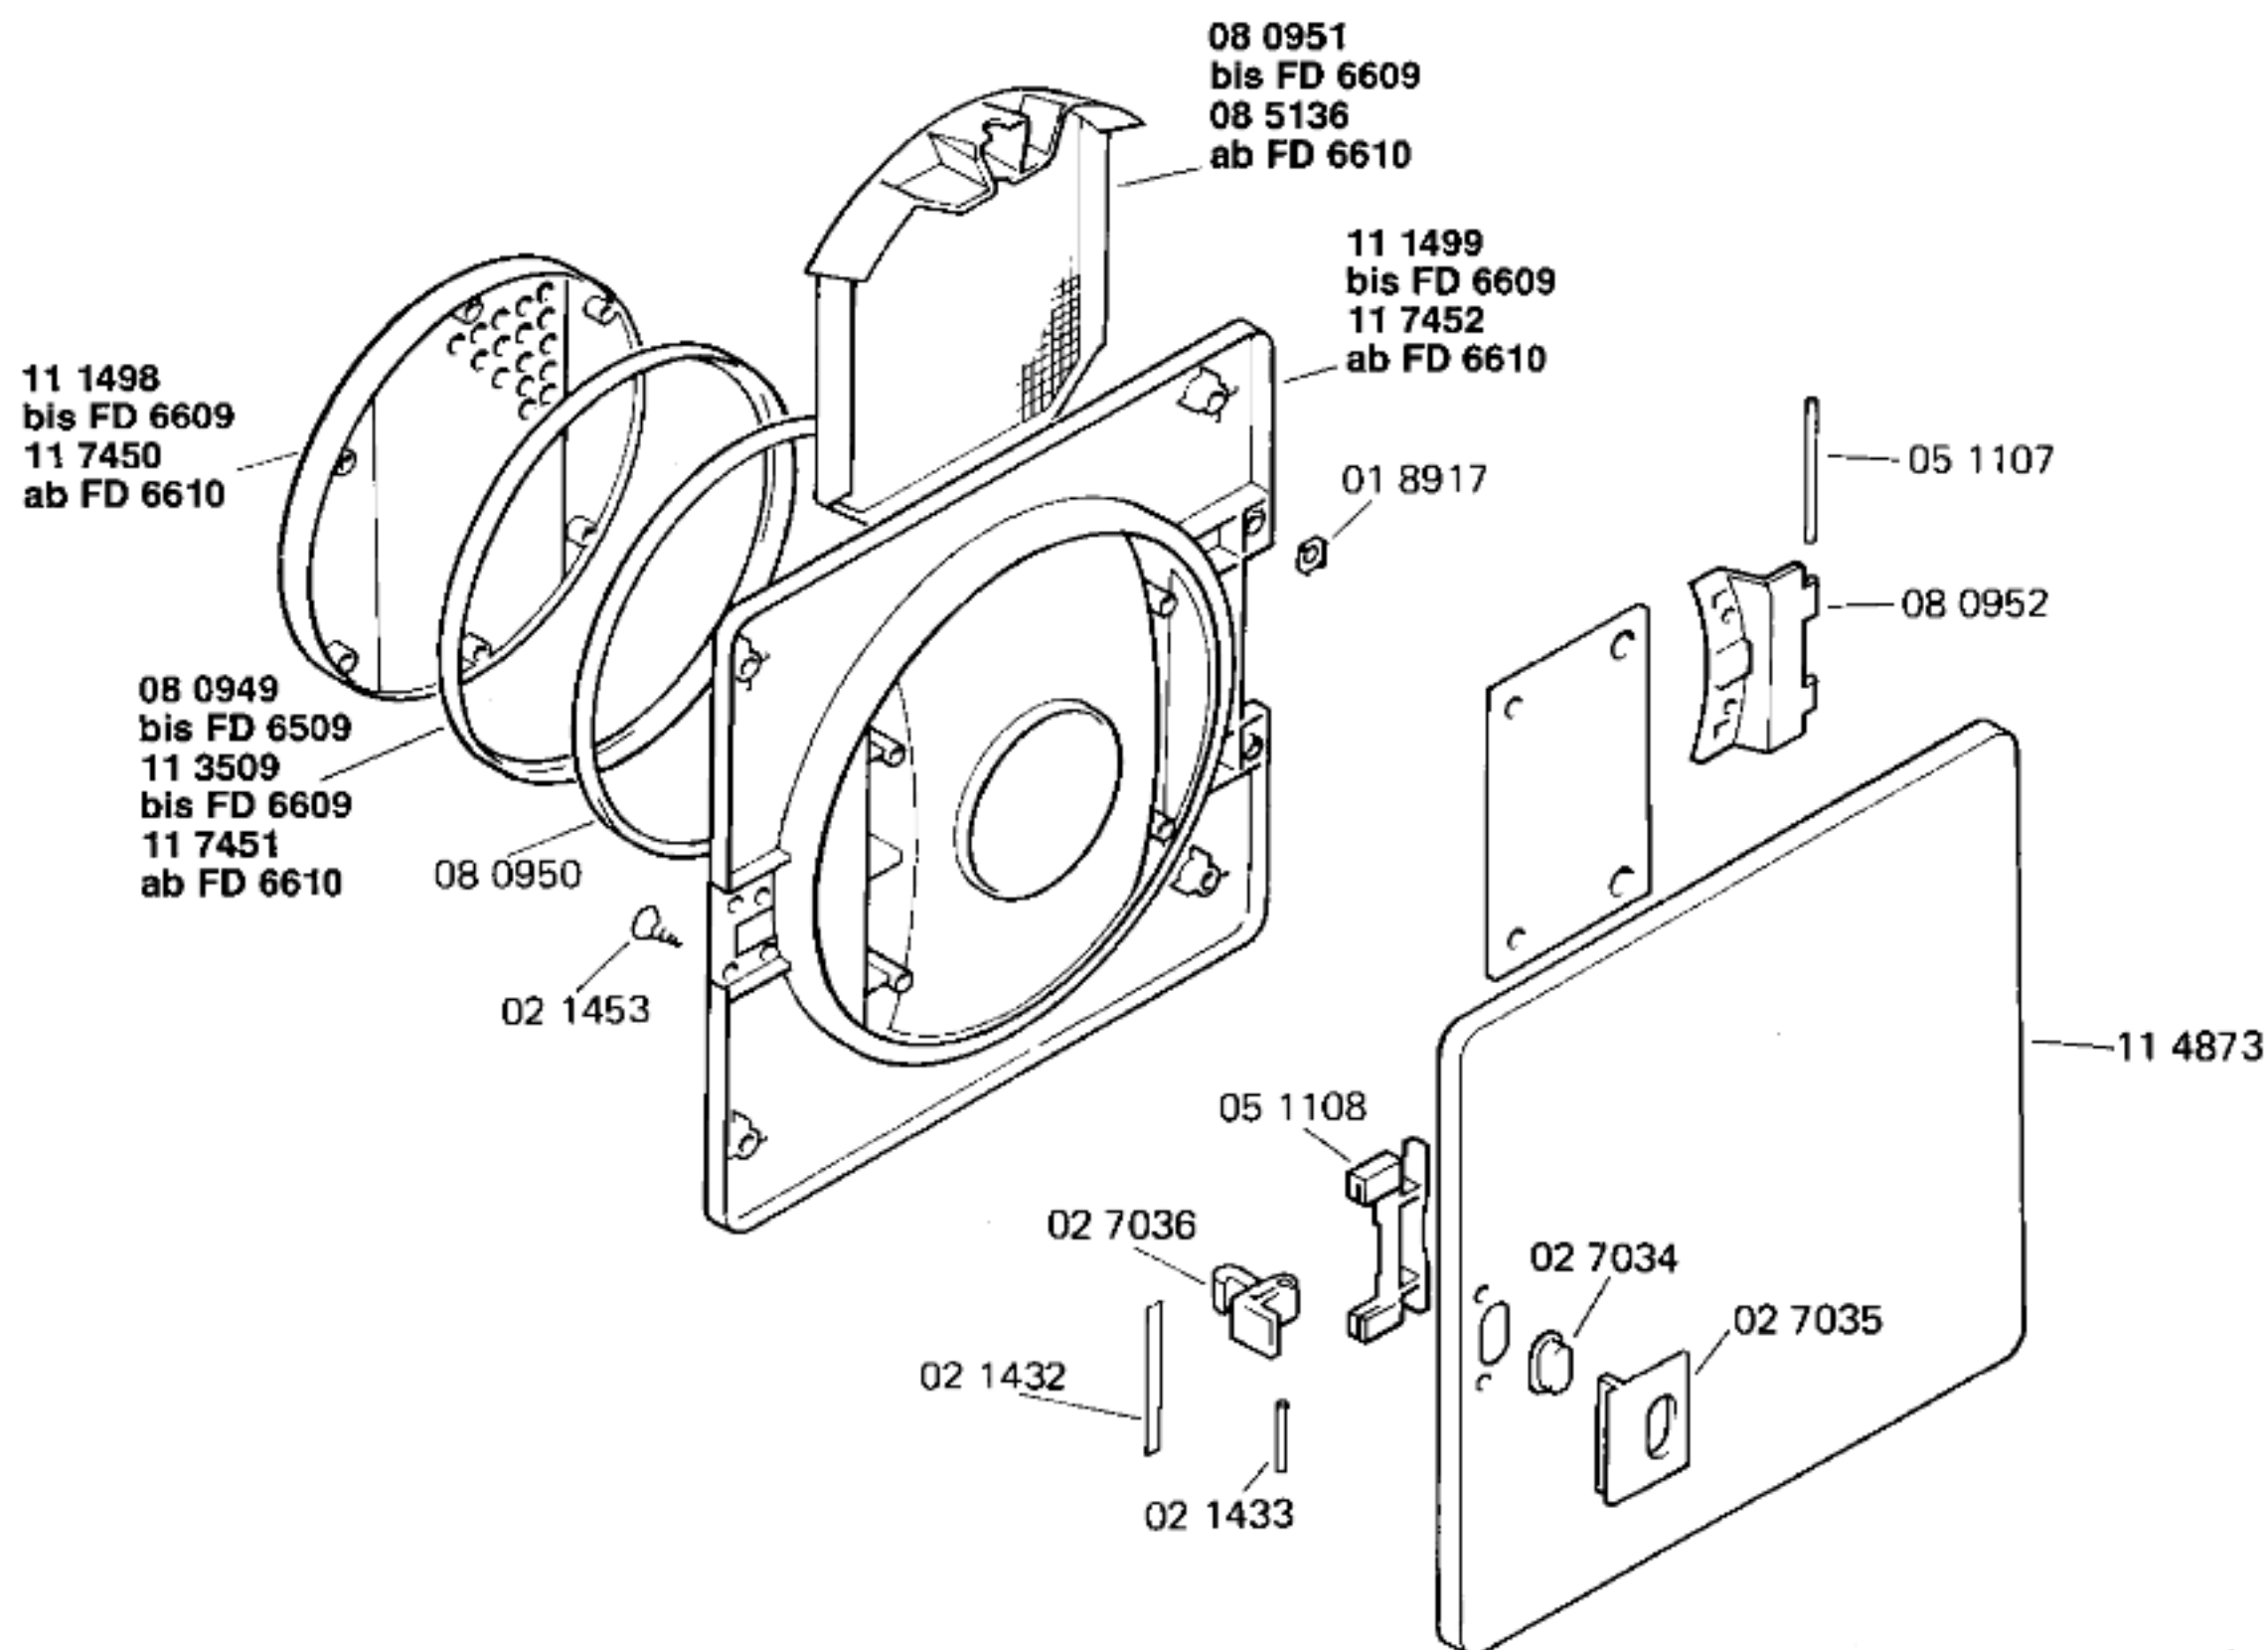

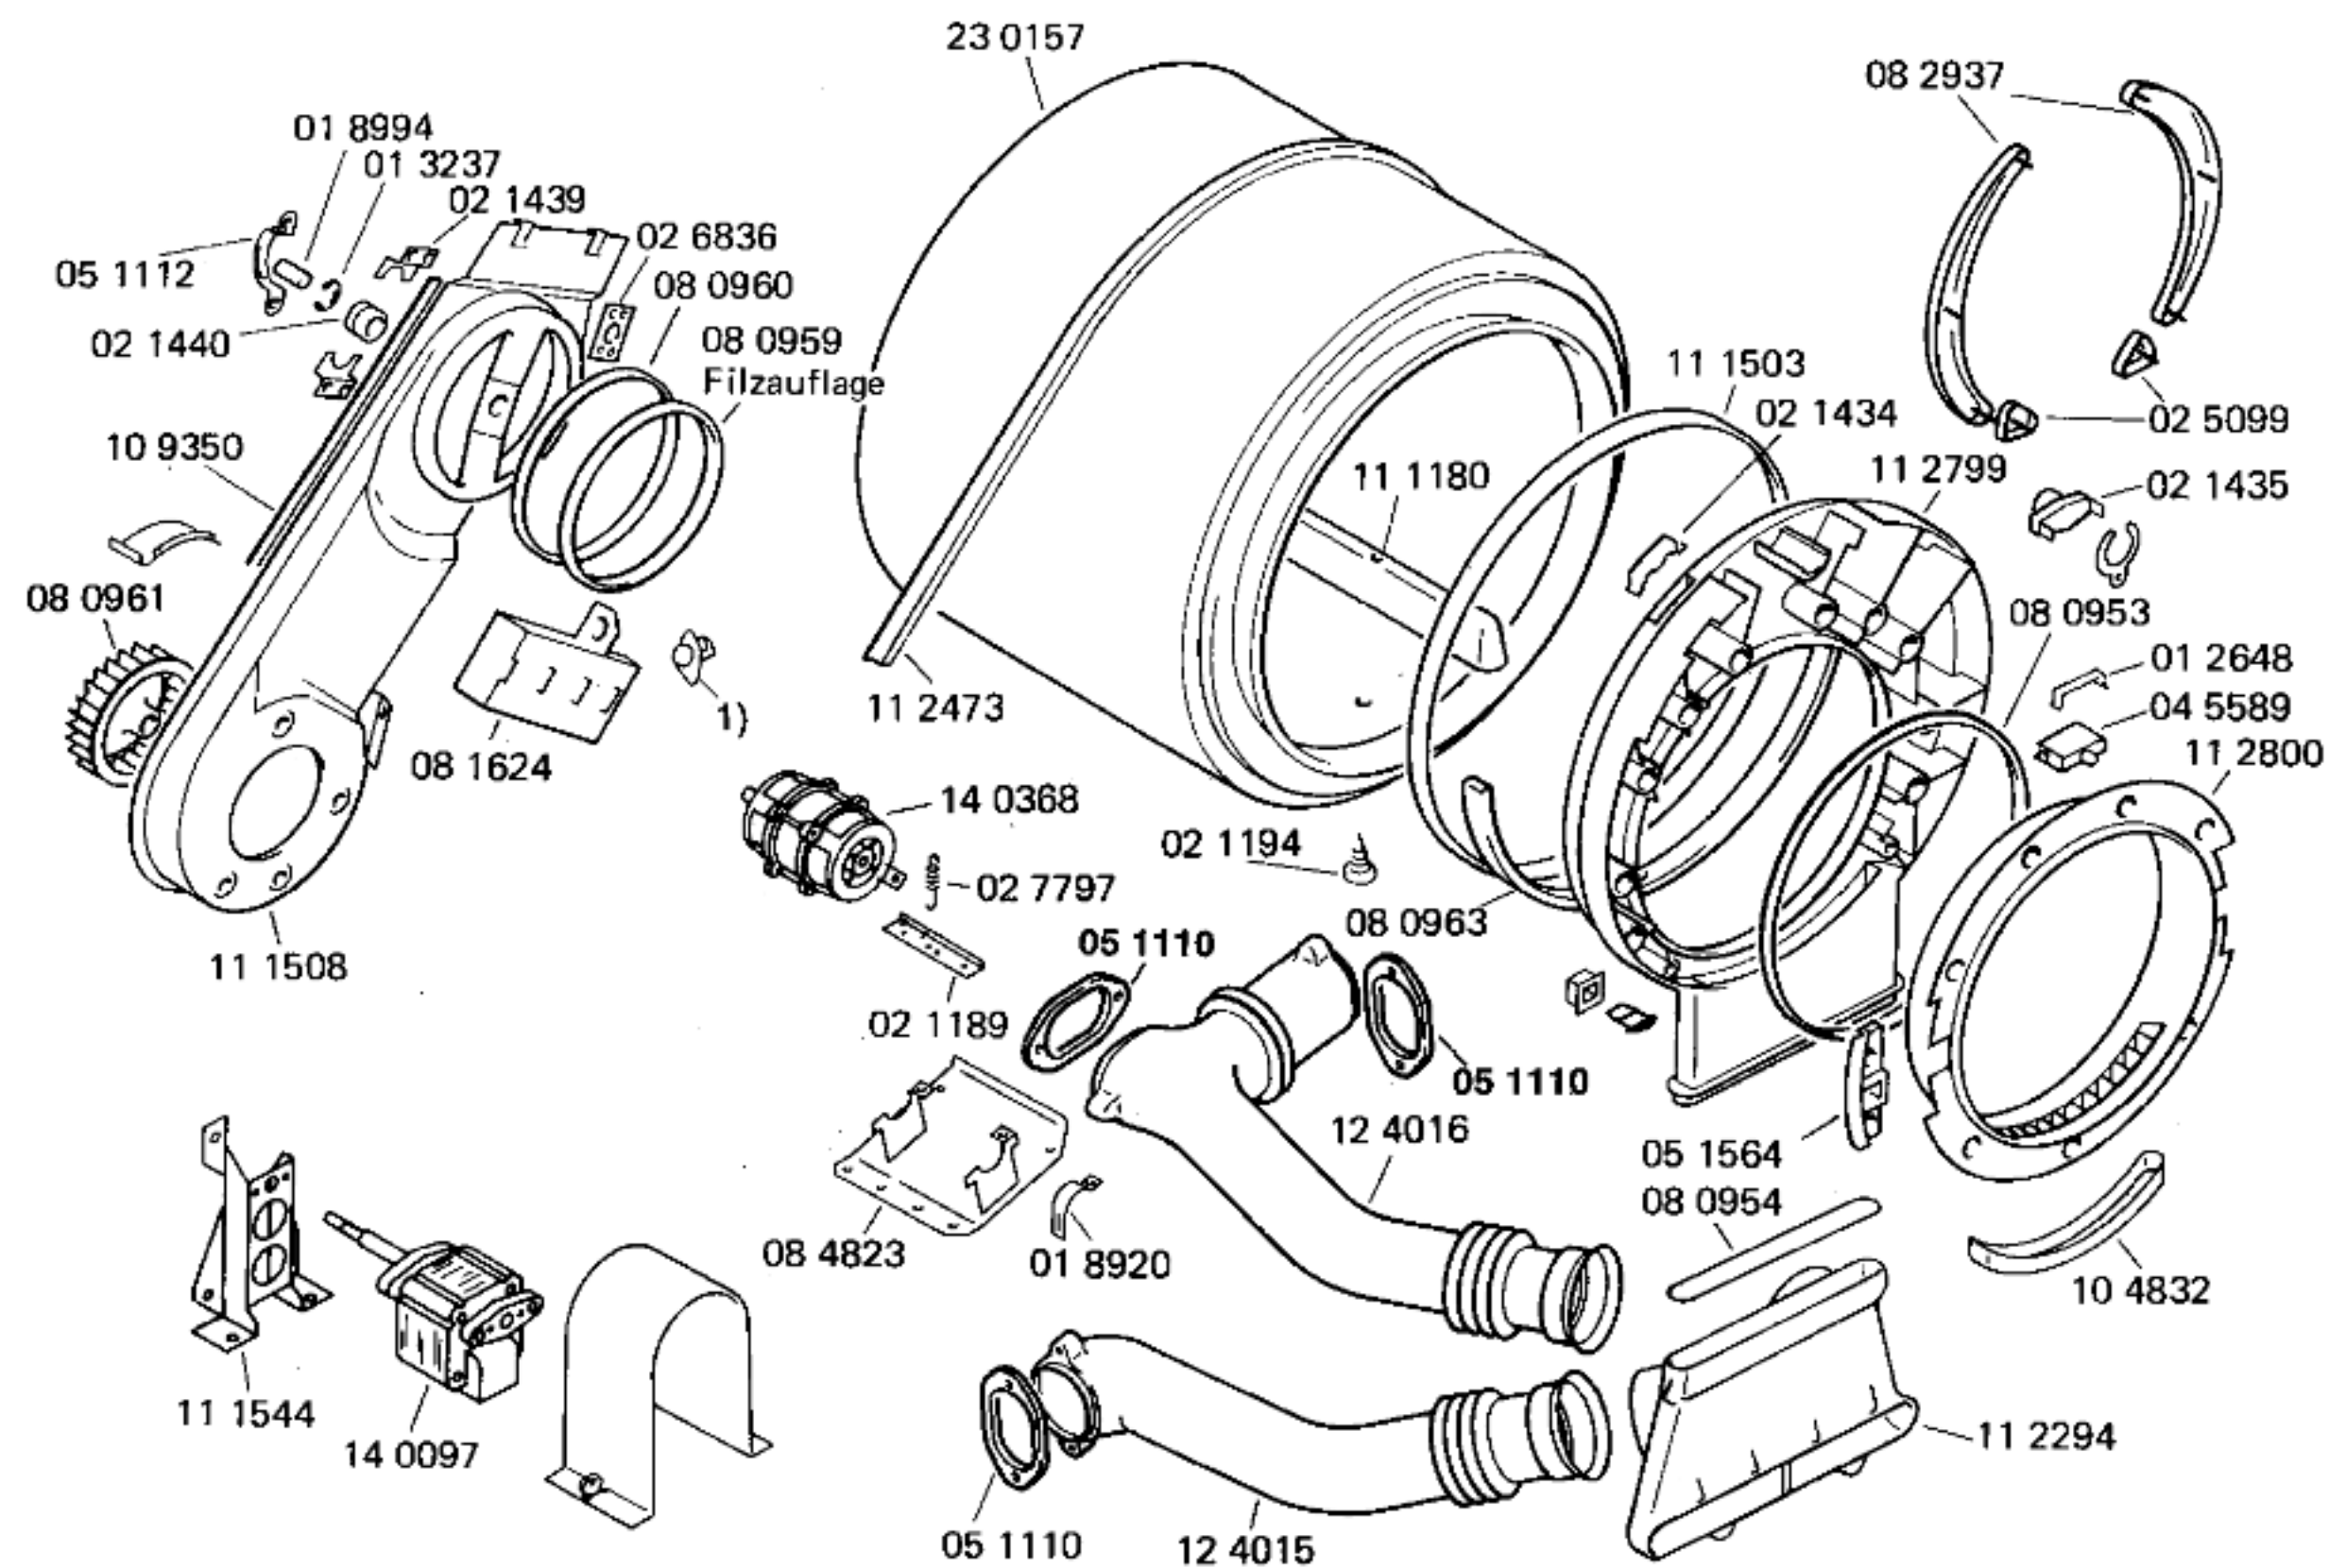

1) 02.7014
D1
02.5756
CH1,DK1,S1