


**BOSCH**

BOSCH T 620 – 0 728 144 054–D1
 – 0 728 144 067–GB1
 – 0 728 144 068–N1, SF1
 – 0 728 144 069–CH1, DK1, S1

WASCHGERÄTE
 Trockner

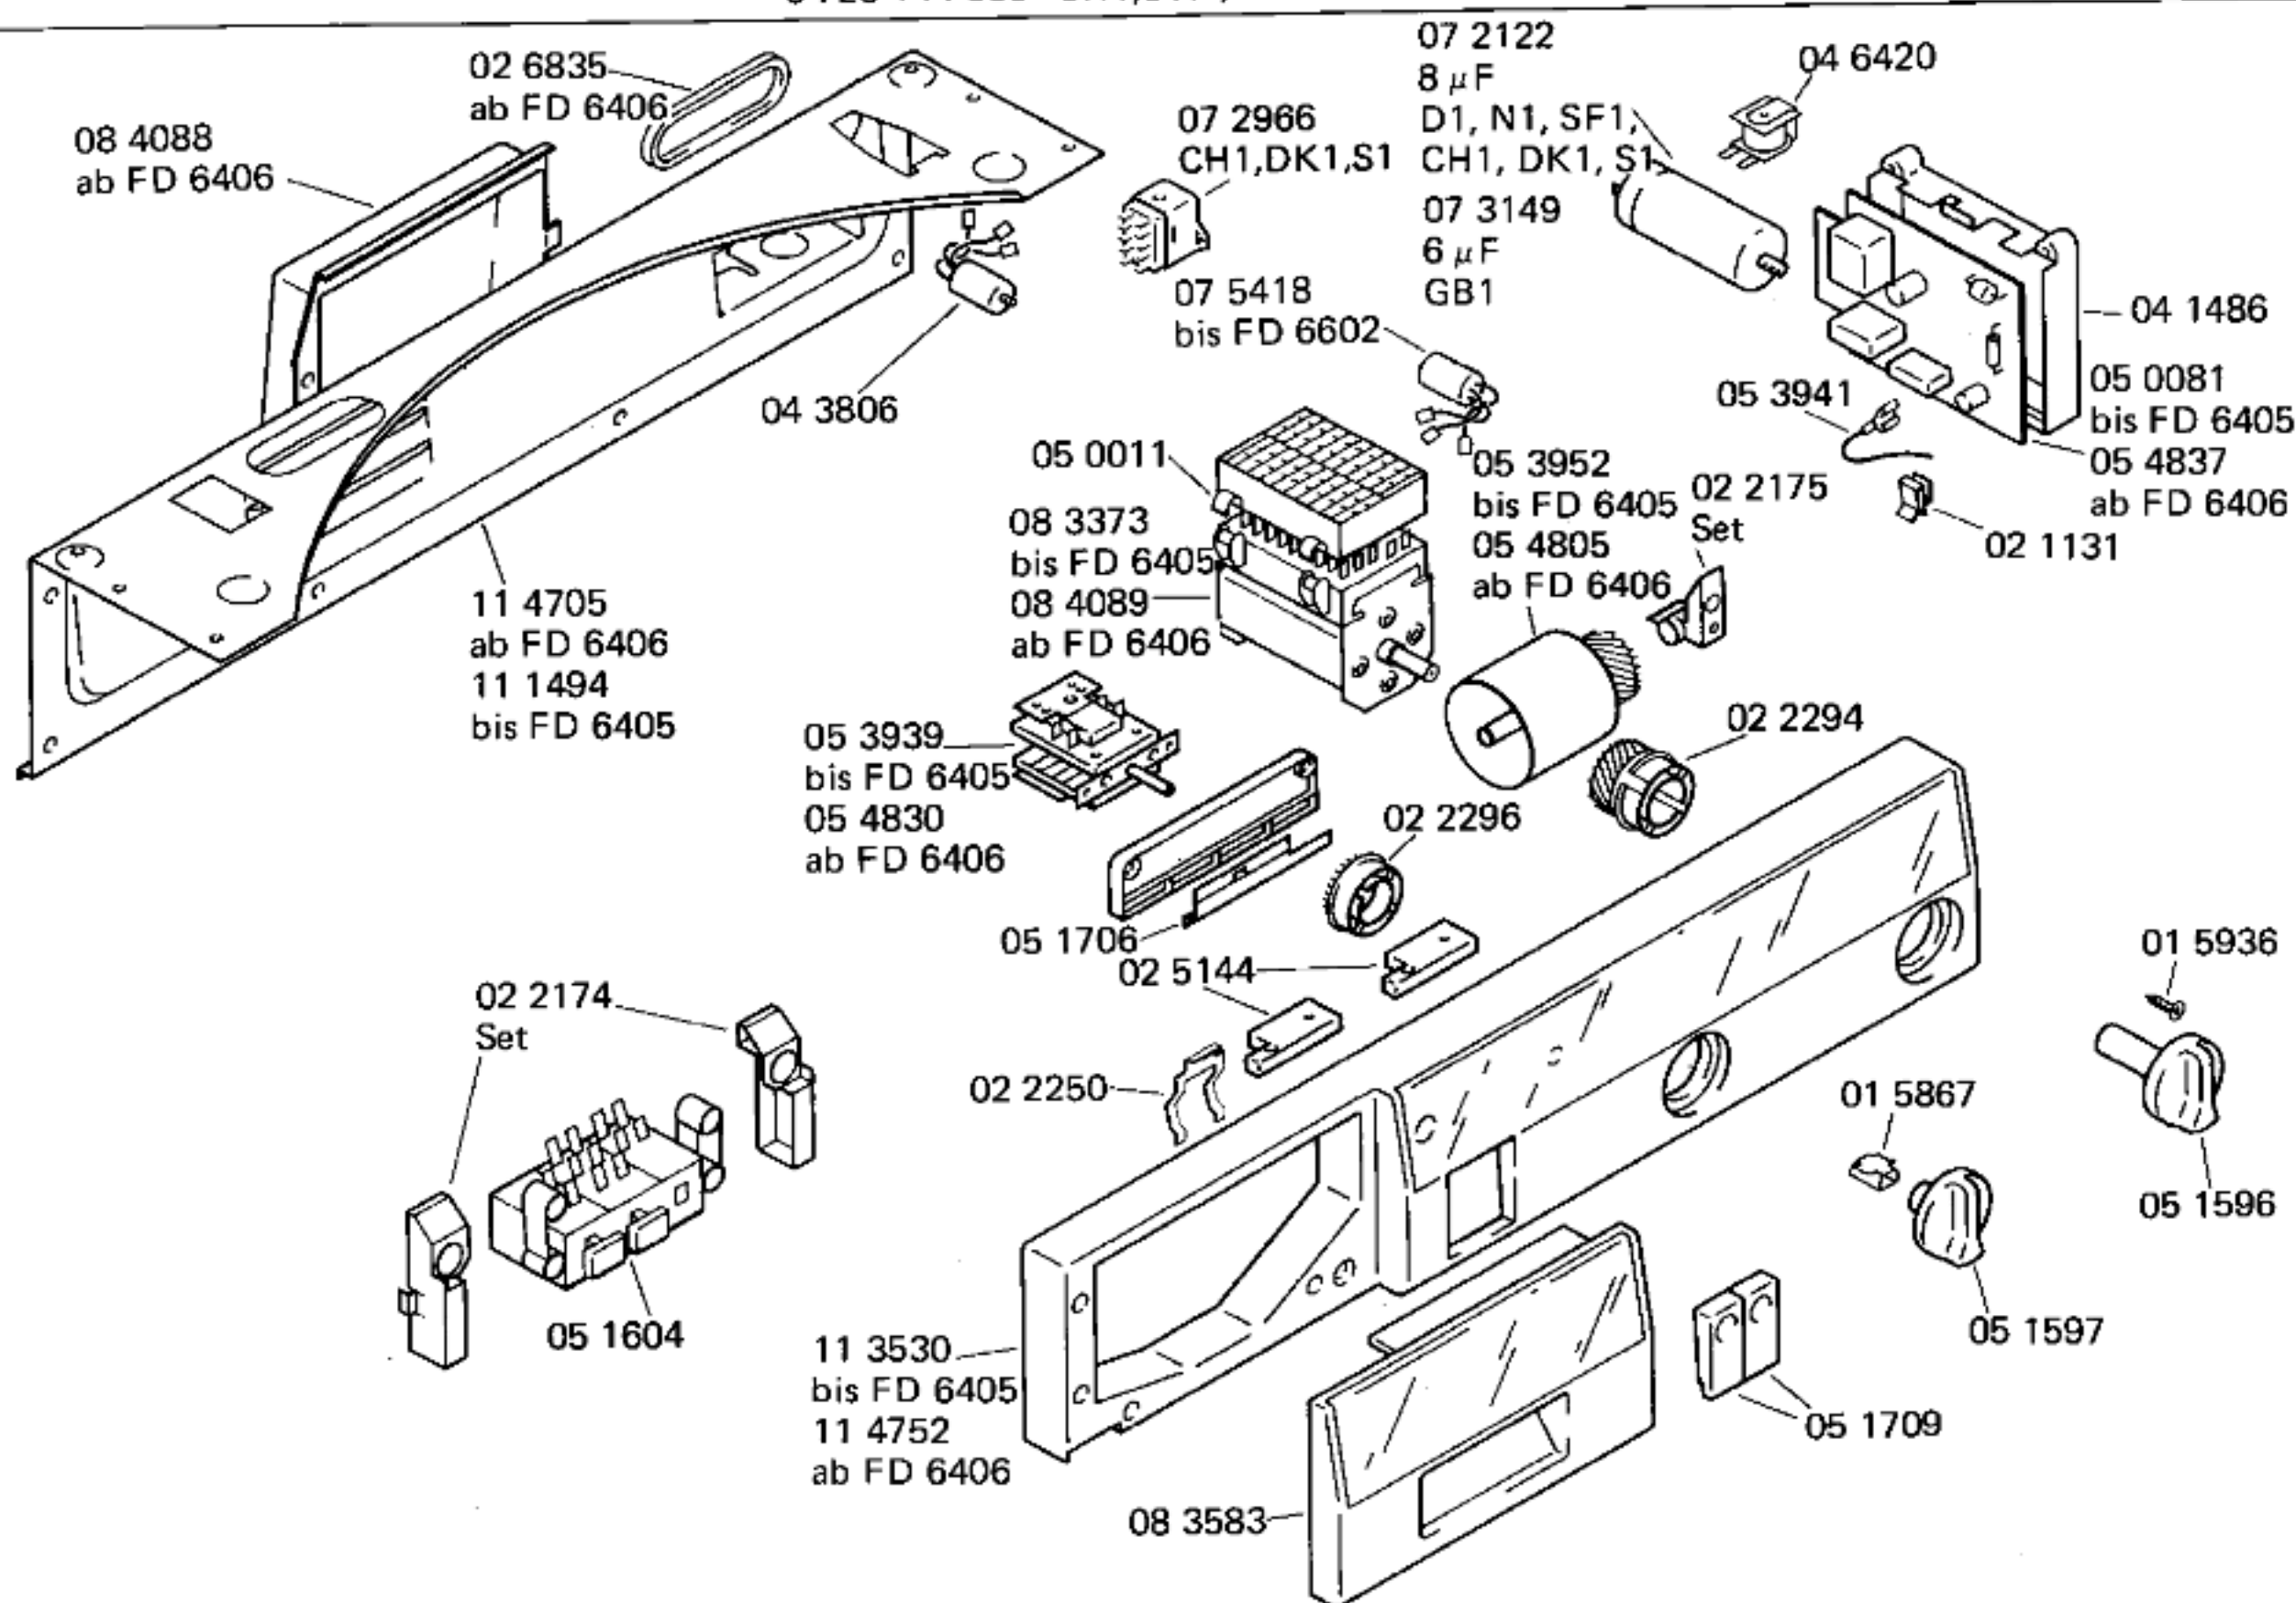

Ident-Nummern-Konstante
 3740

Aufstellanweisungen

51 1537
 (D, GB, F, I, NL, E)
 51 1972
 (SF, N)
 bis FD 6509
 51 1968
 (D, GB, F, I, NL, E)
 51 1752
 (SF, N)
 51 2531
 (D, F, I, DK, S)
 ab FD 6510
 SF, N
 ab FD 6406

Gebrauchsanweisungen


51 1538
 D, GB, F, I, NL
 51 1786
 D, F, I, DK, S
 51 1787
 SF, N
 bis FD 6405
 51 2640
 (D, GB, F, NL, I)
 51 2532
 (D, F, I, DK, S)
 51 1993
 (SF, N)
 ab FD 6406

**BOSCH**


BOSCH T 620 — 0 728 144 054—D1
 — 0 728 144 067—GB1
 — 0 728 144 068—N1, SF1
 — 0 728 144 069—CH1, DK1, S1

WASCHGERÄTE
 Trockner

Ident-Nummern-Konstante
 3740

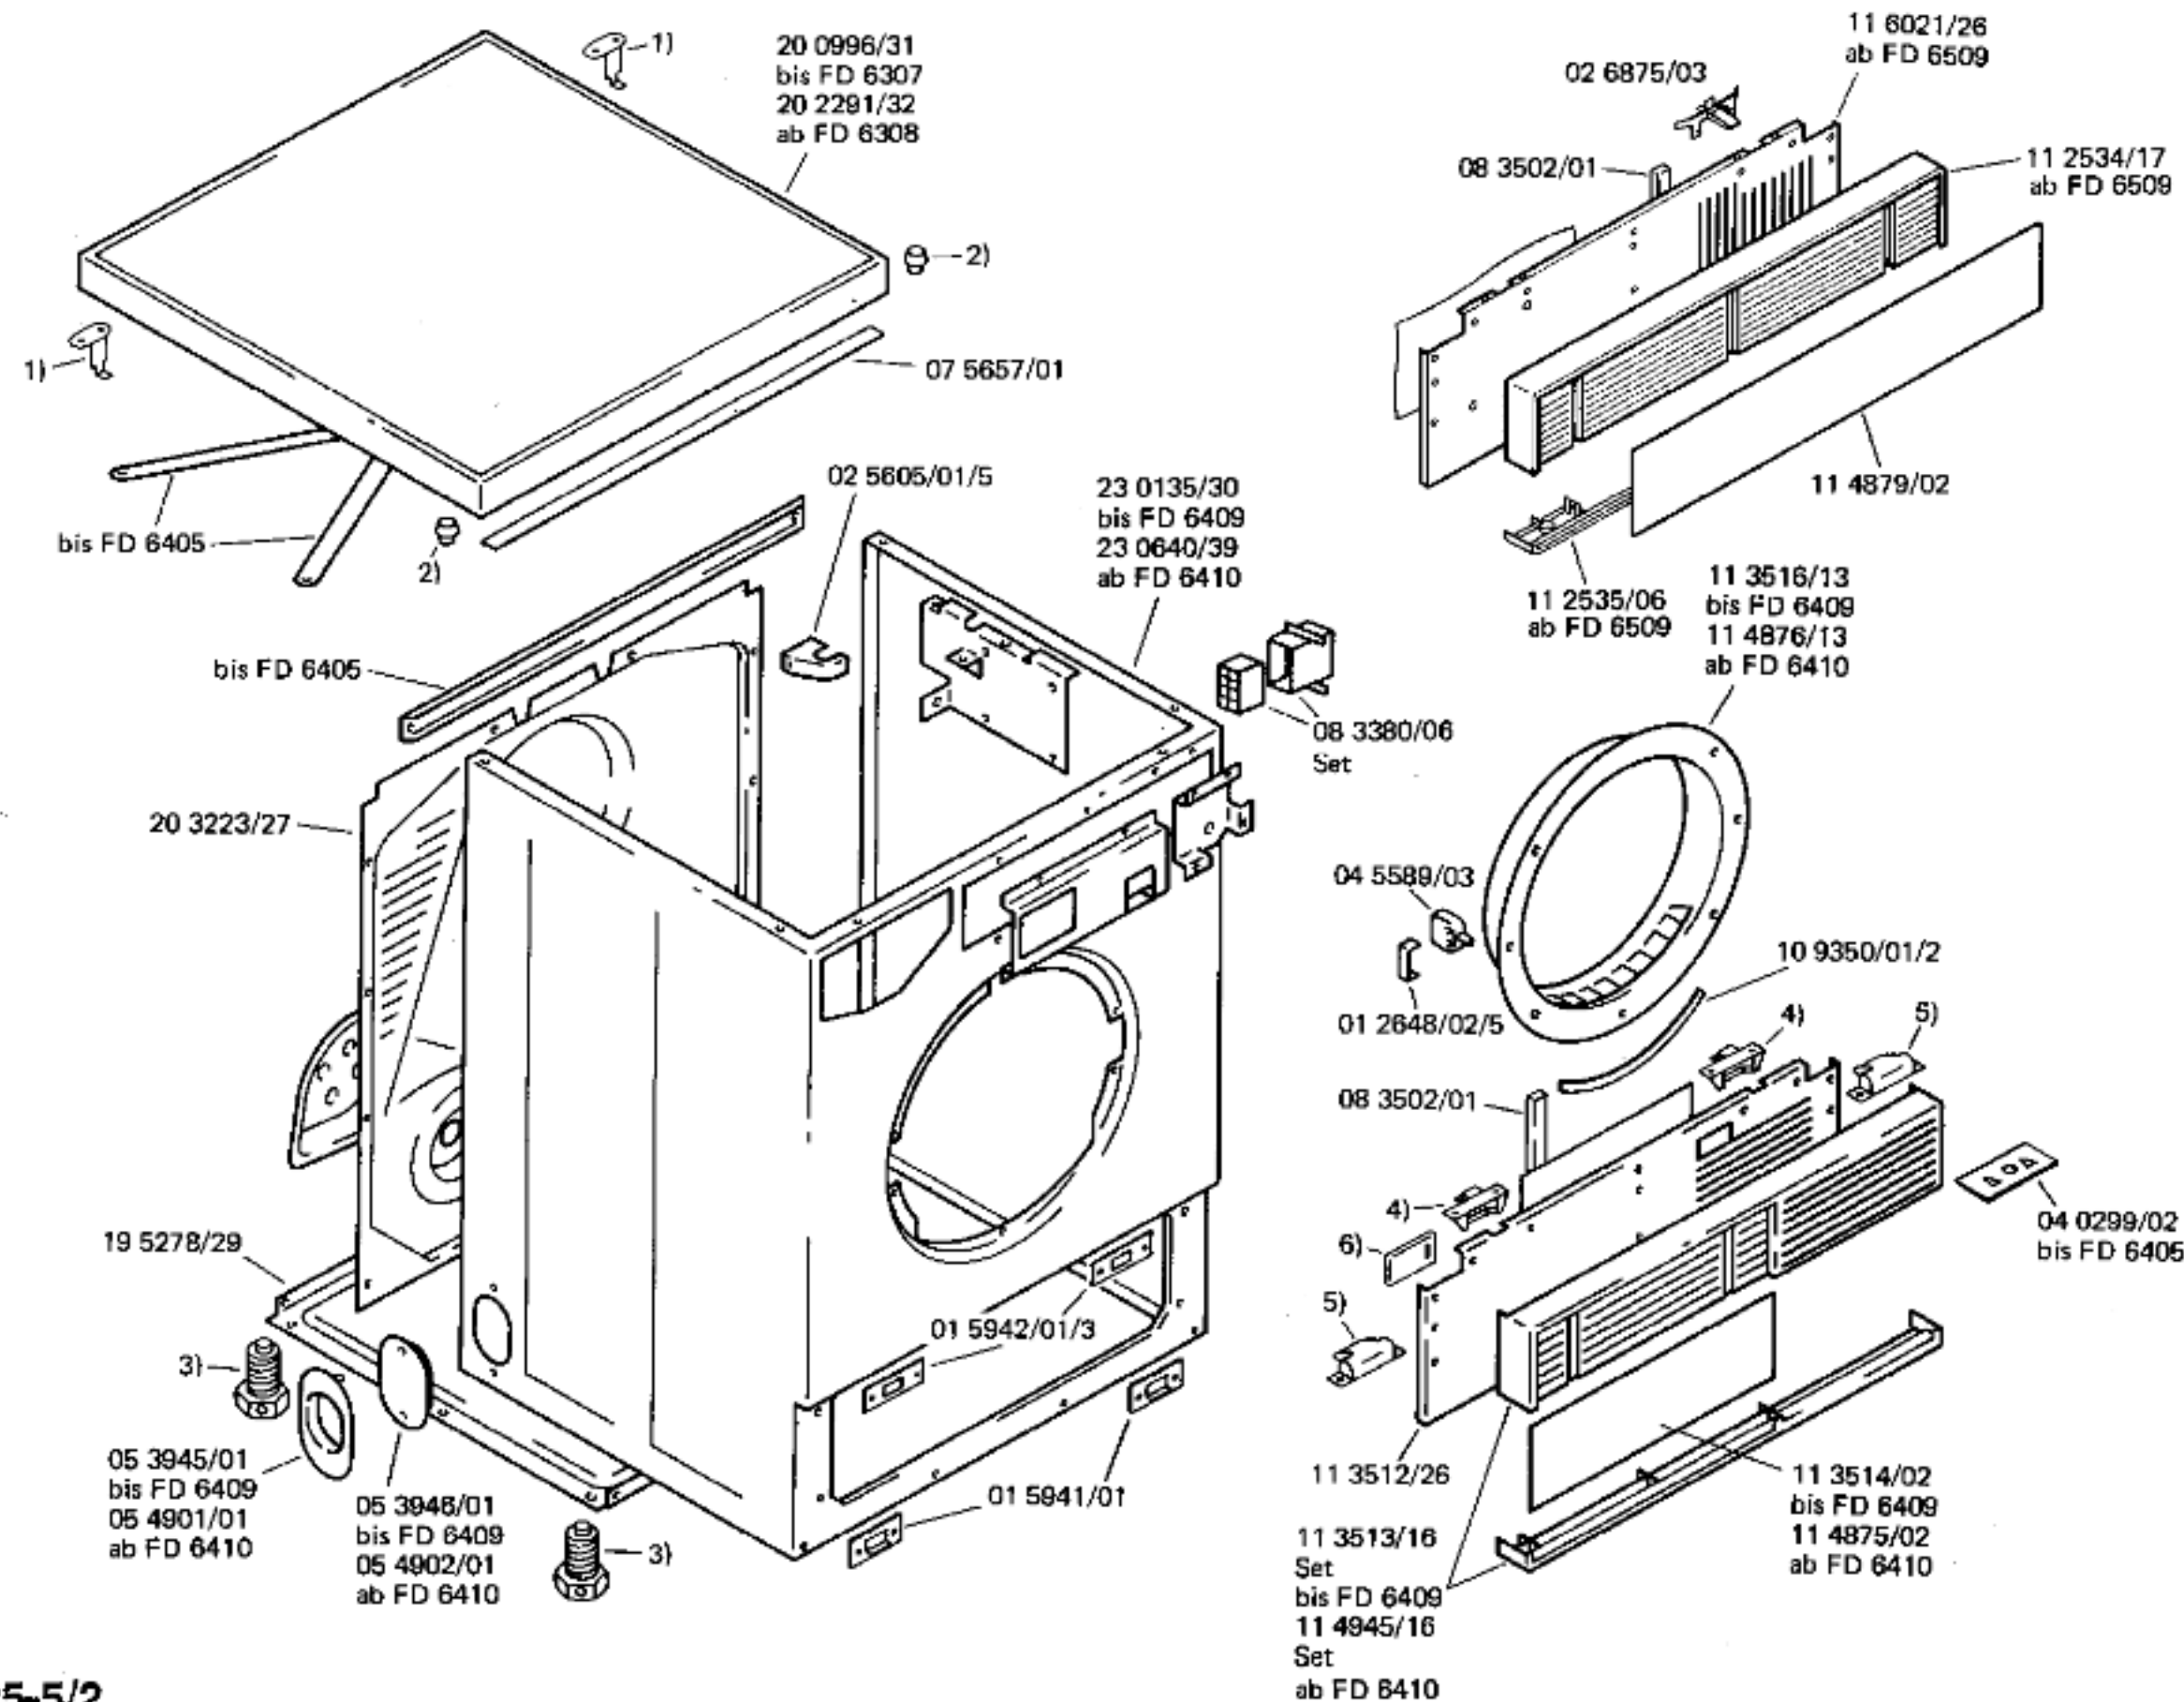

- 1) 02 0159/01/6
- 2) 01 5938/01/5
- 3) 05 1104/01
- 4) 01 5940/02
 bis FD 6405
 02 6875/03
 ab FD 6406
- 5) 01 5939/02
- 6) 02 6876/01

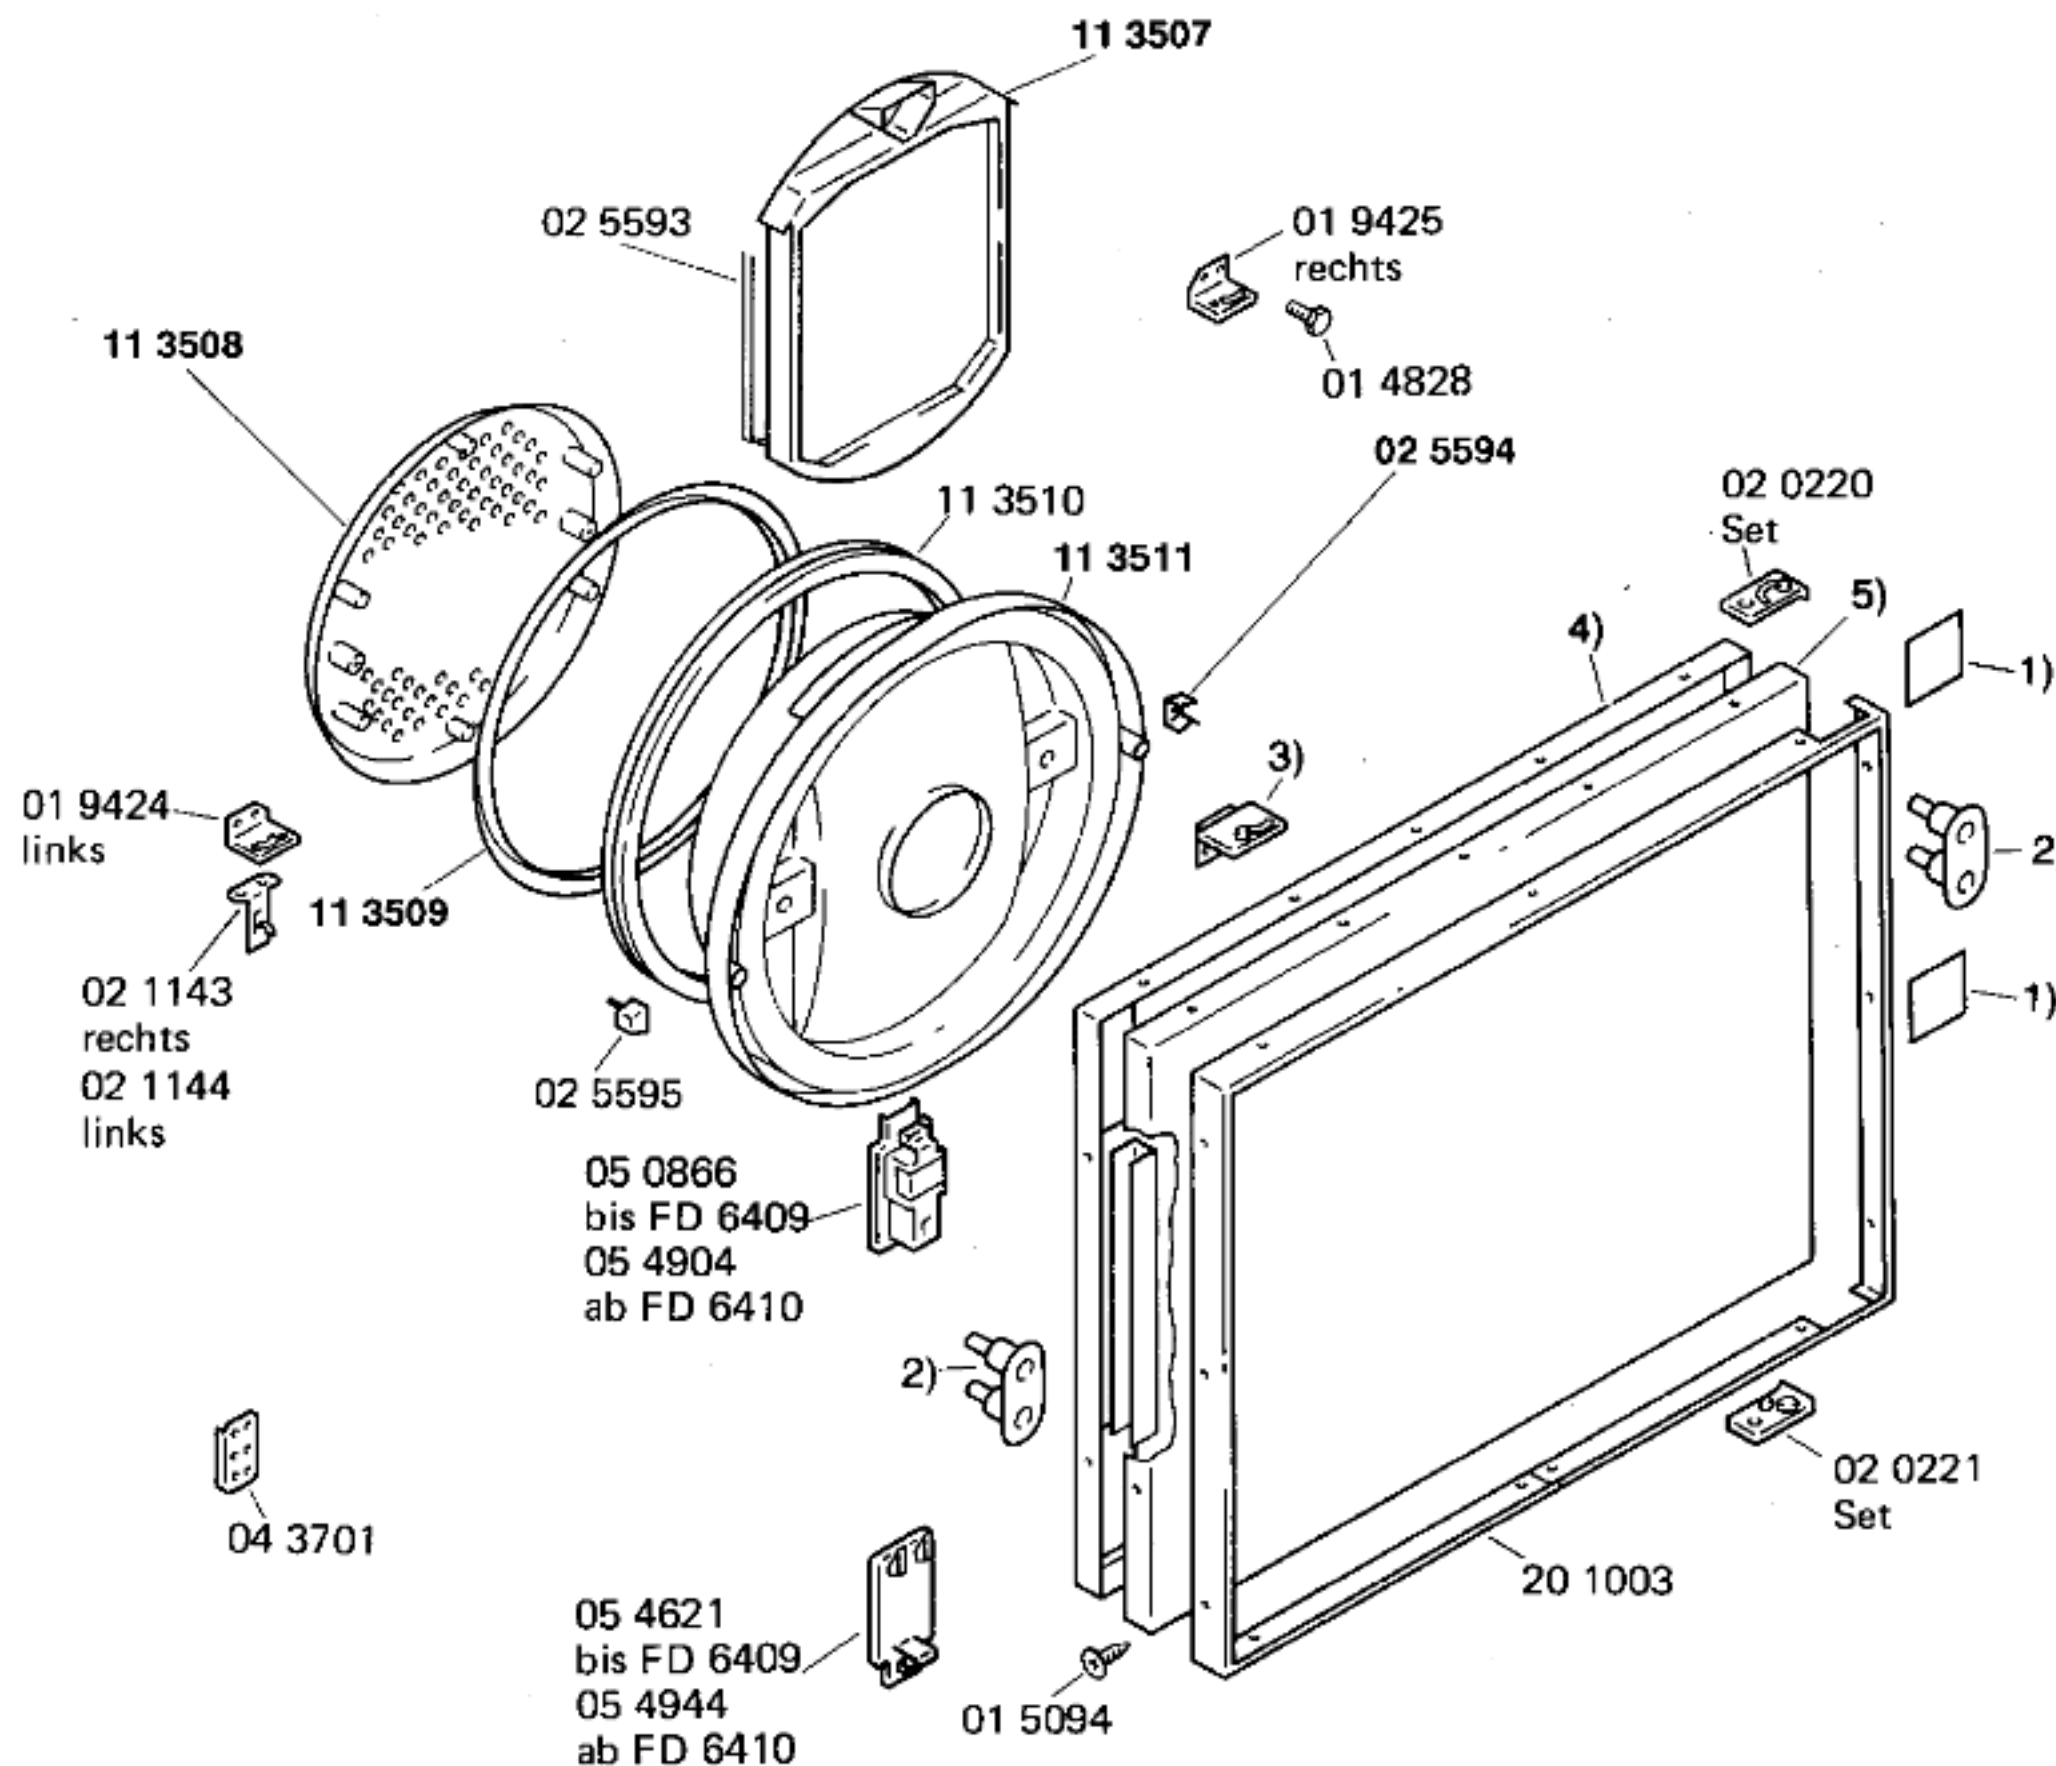


- 1) 05 3943
- 2) 05 3944
- 3) 05 0119
 Set links
 bis FD 6408
 05 0120
 Set rechts
 bis FD 6408
 05 4942
 Set links und rechts
 ab FD 6409
- 4) 20 2232
 bis FD 6409
 20 3755
 ab FD 6410
- 5) 20 2231
 bis FD 6409
 20 2766
 ab FD 6410

**BOSCH**

BOSCH T 620 — 0 728 144 054 — D1
 — 0 728 144 067 — GB1
 — 0 728 144 068 — N1, SF1
 — 0 728 144 069 — CH1, DK1, S1

WASCHGERÄTE
 Truckner

Ident-Nummern-Konstante
 3740

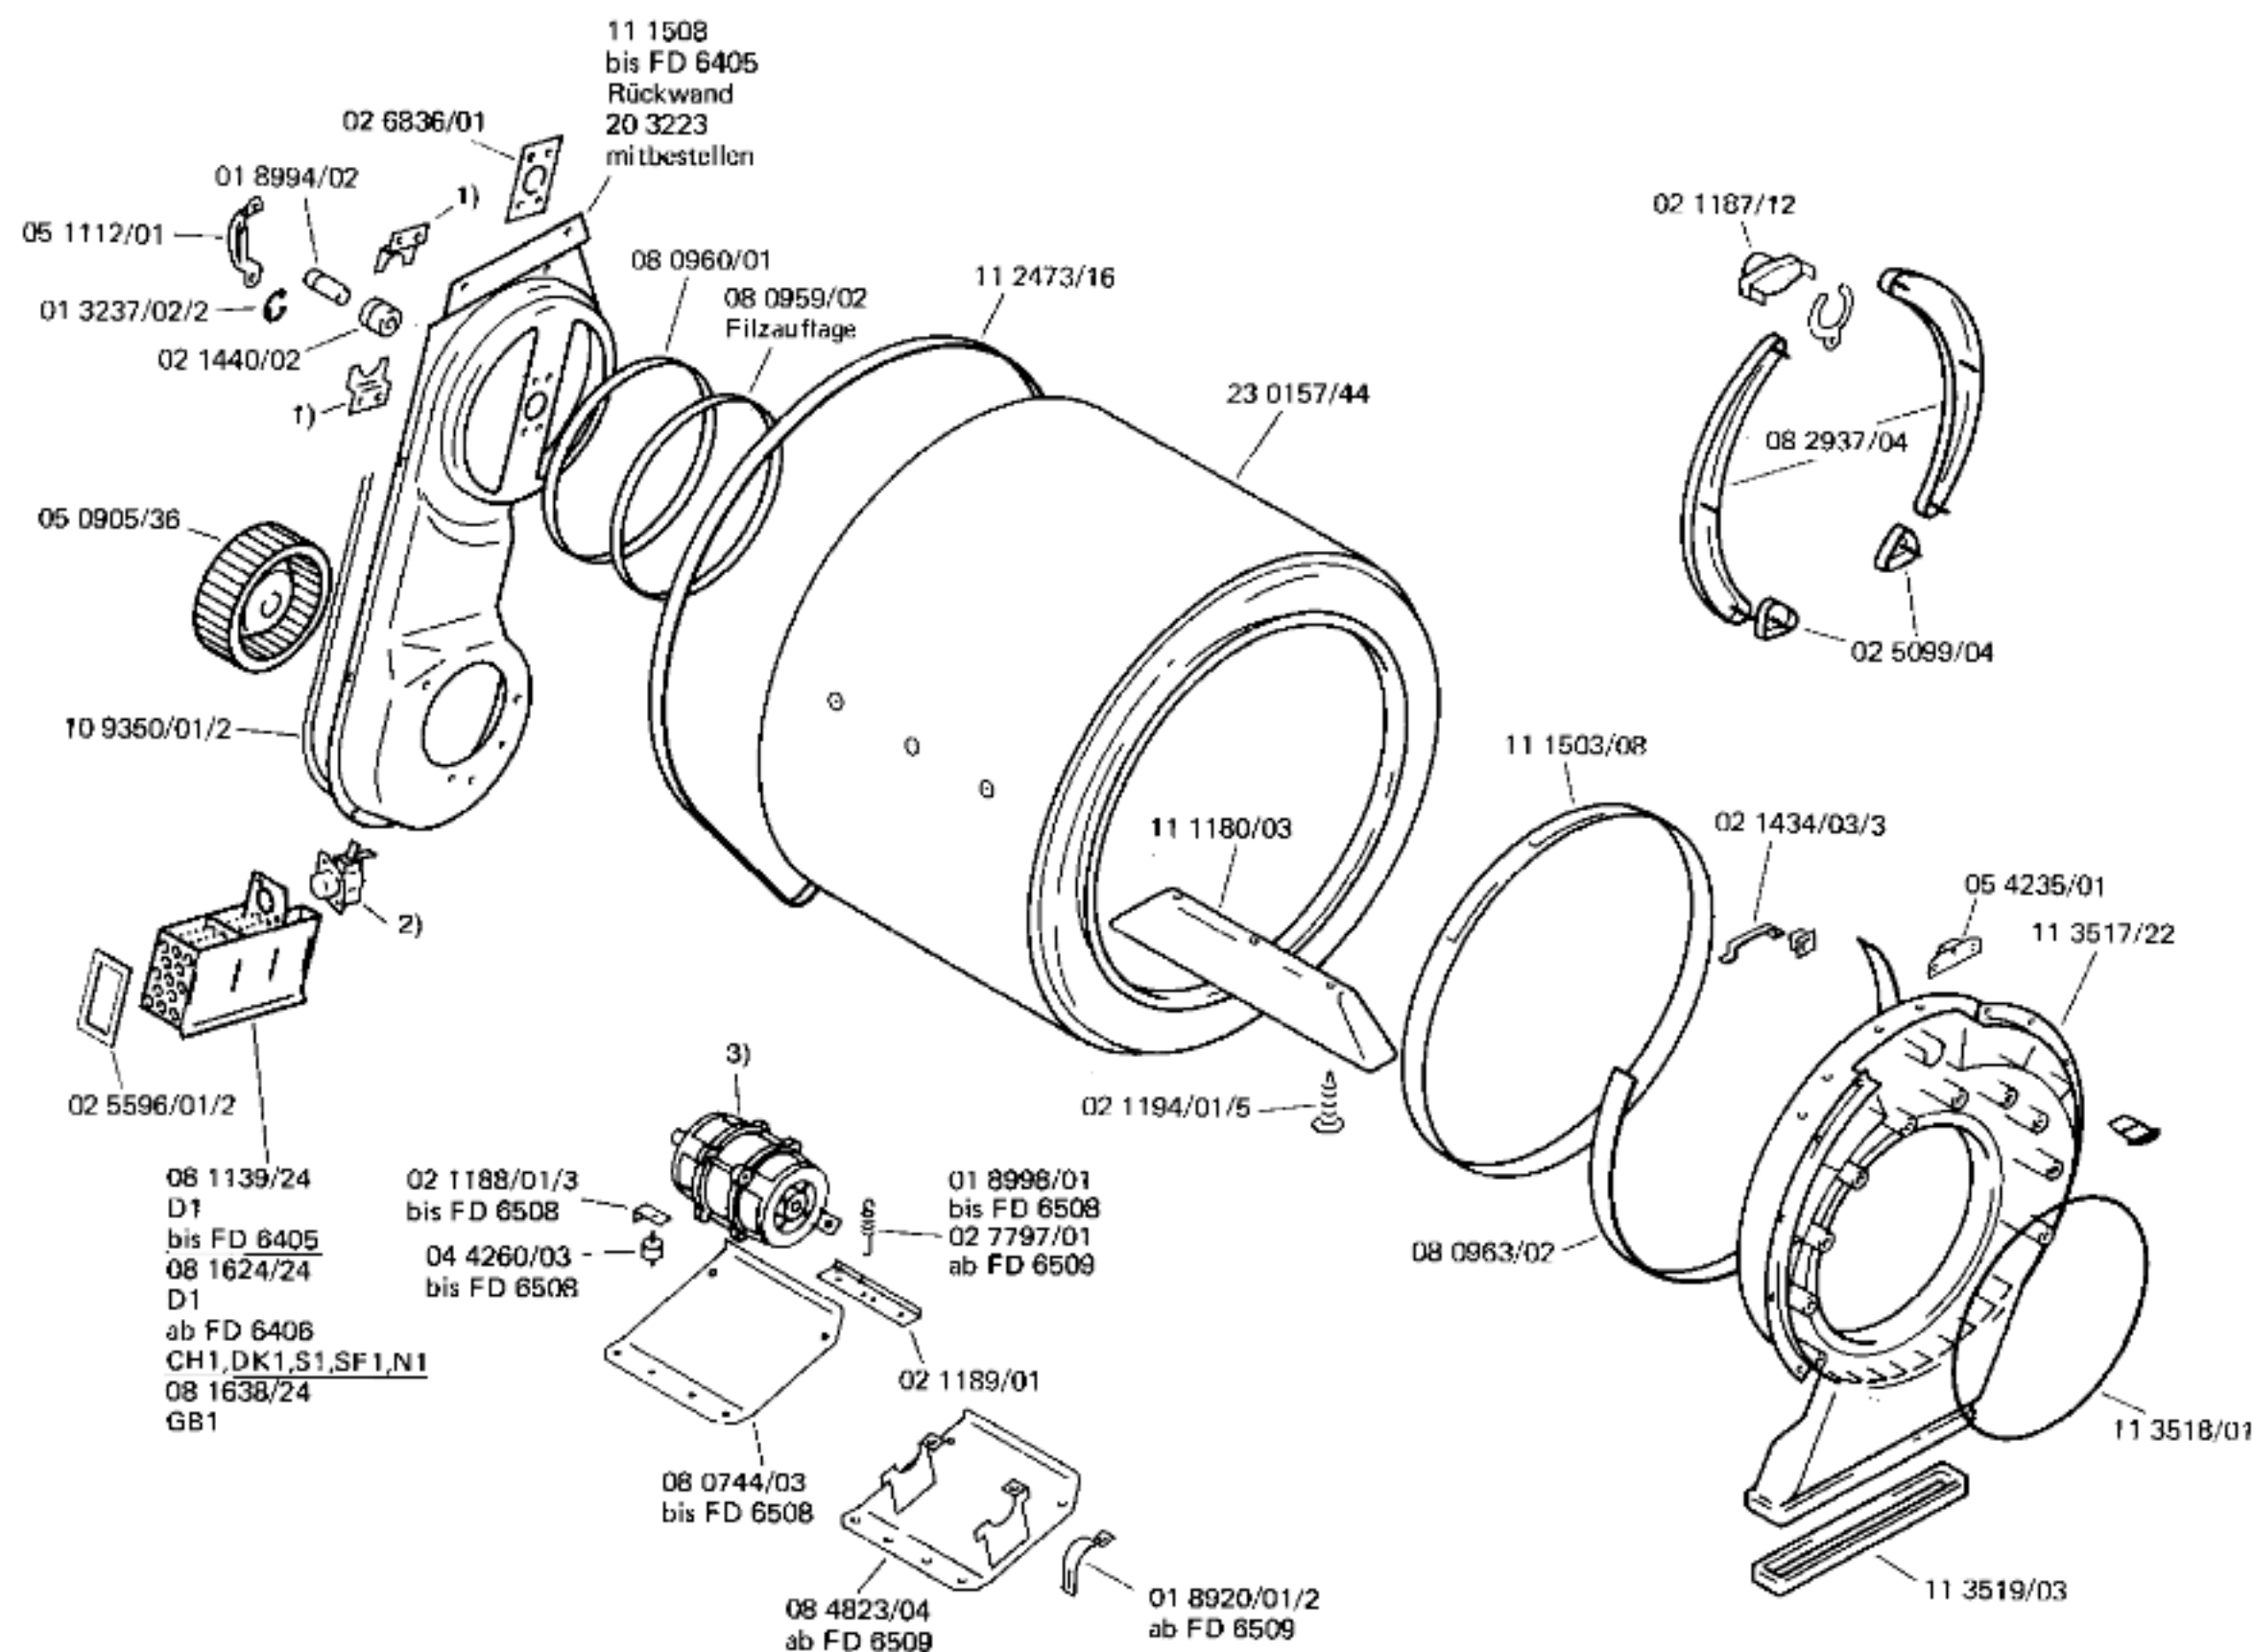

- 1) 02 1439/01
- 2) 02 1749/12
 D1
 bis FD 6405
 02 7014/12
 D1
 ab FD 6406
 02 7014/12
 GB1, N1, SF1
 02 5756/12
 CH1, DK1, S1
- 3) 14 0015/44
 D1, CH1, DK1, S1, N1, SF1
 14 0309/44
 GB1
 bis FD 6508
 14 0368/40
 D1, CH1, DK1, S1, N1, SF1
 14 0369/40
 GB1
 ab FD 6509

1) 11 3525

