


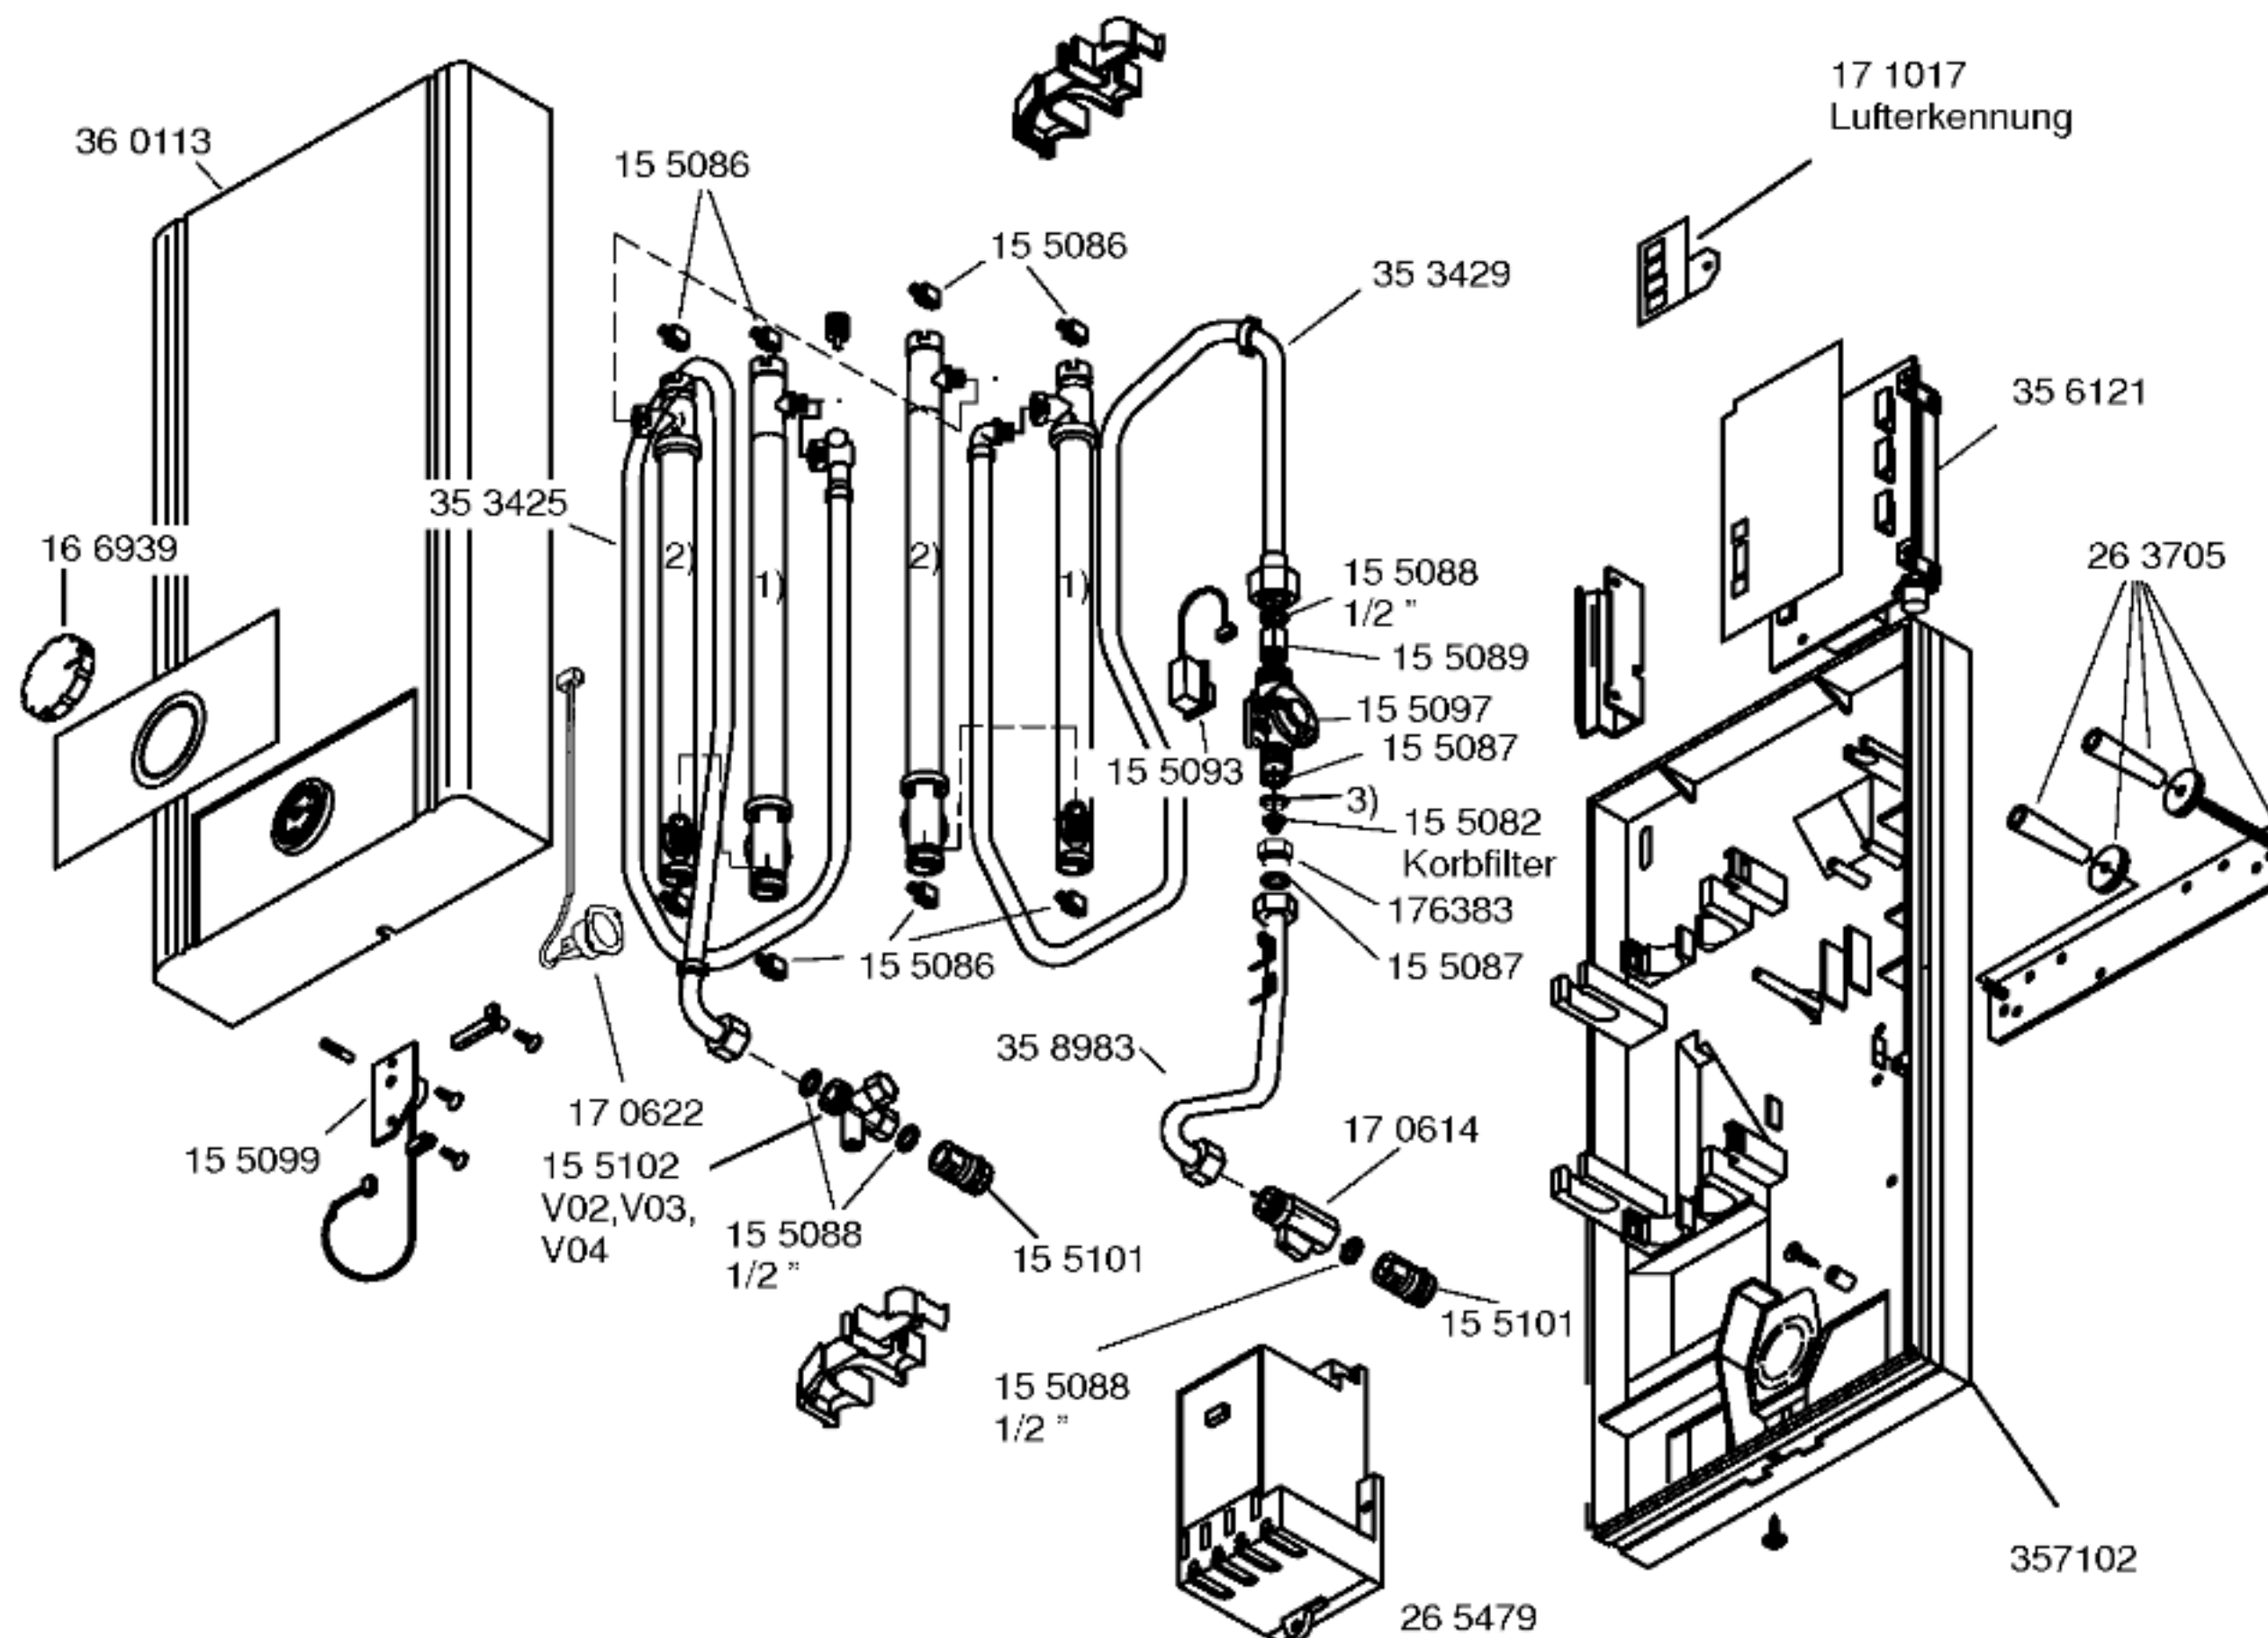

Gebrauchsanleitung  
52 0499  
(D)

- 1) 29 0337  
3KW, V01  
29 0338  
3,5KW, V02  
29 0339  
4KW, V03  
29 0340  
4,5KW, V04
- 2) 29 0341  
6KW, V01  
29 0342  
7KW, V02  
29 0343  
8KW, V03  
29 0344  
9KW, V04
- 3) 15 5084  
7l/min, V01  
16 5874  
8l/min, V02  
15 5085  
9l/min, V03,V04