



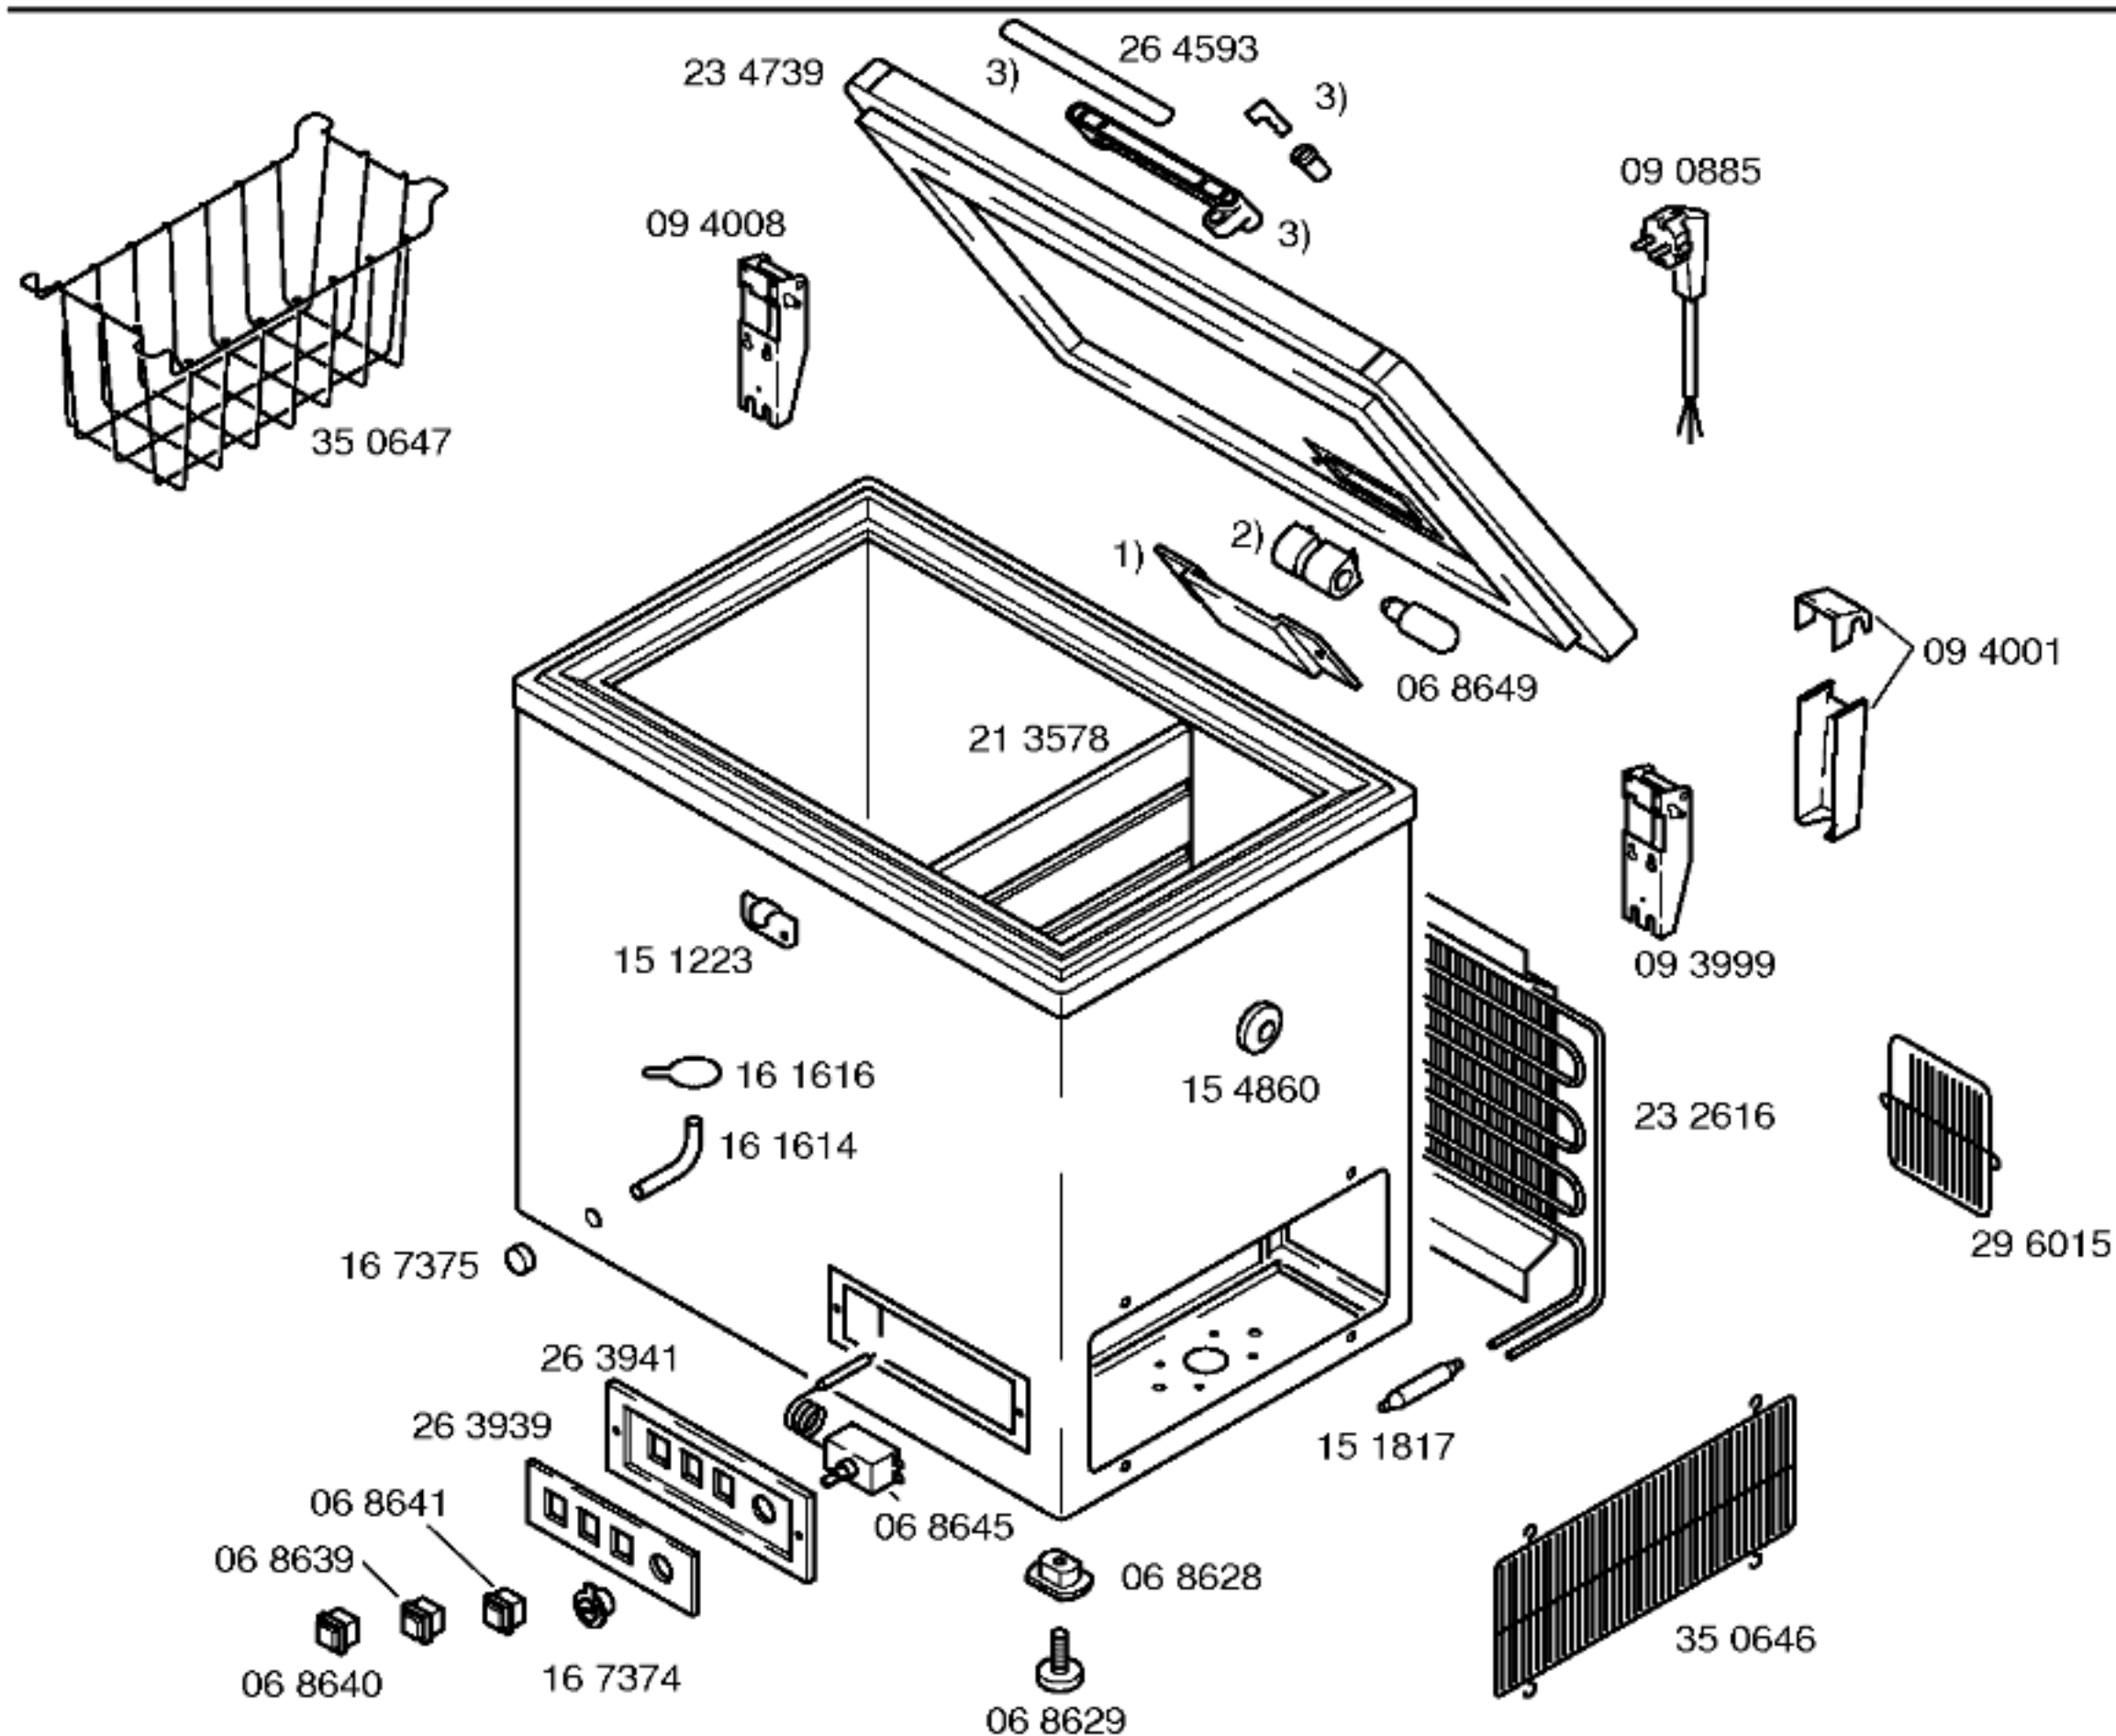

Libro de instrucciones
51 6522
(E)

- 1) 26 4703
- 2) 06 8643
- 3) 26 4594
Set

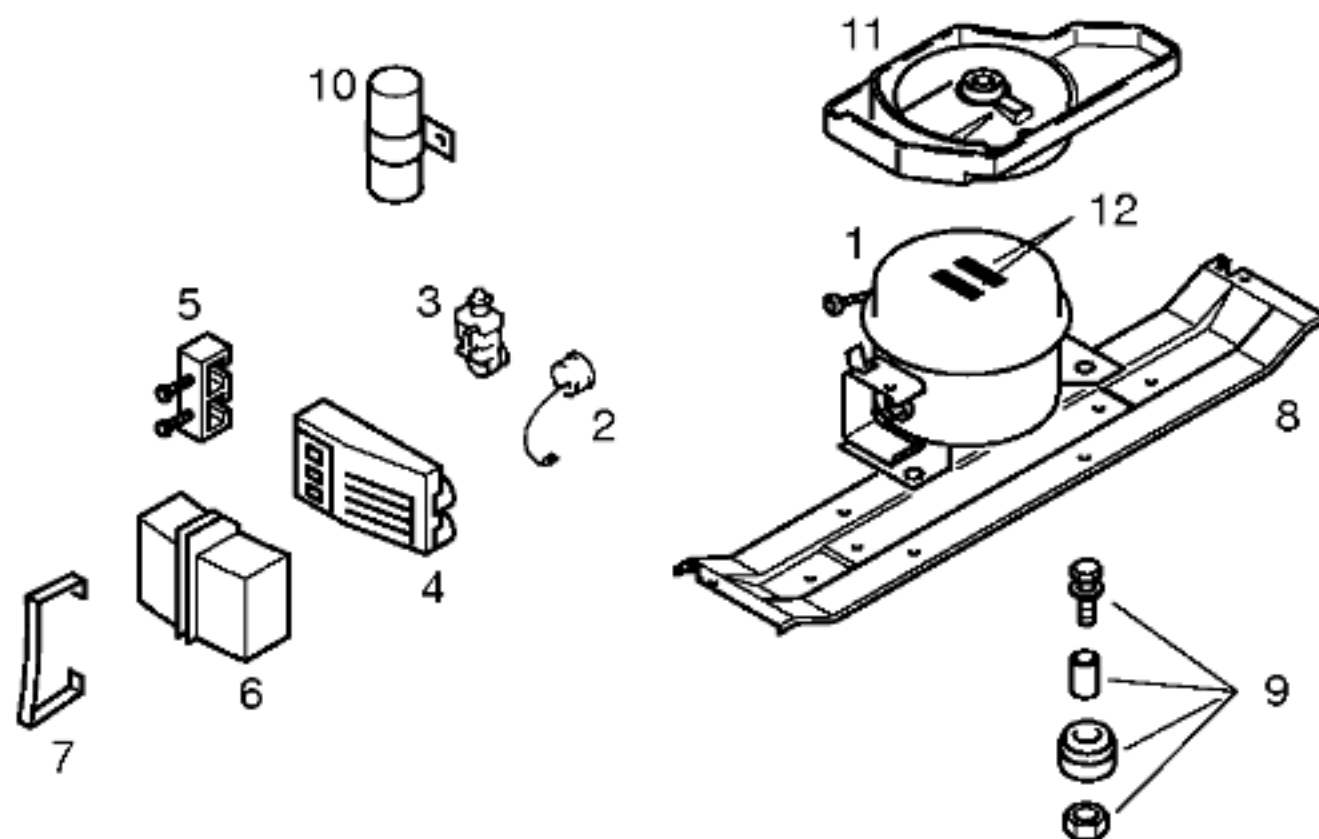

Pos.	ZEM	ASPERA	NECCHI
	GL80AB	B1116Z	ESR8
1	14 1365	14 1365	14 1365
2	15 4890	16 1628	16 1630
3	15 4887	16 1631	16 1632
4	09 6836	16 1633	16 1634
5			
6			
7			
8			
9	15 4861	15 4861	15 4861
10			
11			
12			
13			

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	ZANUSS GL80AB	ASPERA B1116Z	NECCHI ESR8
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	RANCO K54 L1887 MIN. MAX -19° -29 -14°		
Füllmenge/Fill. quantity/Charge/Carga 134a g			
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm			
Magnetventil/Magnetic valve/Electrovanna/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			