



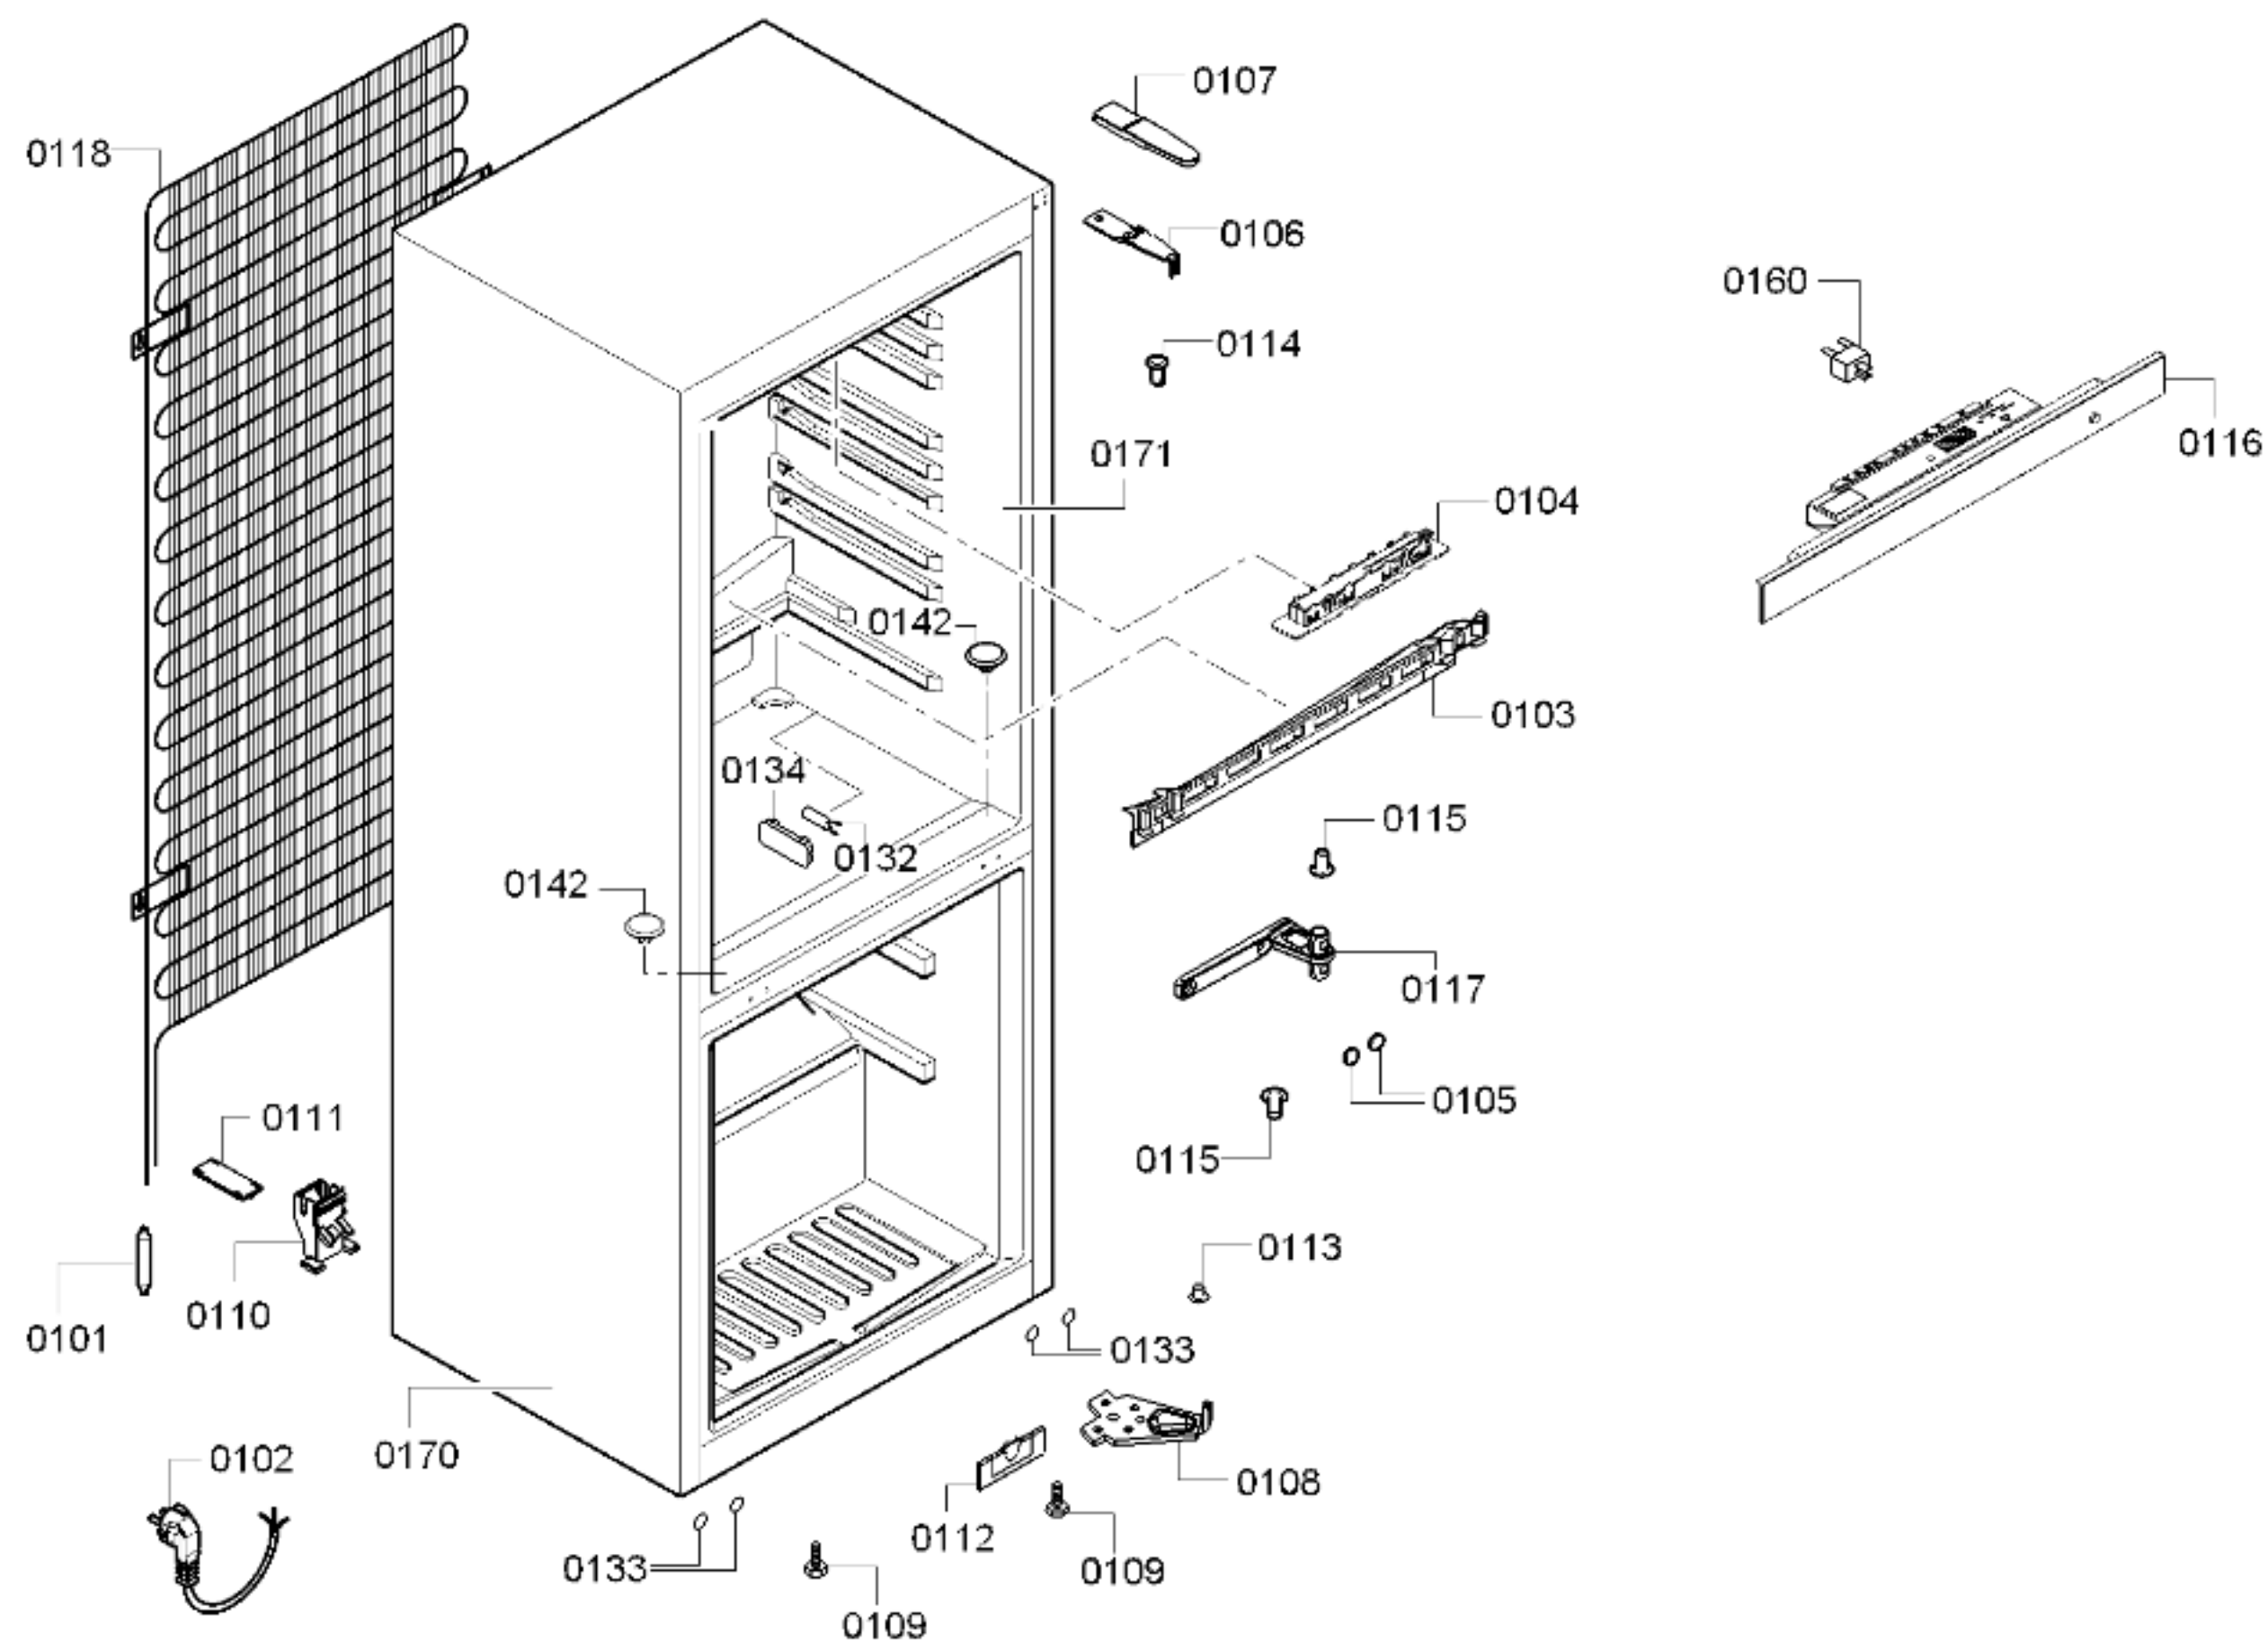


0199

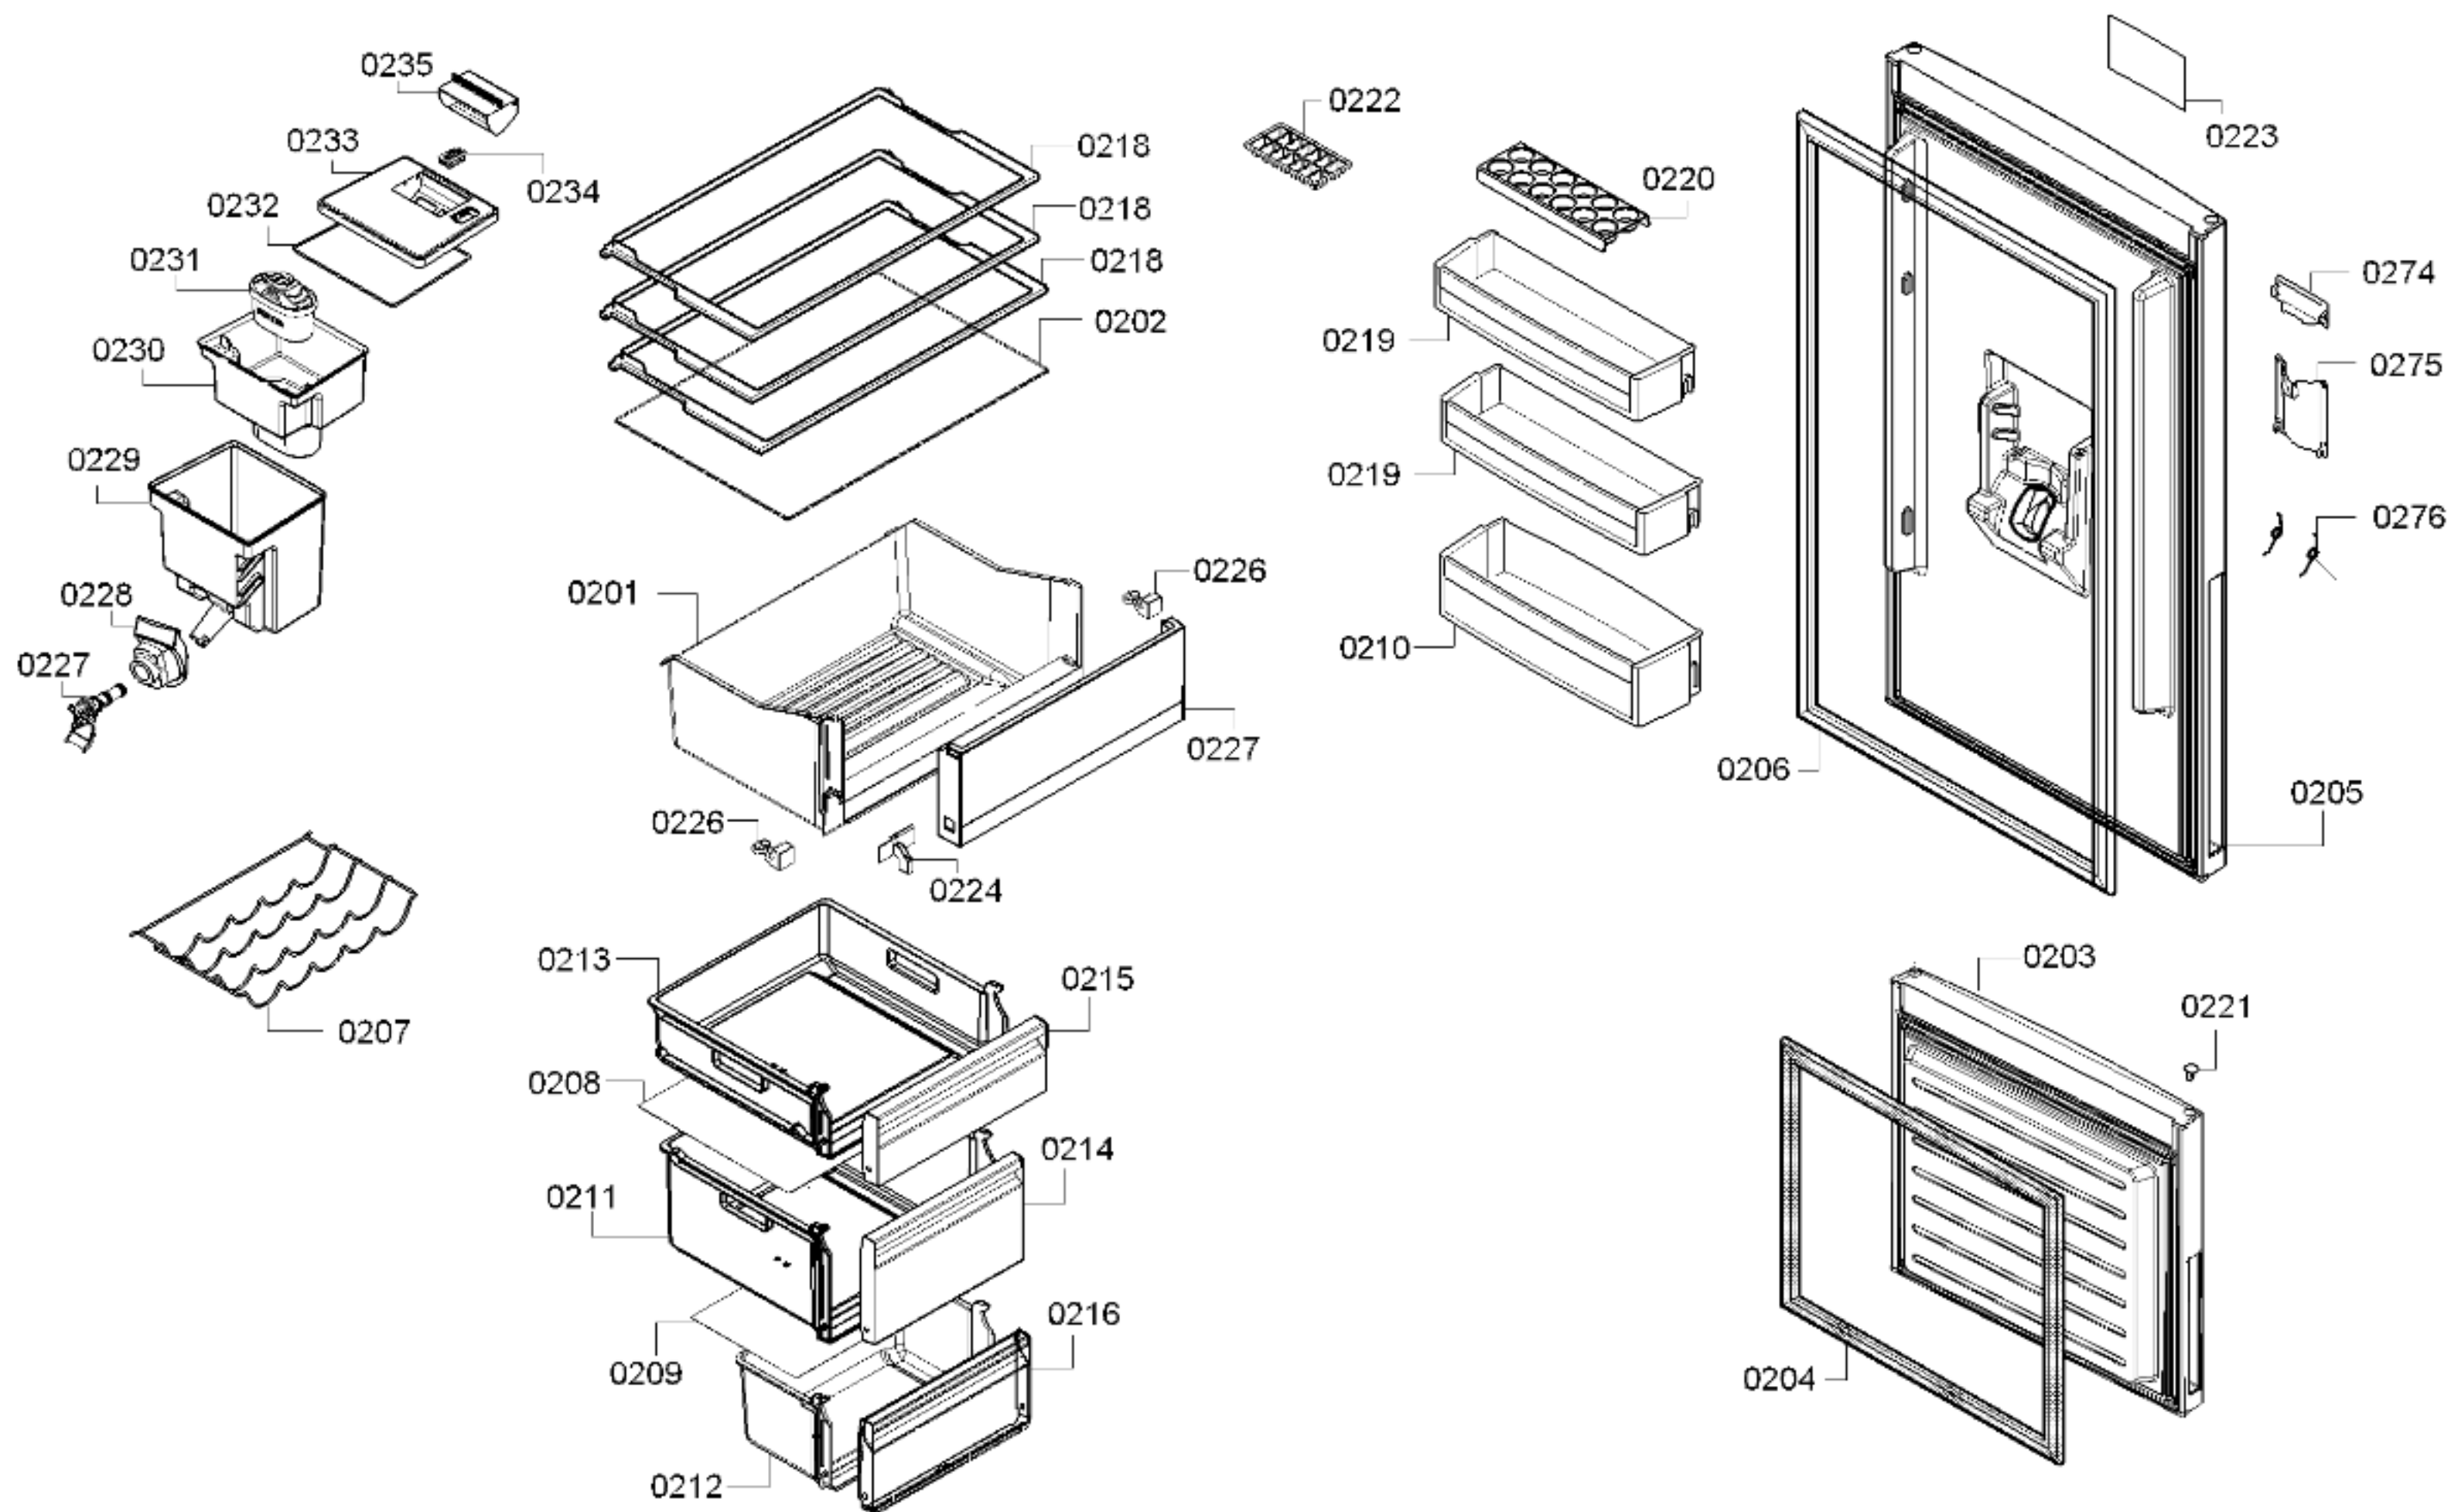

0195



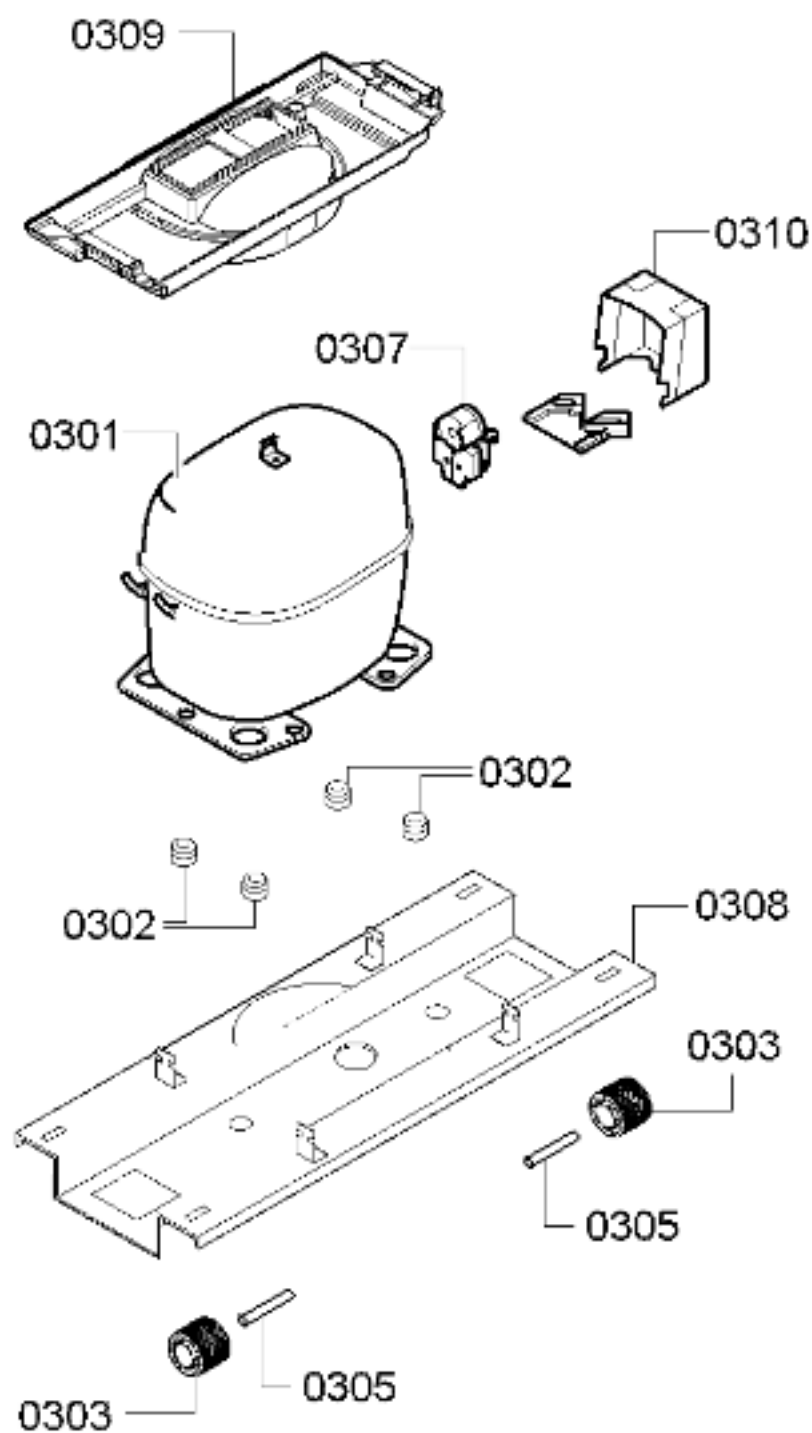

TECHNISCHE DATEN/TECHNICAL DATA/DCNNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor			
Typ/Type/Tipo	JIAXIPERA		
Förderleistung/Delivery/Debit/Aspiración l/h	NT1113Y		
Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A			
Widerstand/Resistance/Resistencia Ha/main/prin. Ohm			
Hi/aux.			
Klappe Therm./Thermostat/Termostat			
Typ/Type/Tipo			
Reglerstellung/Position/Conexión			
Schaltwerte/Switching values/	..ein/conex.°C		
Valeurs de commutation/Desconex.	..aus"/descon.		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/Charge/Carga R600	g	96	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W		
Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	KW		
Leistung/Power/Puissance/Potencia	W		
Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	KW		
* Siehe Typenschild/Mamul etiketine baxiniz			