


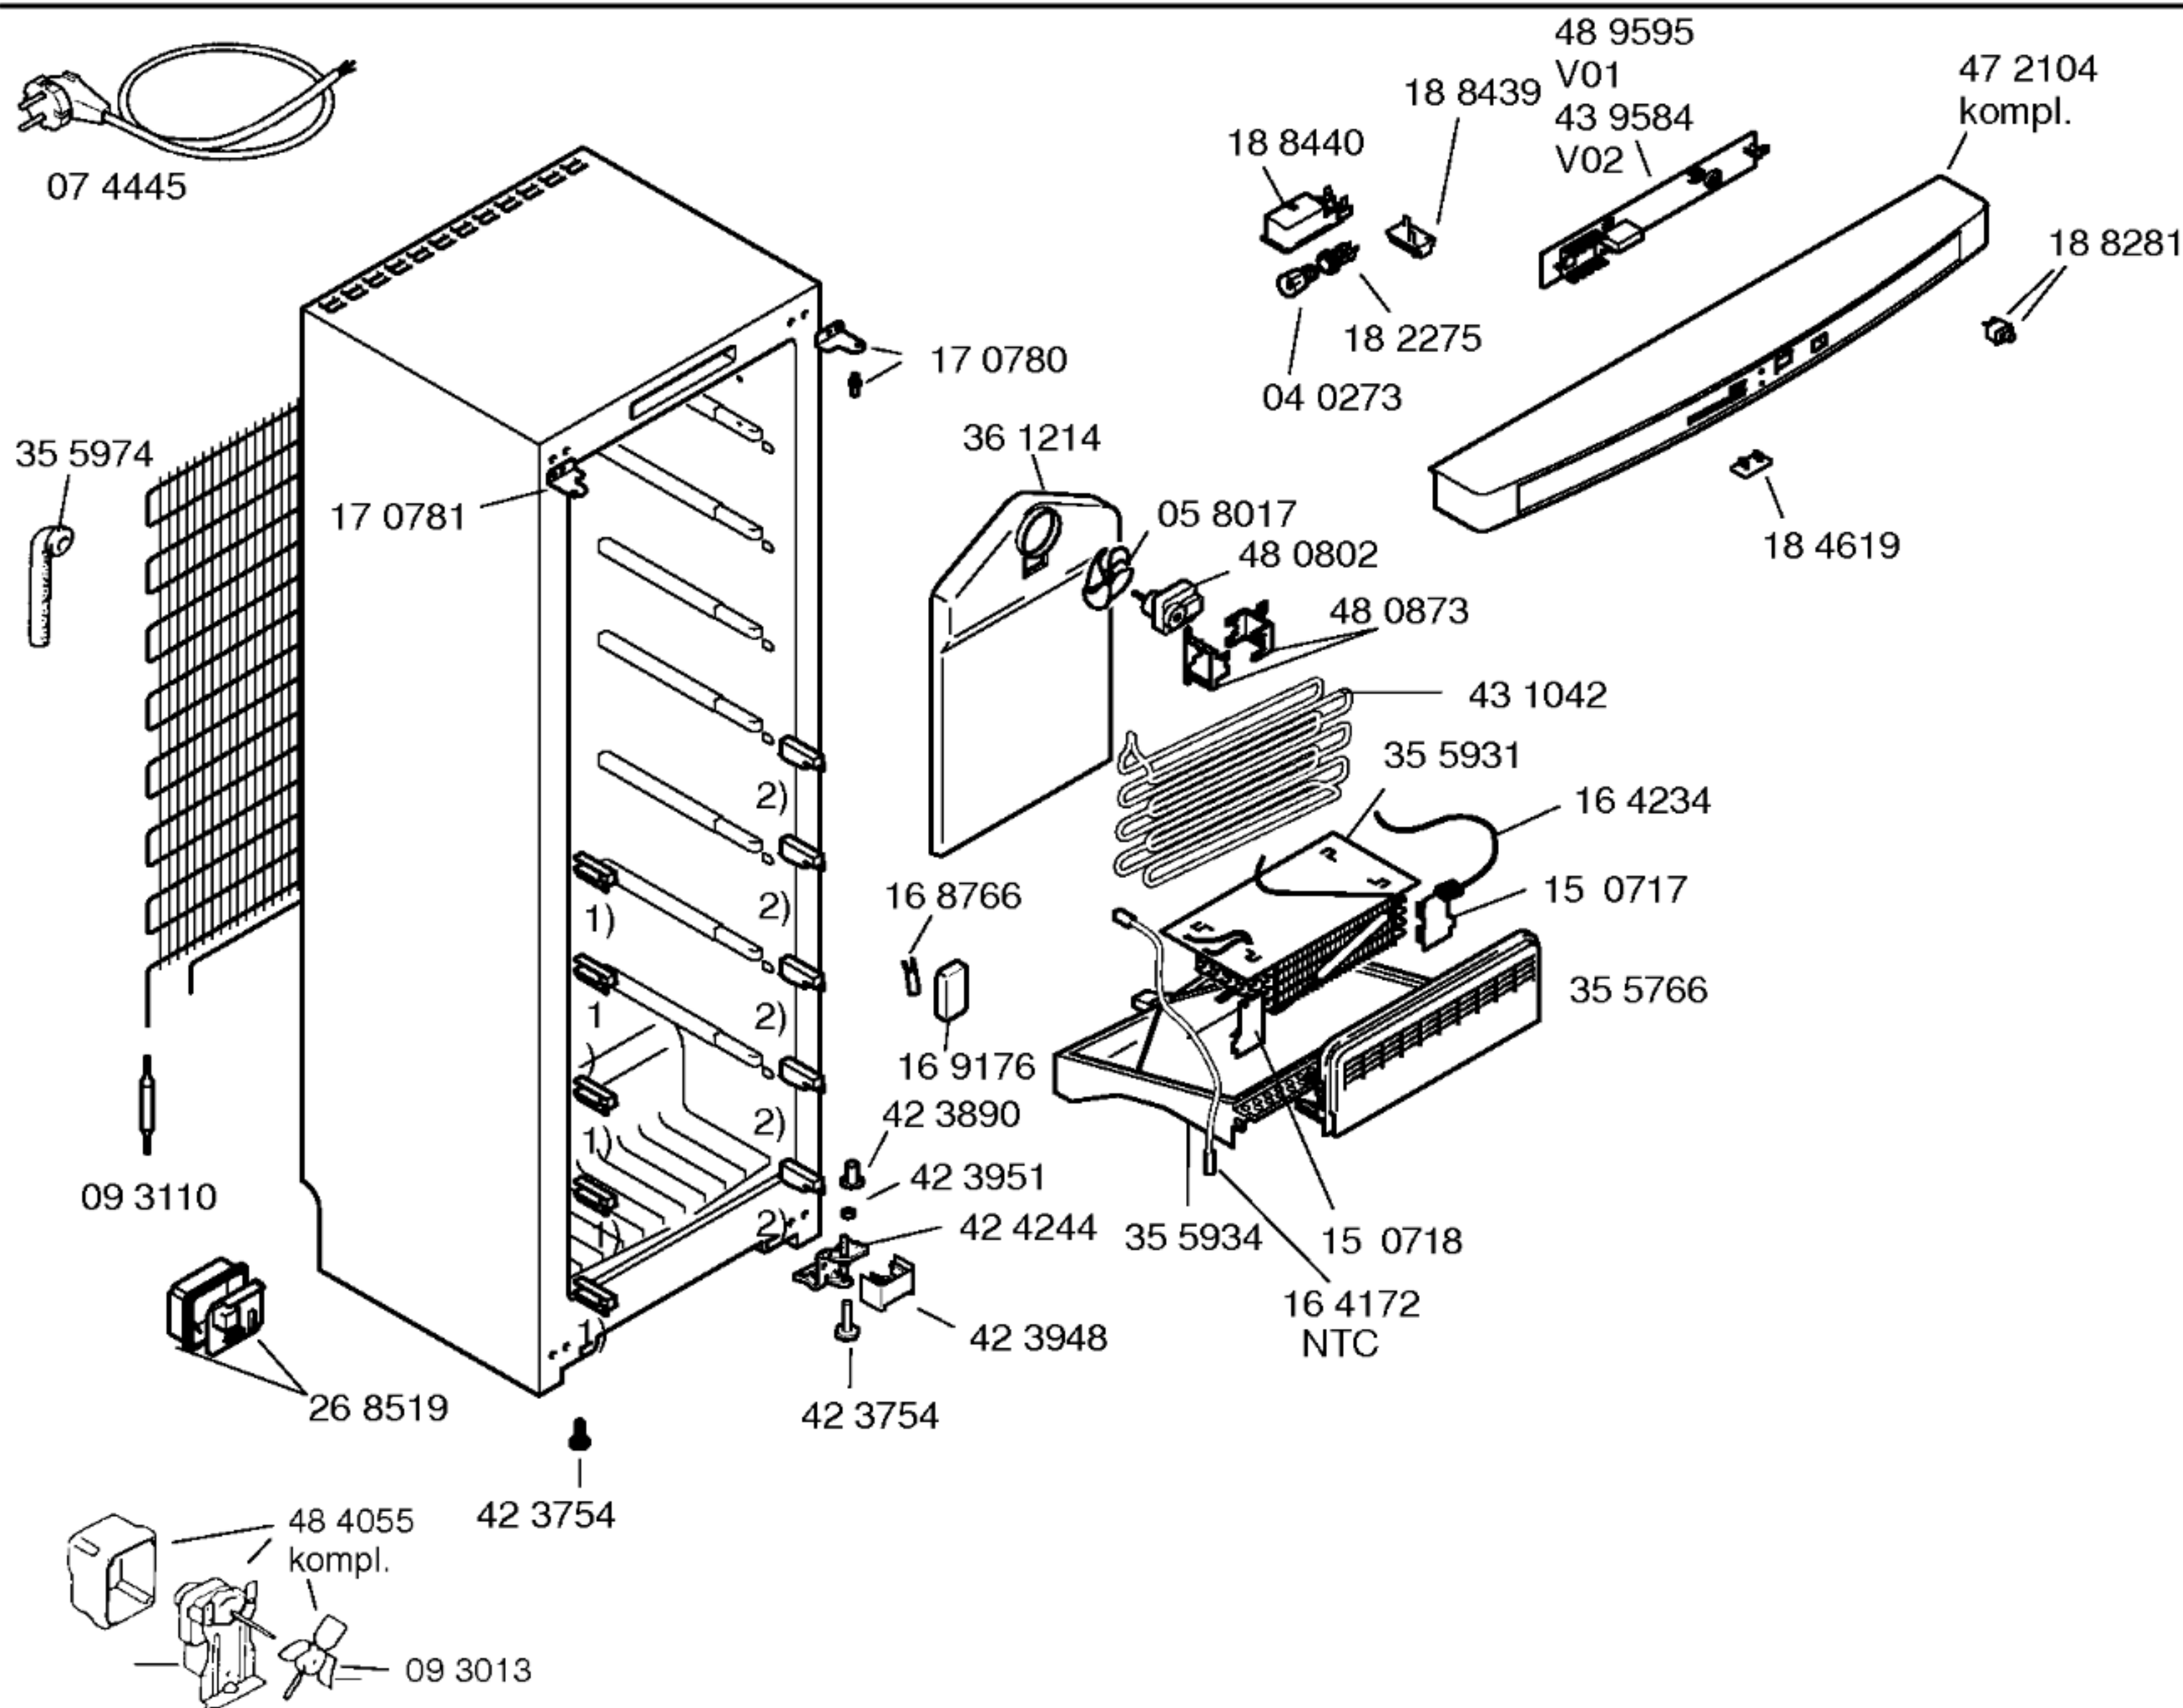




Mat. - Nr. - Konstante
3740


Gebrauchsanweisung
58 8124
(de,en,tr,farsi)
Montageanleitung
58 0241
Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

Gefrierraumteiler
35 3678

1) 17 1455
2) 17 1454

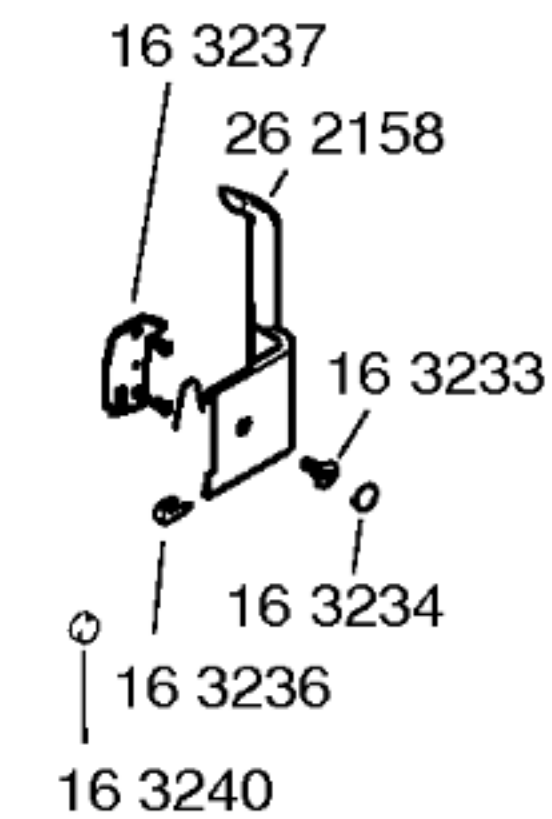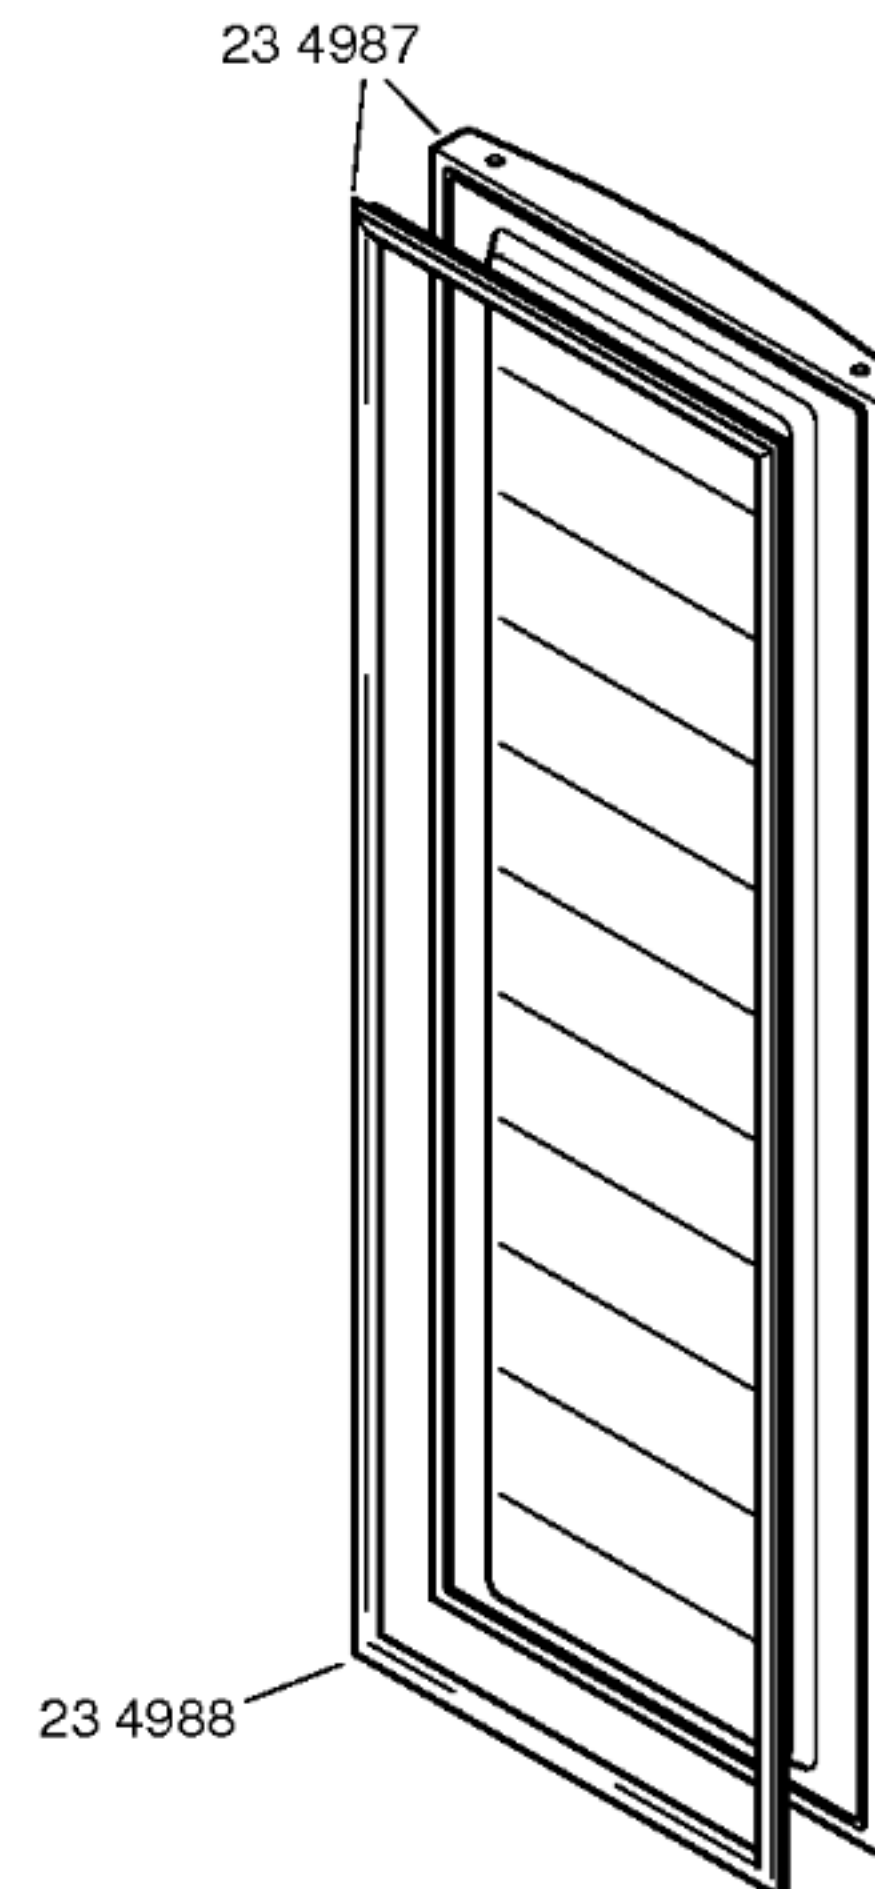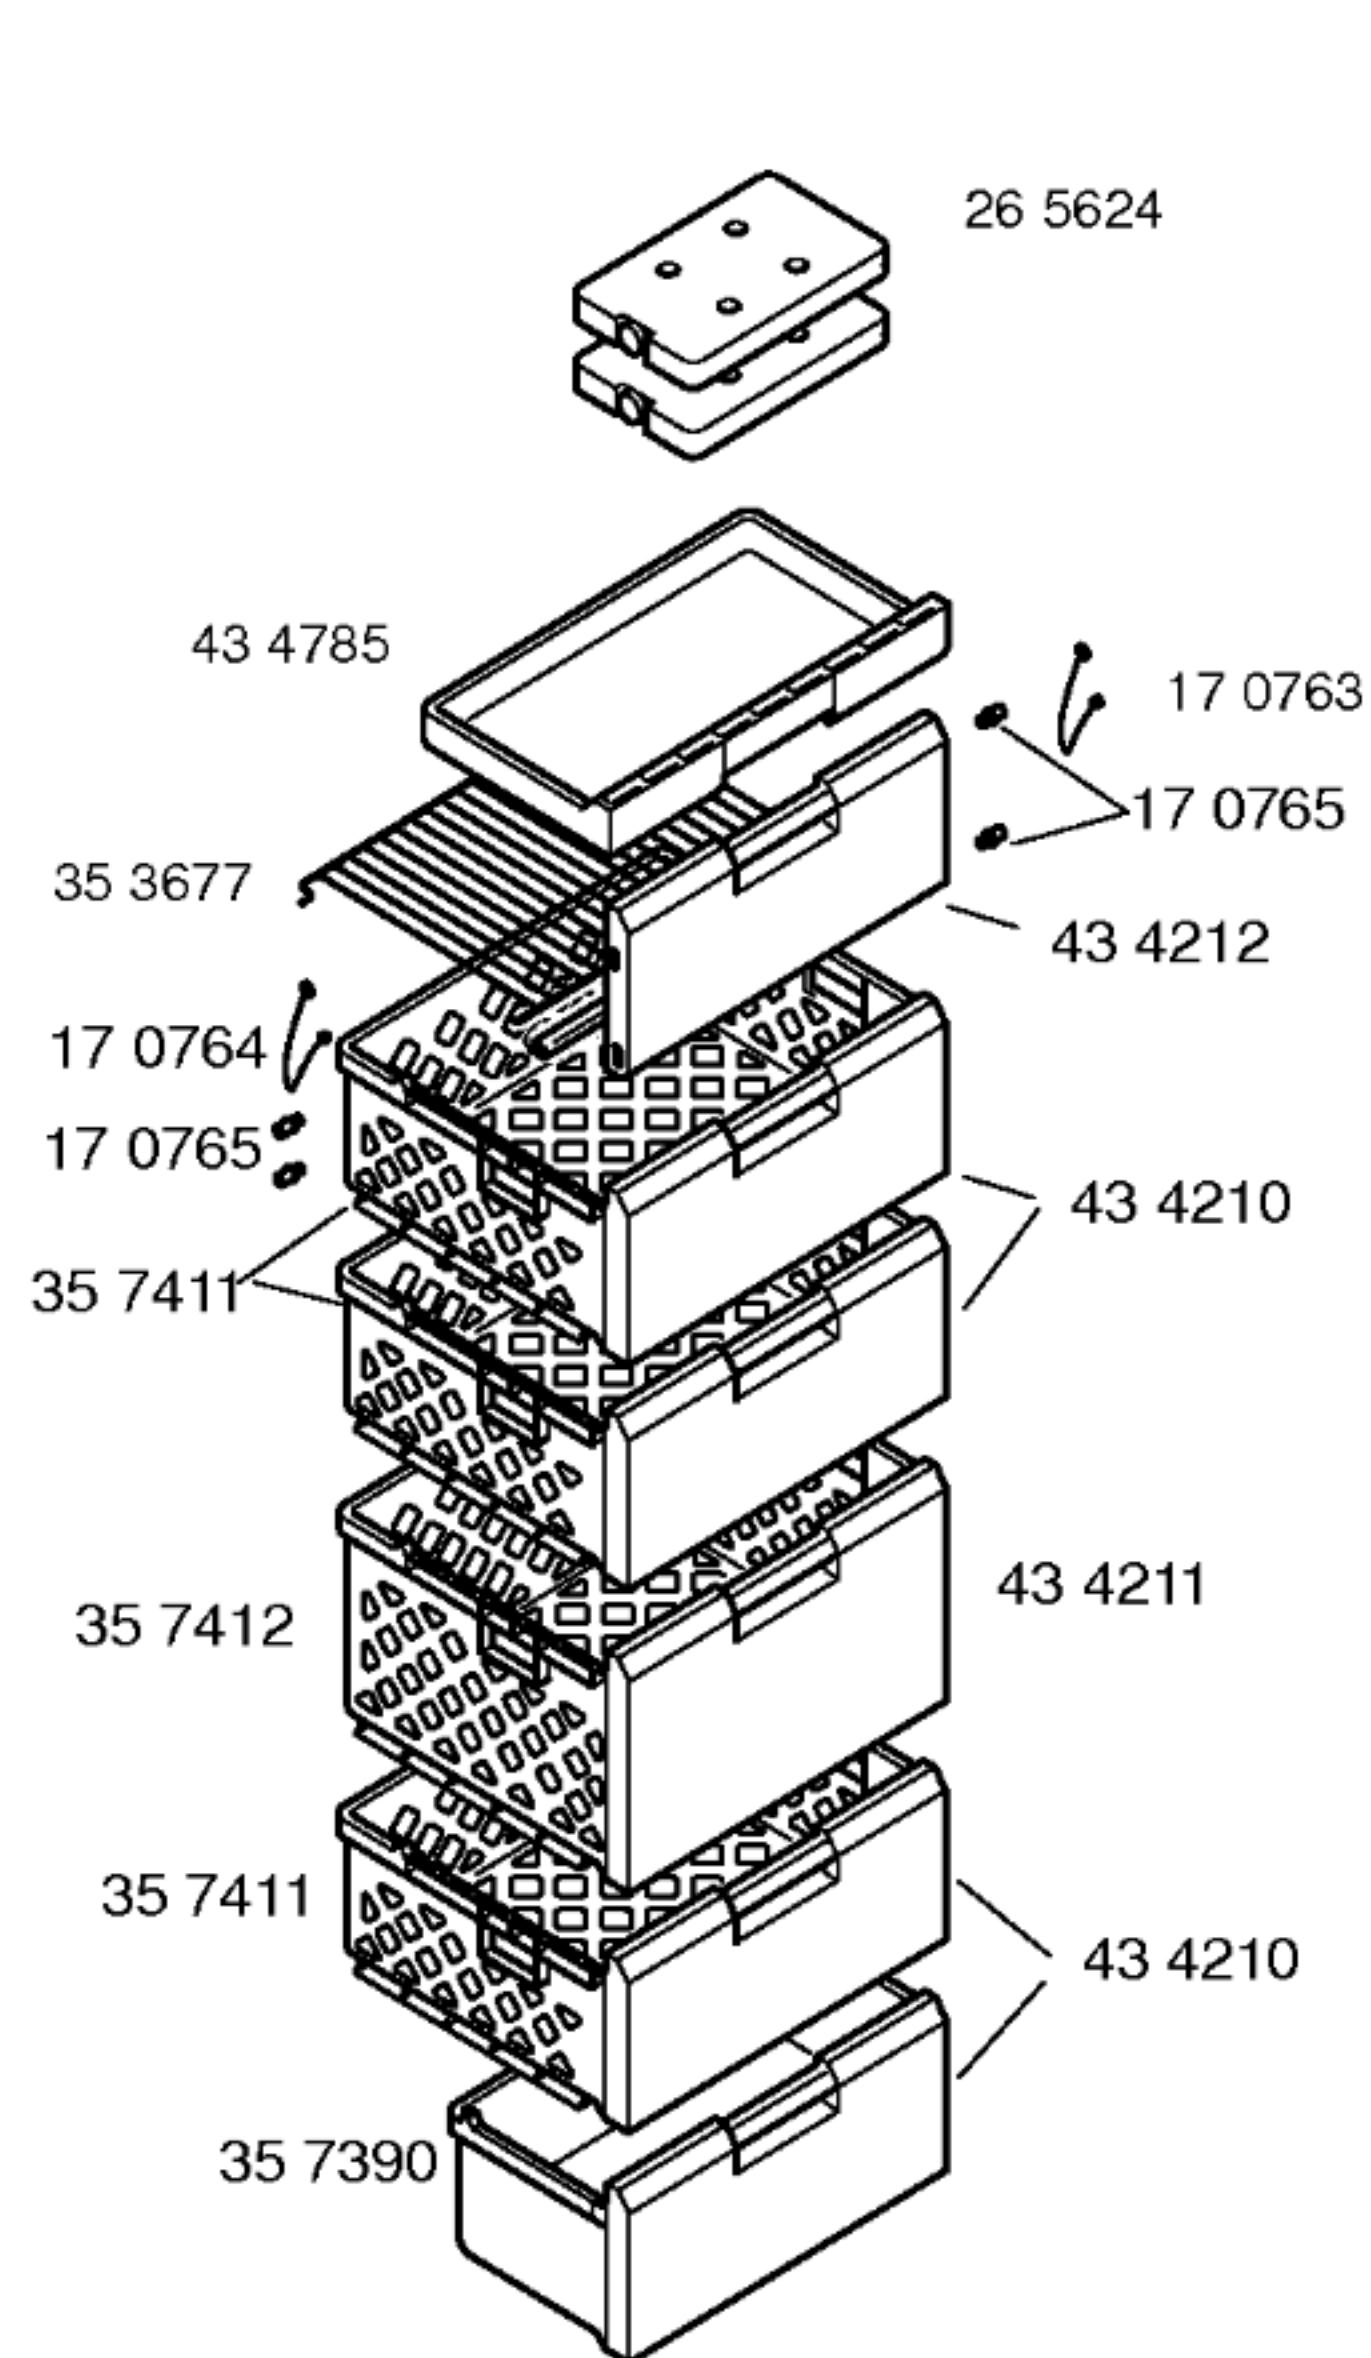

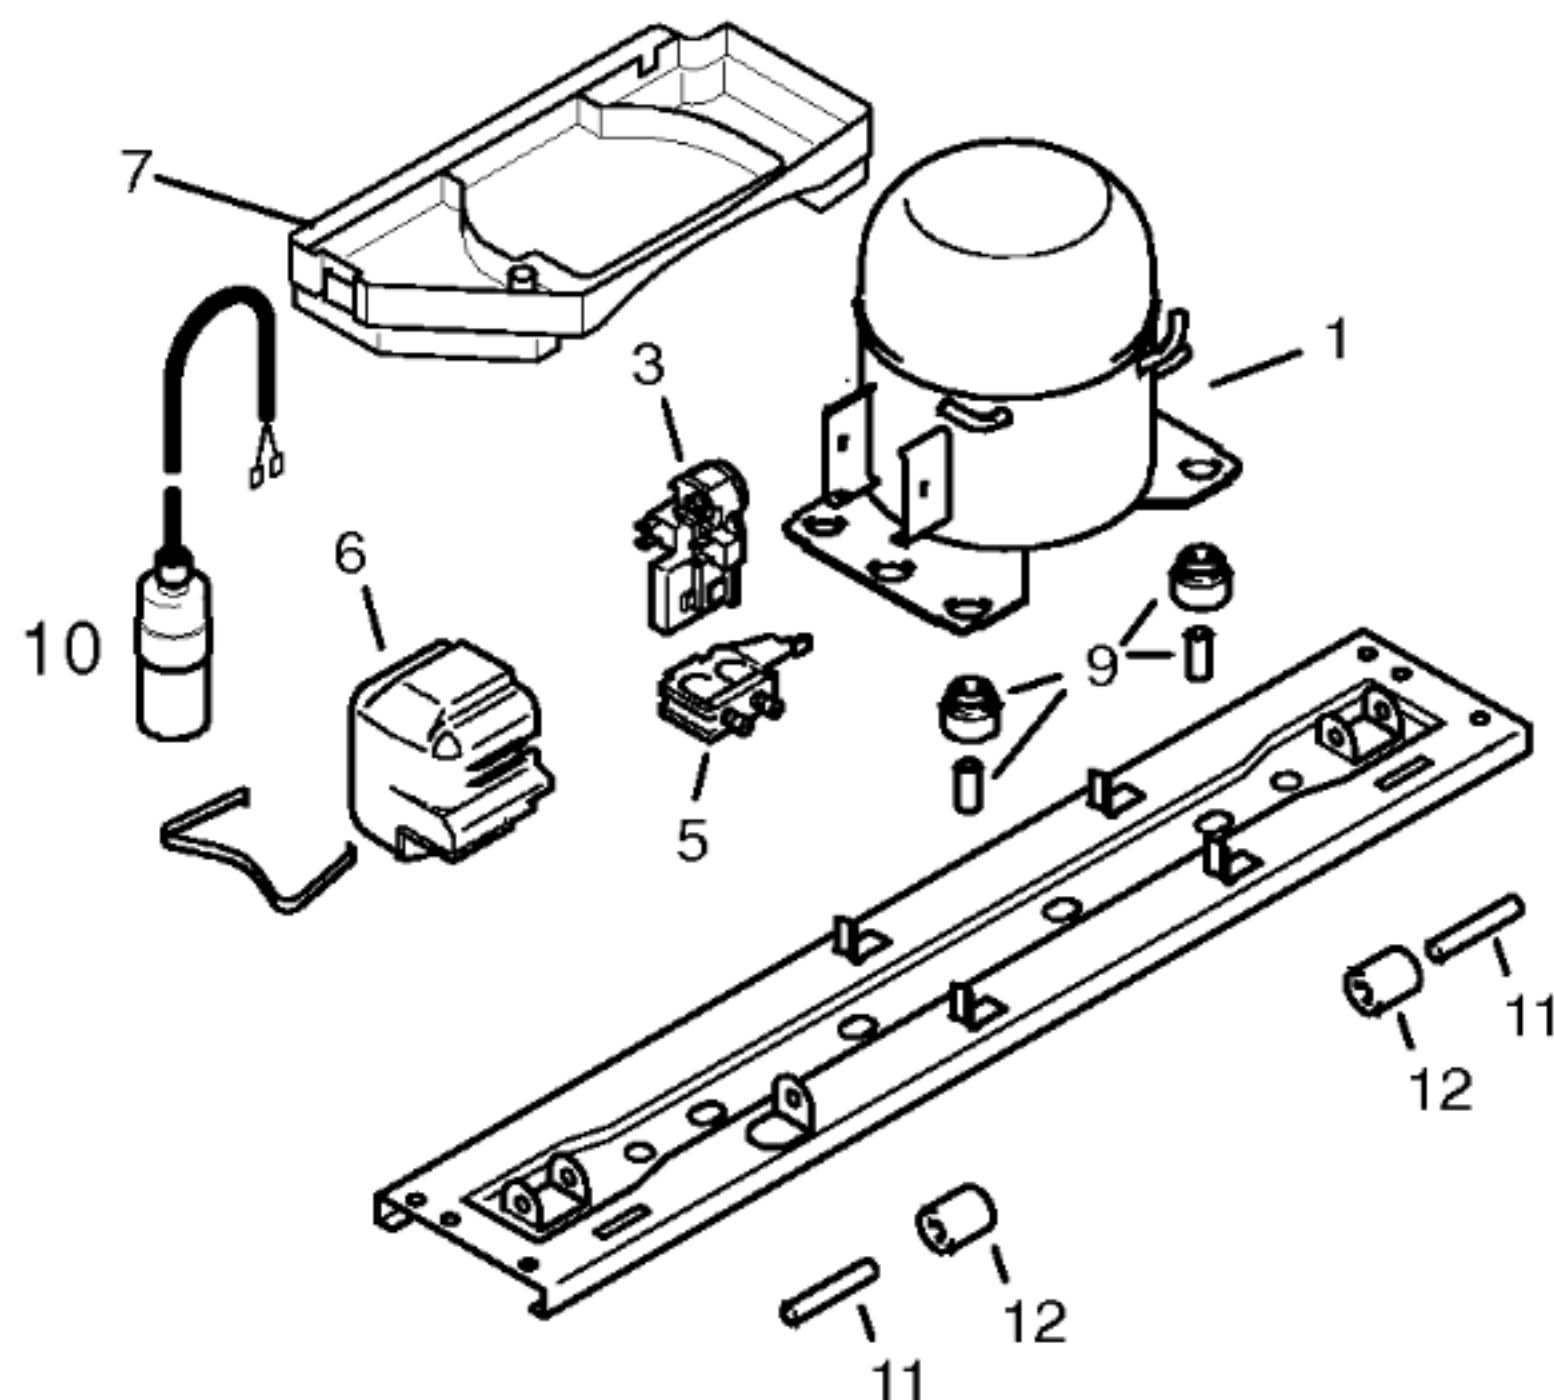Mat. – Nr. – Konstante
3740

Pos.	V01,V02		
	Danfoss		
	NL10FT		
1	14 2357		
2			
3	18 8837		
4			
5	15 0760		
6	15 1072		
7	09 6212		
8			
9	05 0166		
10	09 4910		
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		NL 10FT				
Förderleistung/Delivery/Débit		l/h				
Anlaufstrom/Starting current/Cour de démarrage		A				
Widerstand/Resistance/Résistance		Ha/main/prin				
		W				
		Hi/aux				
		W				
Temp.-Regler/Thermostat		Elektronisch				
Typ/Type		EIN AUS				
Regelstellung/Position		-15 -16				
Schaltwerte/Switching values		"warm"				
Valeurs de commutation		"kalt"				
		-23 -24				
		-9 -14				
Füllmenge/Fill.quantity/Charge		R600a				
		*				
Anschlußwert/Conn.load/Puiss. connectée		W				
		217				
Heizung/Heater/Chauffage		Abtauheizung				
Widerstand/Resistance/Résistance		W				
Leistung/Power/Puissance		W				
		288				
		200				
Ventilator/Blower/Ventilateur		W				
Widerstand/Resistance/Résistance		W				
		560				
Raumtemperaturfühler 2%		C K				
		+10 9,9				
		+5 12,7				
		+0 16,3				
Widerstand NTC-Fühler 1%		C k				
		-18 43,3				
		-22 54,6				
		-26 69,4				
Magnetventil/Magnetic valve/Electrovanne		W				
Widerstand/Resistance/Résistance		W				
Spannung/Voltage/Tension		V				

* siehe Typenschild