


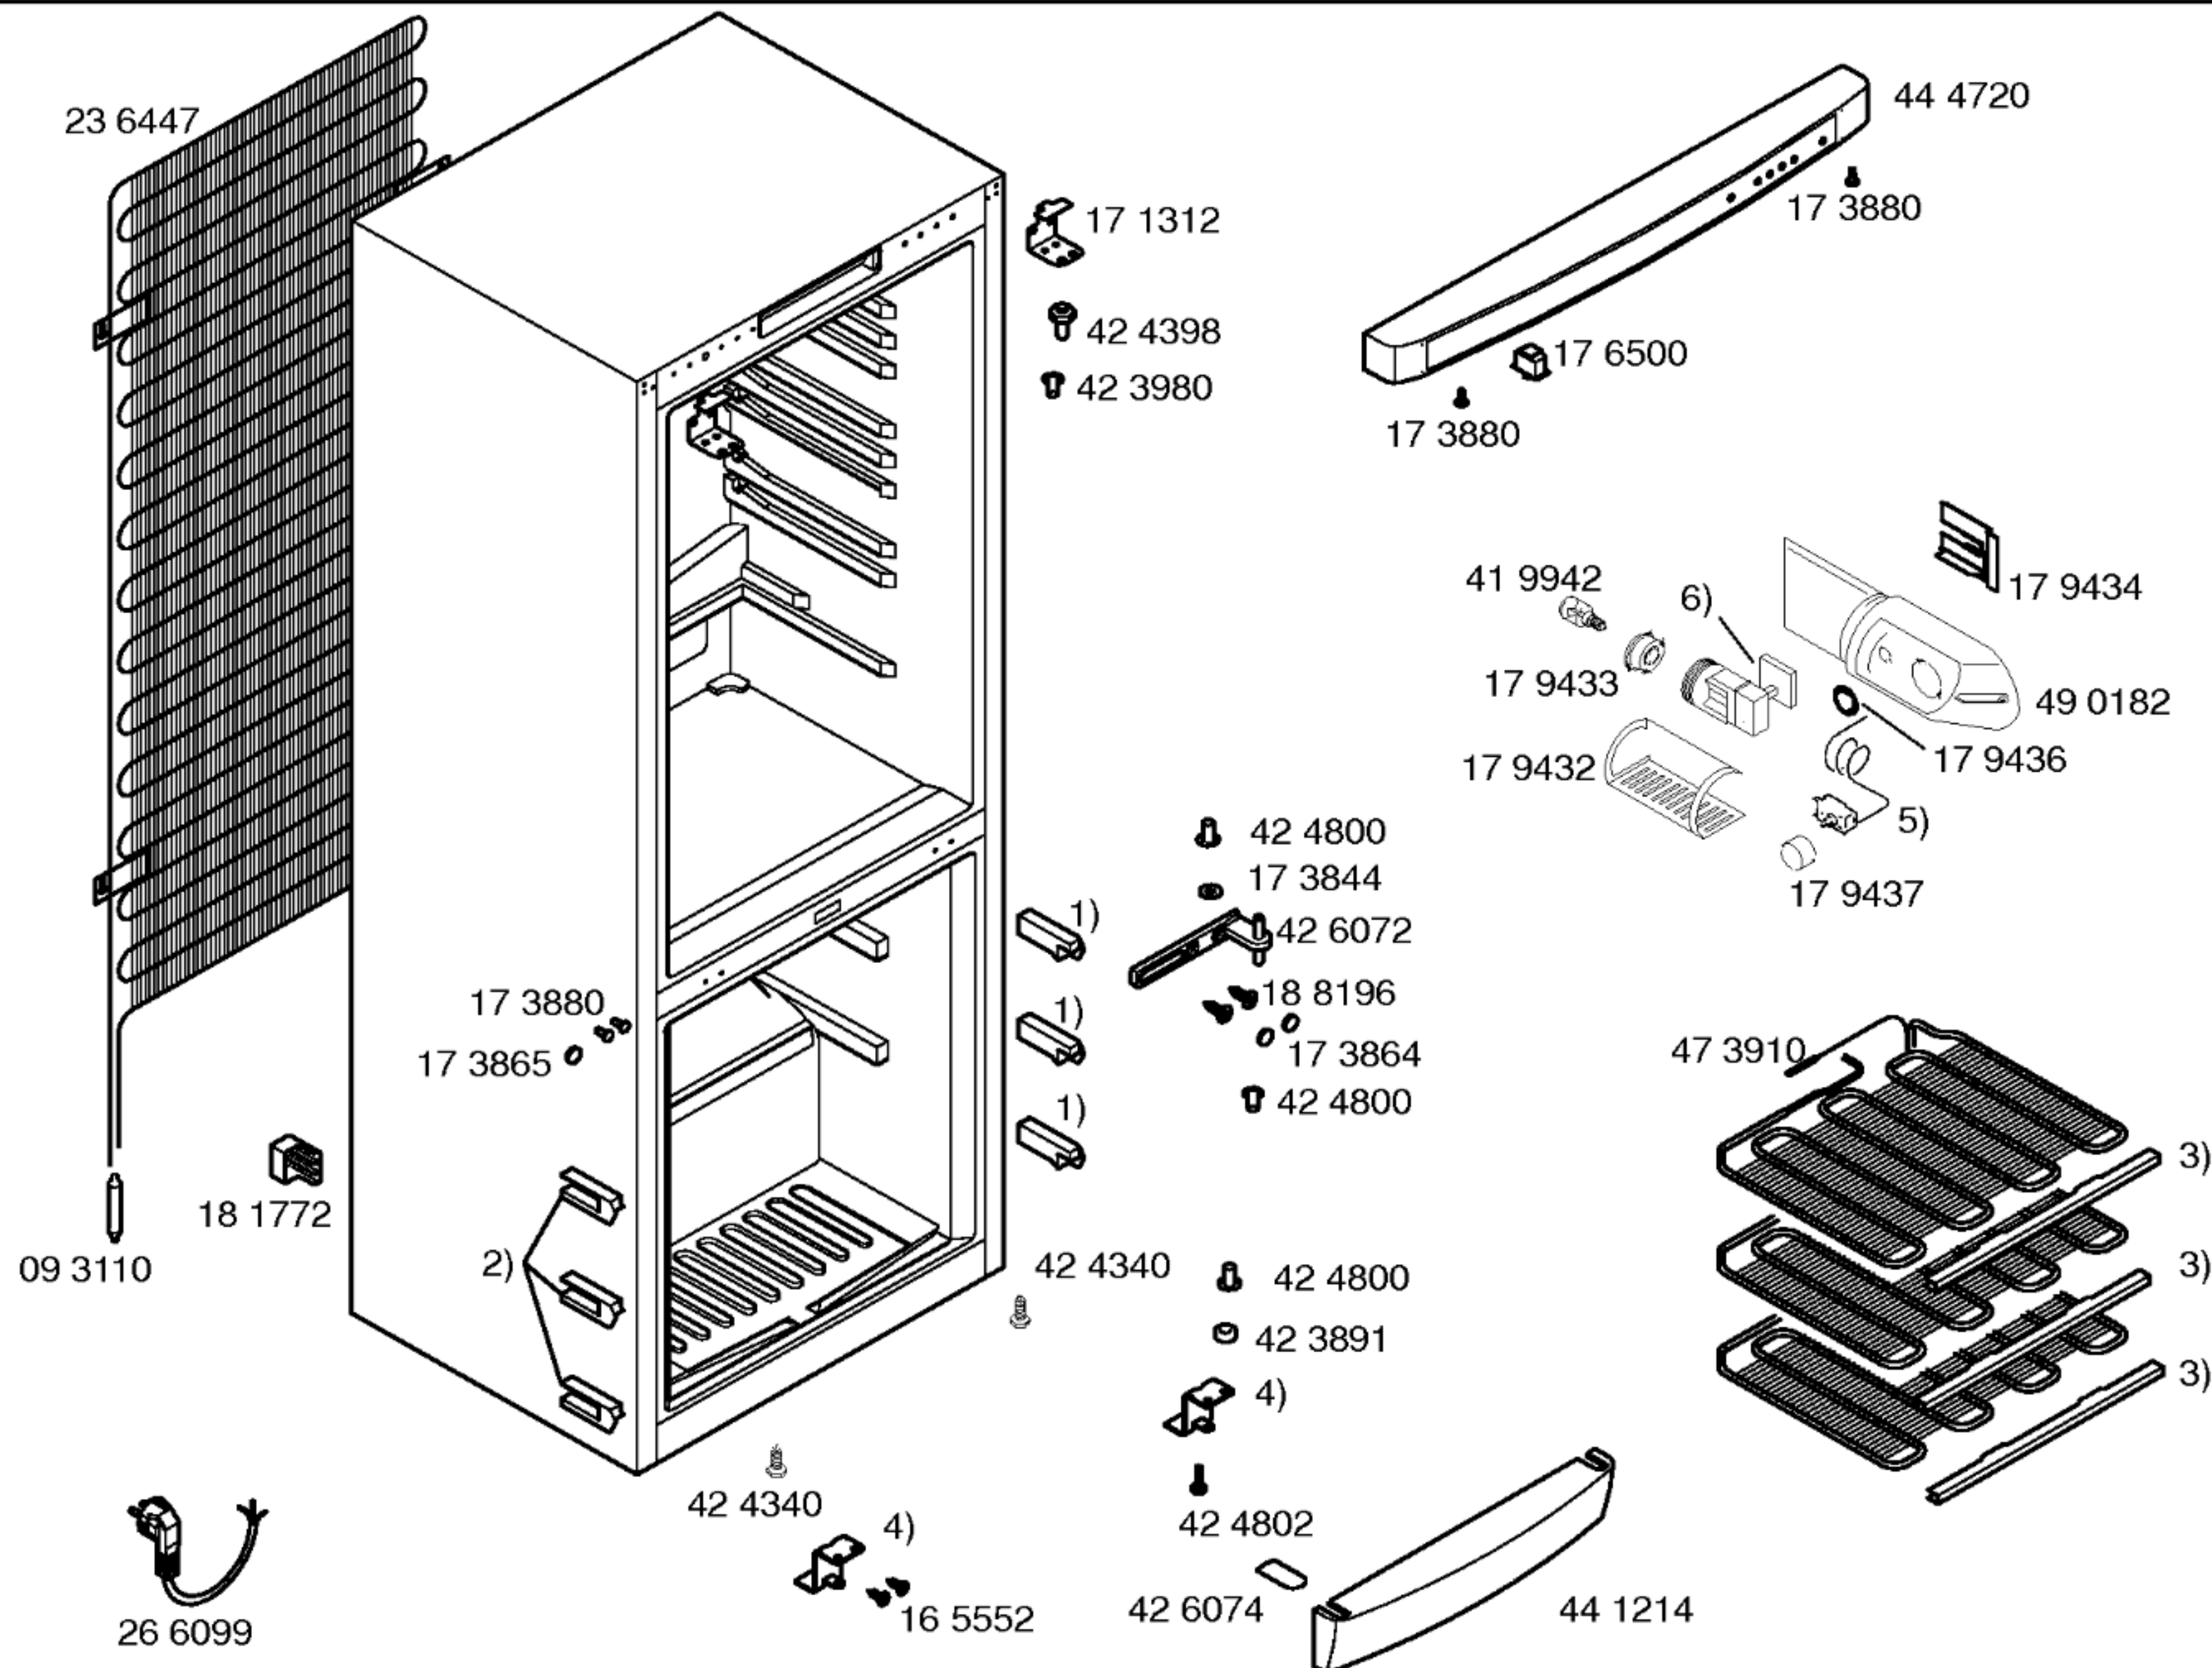

Gebrauchsanweisung

59 8108

(DE)

1) 18 3821

2) 18 3822

3) 36 2472

4) 42 4801

V01

42 8184

V02,v03

5) 17 9435

V01,V02

42 8569


V03


6) 18 3939

V01,V02

42 8568

V03

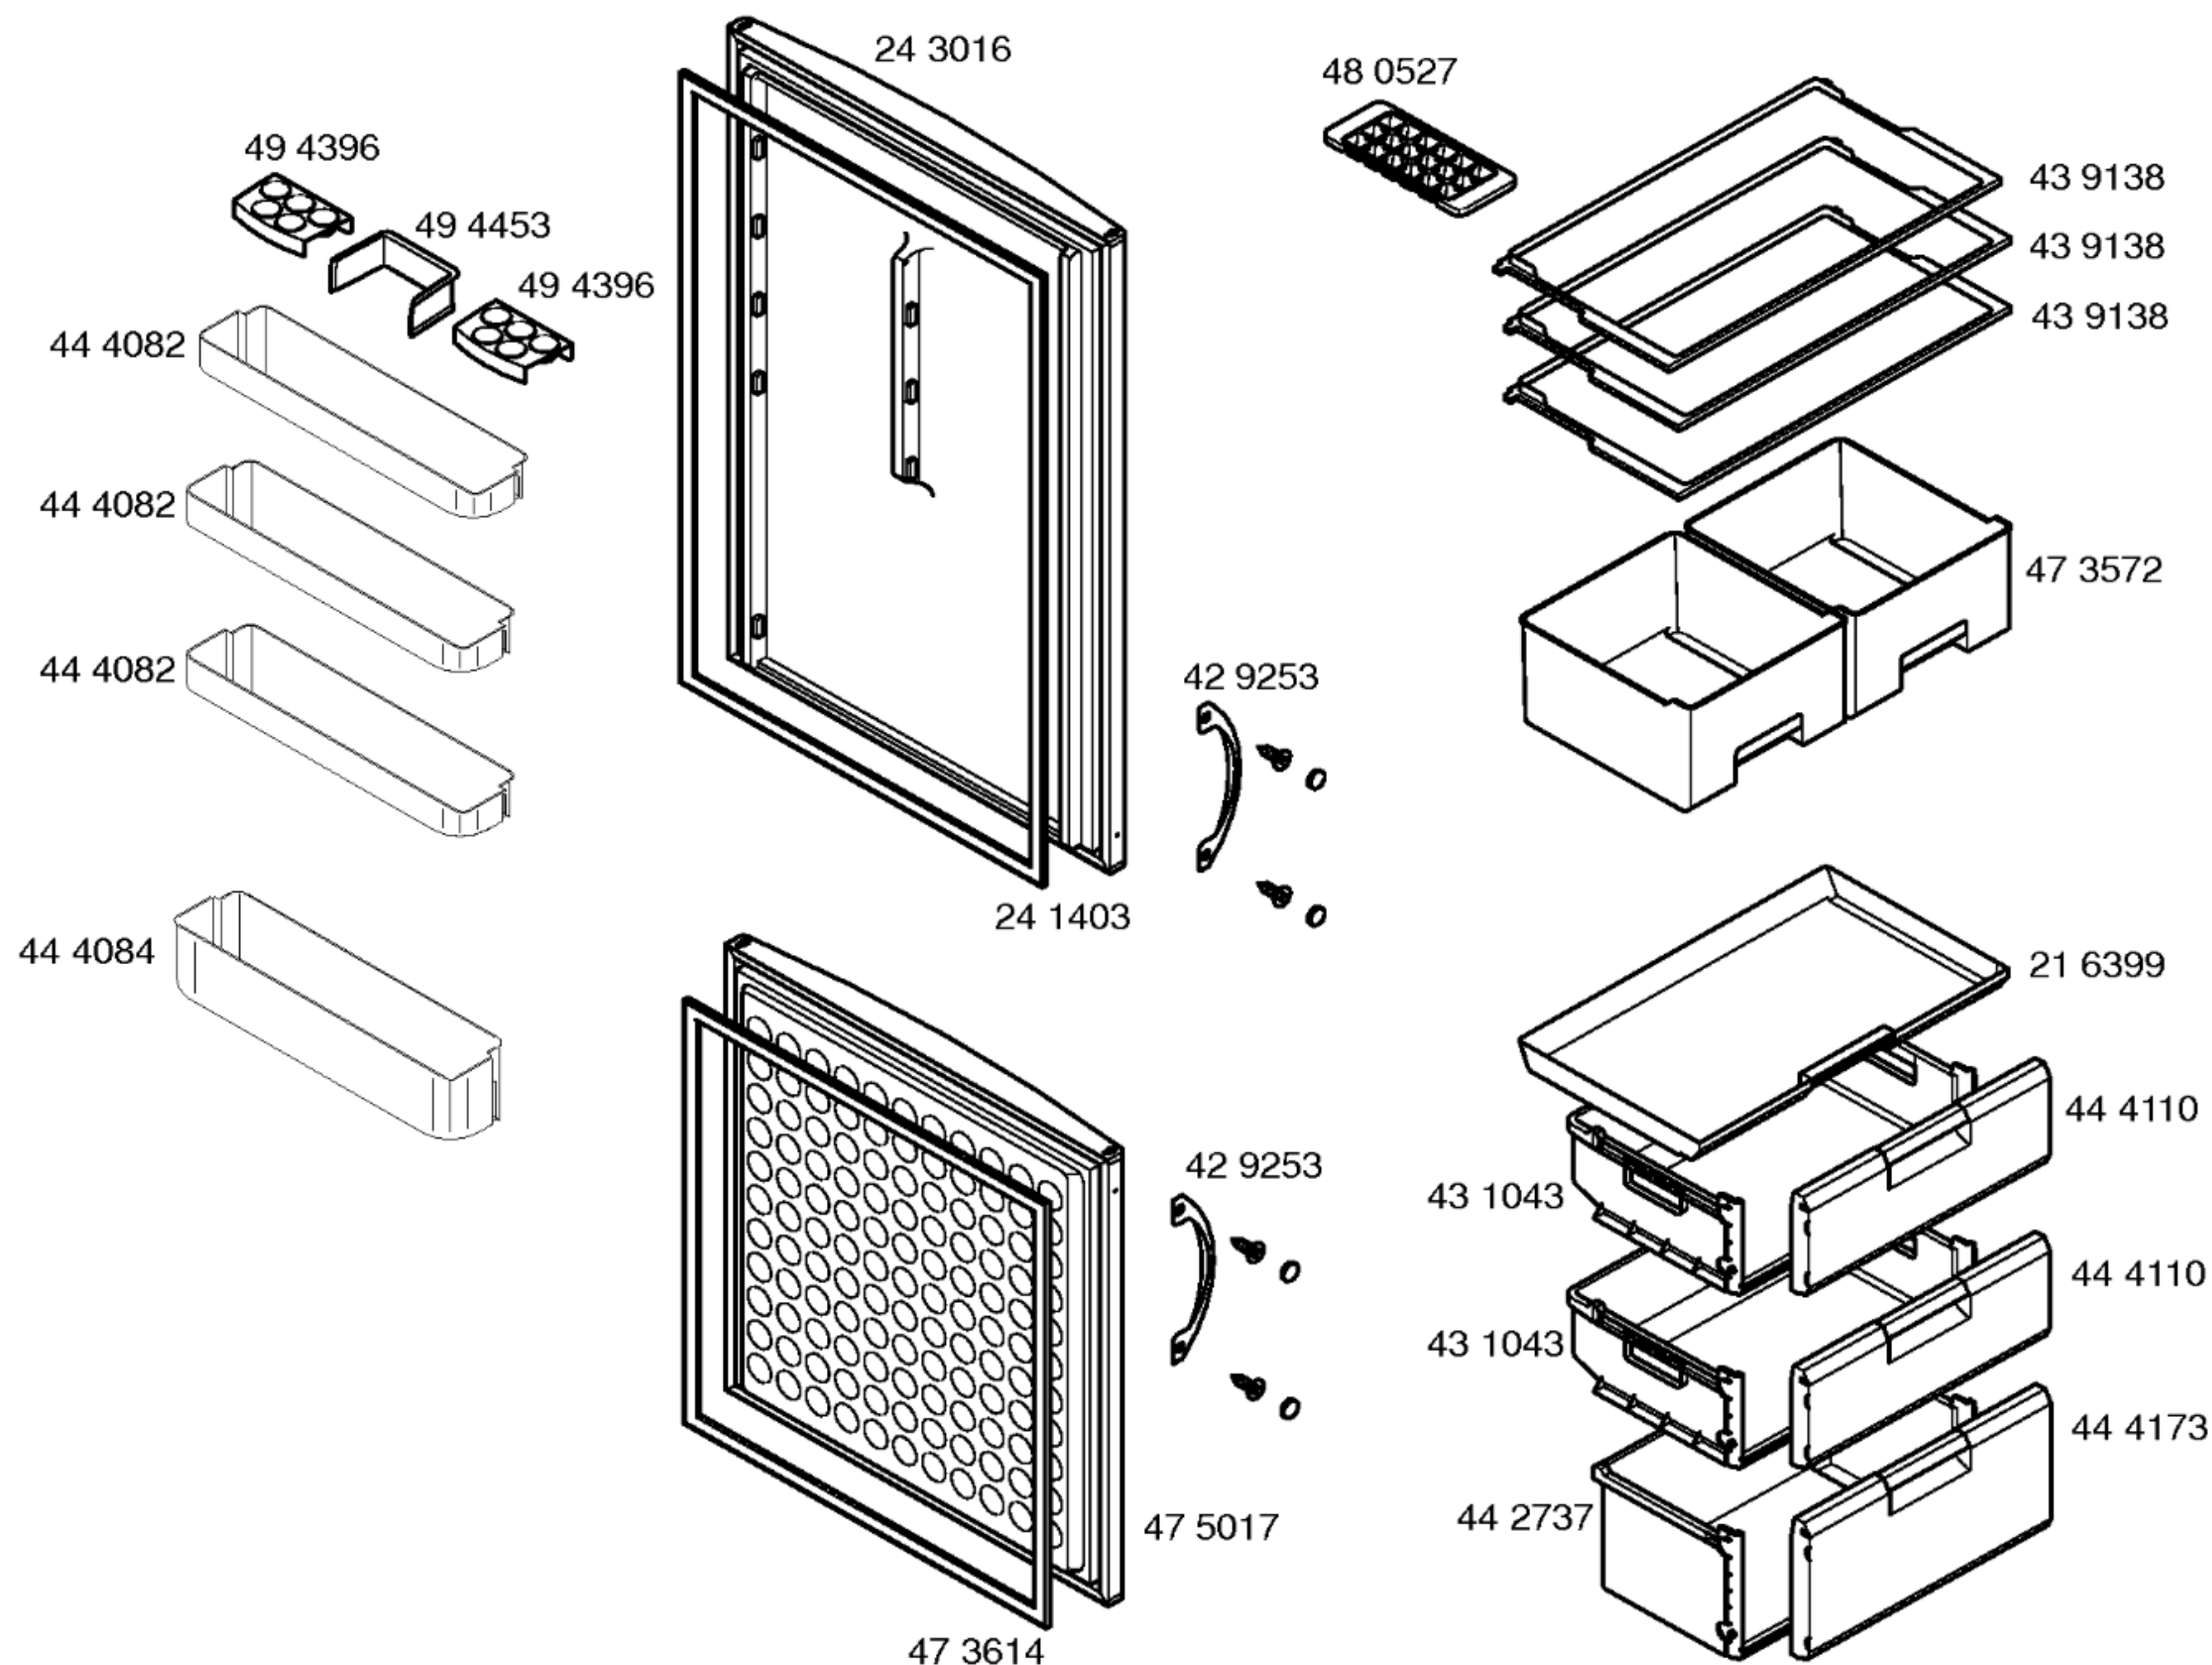

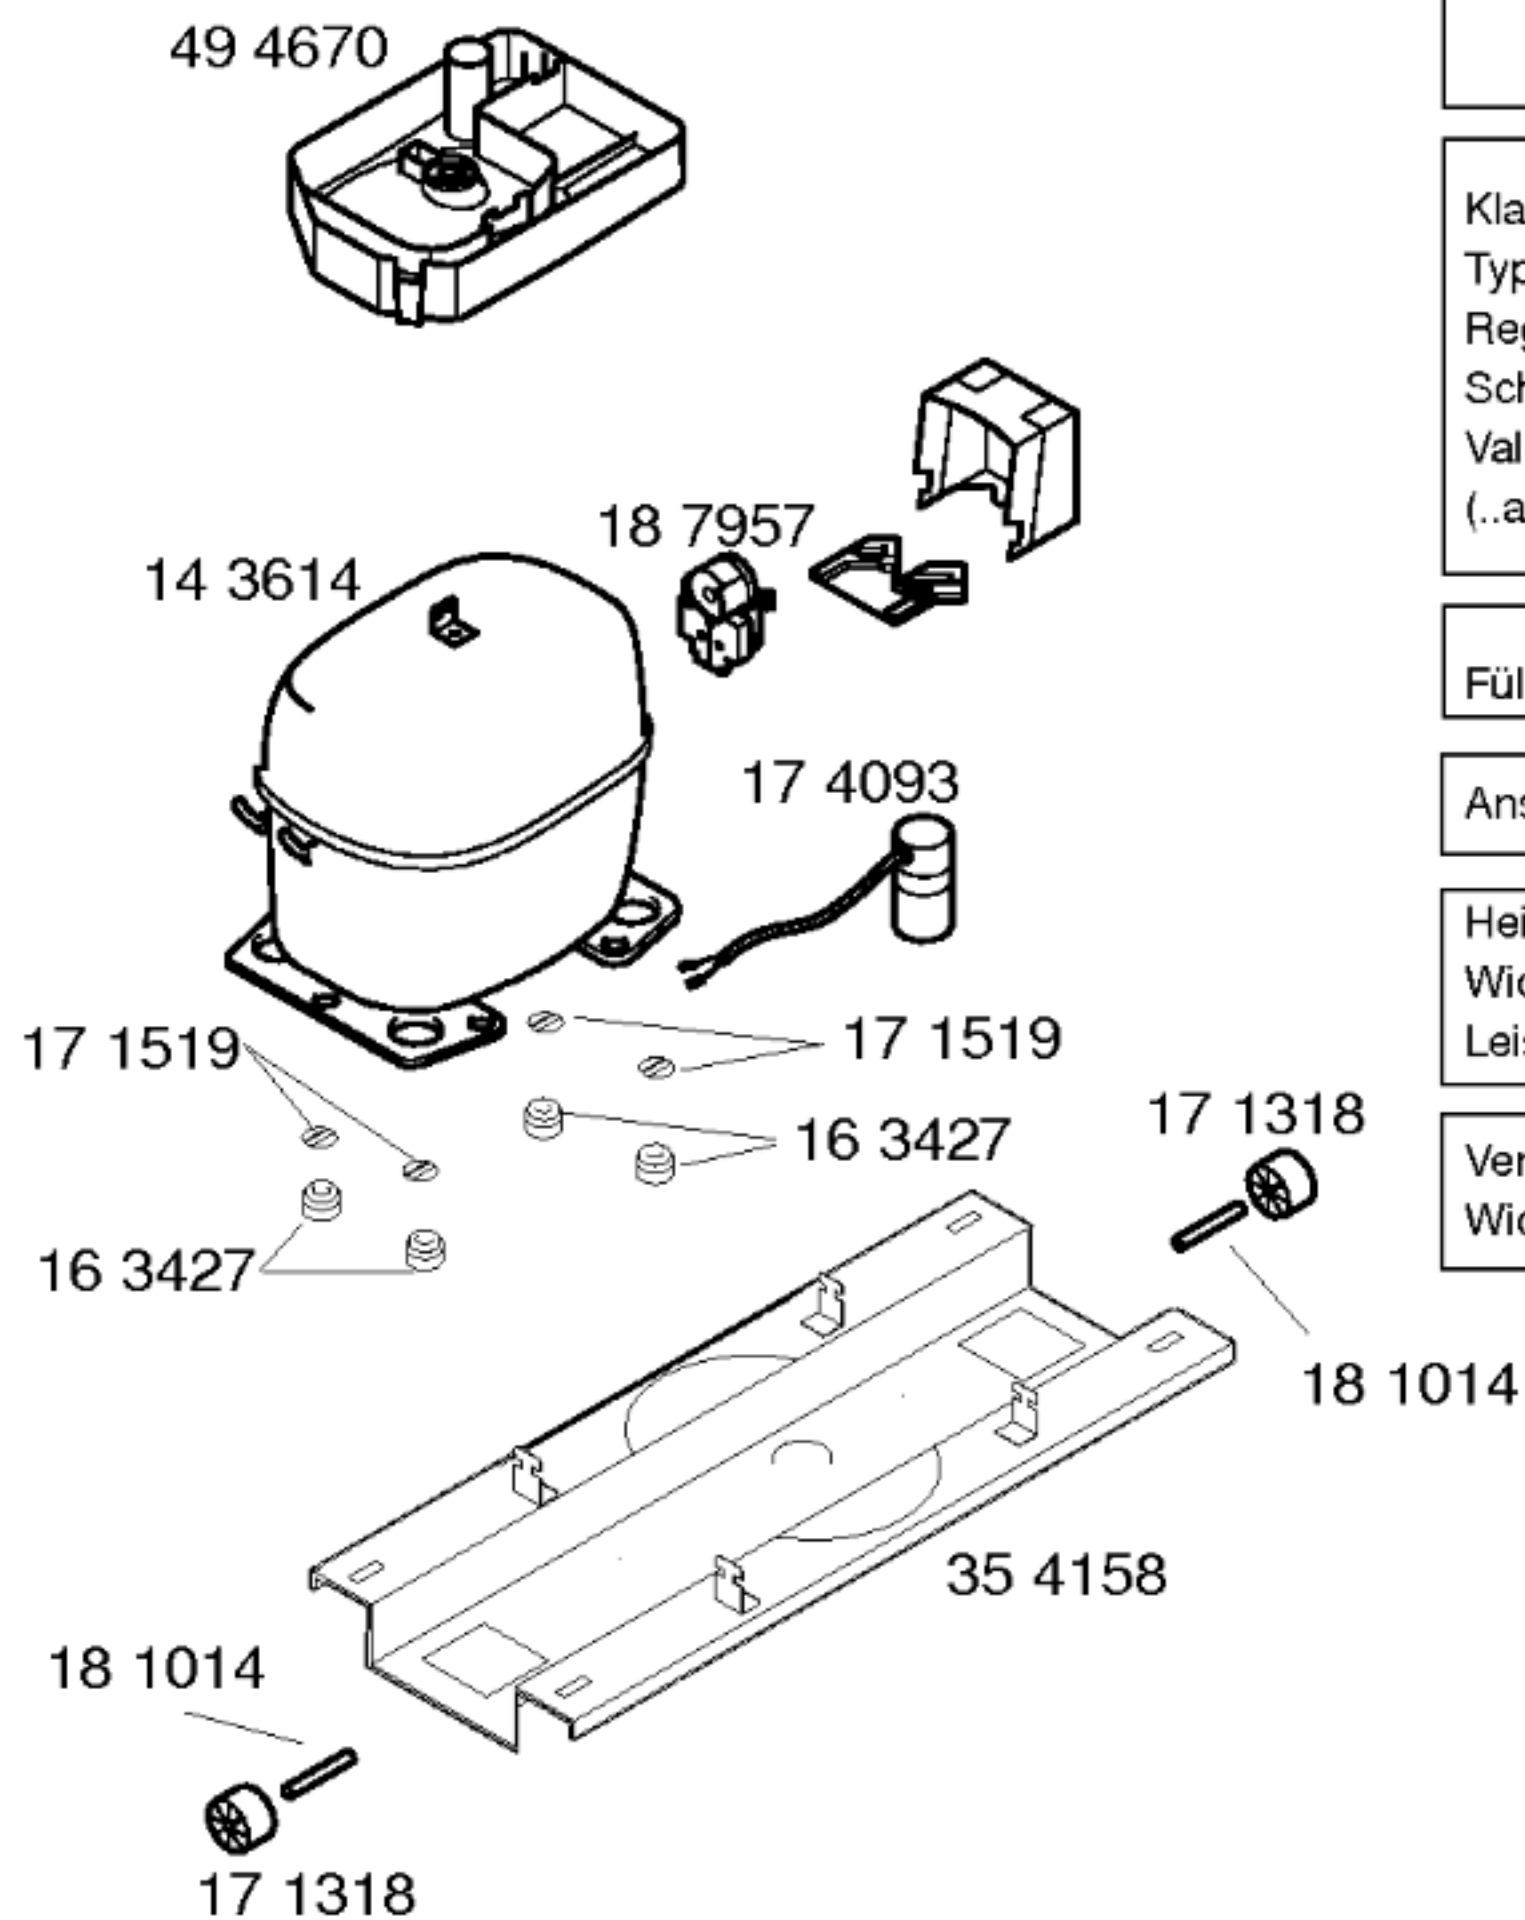

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita DG125E		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantily/Charge/Carga R600 g			
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W			
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia KW Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia KW			