 
 
 


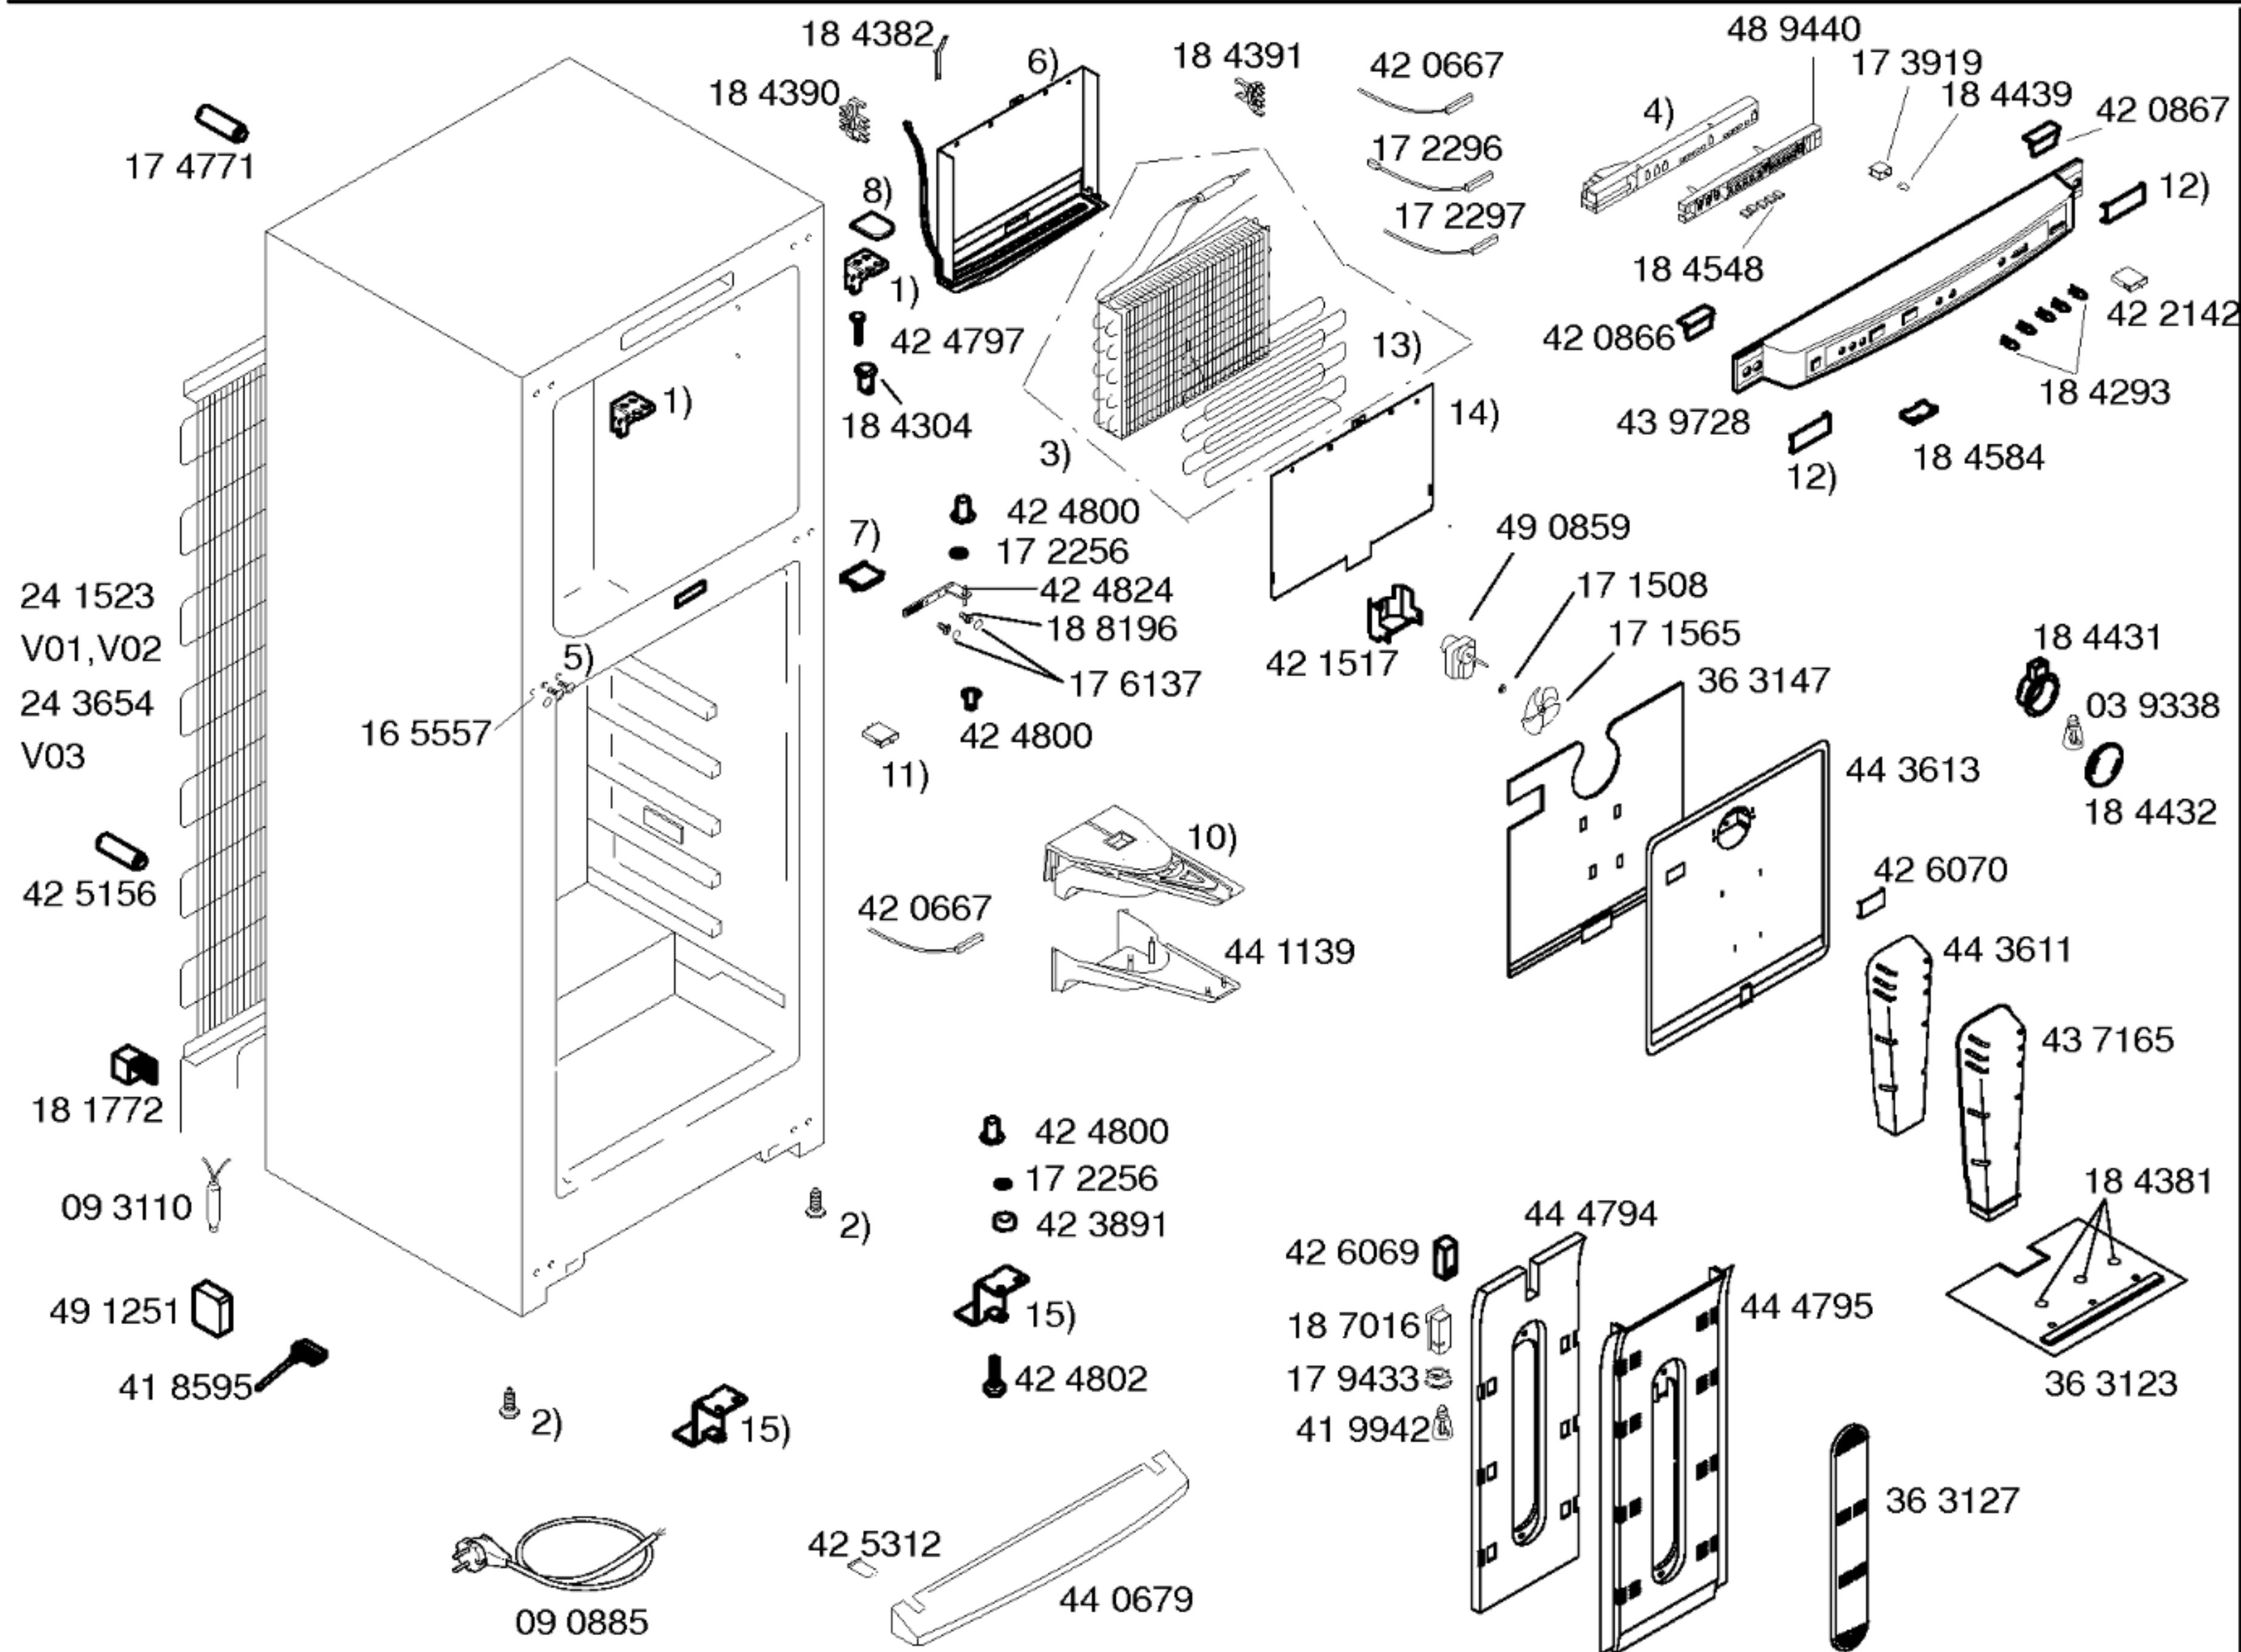

Gebrauchsanweisung
59 1001
(DE,GB,FR,ES,PT
IT)

- 1) 42 4798
- 2) 42 4340
- 3) 43 8726
- 4) 49 3812
V01
49 7504
V02,V03
- 5) 16 5552
- 6) 36 9905
- 7) 41 8128
- 8) 42 4799
- 10) 43 2091
V01
44 4749
V02,V03
- 11) 42 2142
- 12) 42 0864
- 13) 36 9816
- 14) 44 4819
- 15) 42 8184

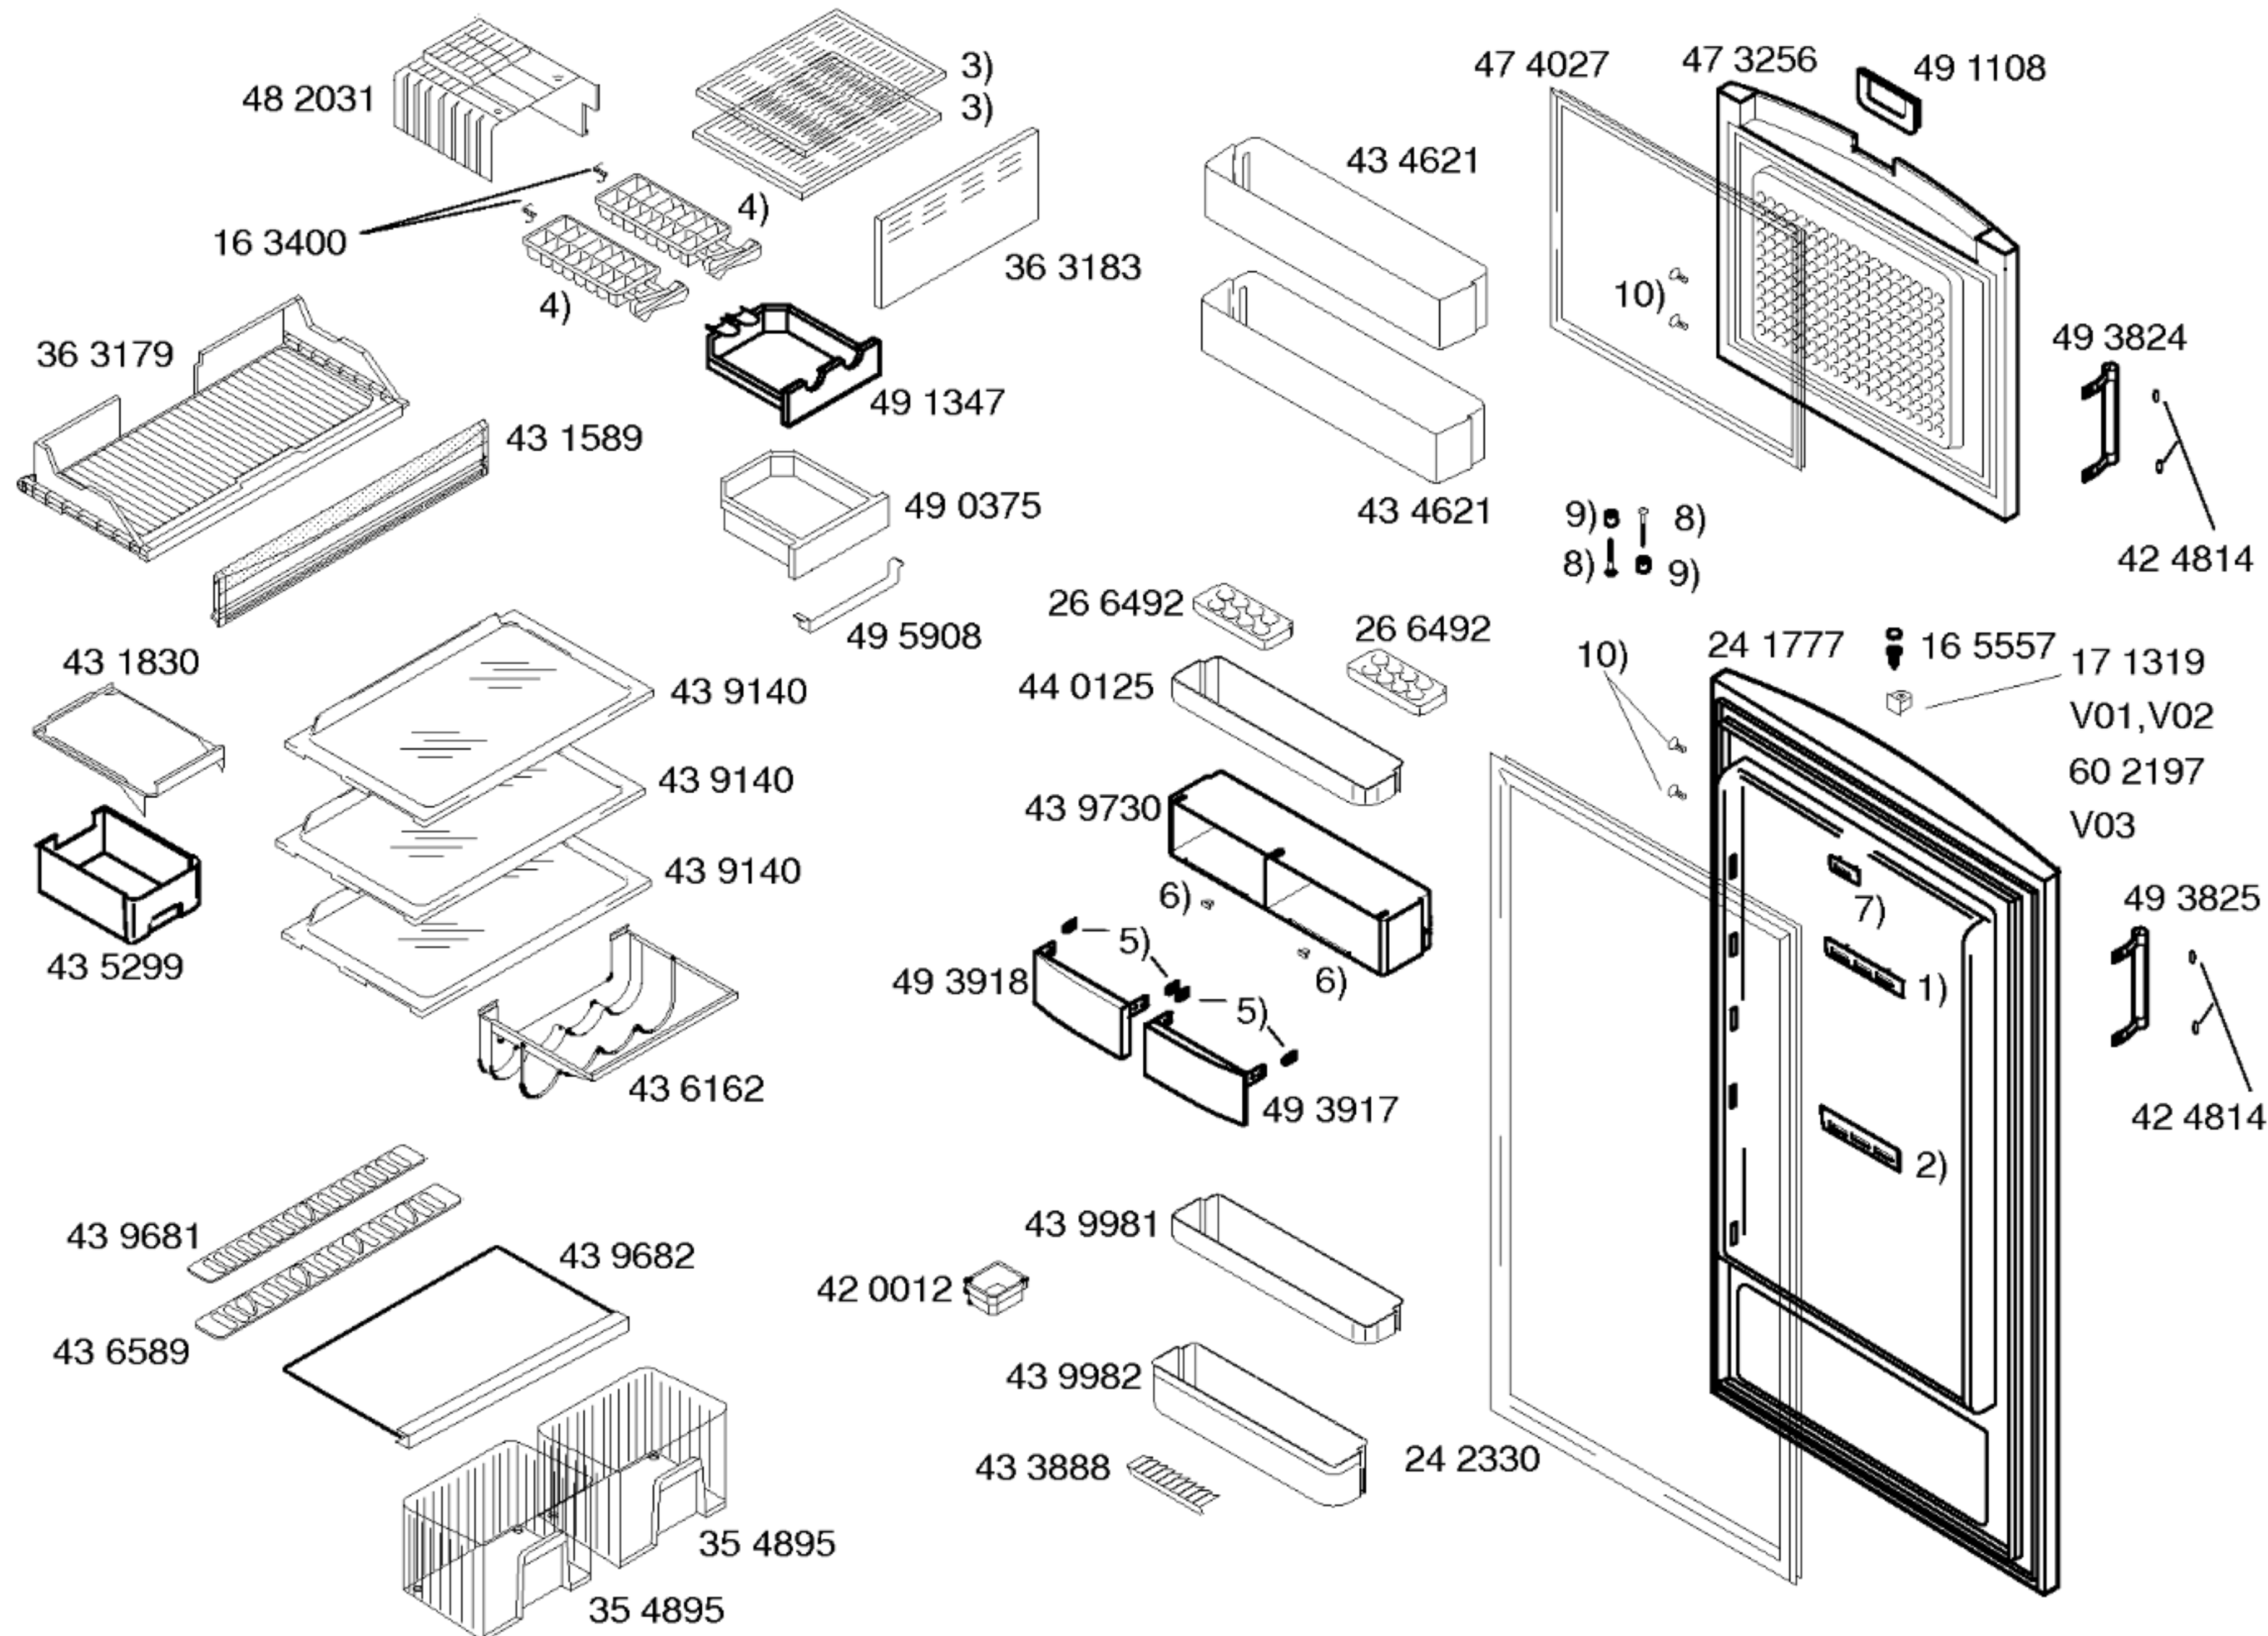

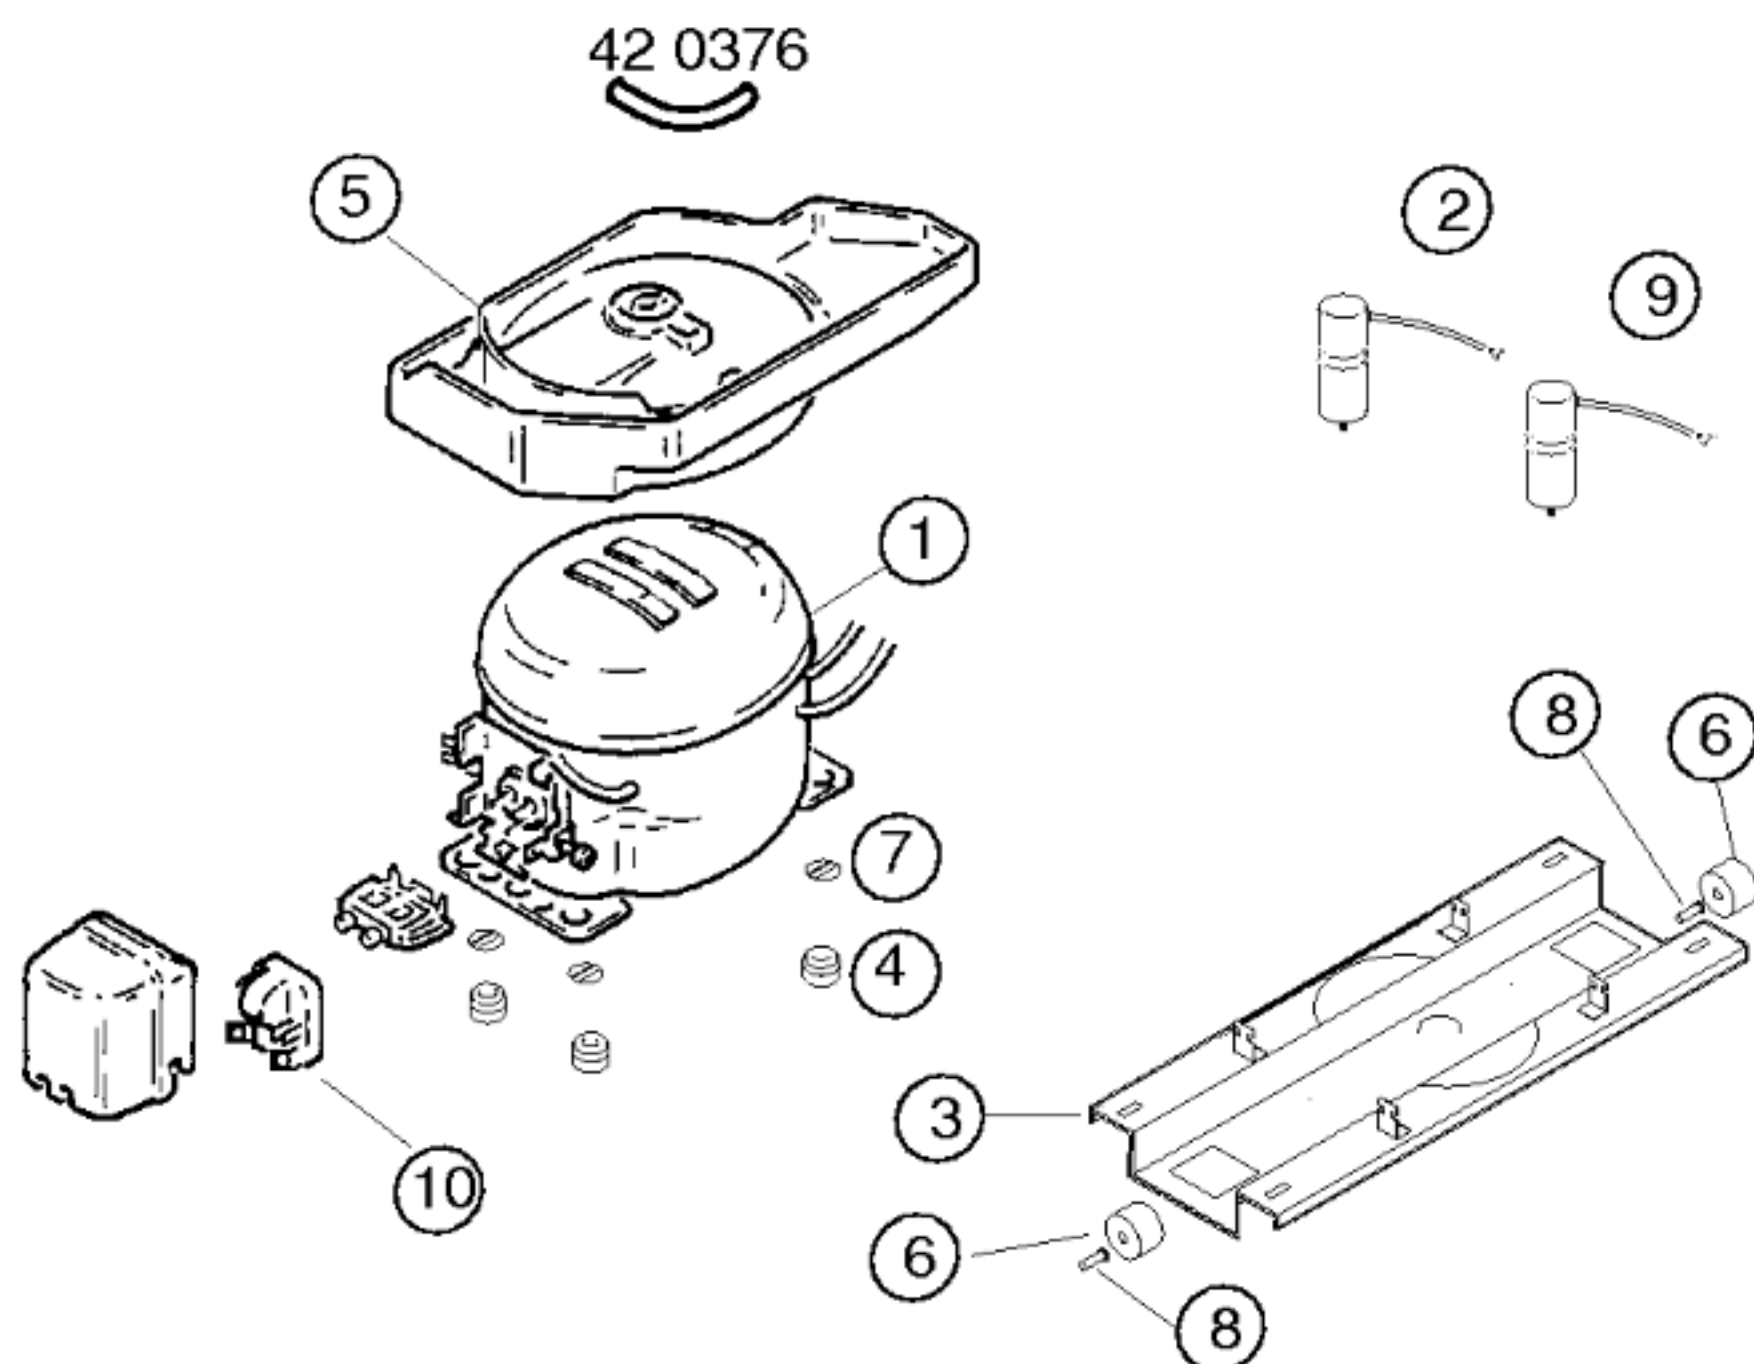

	V01	V02	V03
Pos.	Matsushita		Danfoss
	DGX125E		NLX13KK
1	14 3603		14 4119
2	42 0857	41 8629	17 4093
3	35 4583		
4	16 3427		
5	49 4670		49 4671
6	17 1318		
7	17 1519		
8	18 1014		
9	42 0827	41 8628	—
10	—	—	16 5570
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER				
	V01, V02	V03		
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Matsushita DGX125E 8	Danfoss NLX13KK		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acta kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Elektronisch			
Füllmenge/Fill. quantily/ Dolum miktari	R600	g	58	58
Anschlusswert/Comm. load/Giris gucu	W	215		
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ω W	Verdampfer 267	Ablaufrinne 81	Klappe 4
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ω			
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ω V			
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz